
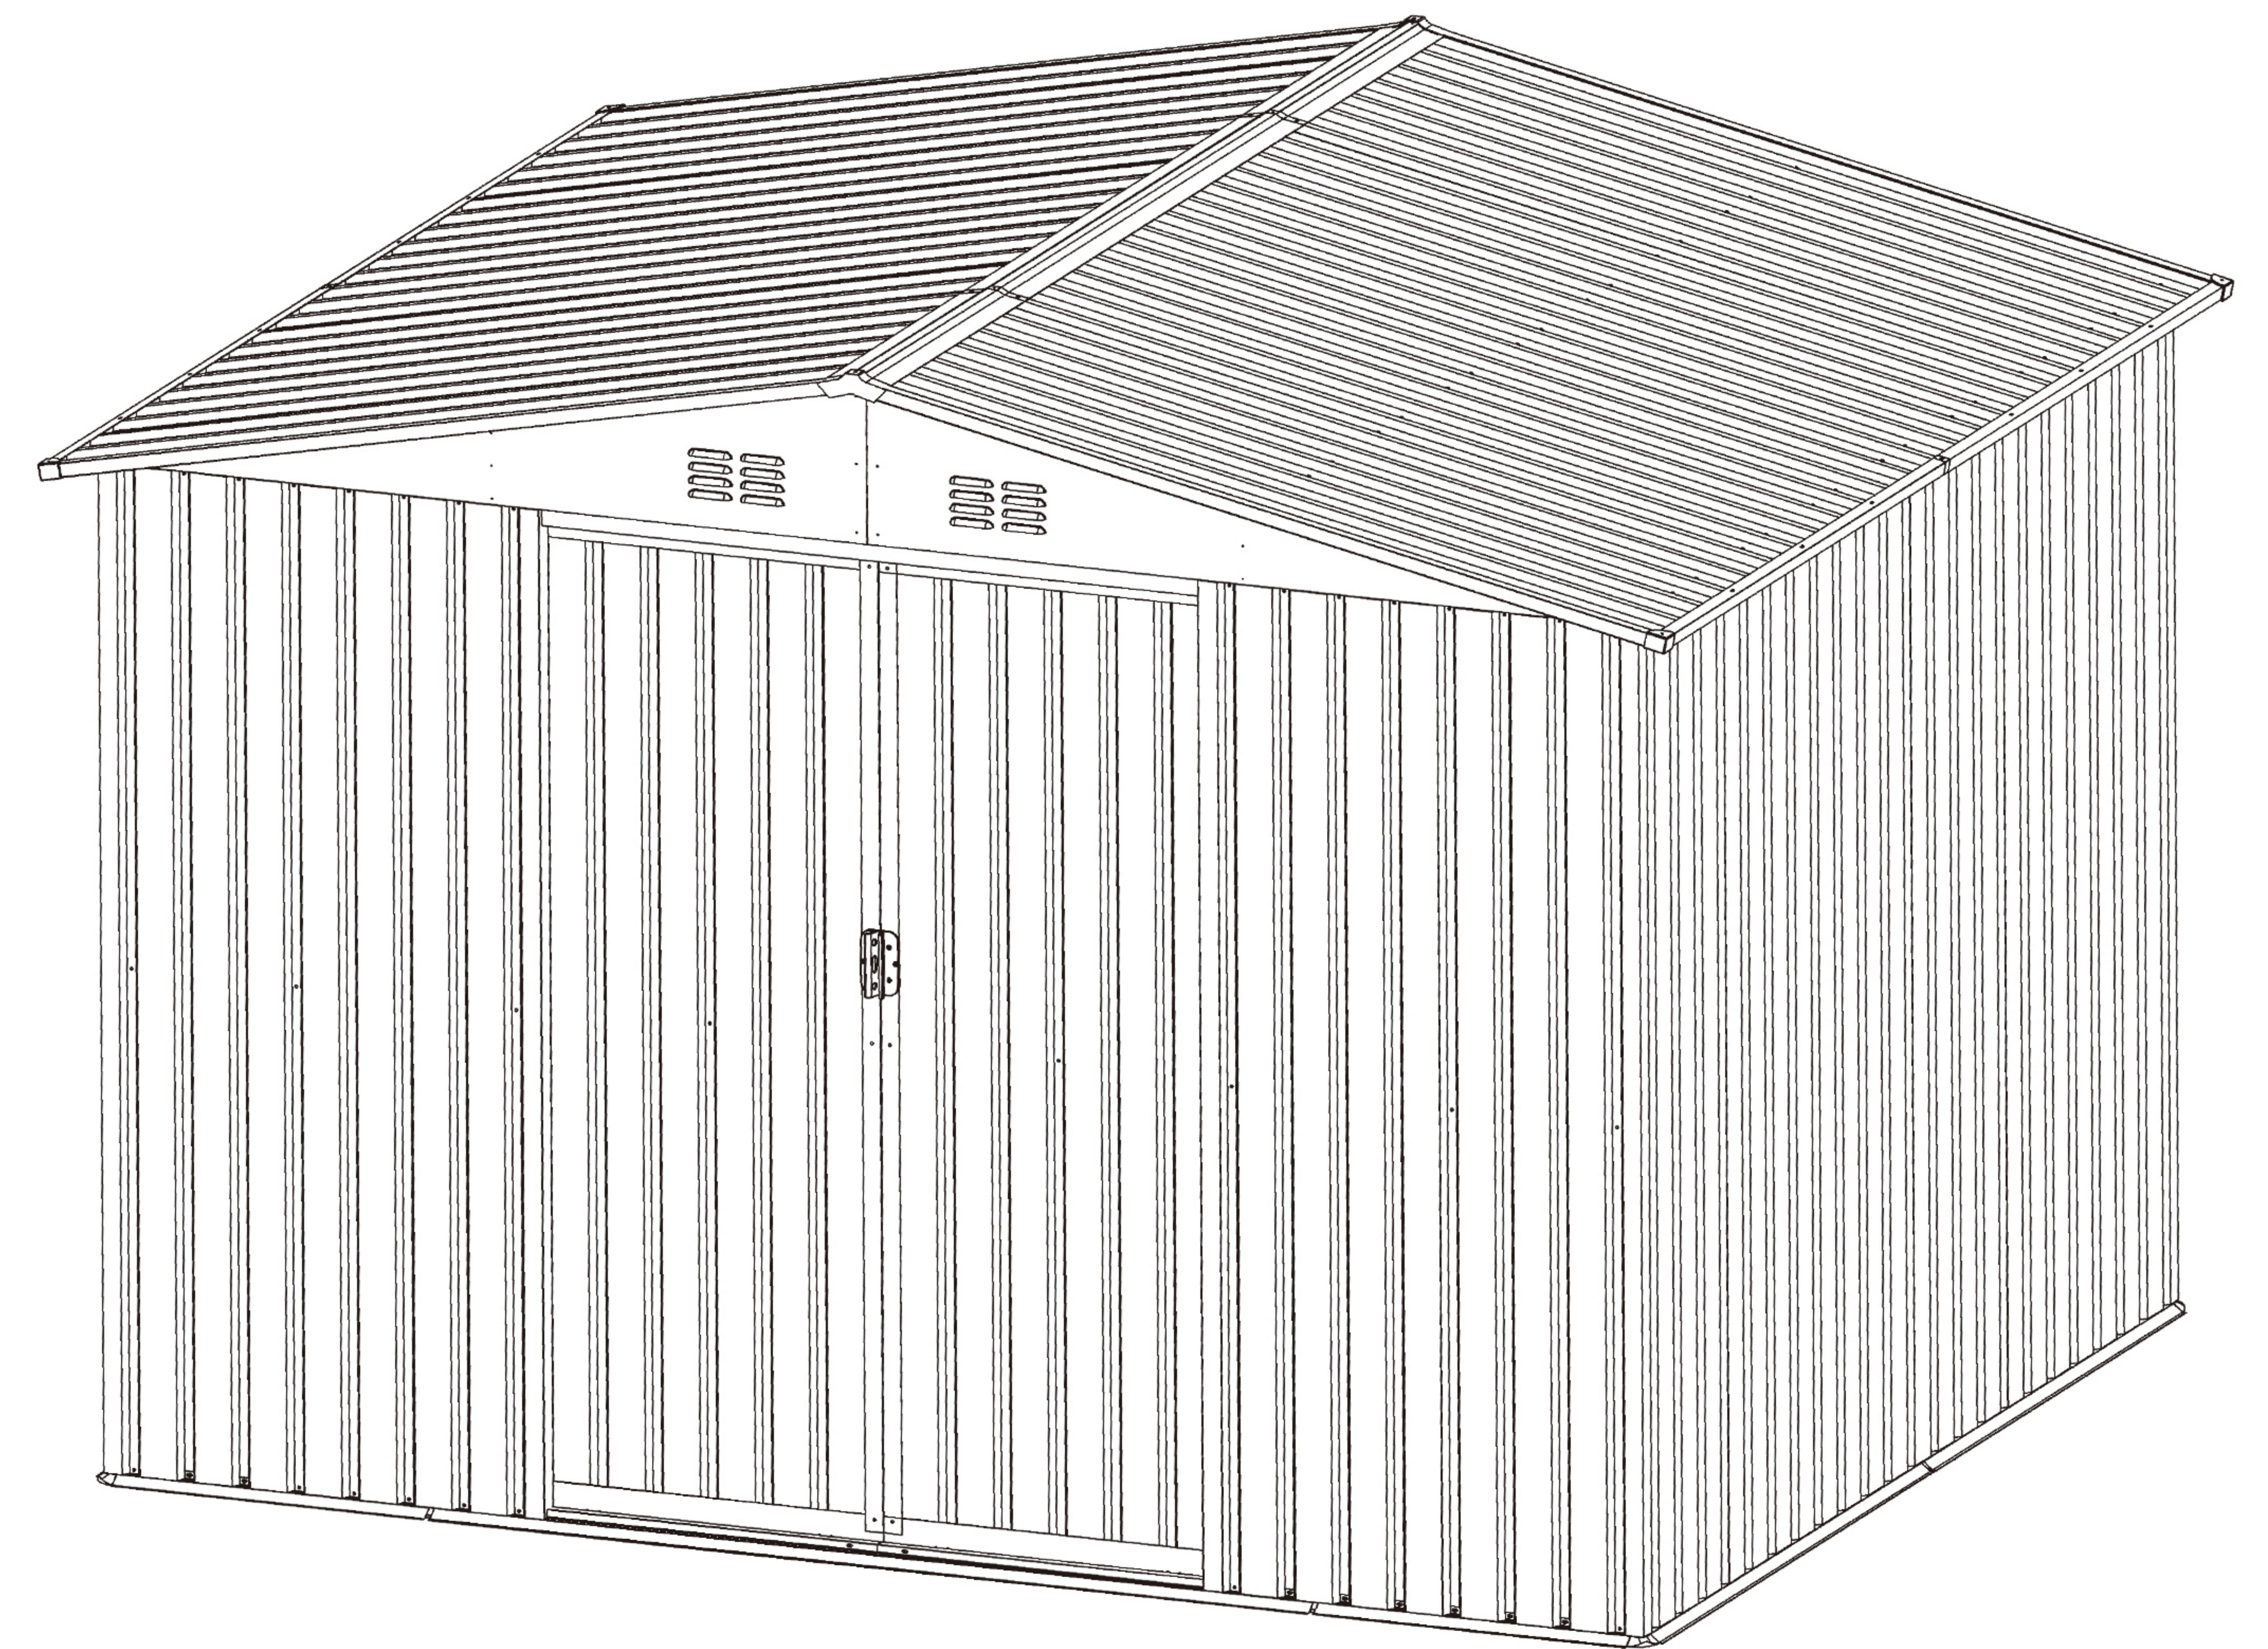


Metal Garden Shed

OWNER'S MANUAL

Size 10 Ft X 8 Ft

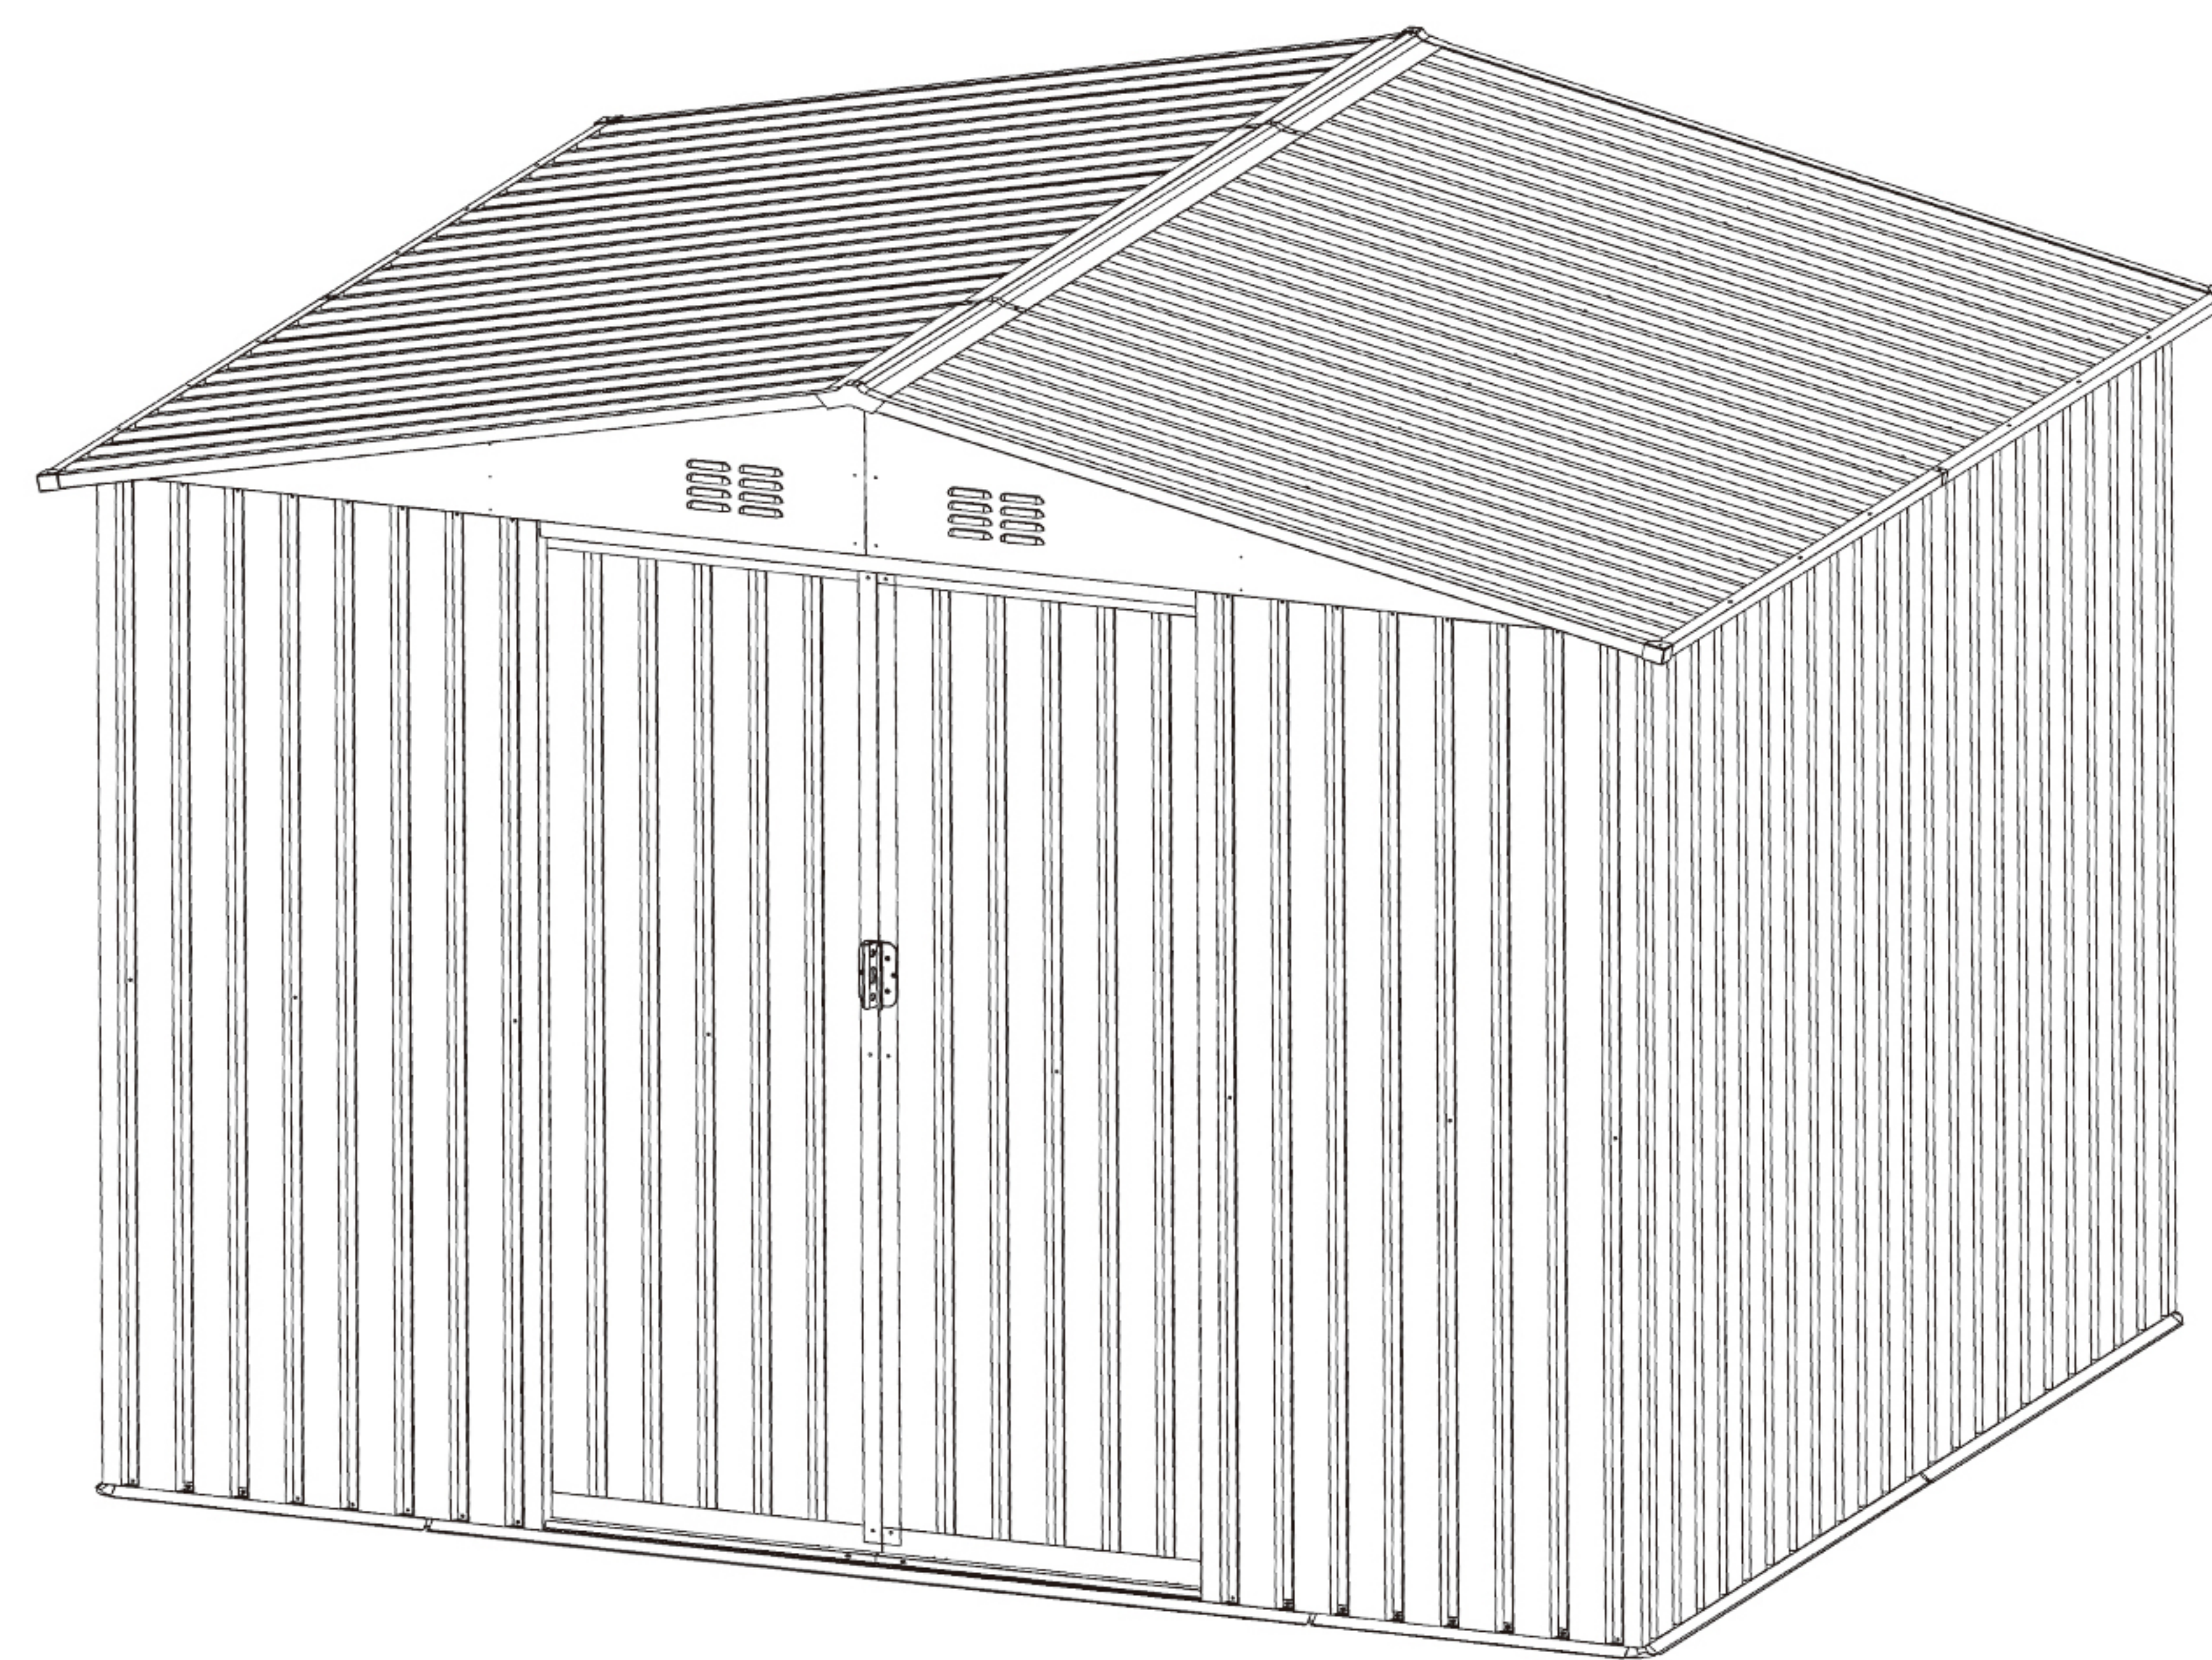

Tall walk in Shed

Quick & Easy Assembly

Ridge Reinforced walls



Wide Double Doors

Available in Various Sizes





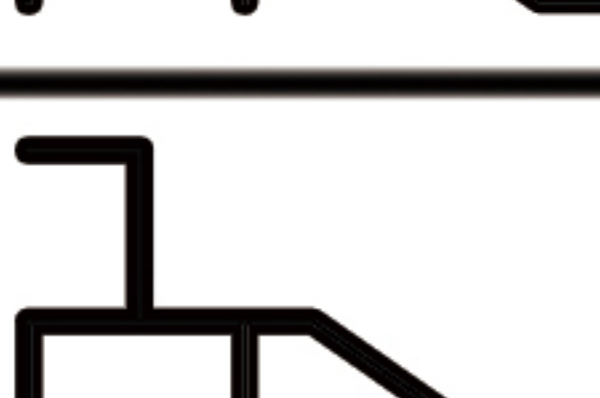






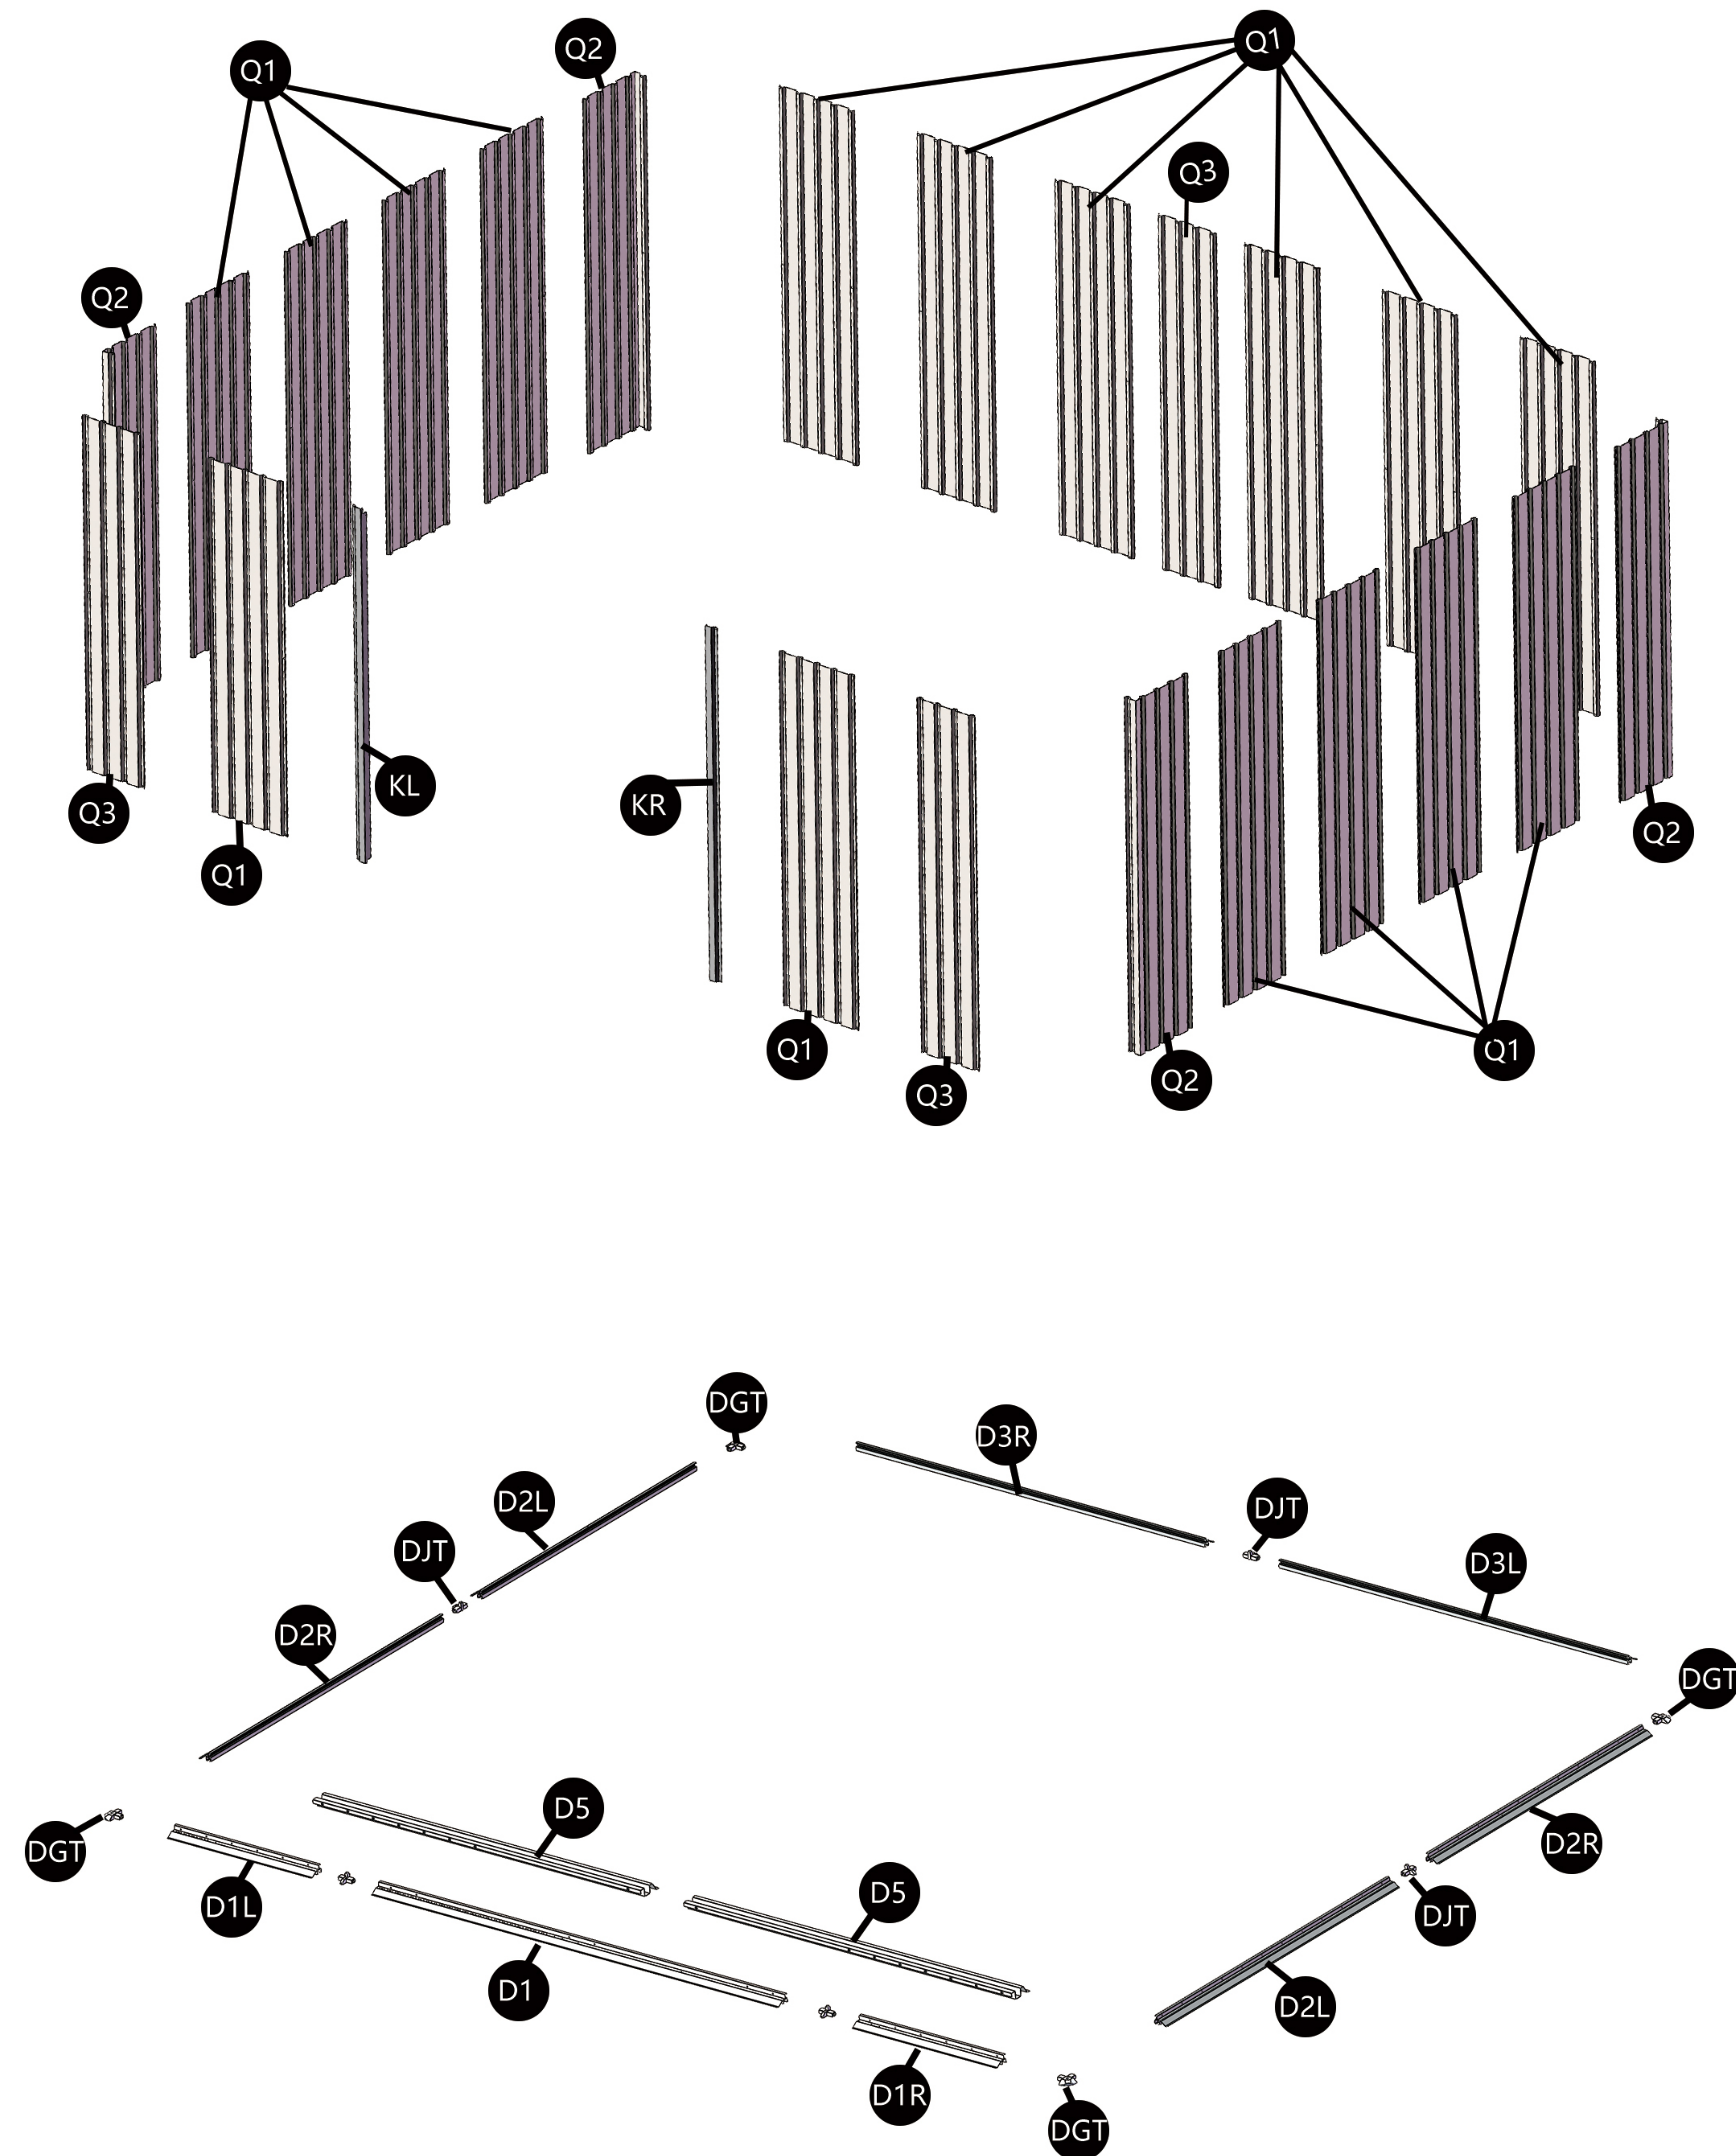
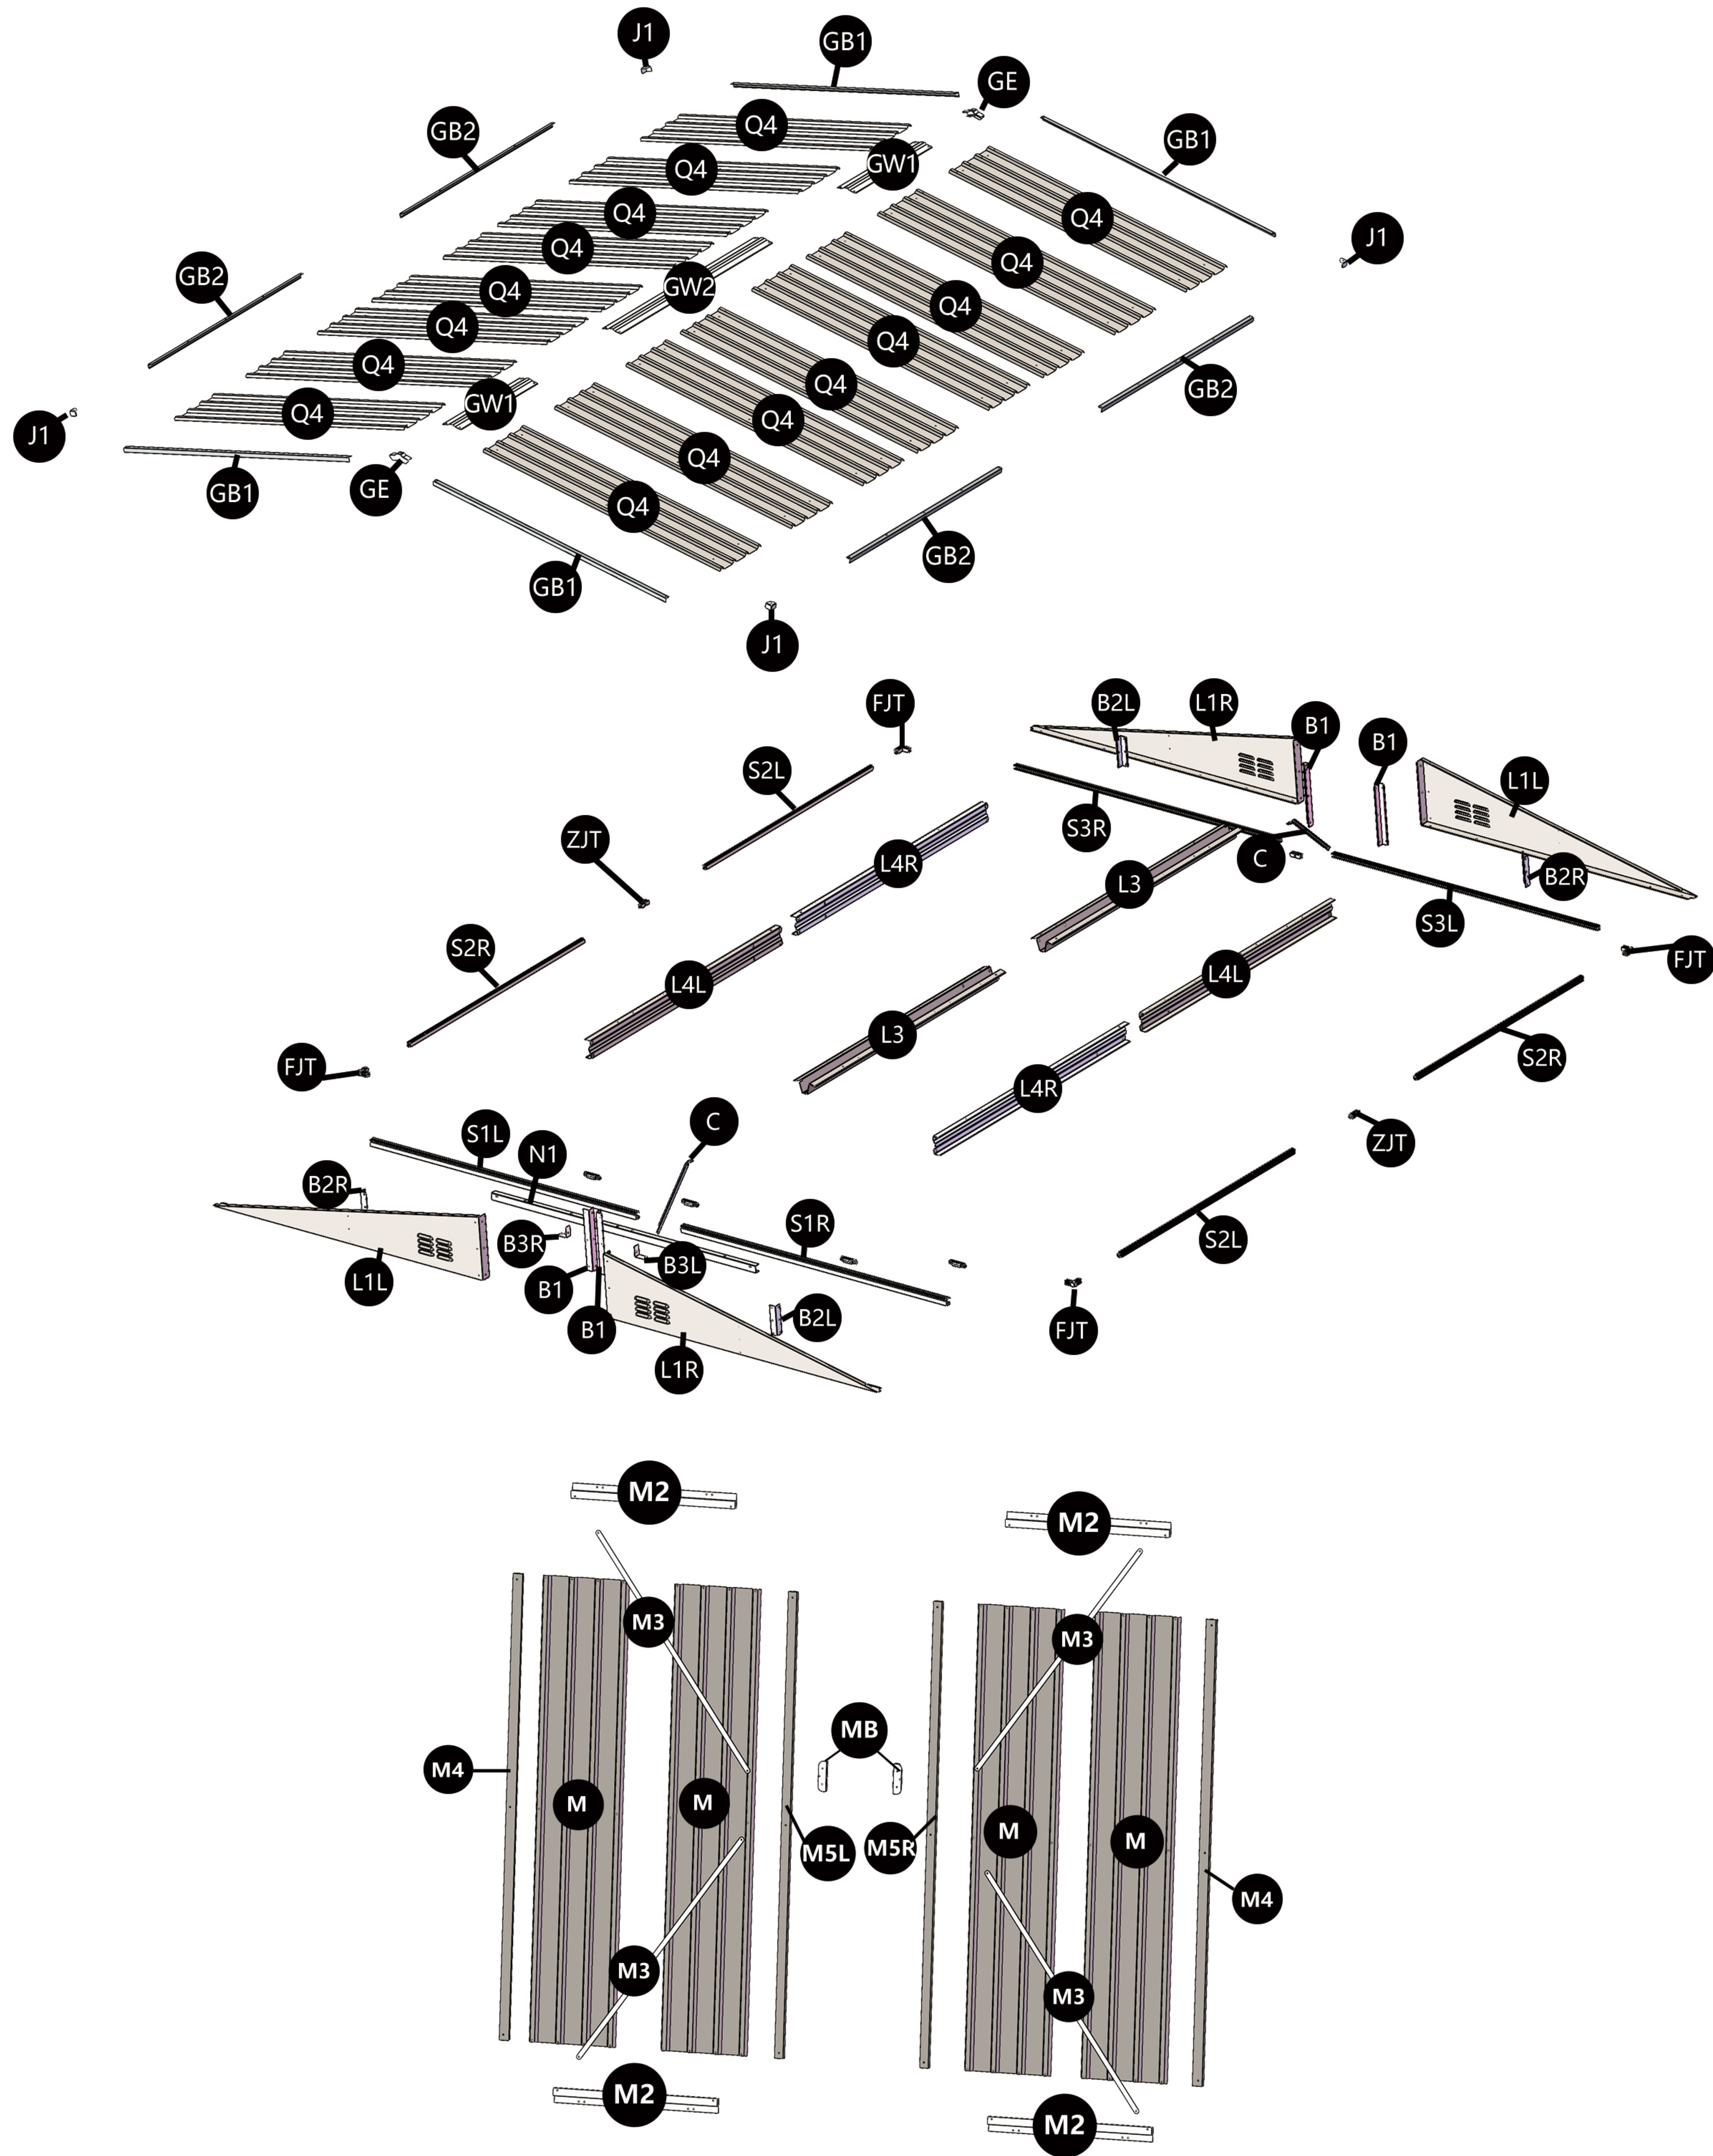



Take care of sharp edges;

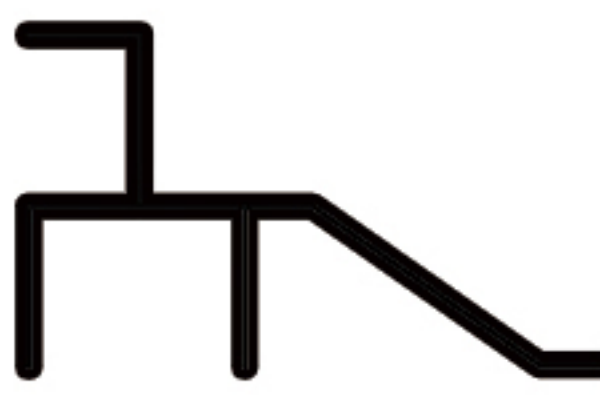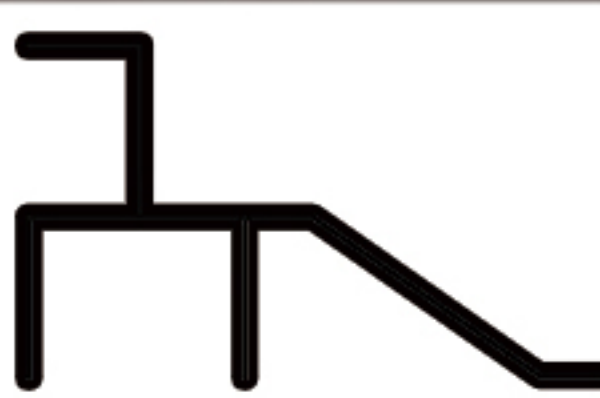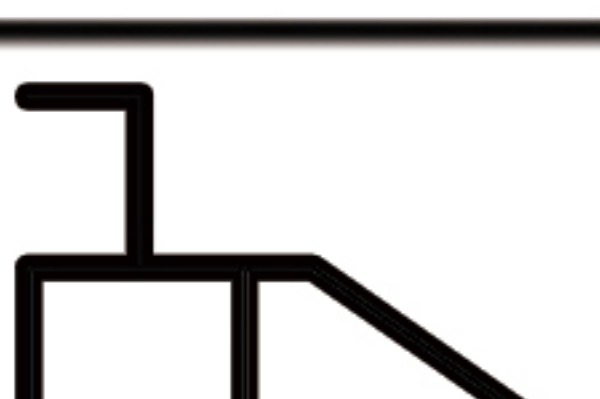


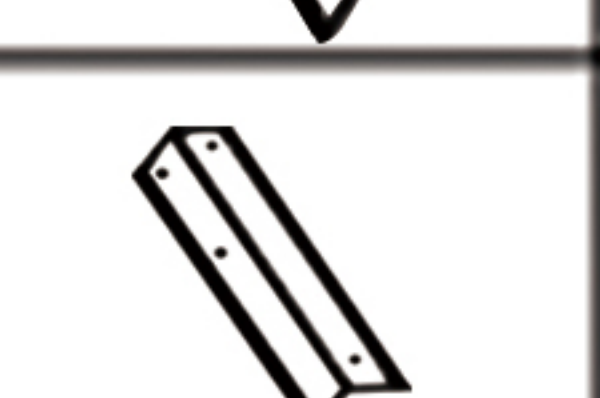

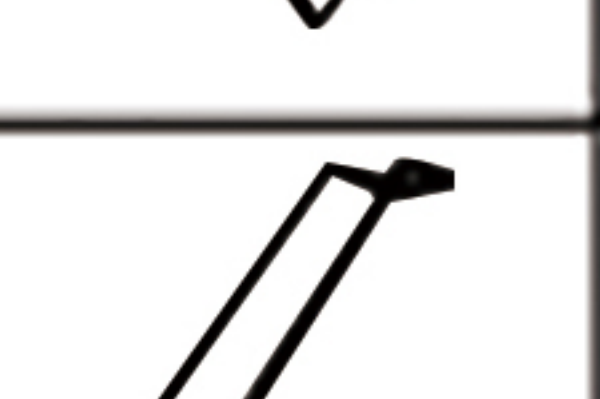






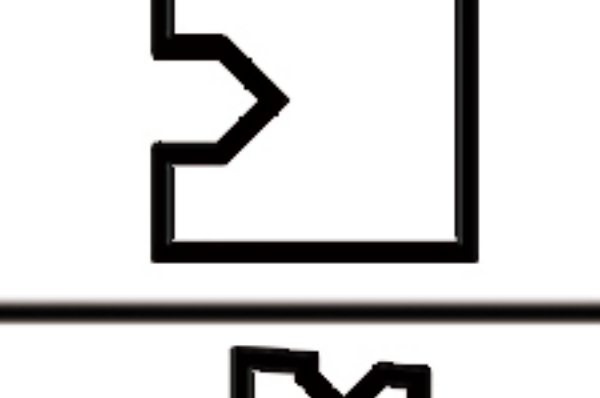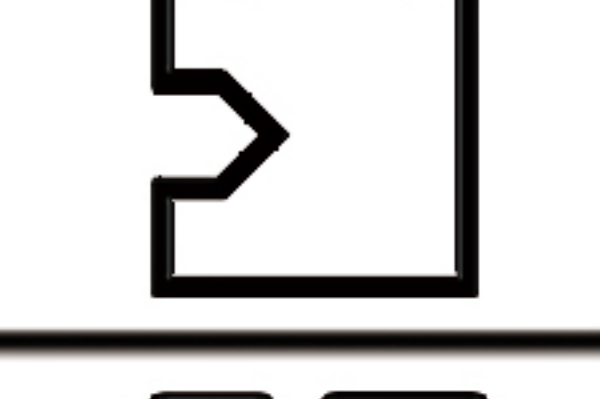



Please wear gloves;




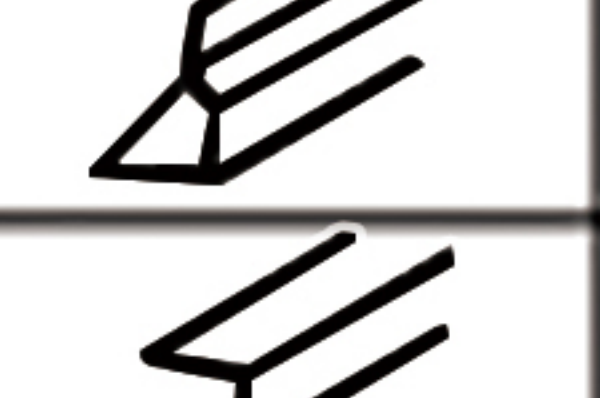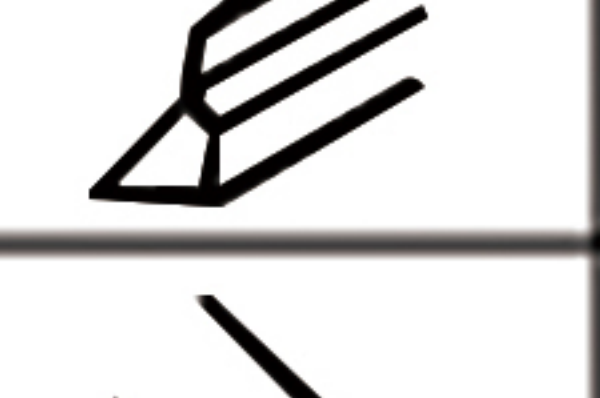







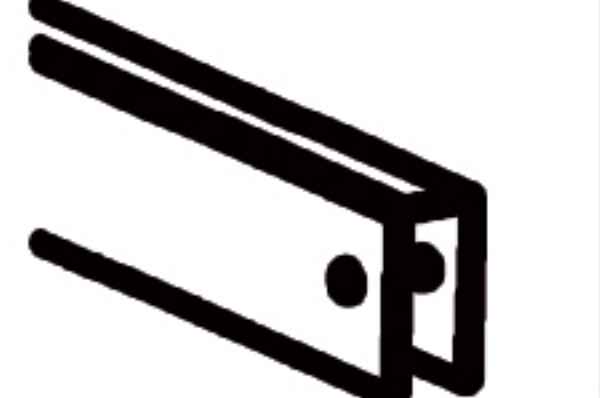


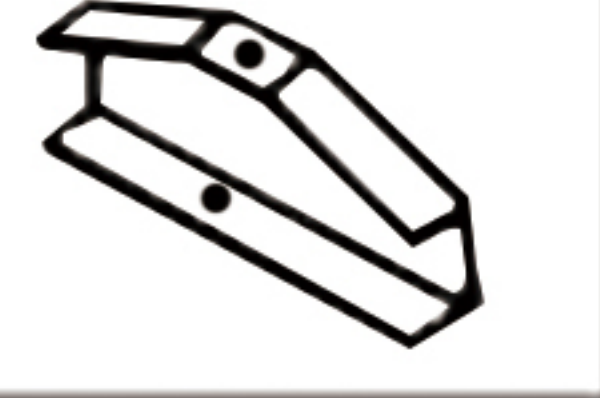

It will take 2 people 4 - 5 hours to install.






PARTS LIST



NO1	PART	QTY
D1		1
D1R		1
D1L		1
D2R		2
D2L		2
D3L		1
D3R		1
D5		2
S1L		1
S1R		1
S2R		2
S2L		2
S3L		1
S3R		1
KL		1
KR		1



NO1	PART	QTY
L1L		2
L1R		2
B1		4
B2L		2
B2R		2
C		2
L3		2
L4L		2
L4R		2
GB1		4
GB2		4
GW1		2
GW2		1
M2		4
M3		4
M4		2

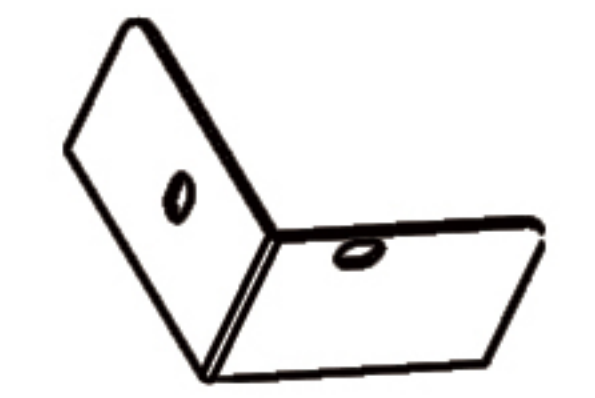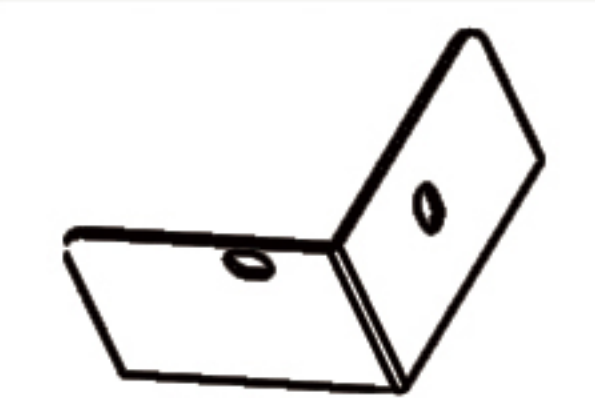NO1	PART	QTY
M5L		1
M5R		1
Q1		16
Q2		4
Q3		3
Q4		16
M		4
J1		4
MB		2
DJT		5
FJT		4
ZJT		4
DGT		4
GE		2
GD		4
G2		4

PARTS LIST

NO1	PART	QTY
B3L		1
B3R		1
LSM		

NO1	PART	QTY
F1		
F3		

NO1	PART	QTY
F4		
F8		

Install LSM at screw exposure,
Prevent collisions.

Warning & Attention:

-Take care of sharp edges; Please wear gloves;

-You are advised to read the whole procedure before installing it

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-All panels are clearly marked and care should be taken to use the correct one. It is important that these instructions are followed step by step;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

Tools:




Gloves



Ladder



Electric drill

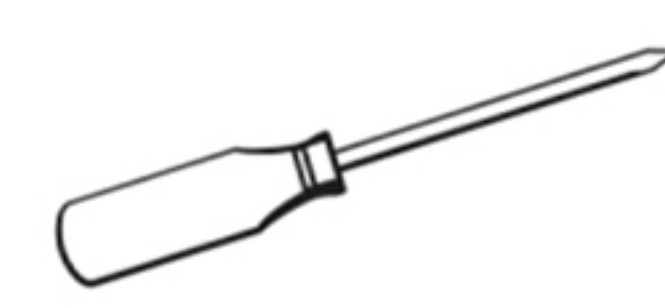


Phillips screwdriver



Safety Helmet Hat



goggles

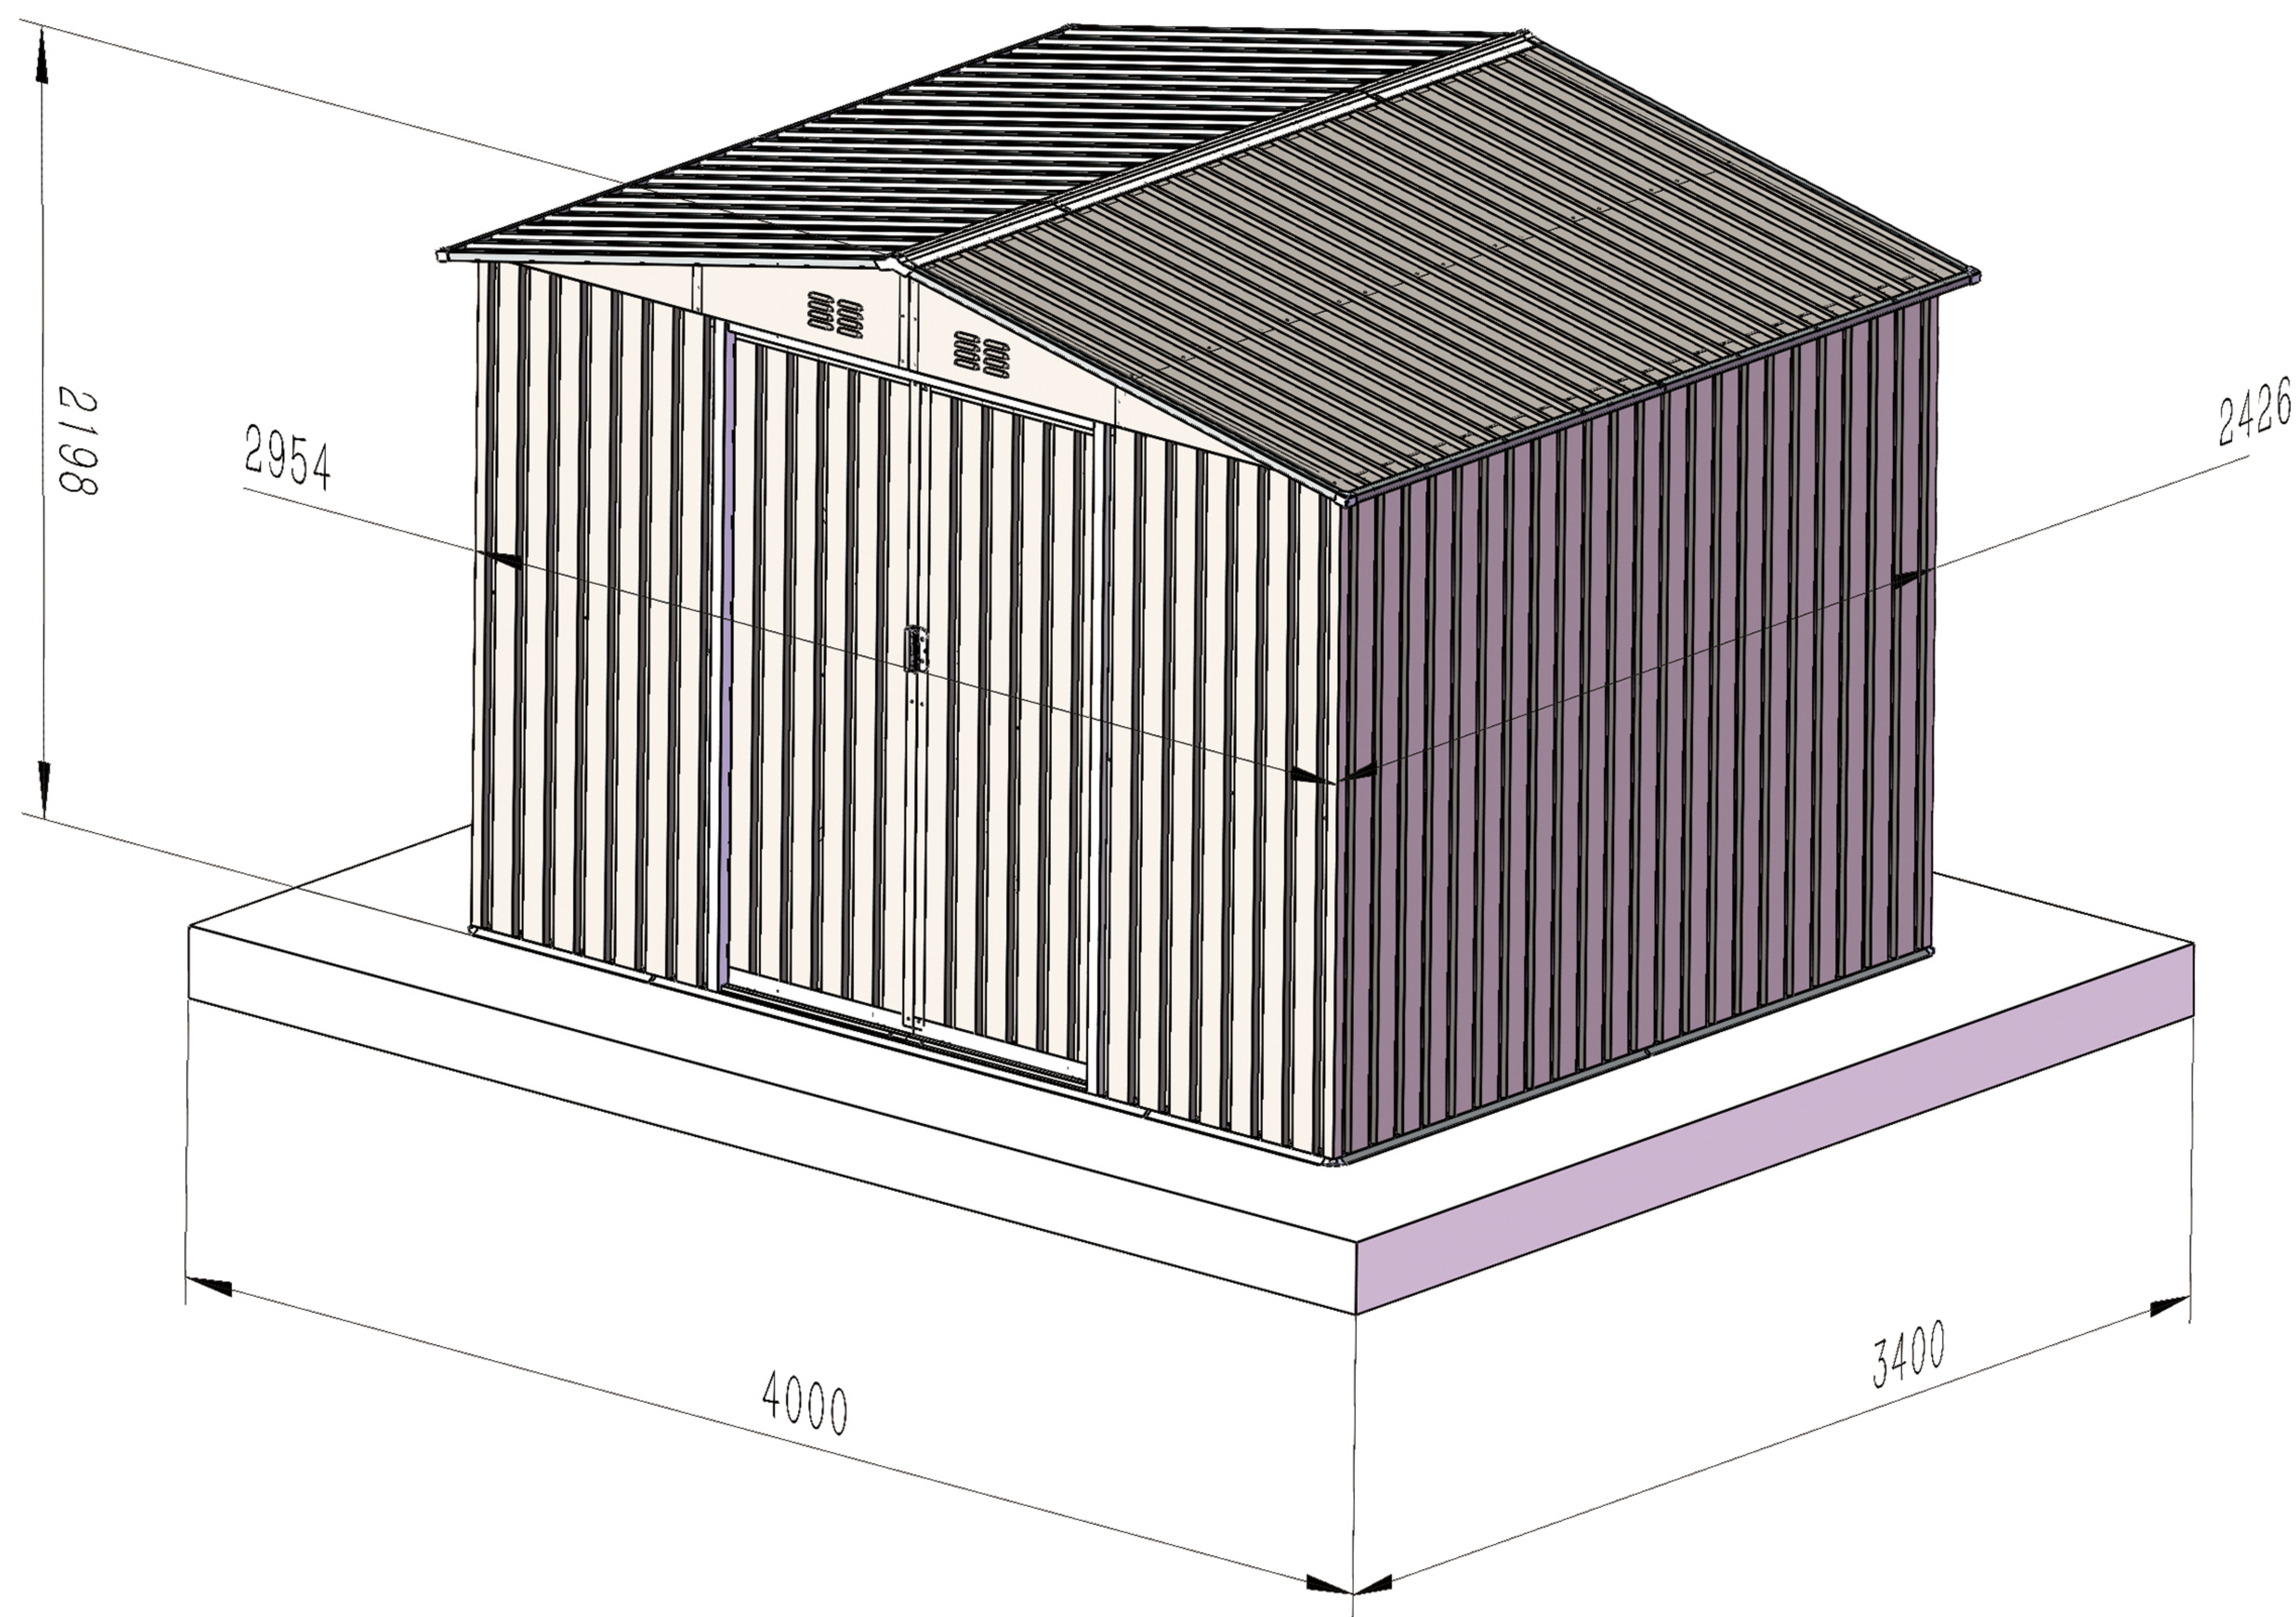

Note: Take care of sharp edges.


All panels are clearly marked and care should be taken to use the bcorrect one. It is important that these instructions are followed step by step.

NO.	PART	Qty.
D1		1
D1L		1
D1R		1

NO.	PART	Qty.
D2R		2
D2L		2
D3R		1

NO.	PART	Qty.
D3L		1
DJT		5
DGT		4

NO.	PART	Qty.
F1		
F8		

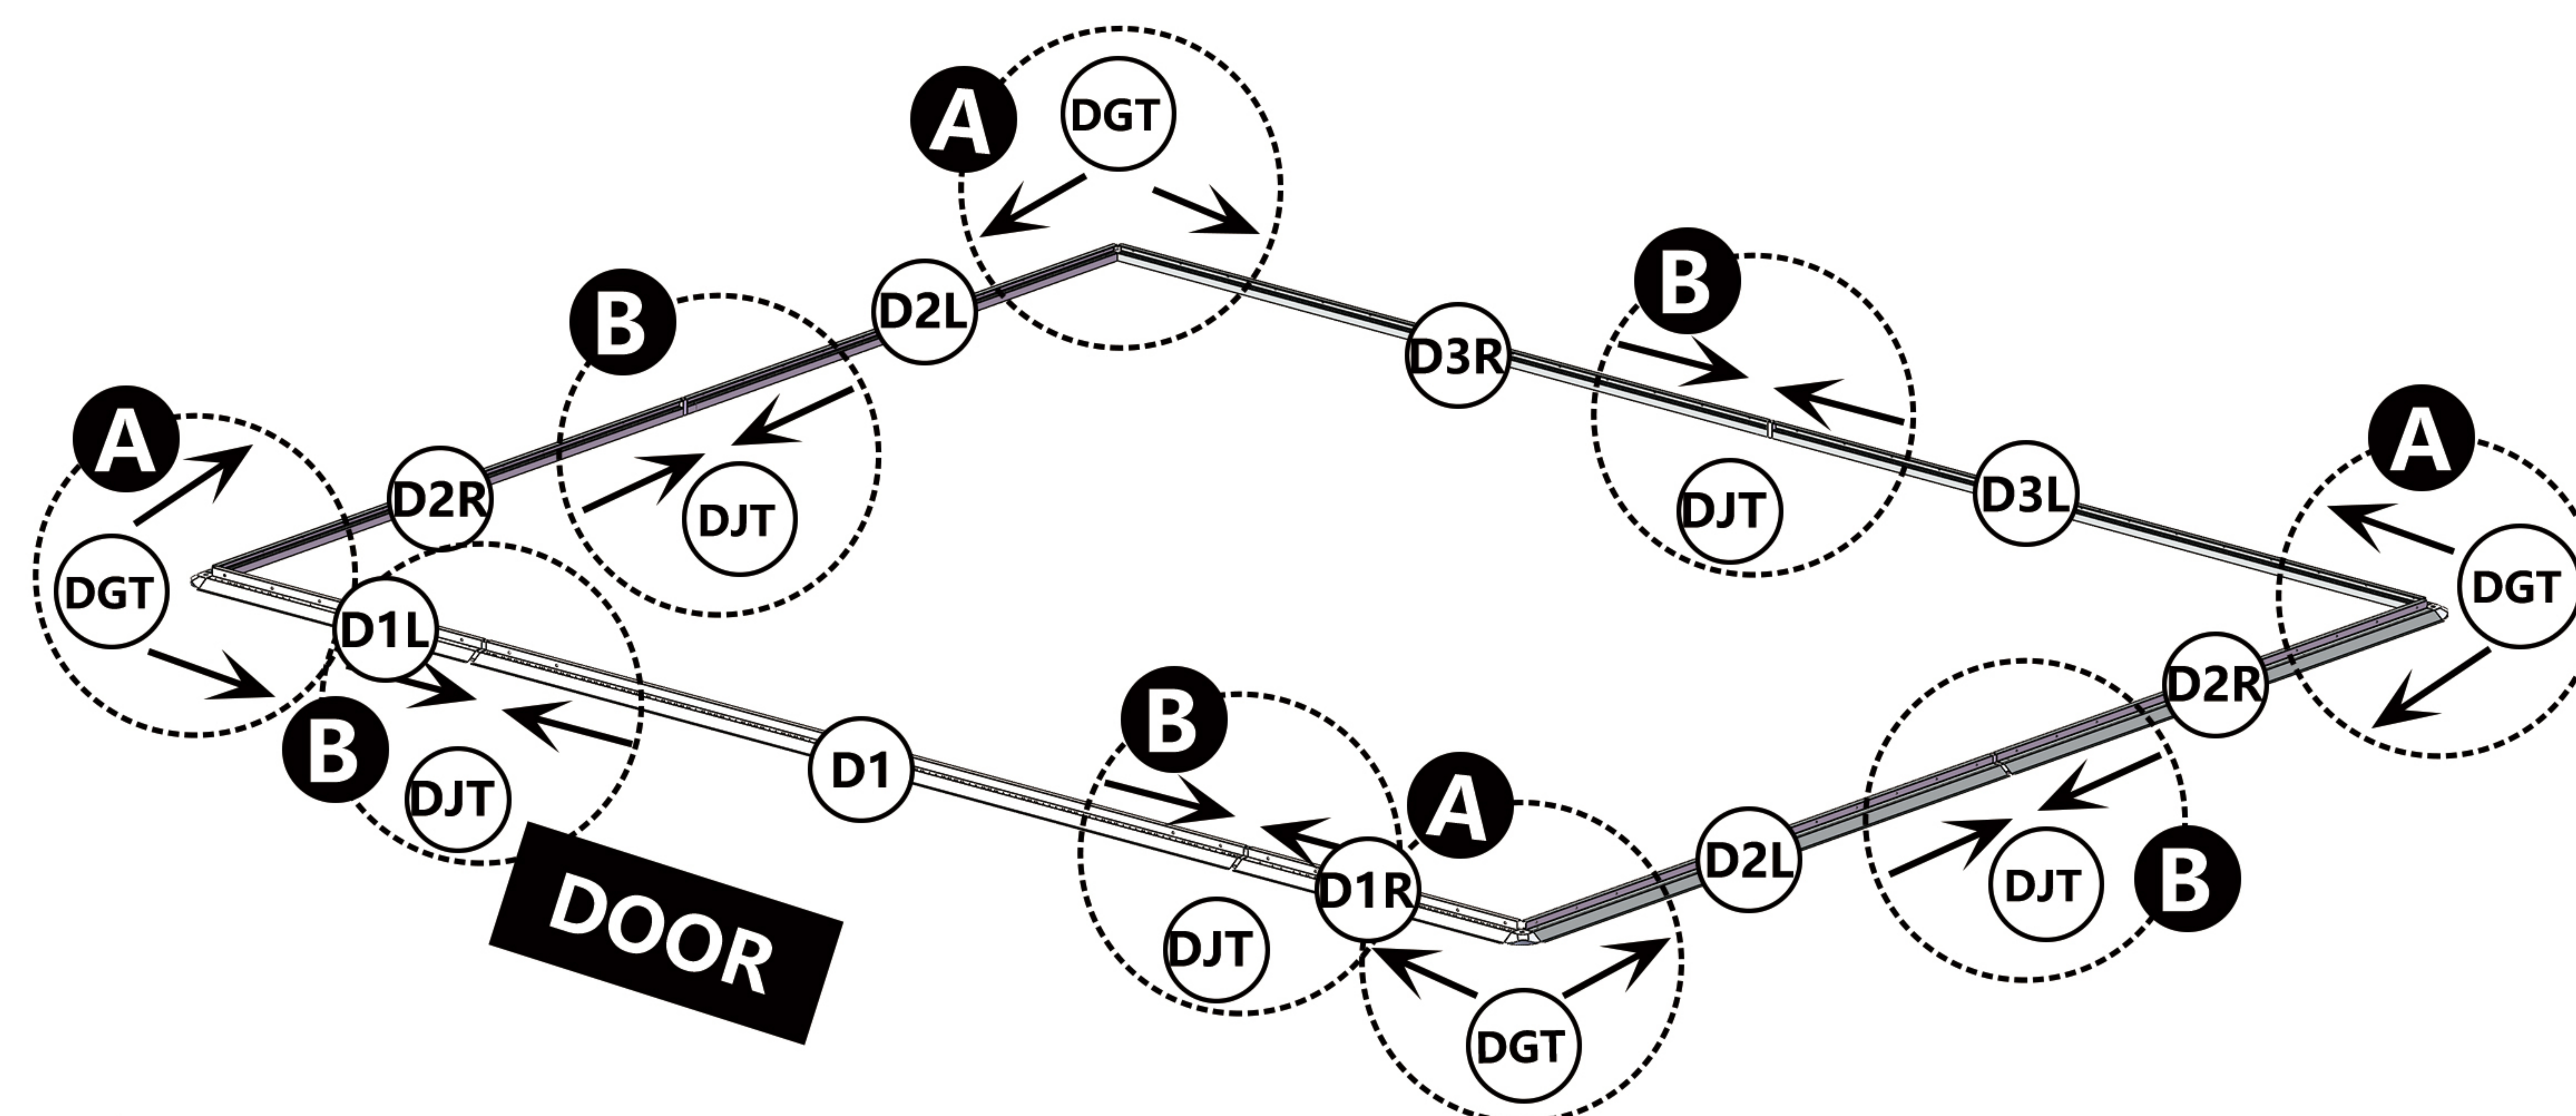

Notice:

DJT installation: At the junction of two arrows, please install in the direction indicated by the arrows (→←).

DGT installation: Two ground pallets are connected to the DGT as shown in the figure.

Each DGT needs to be fixed with two F1s.

F8 installation: After the overall installation is complete, in the case of mud floor,


F8 is installed into the DGT hole, as shown in Figure 1.

Use expansion screws to install other floors.




The installation space should be flat, and at least 4000x3400mm. The foundation is fixed on the ground in this space.


A

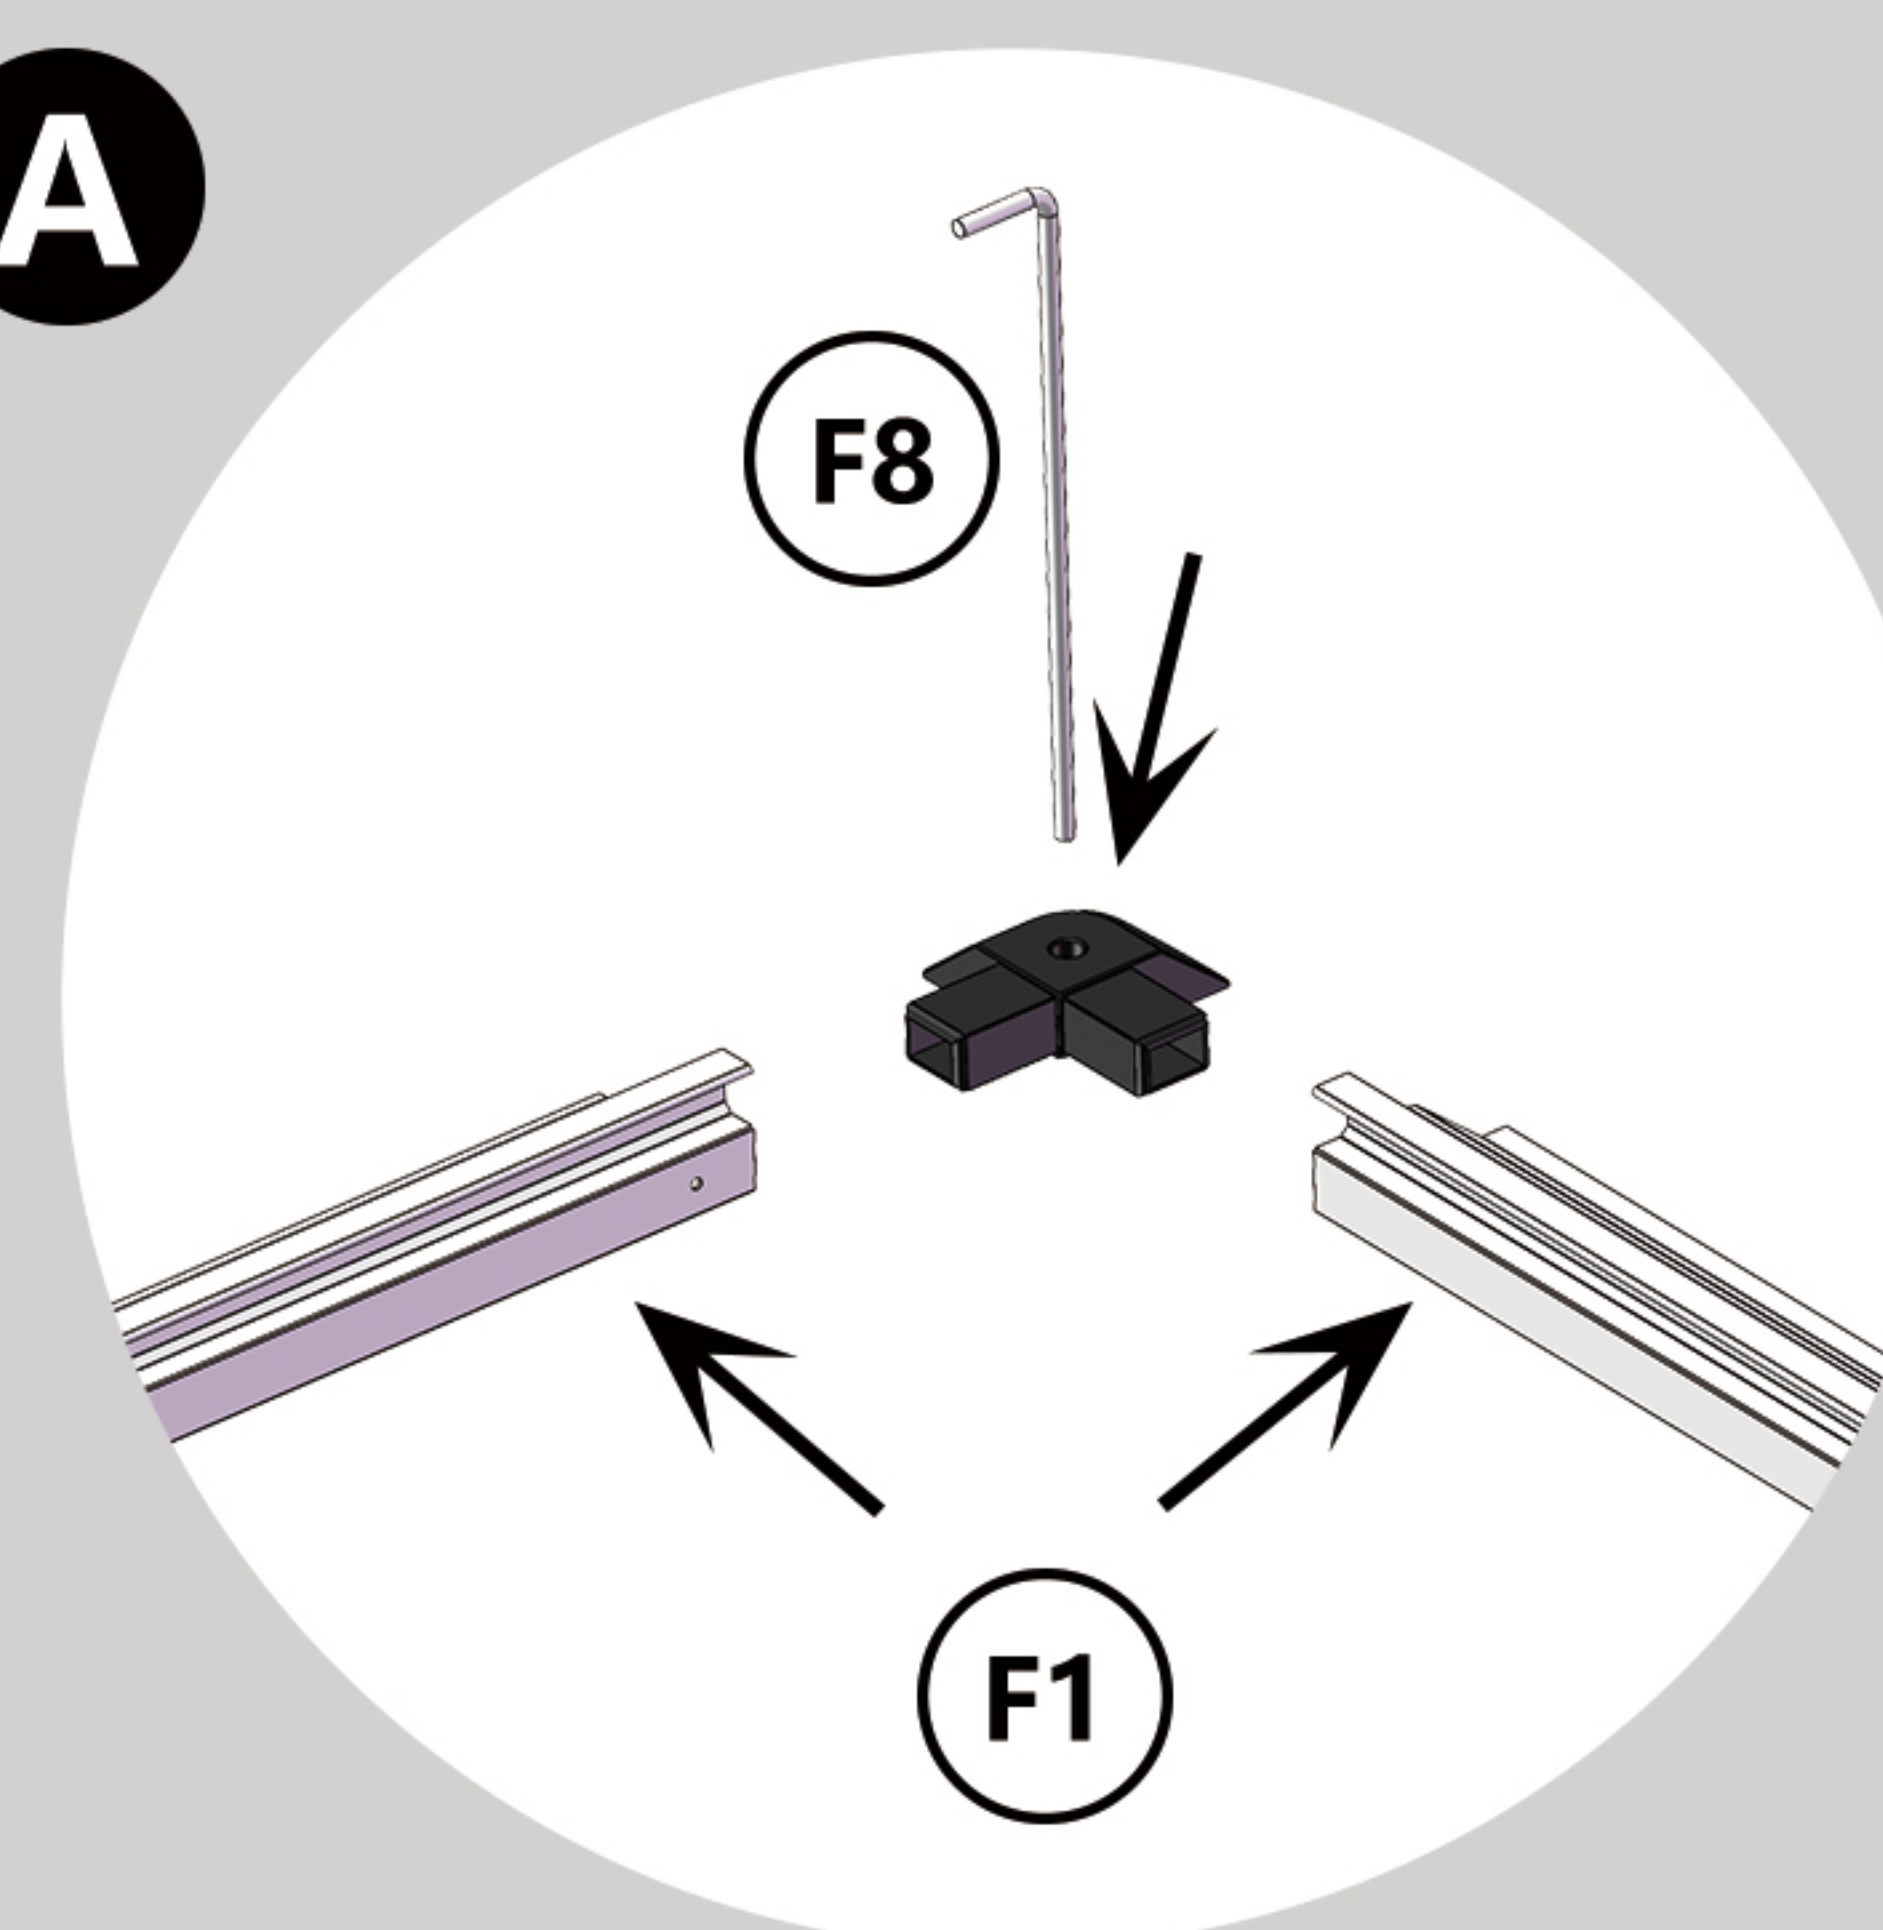

①

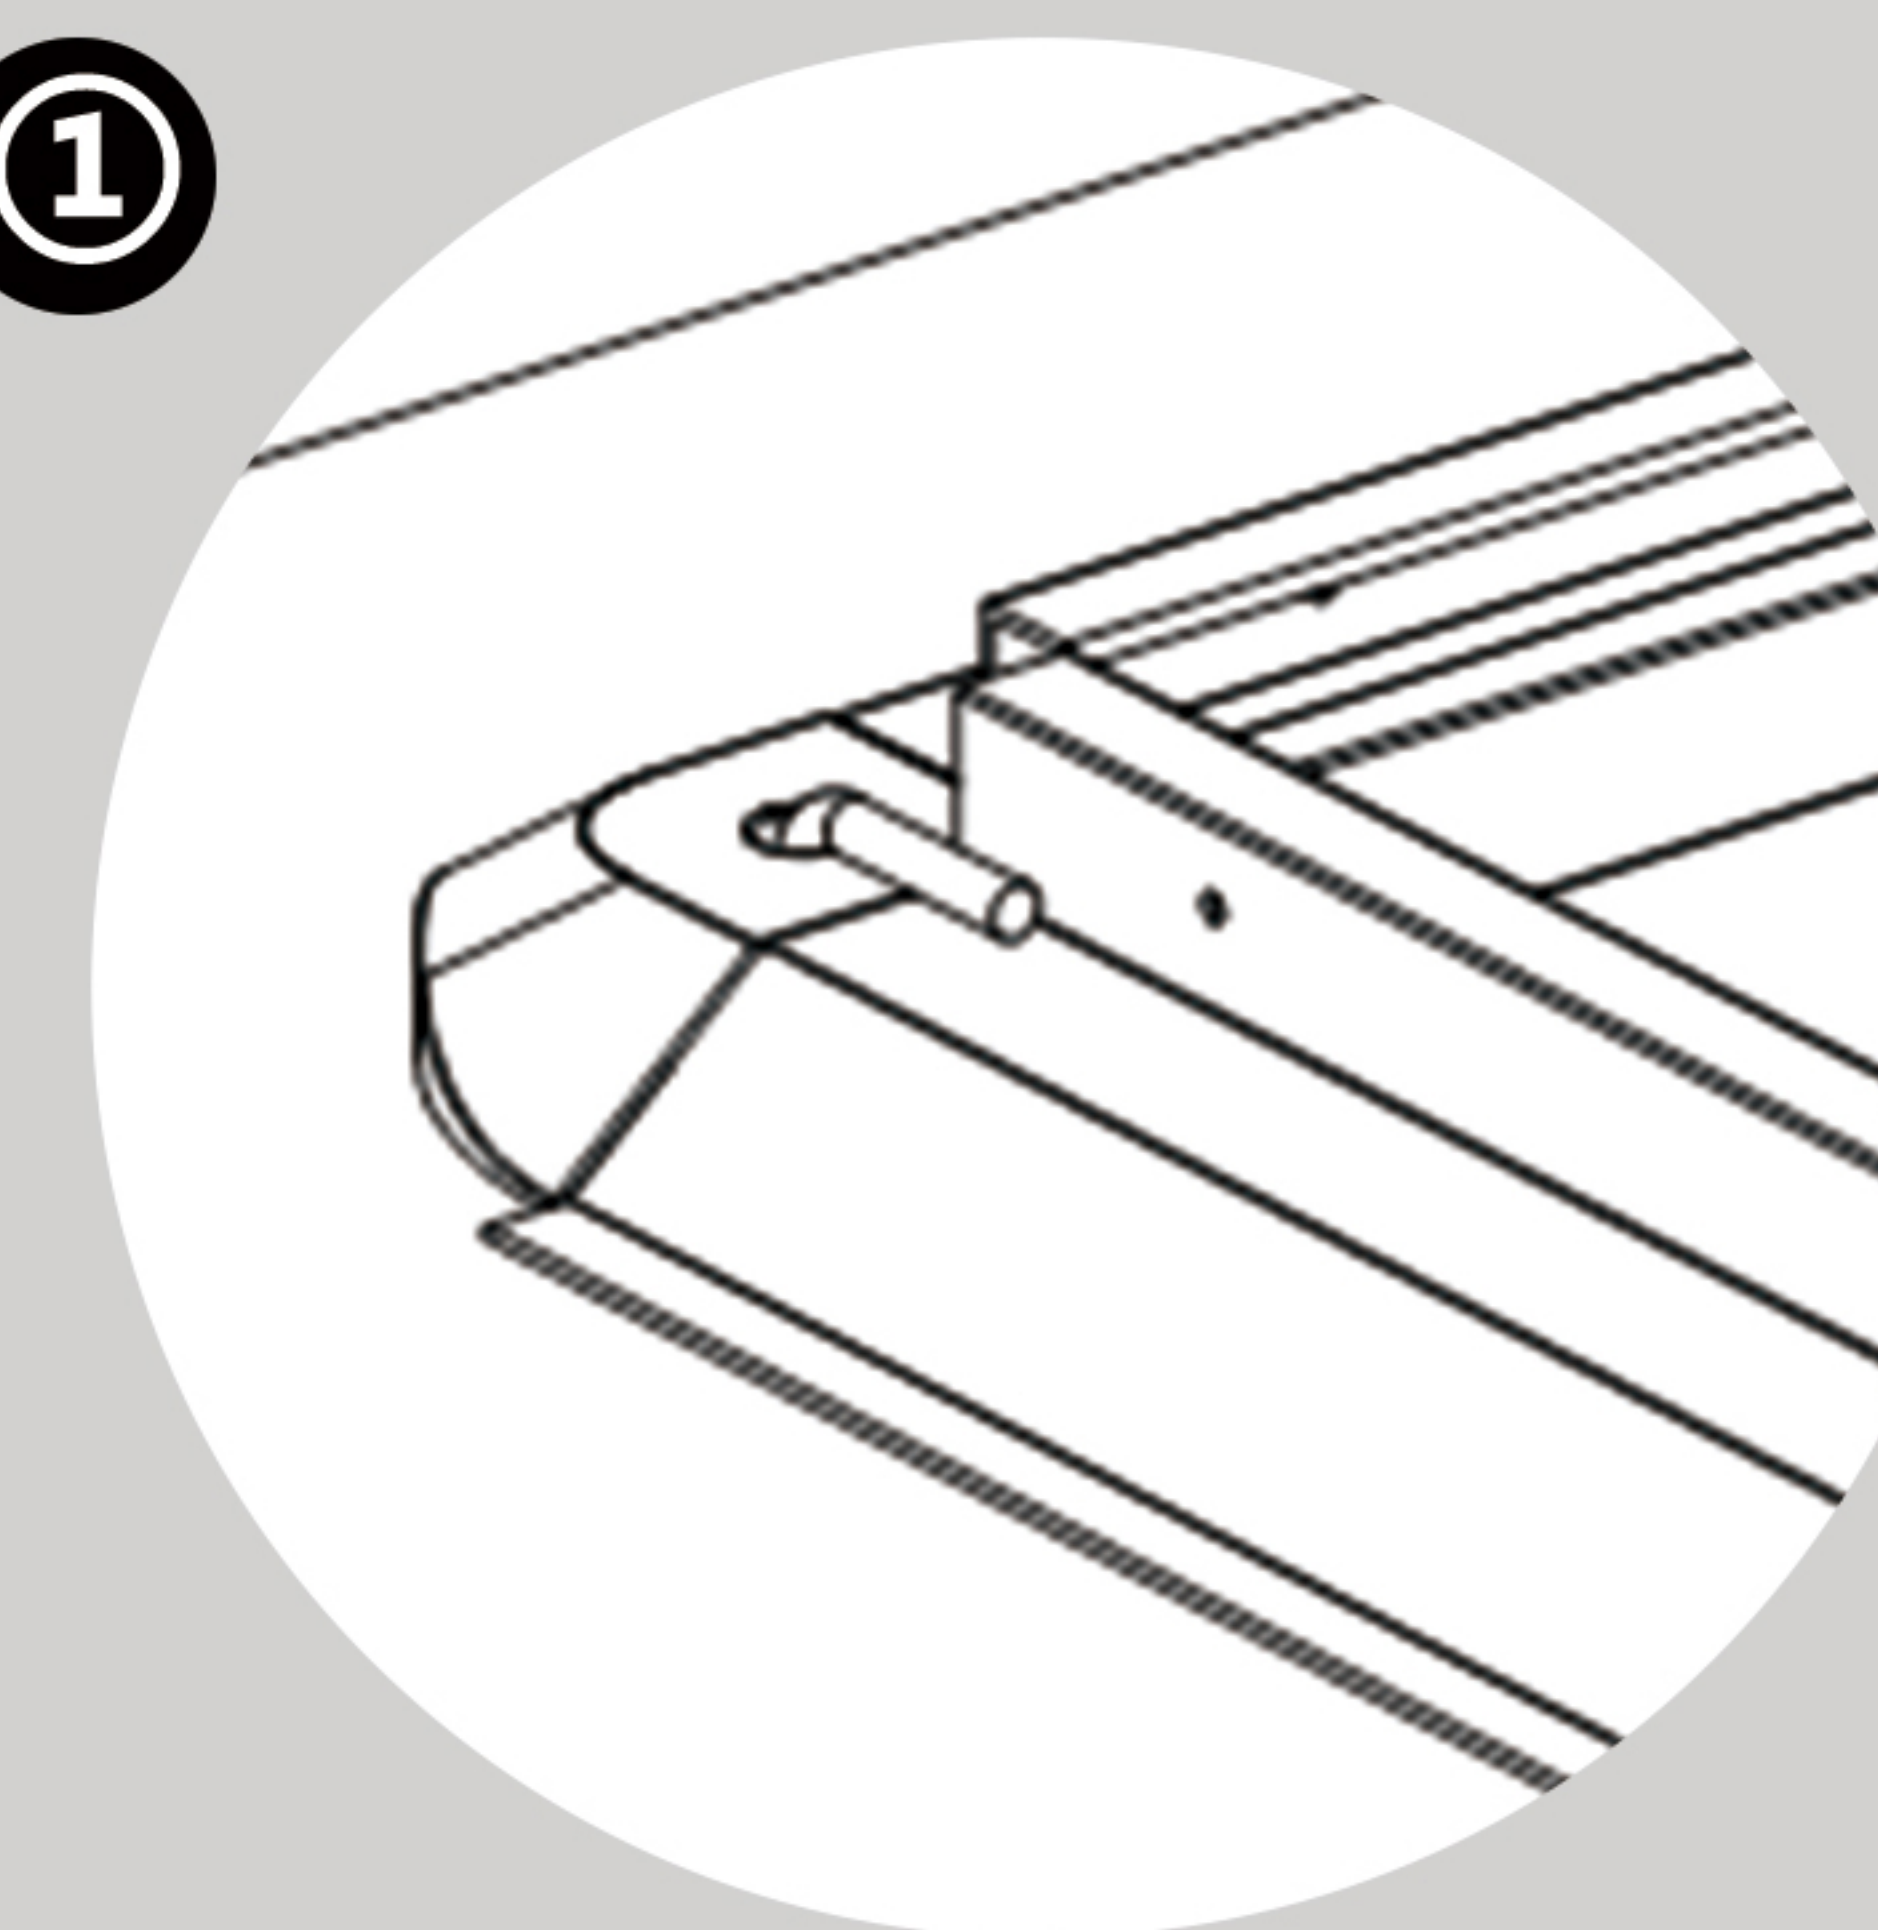

B

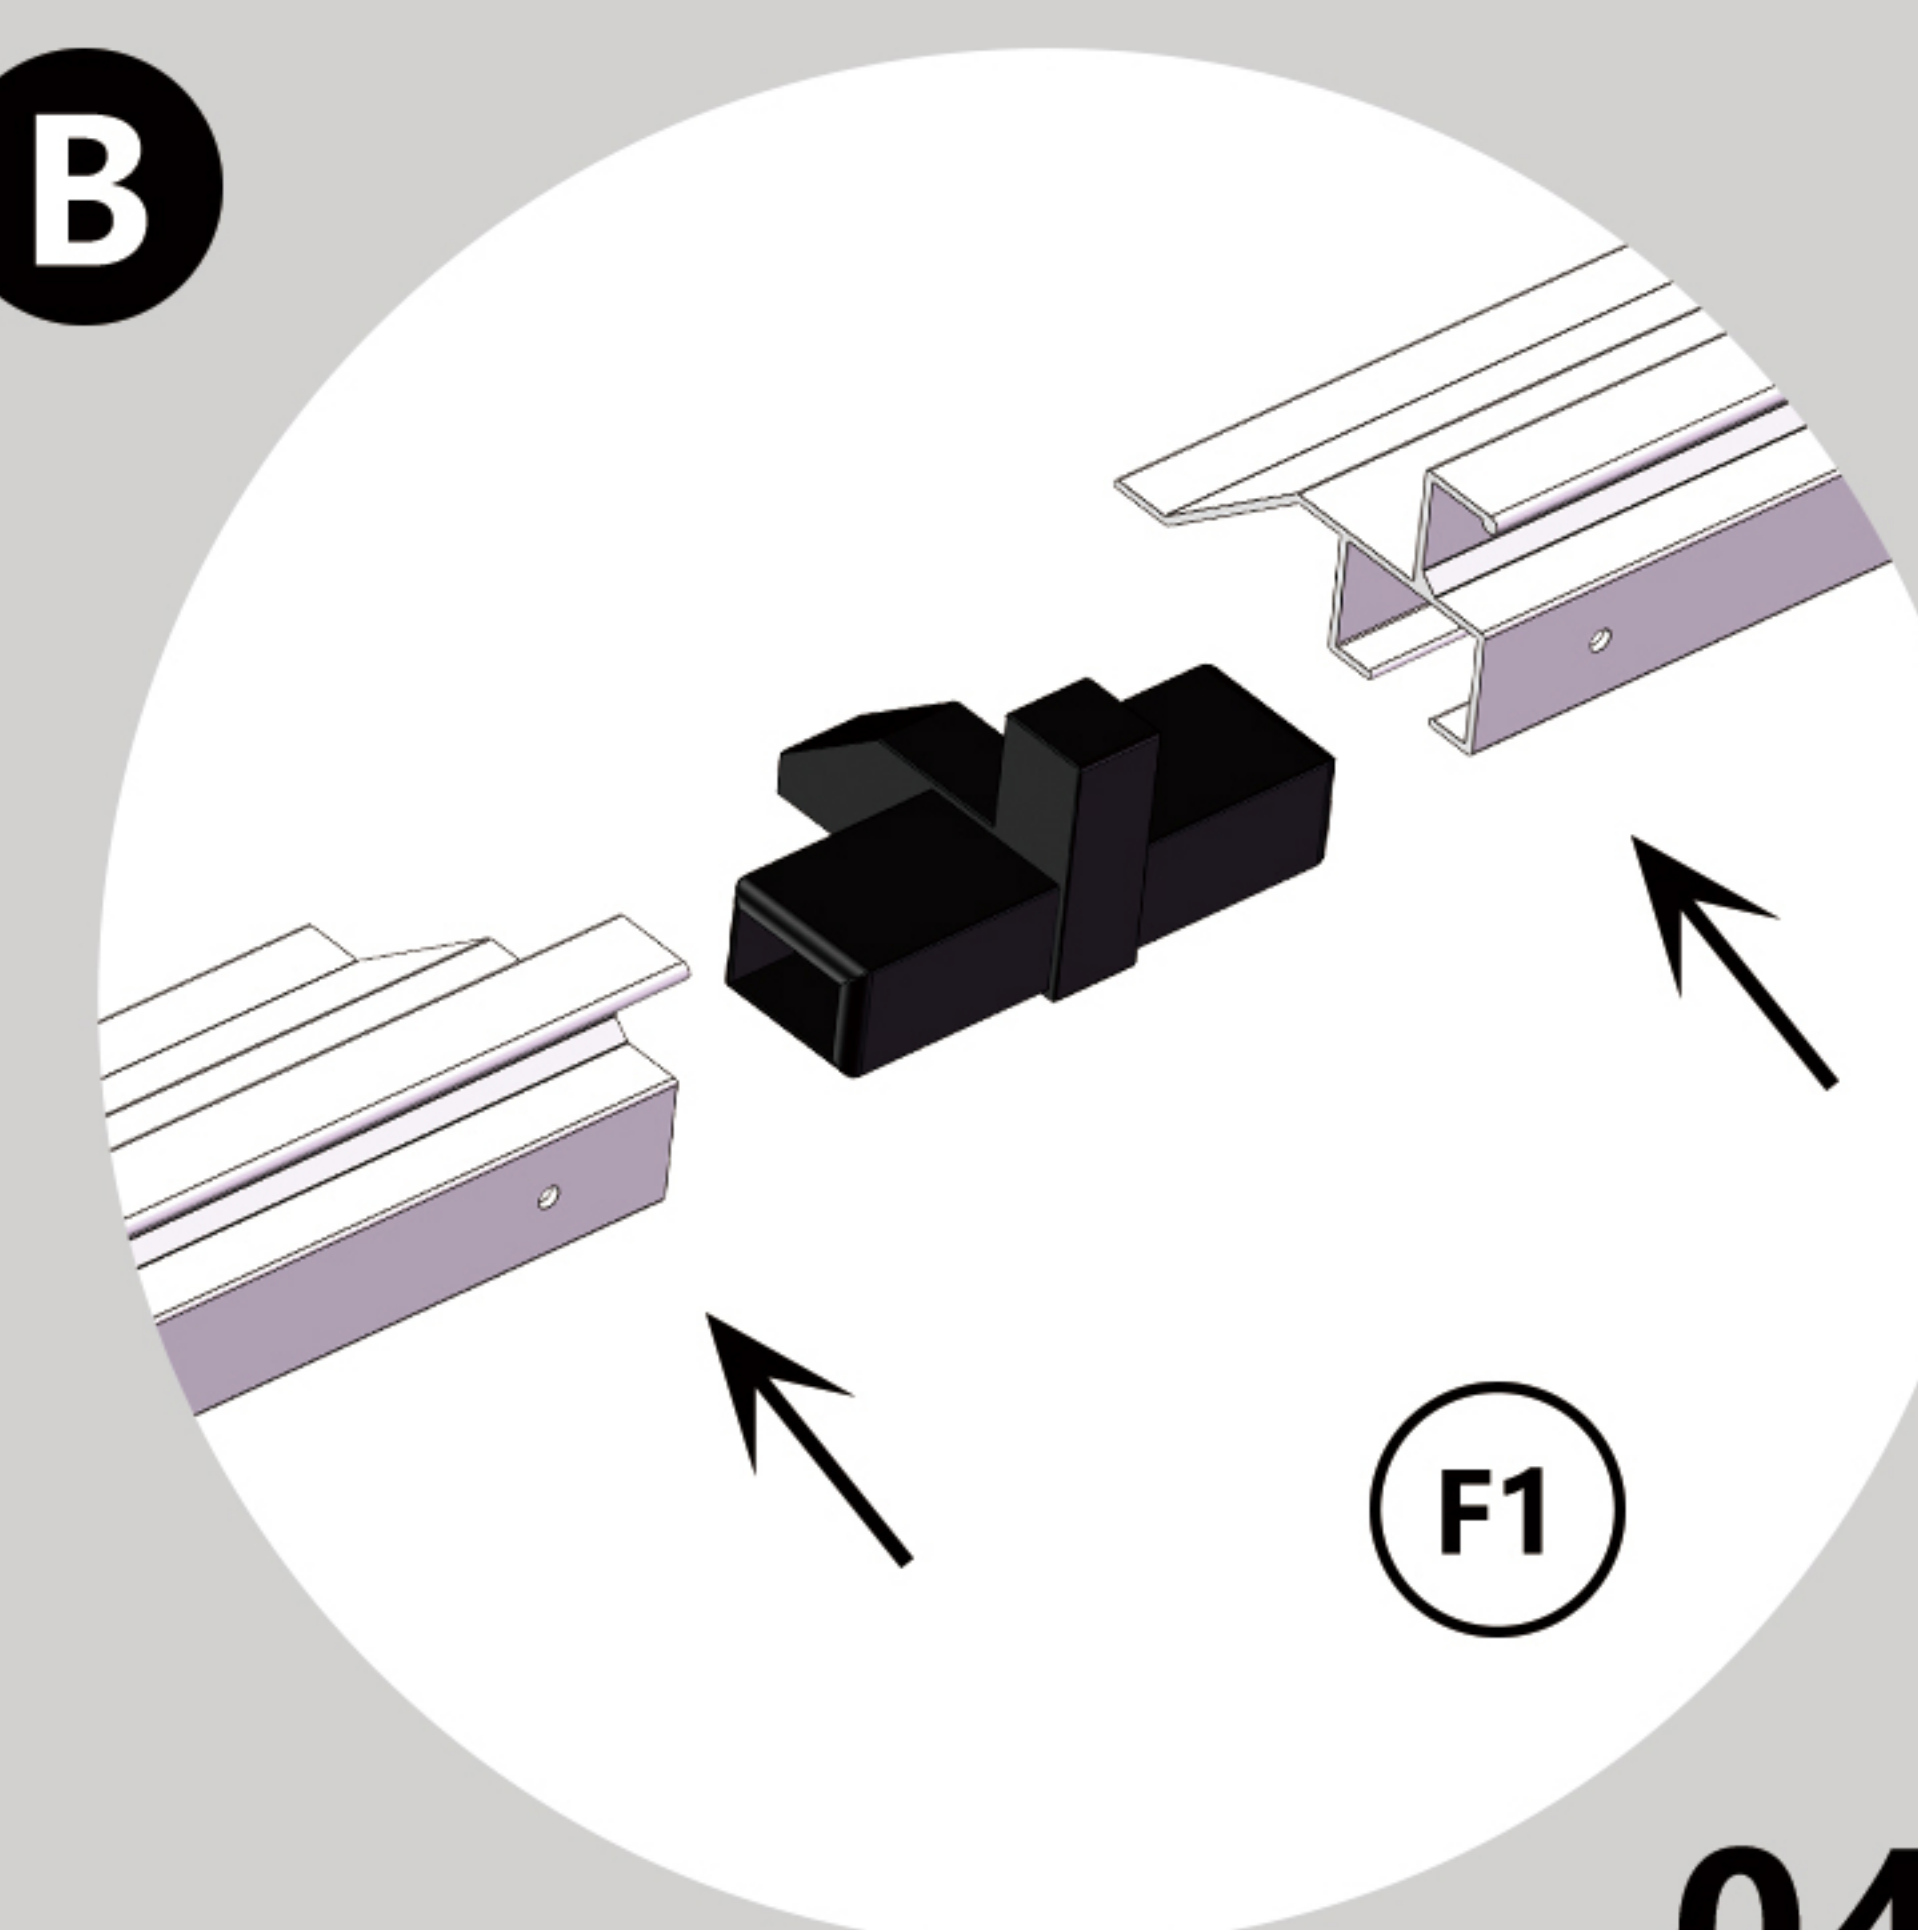


04

03



Note: Please wear gloves



NO.	PART	Qty.
D5		2
F1		

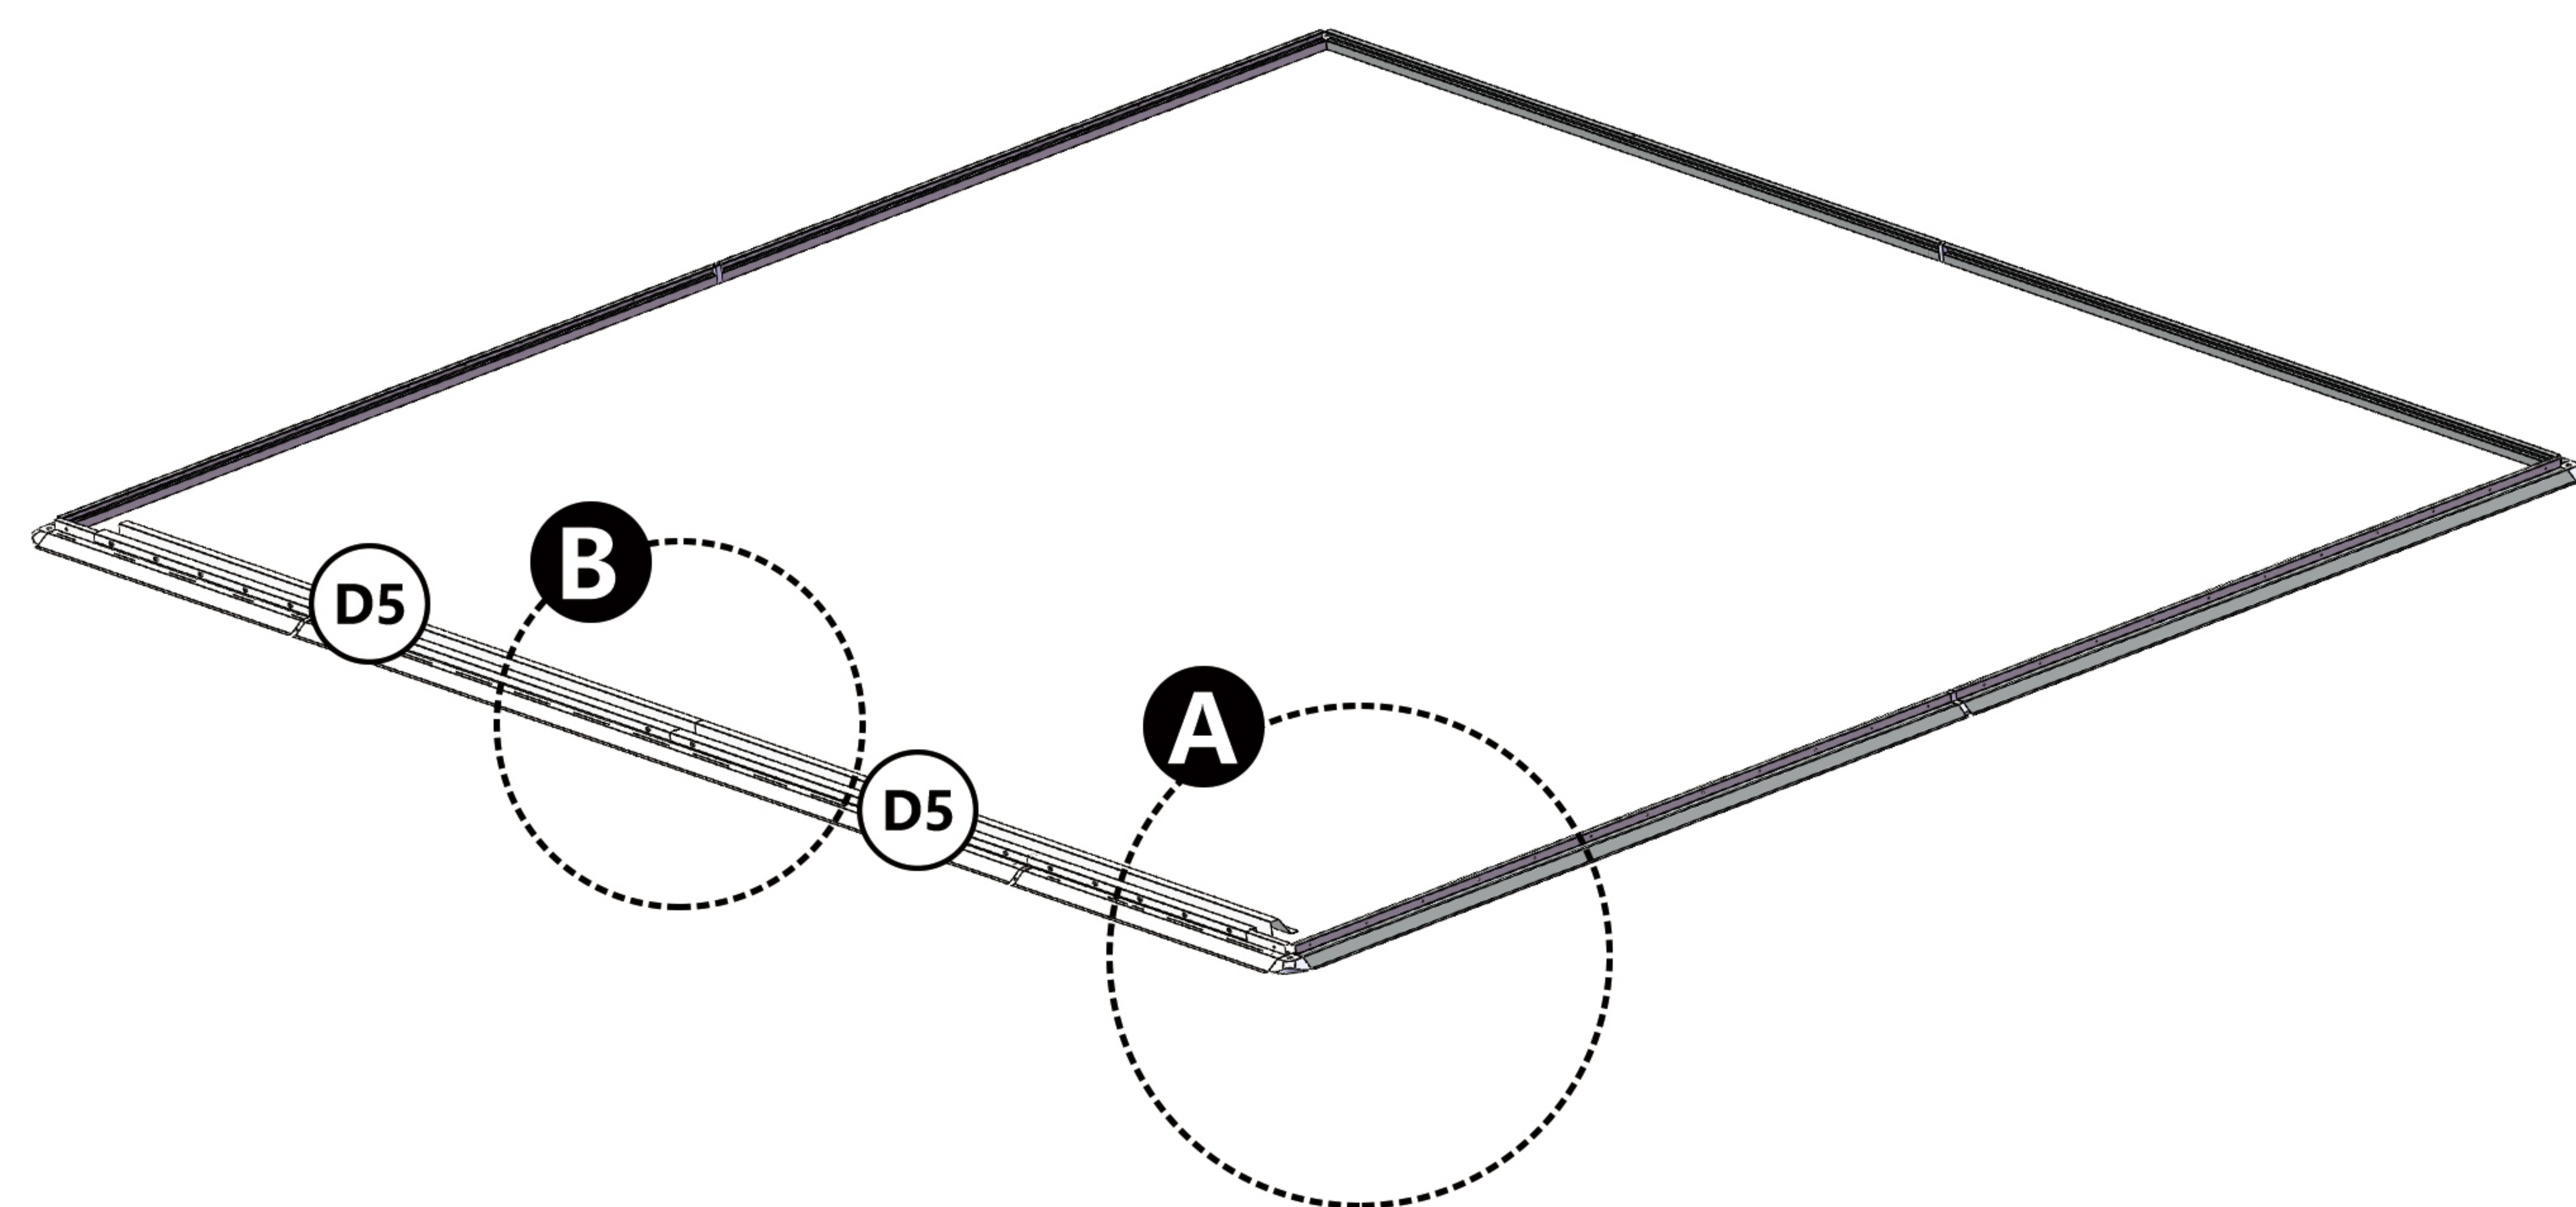


Notice:

Step A do not need to install screws, and align them with the ground frame holes.

Step B Connect the two D5s with F1.

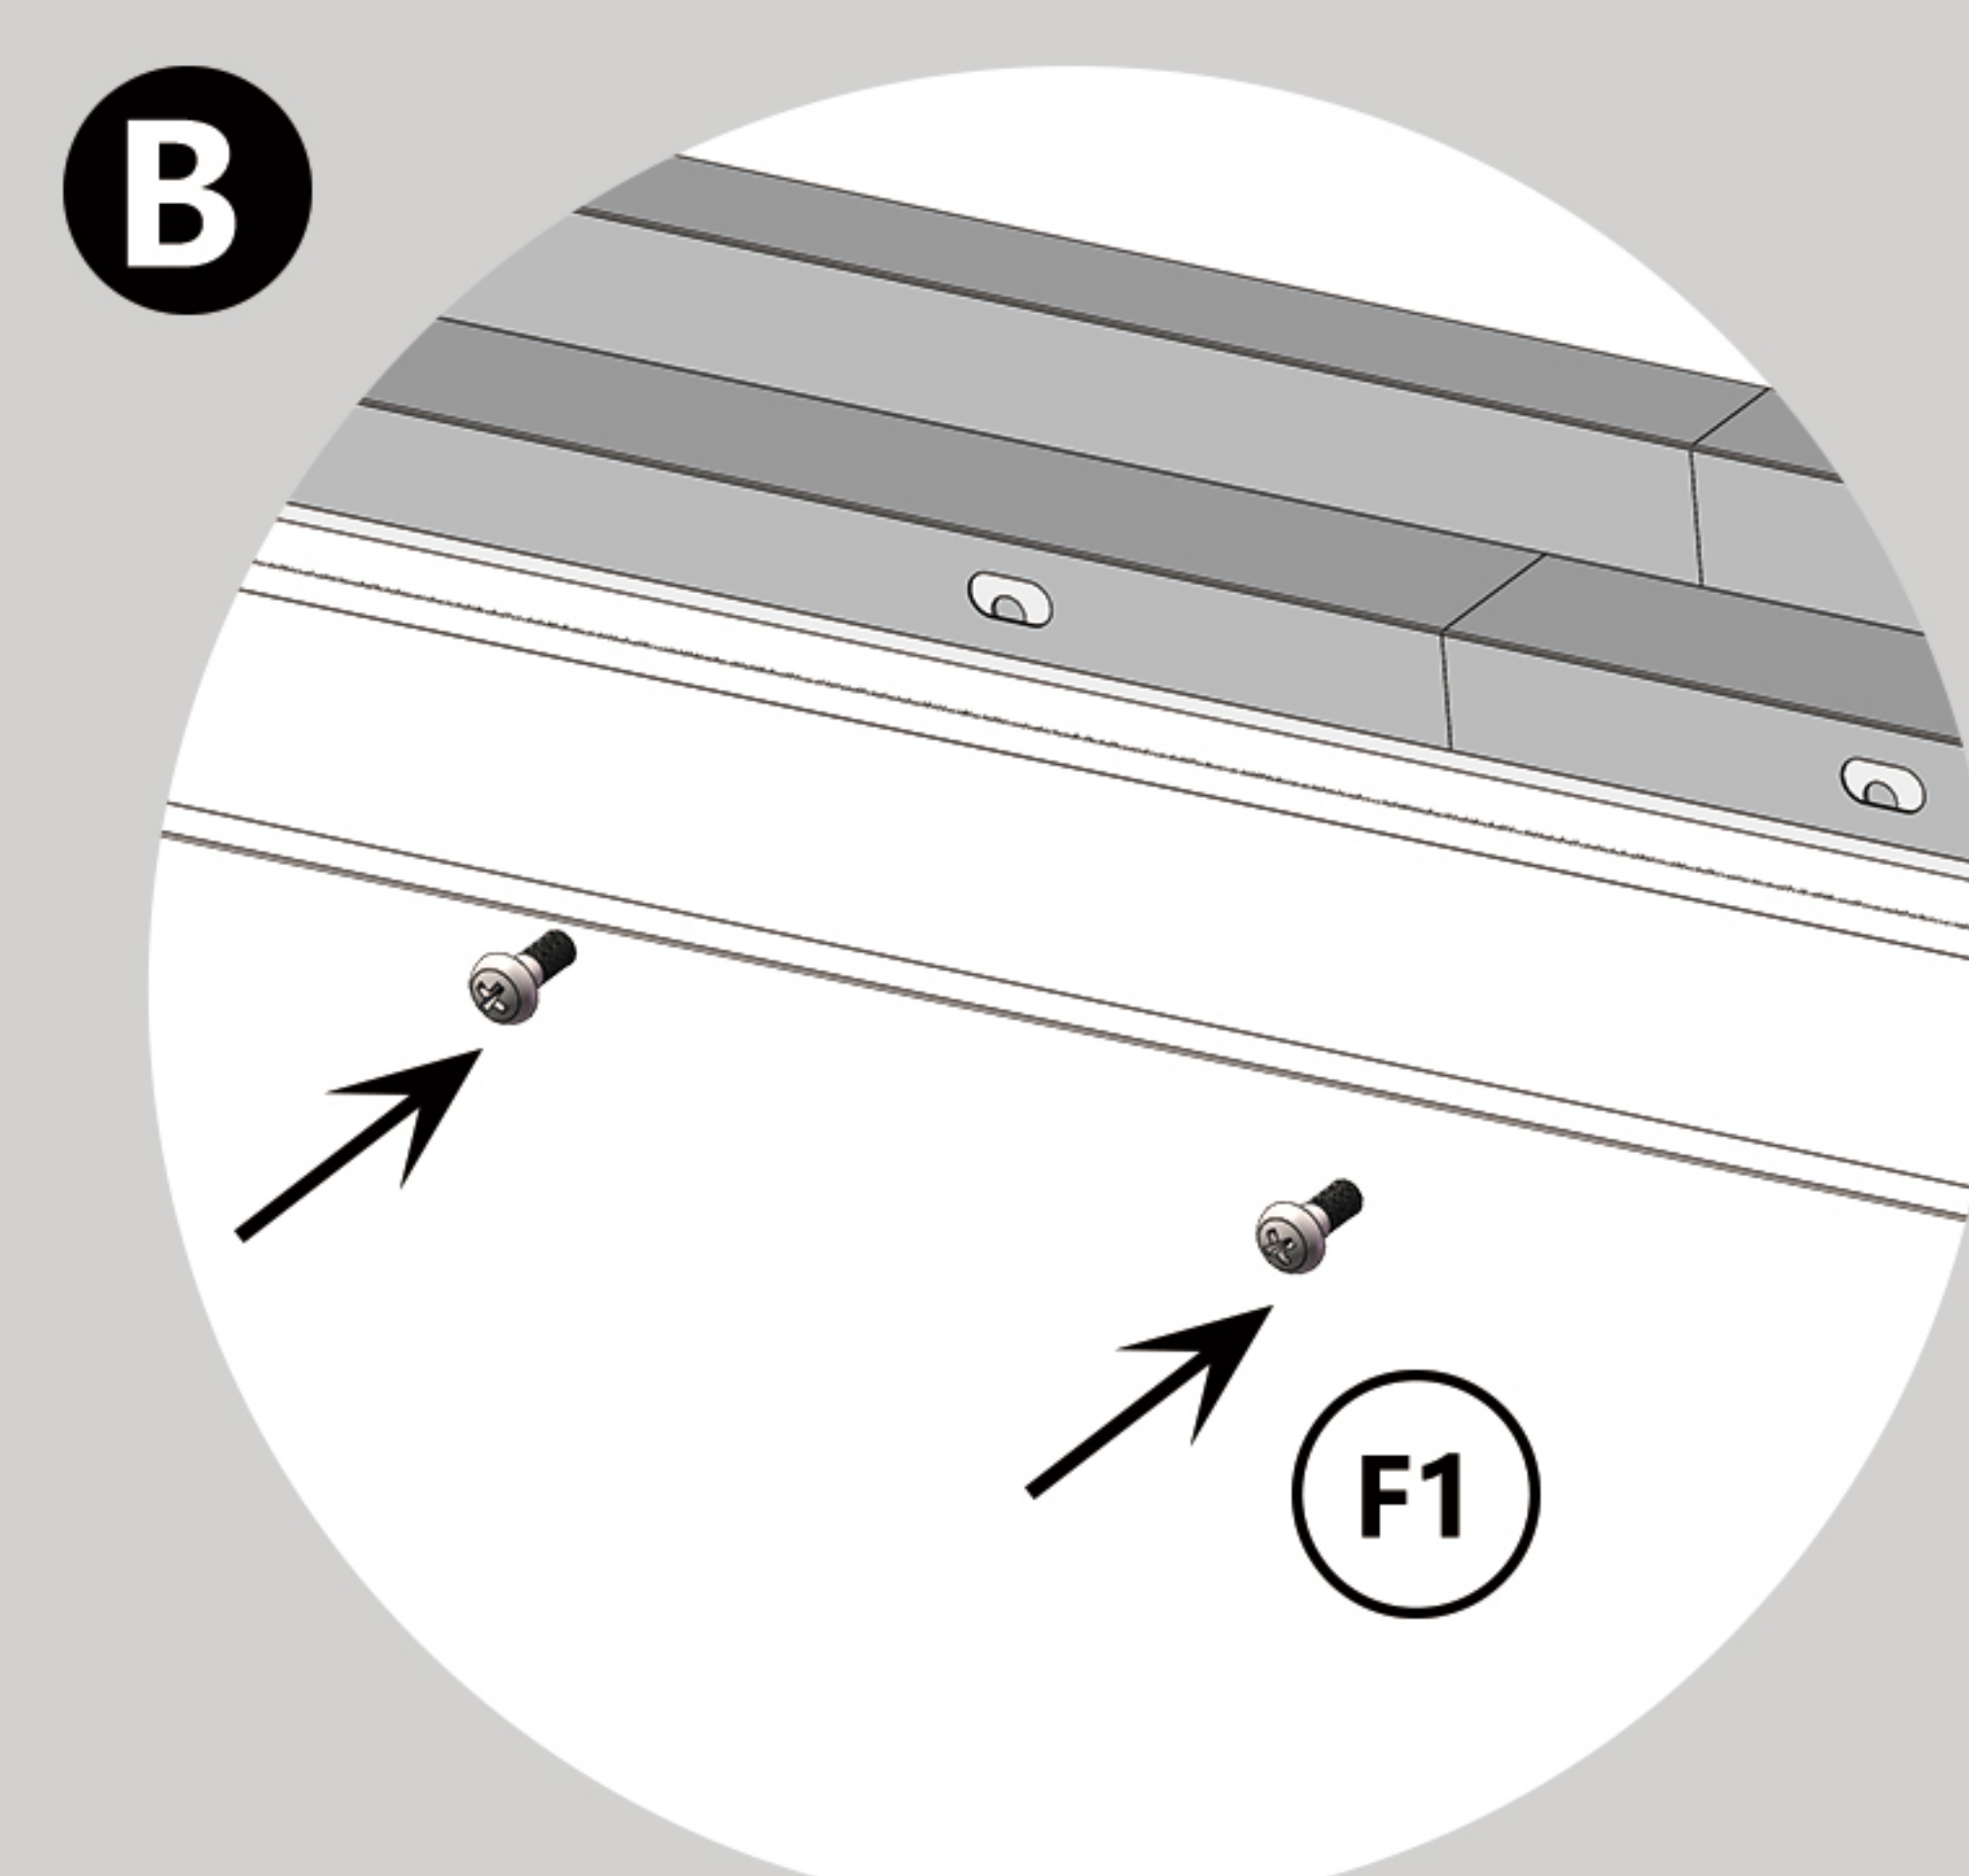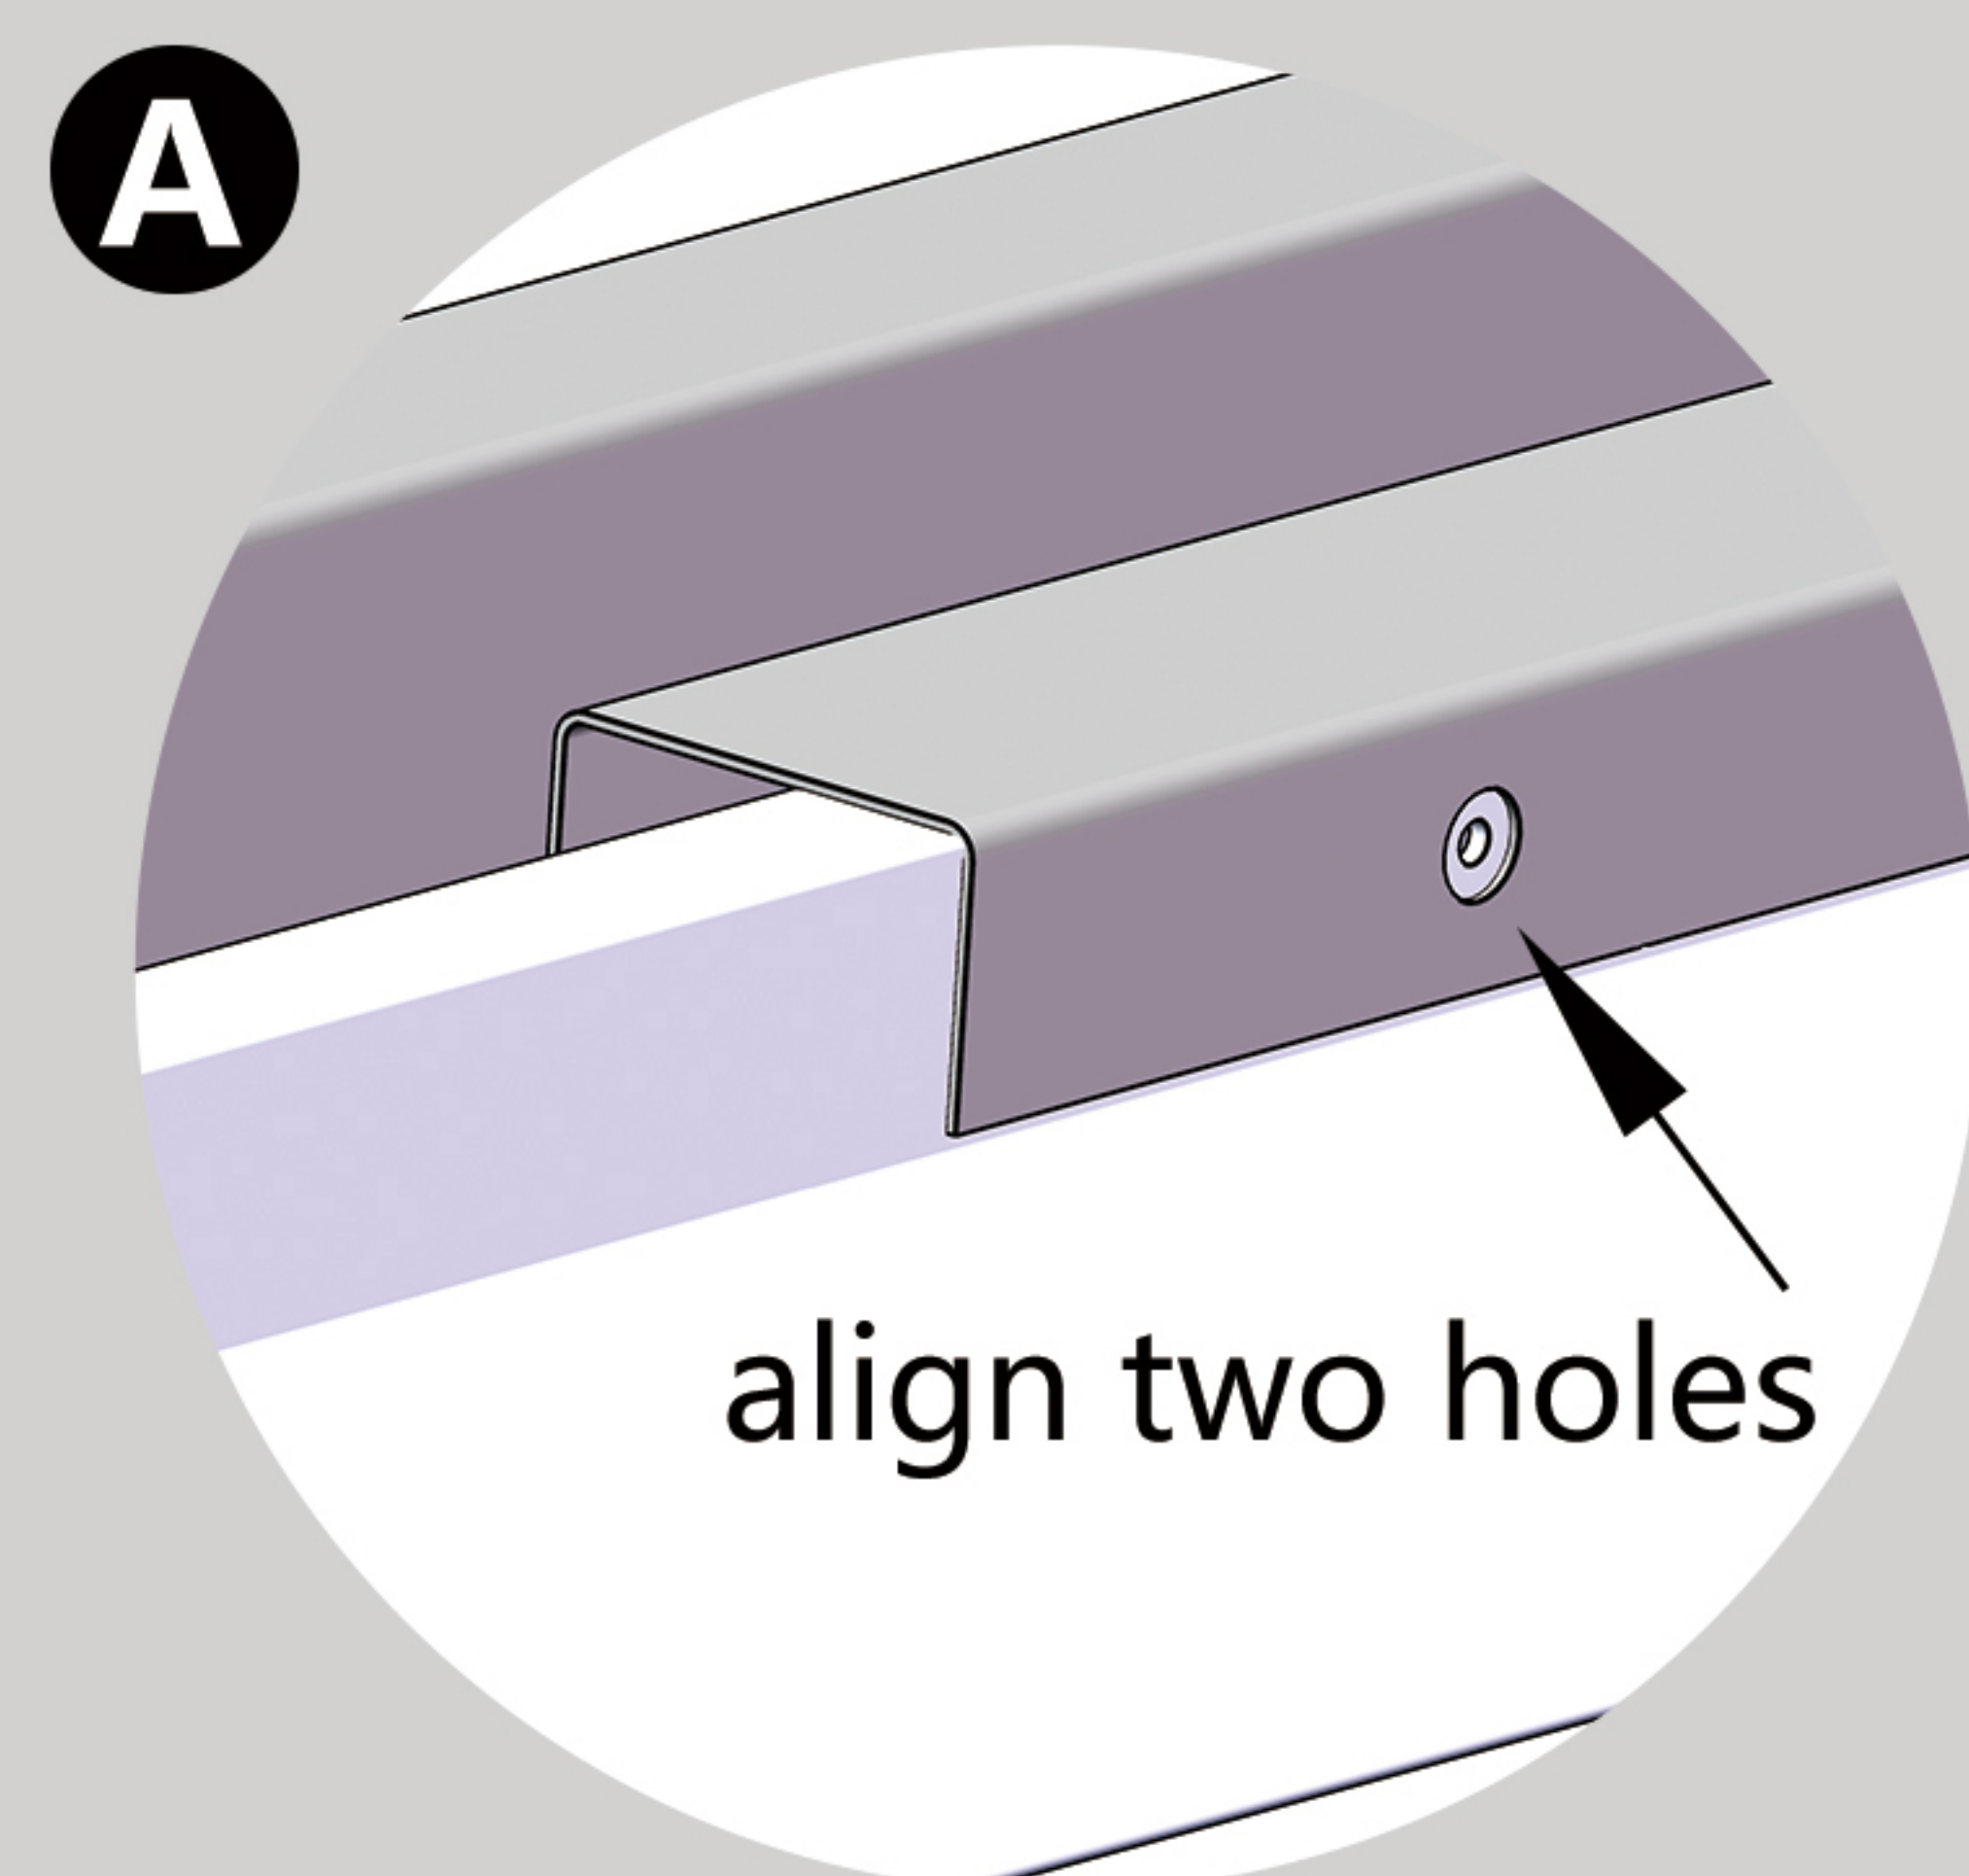


NO.	PART	Qty.
Q2		4
F1		

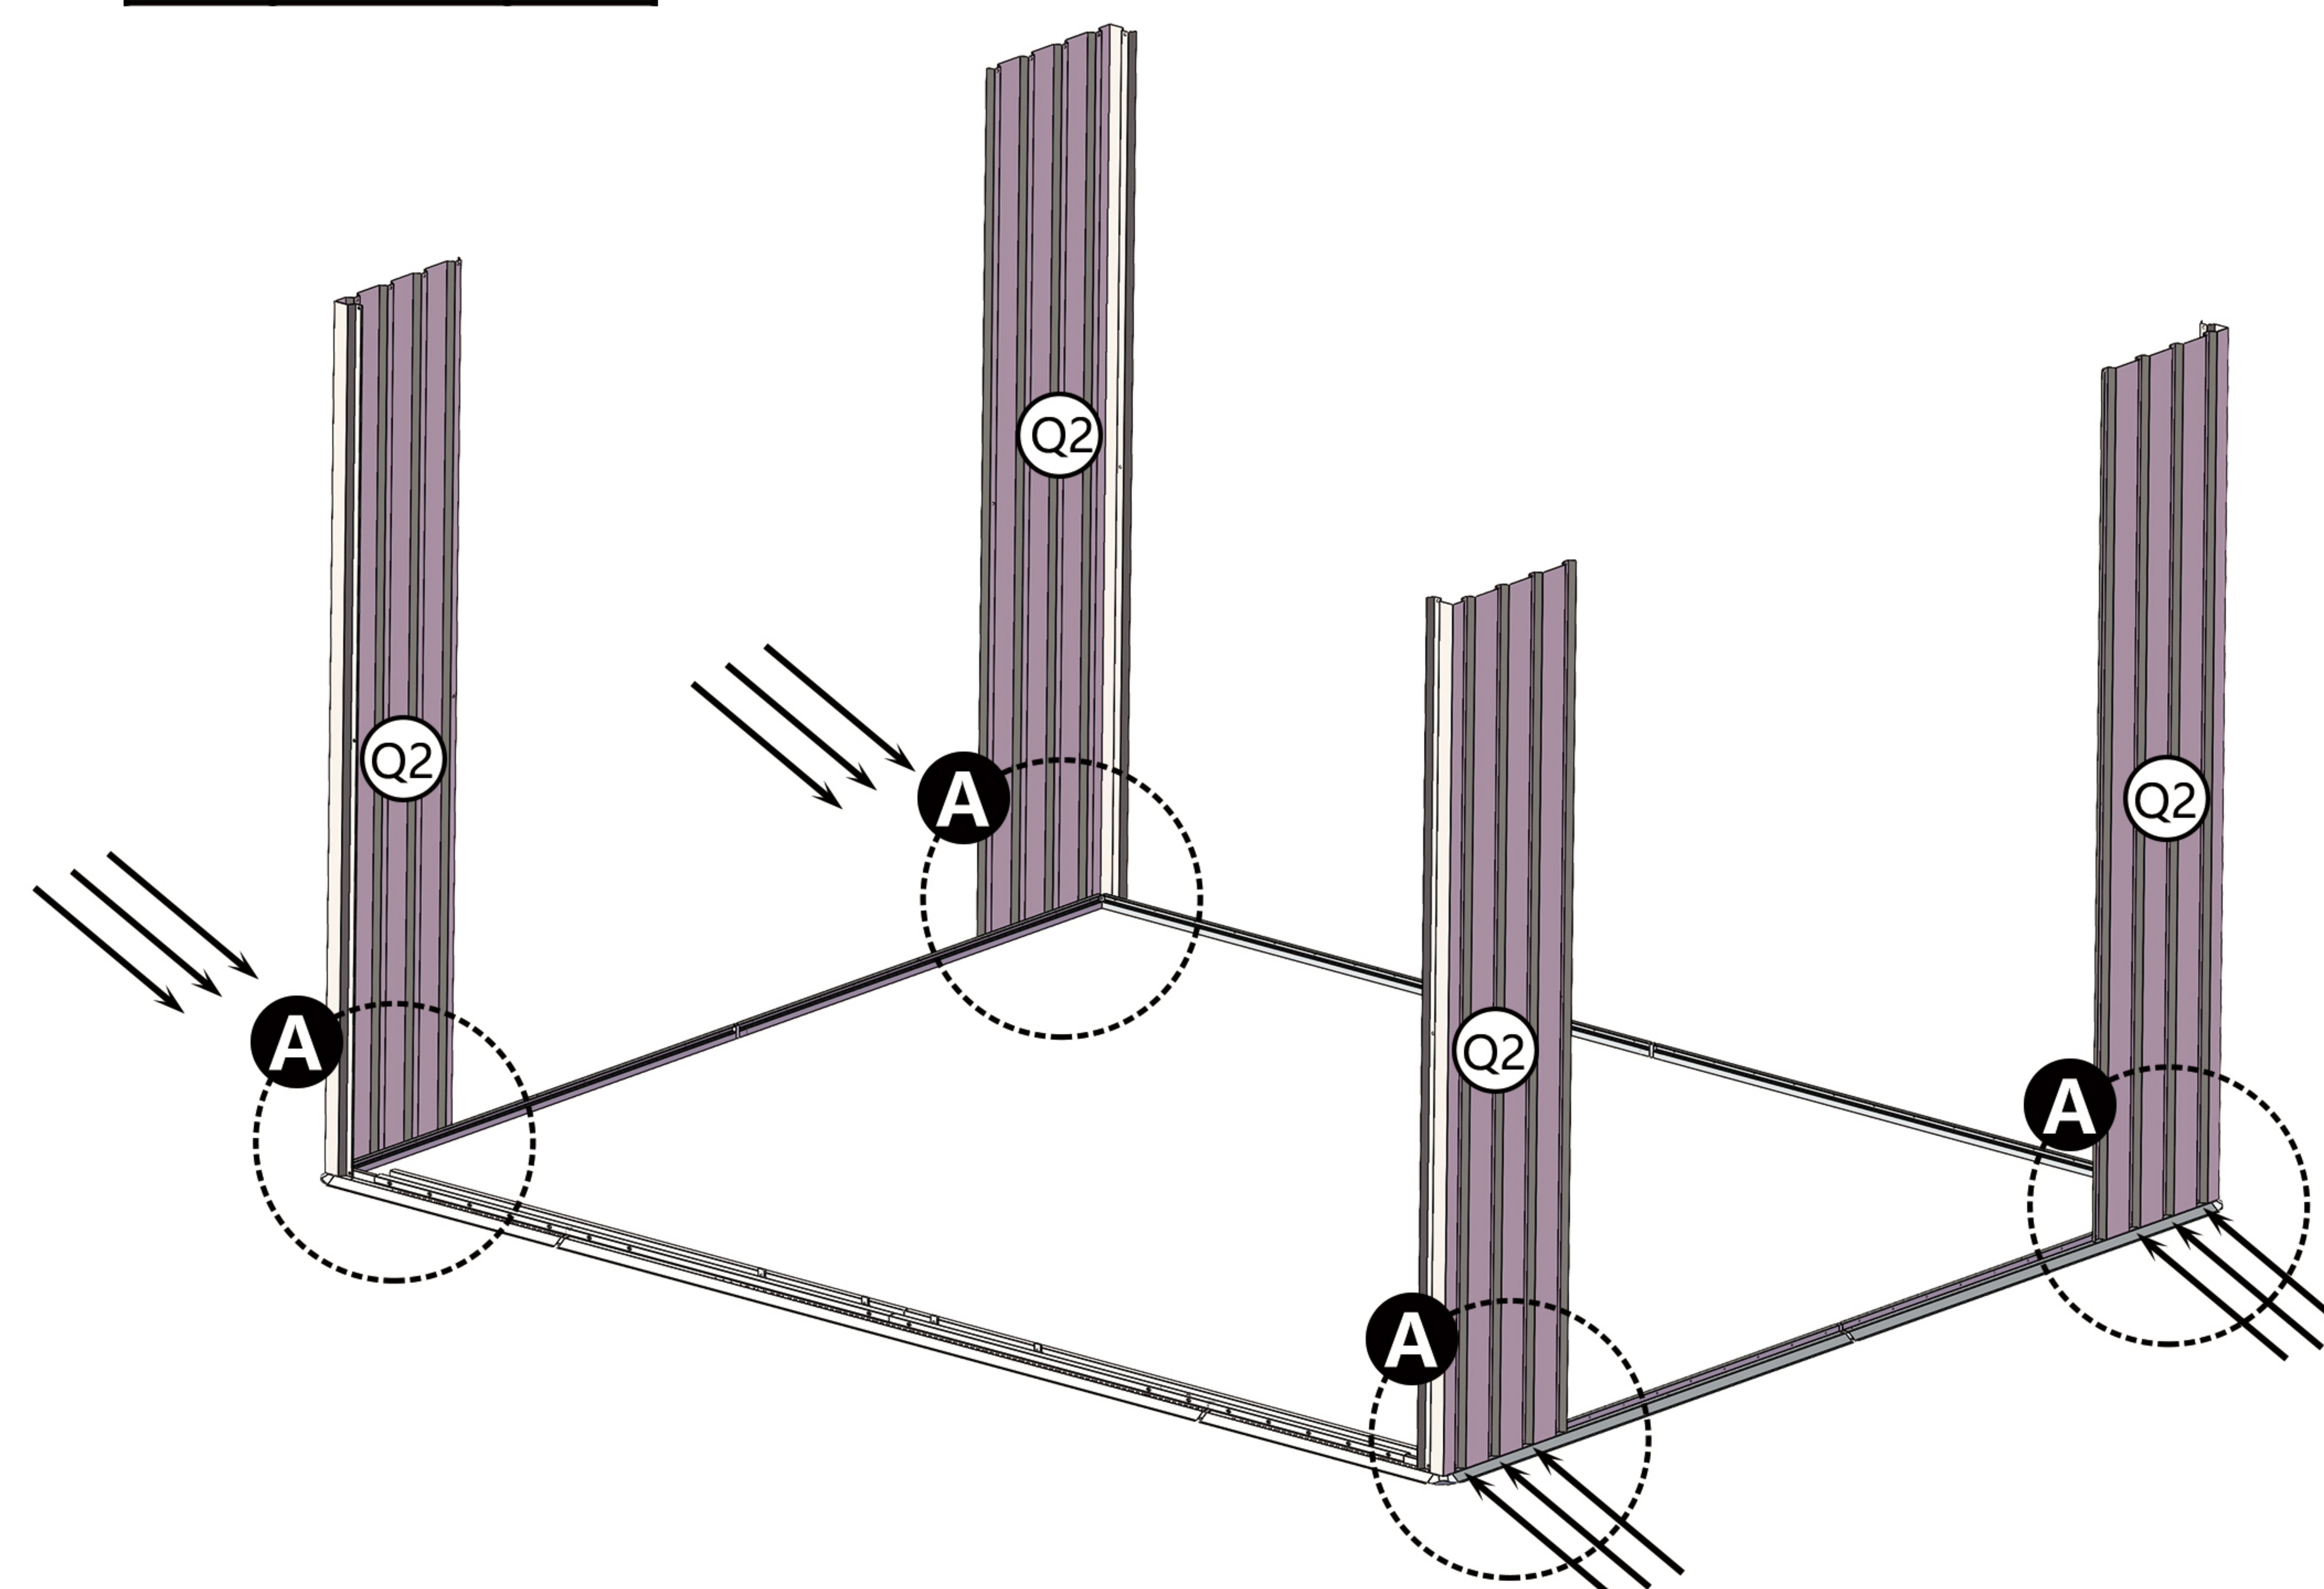






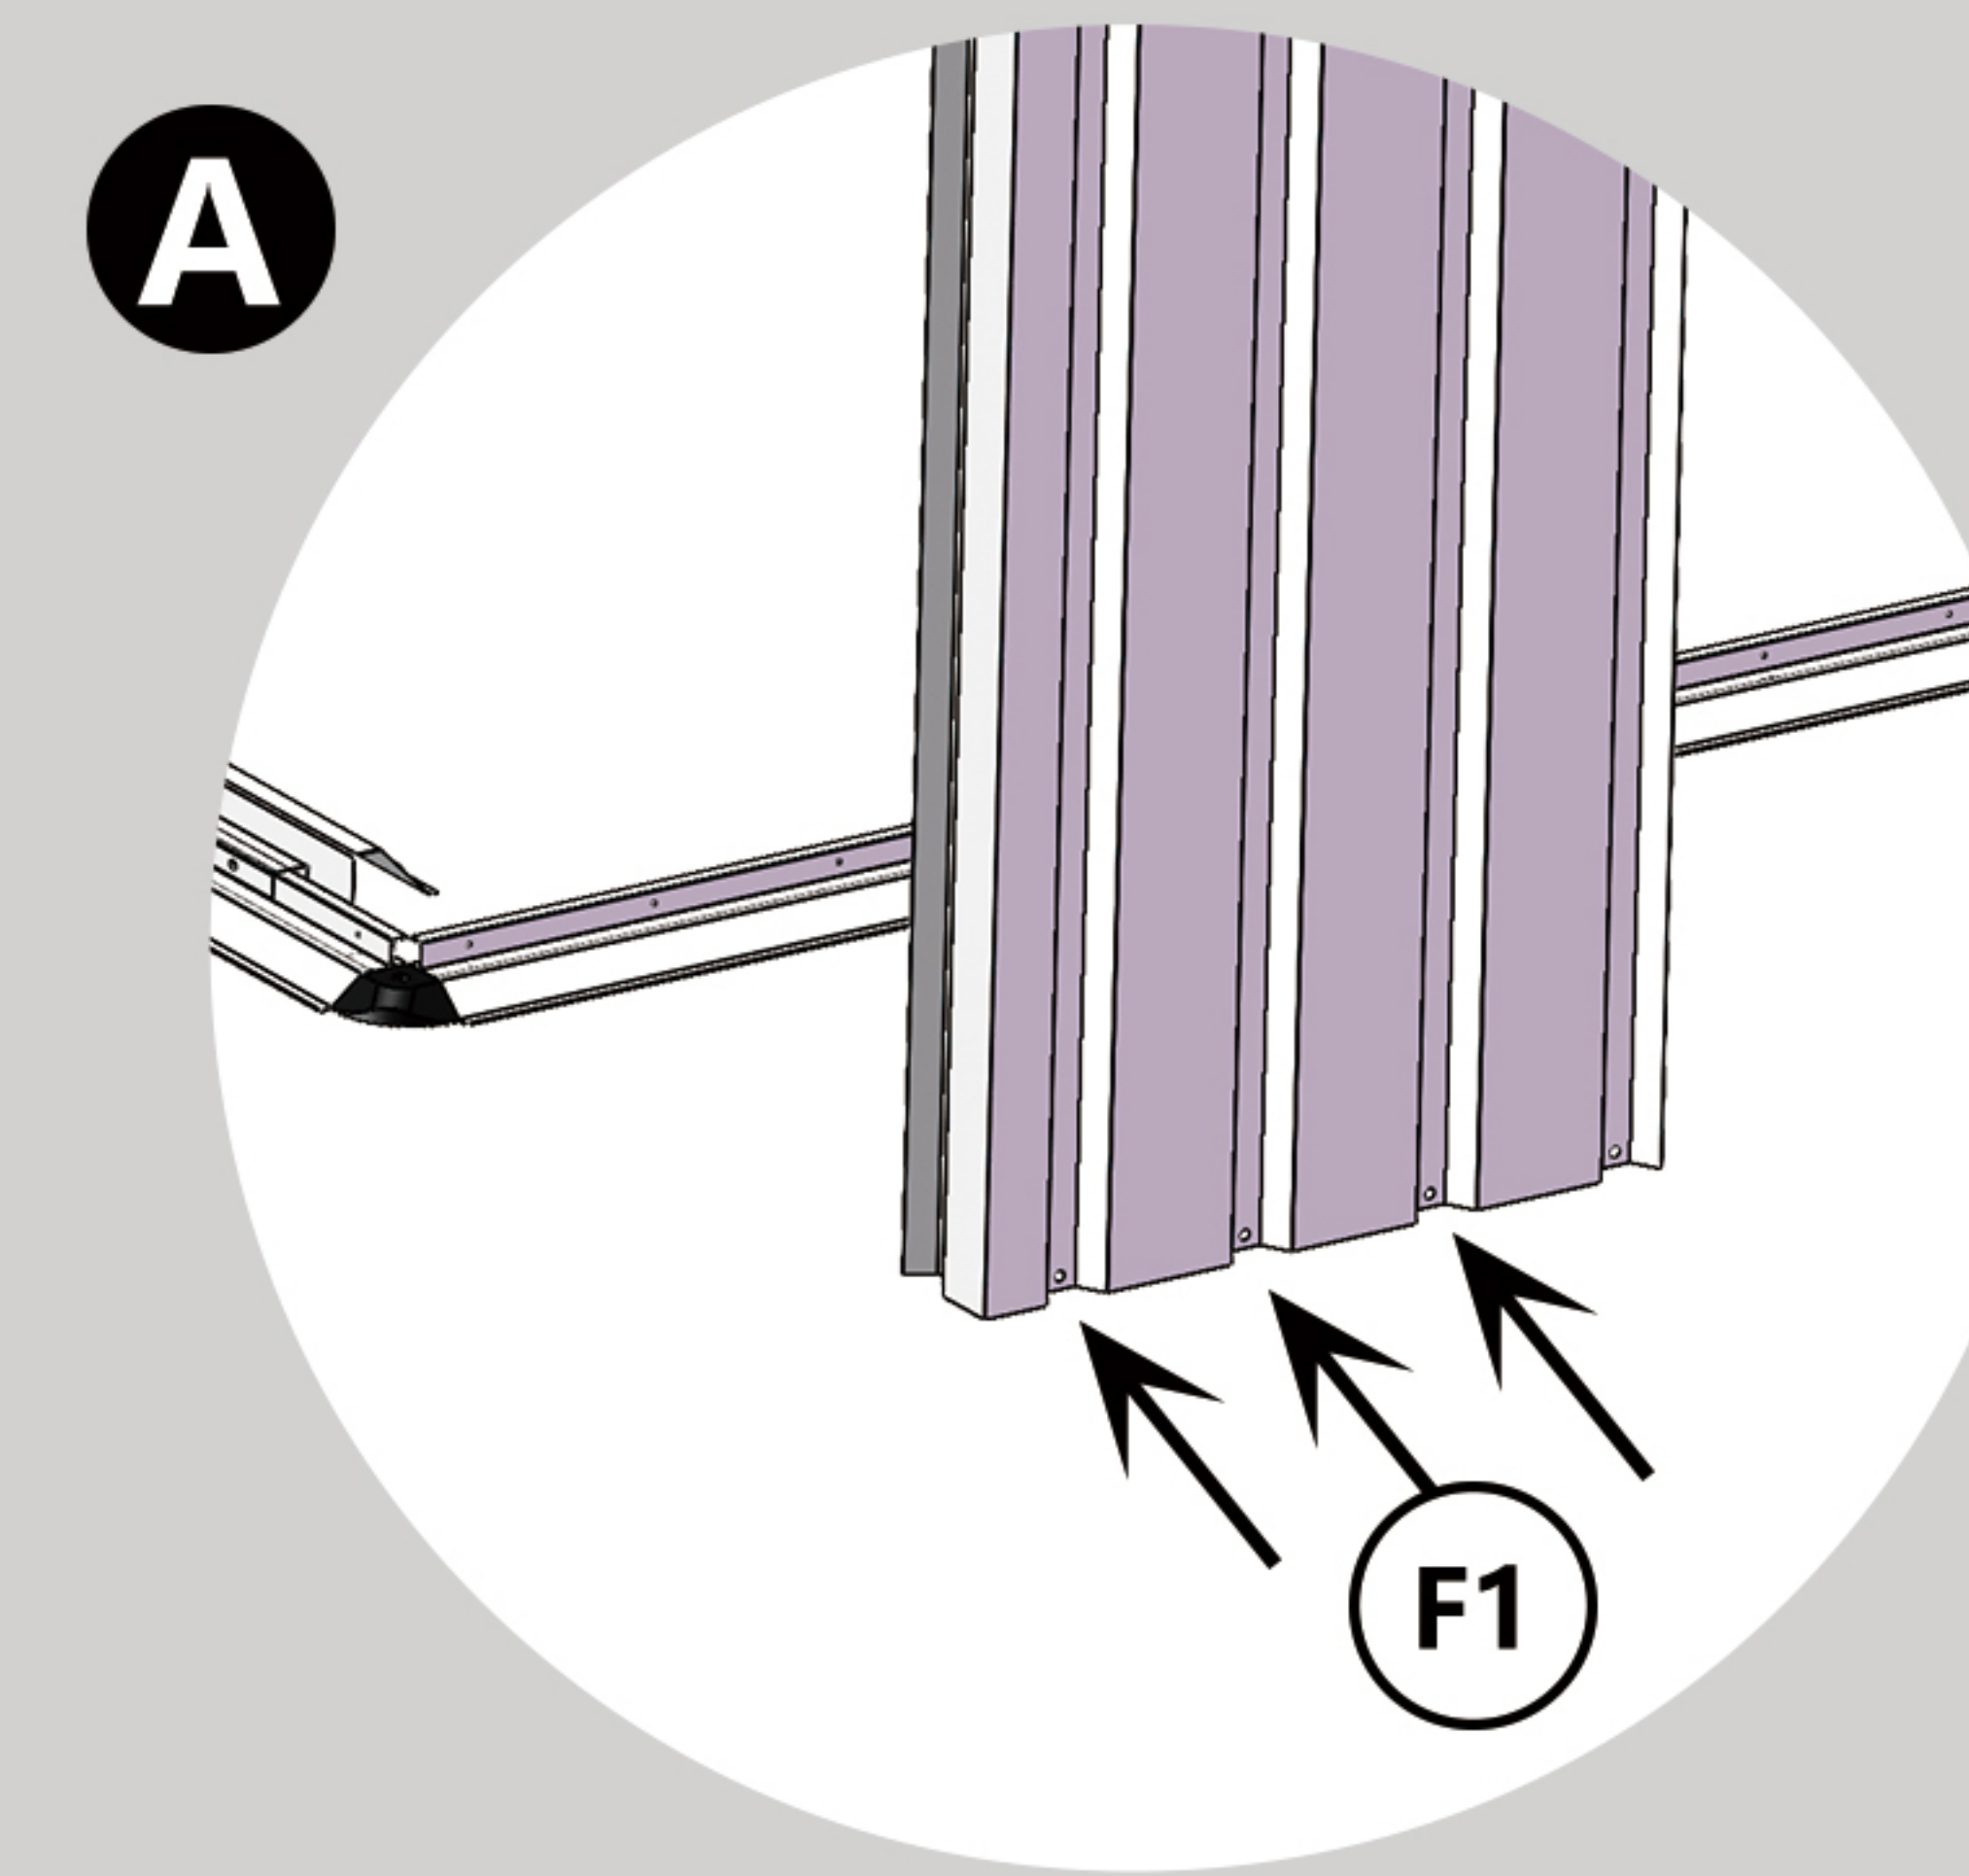


Notice:

In this step, only the three holes in the middle of Q2 need to be installed and reserved on both sides.

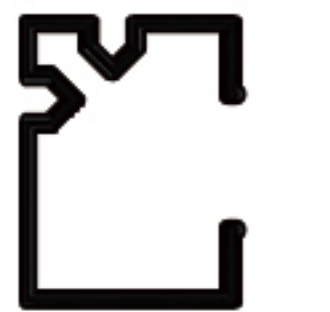The reserved holes are shared with the following steps.




NO.	PART	Qty.	NO.	PART	Qty.
S1R		1	G2		4
S1L		1	F1		
S3L		1	ZJT		2
S3R		1			

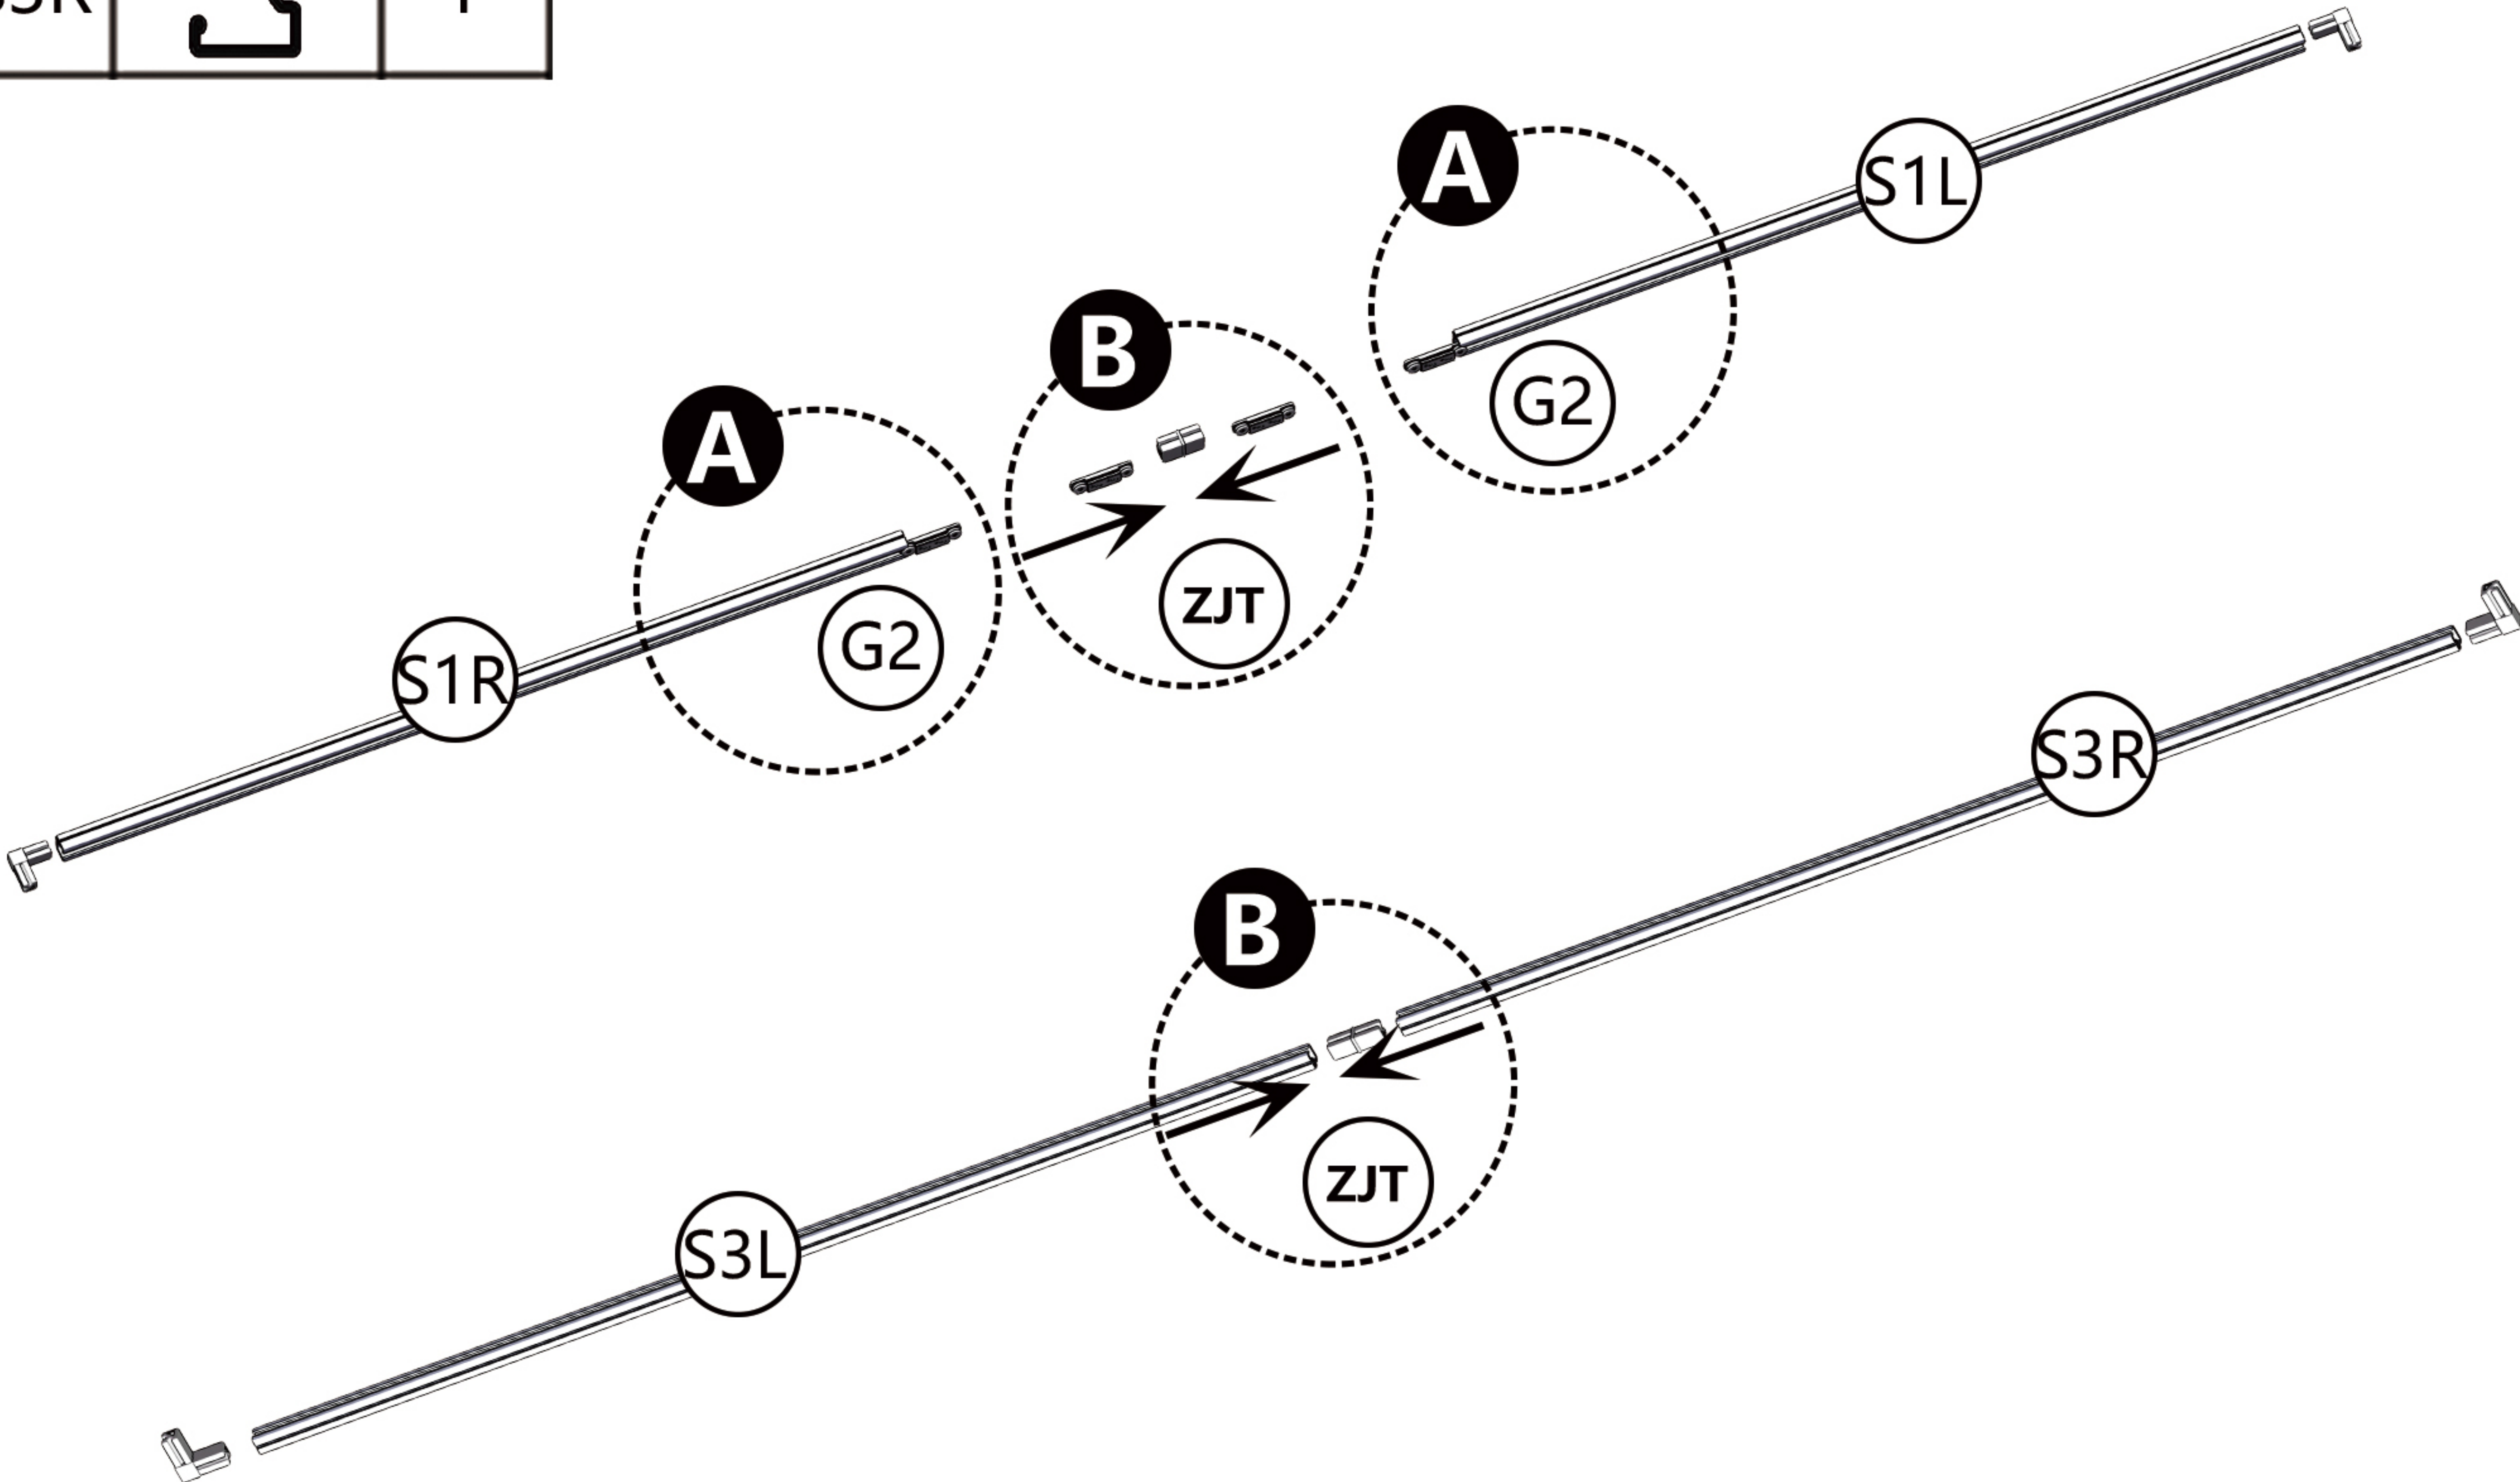





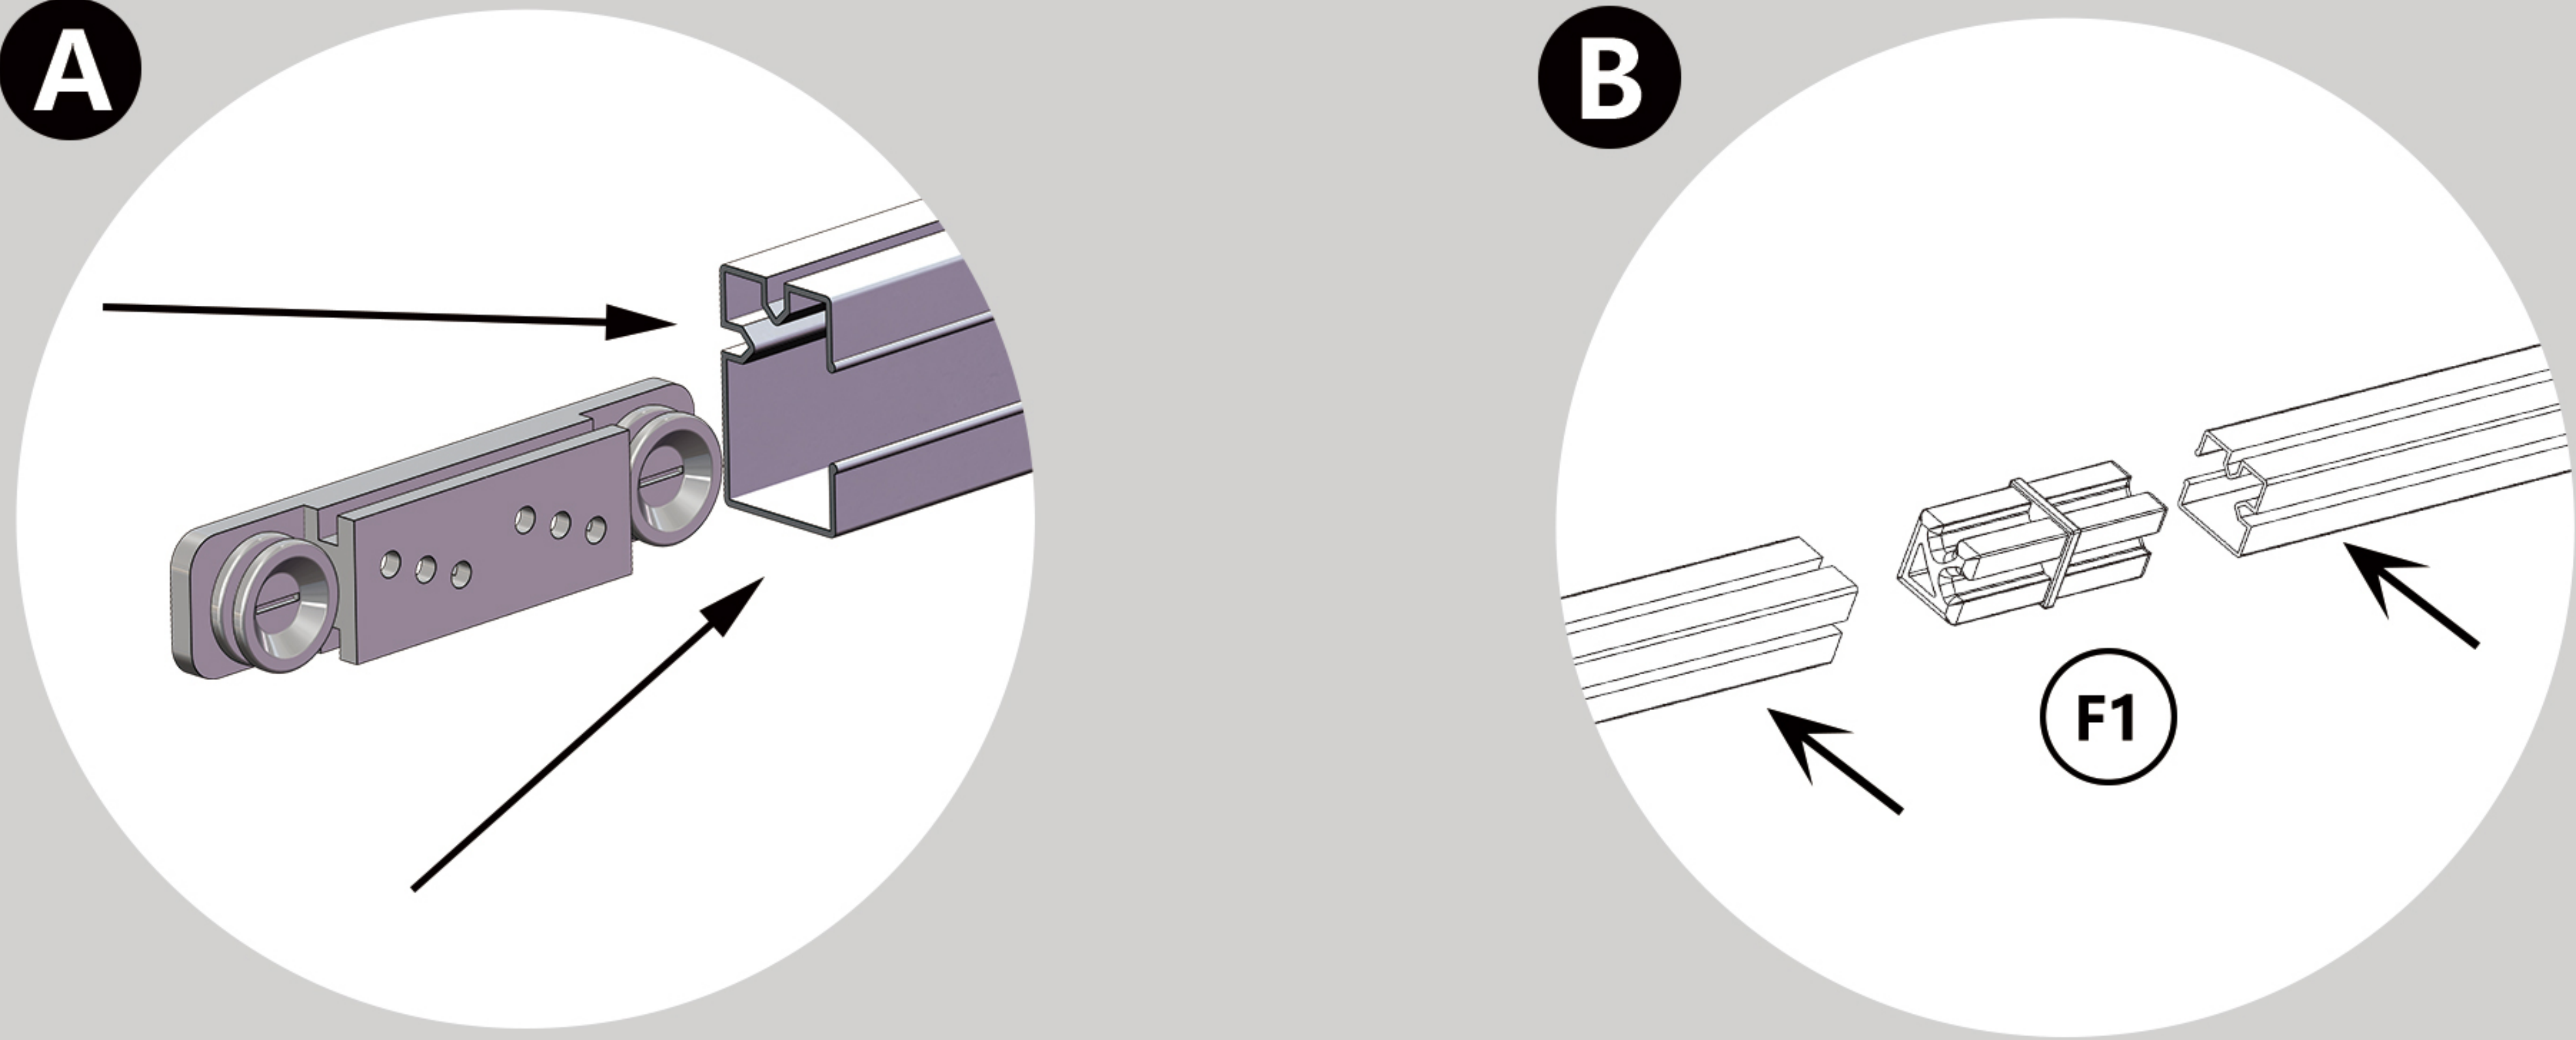


Notice:

G2 has been placed in S1R and S1L before shipment. If it slides out, follow step A to insert it.

S1L and S1R, S3L and S3R, are connected by ZJT and fixed by F1, respectively.



NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.
S2R		2	ZJT		2	FJT		4
S2L		2	N1		1	F1		

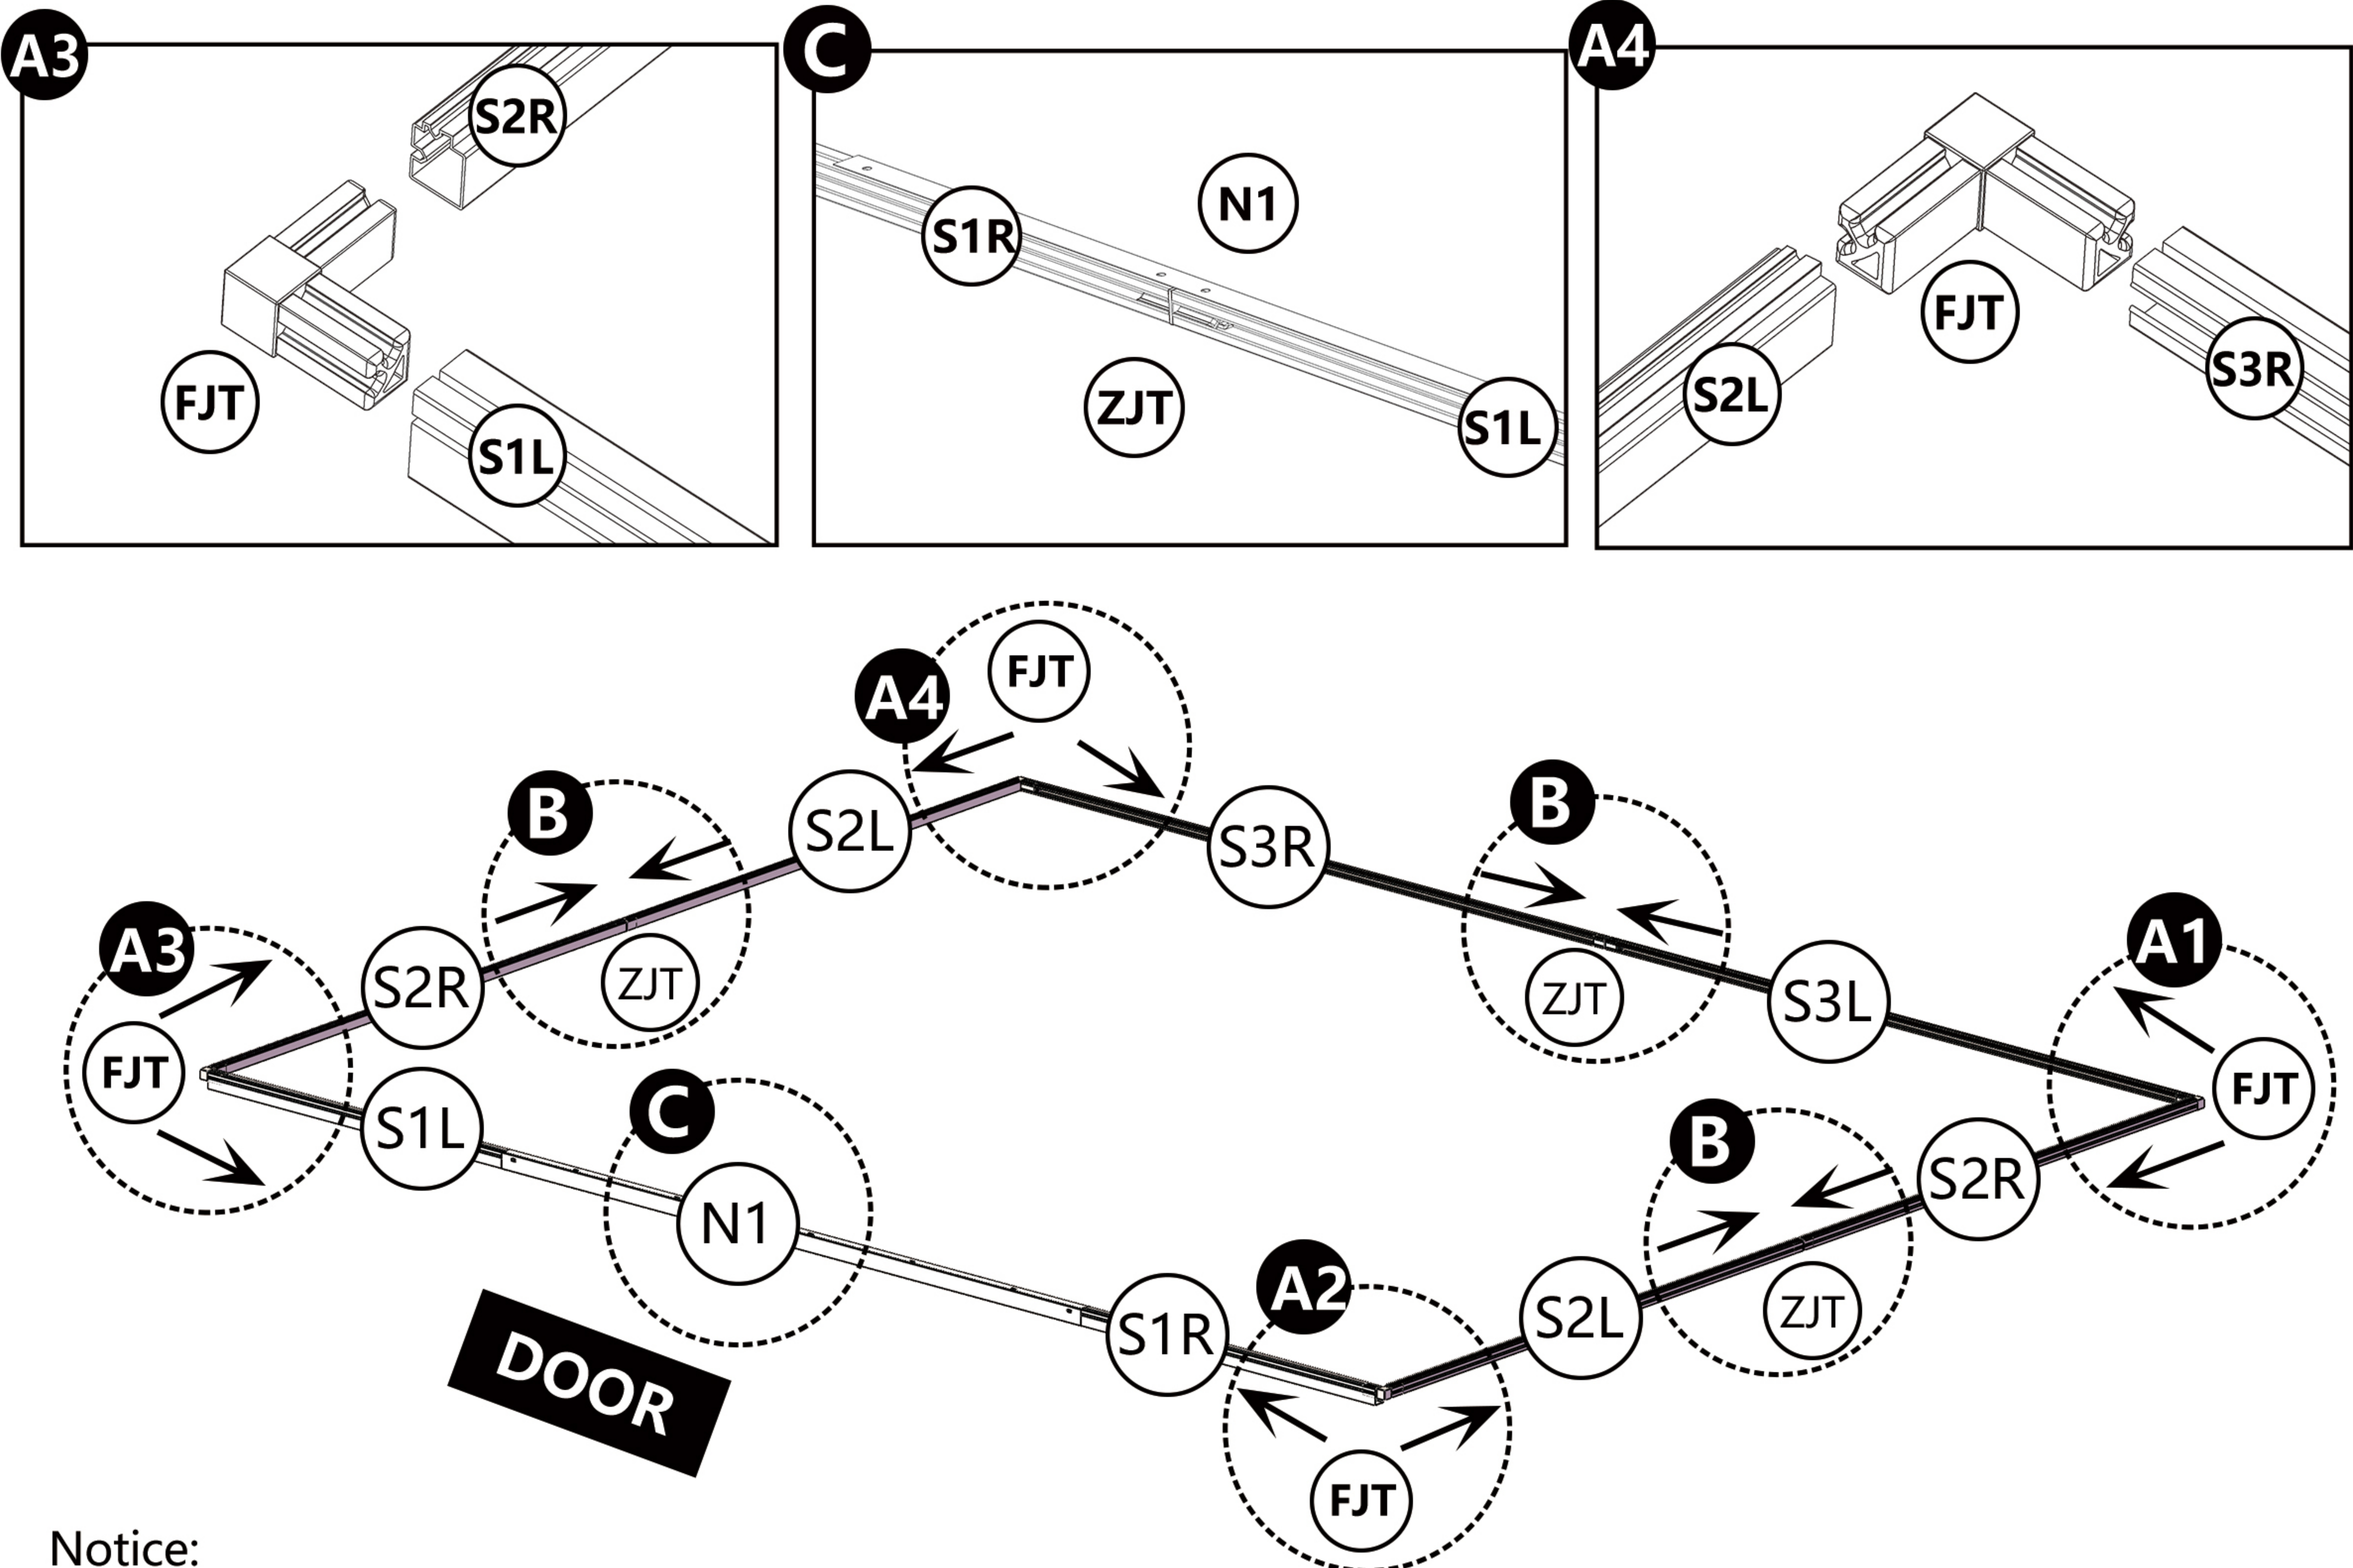


Notice:


ZJT installation: At the junction of two arrows, please install in the direction indicated by the arrows (→←).


FJT installation: Connect the two frames to the DGT as shown. Each DGT needs to be fixed with two F1s.

S1R and S1L do not have fixed hole positions

N1 installation: Fix the N1 to the middle of the connected S1L and S1R with F1

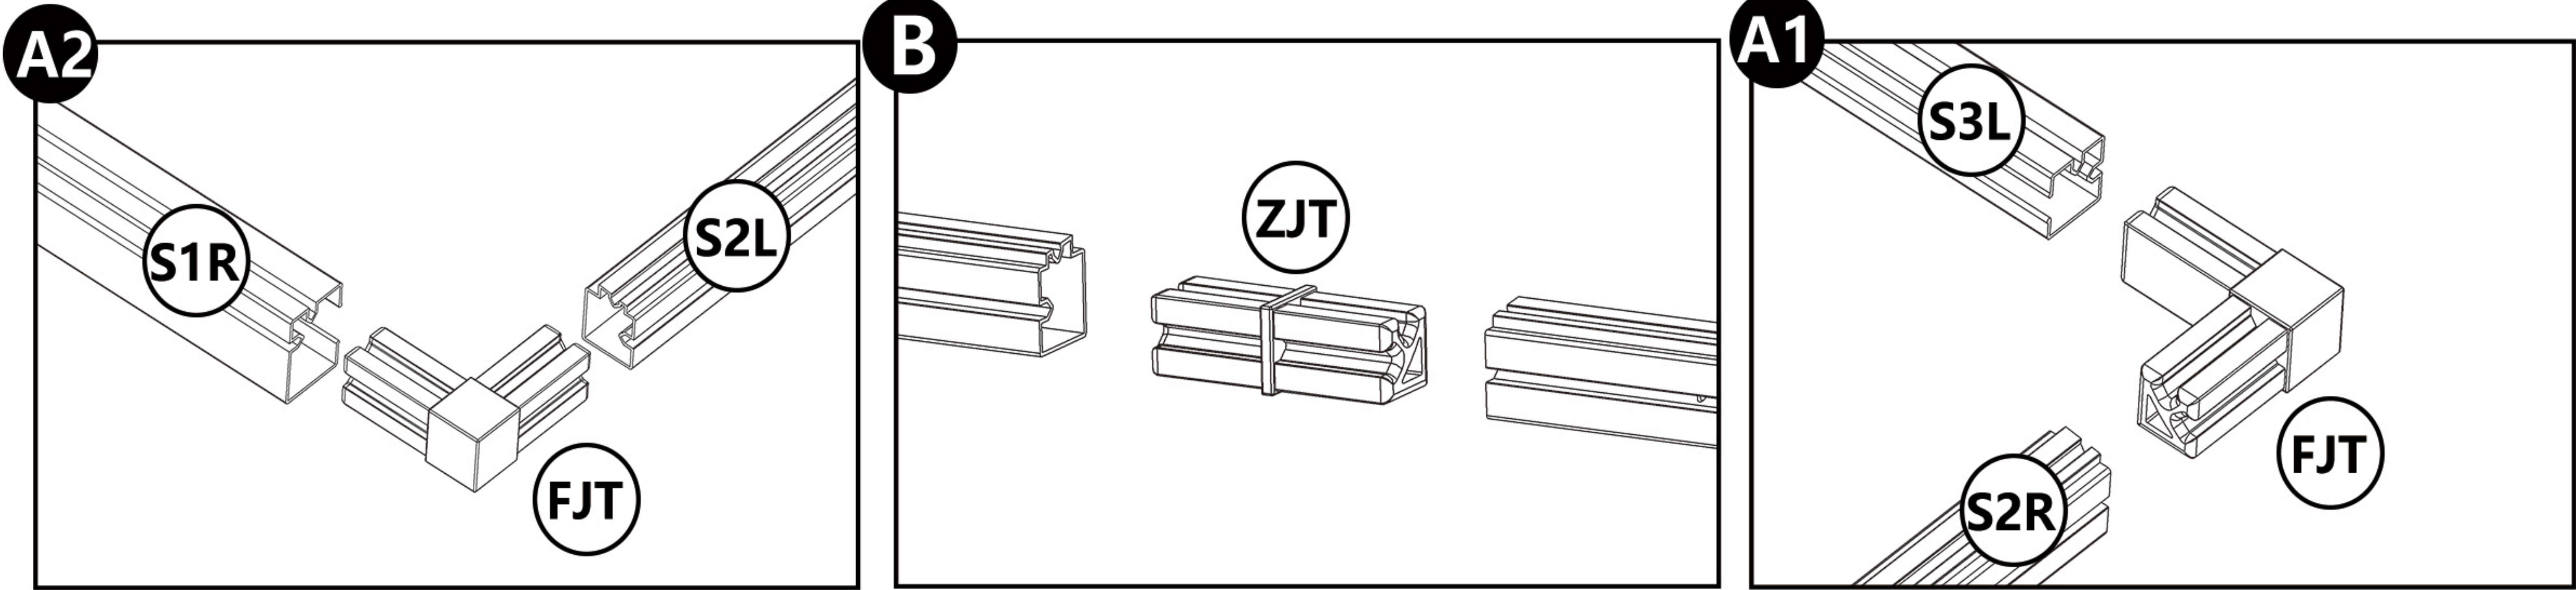

NO.	PART	Qty.
F1		

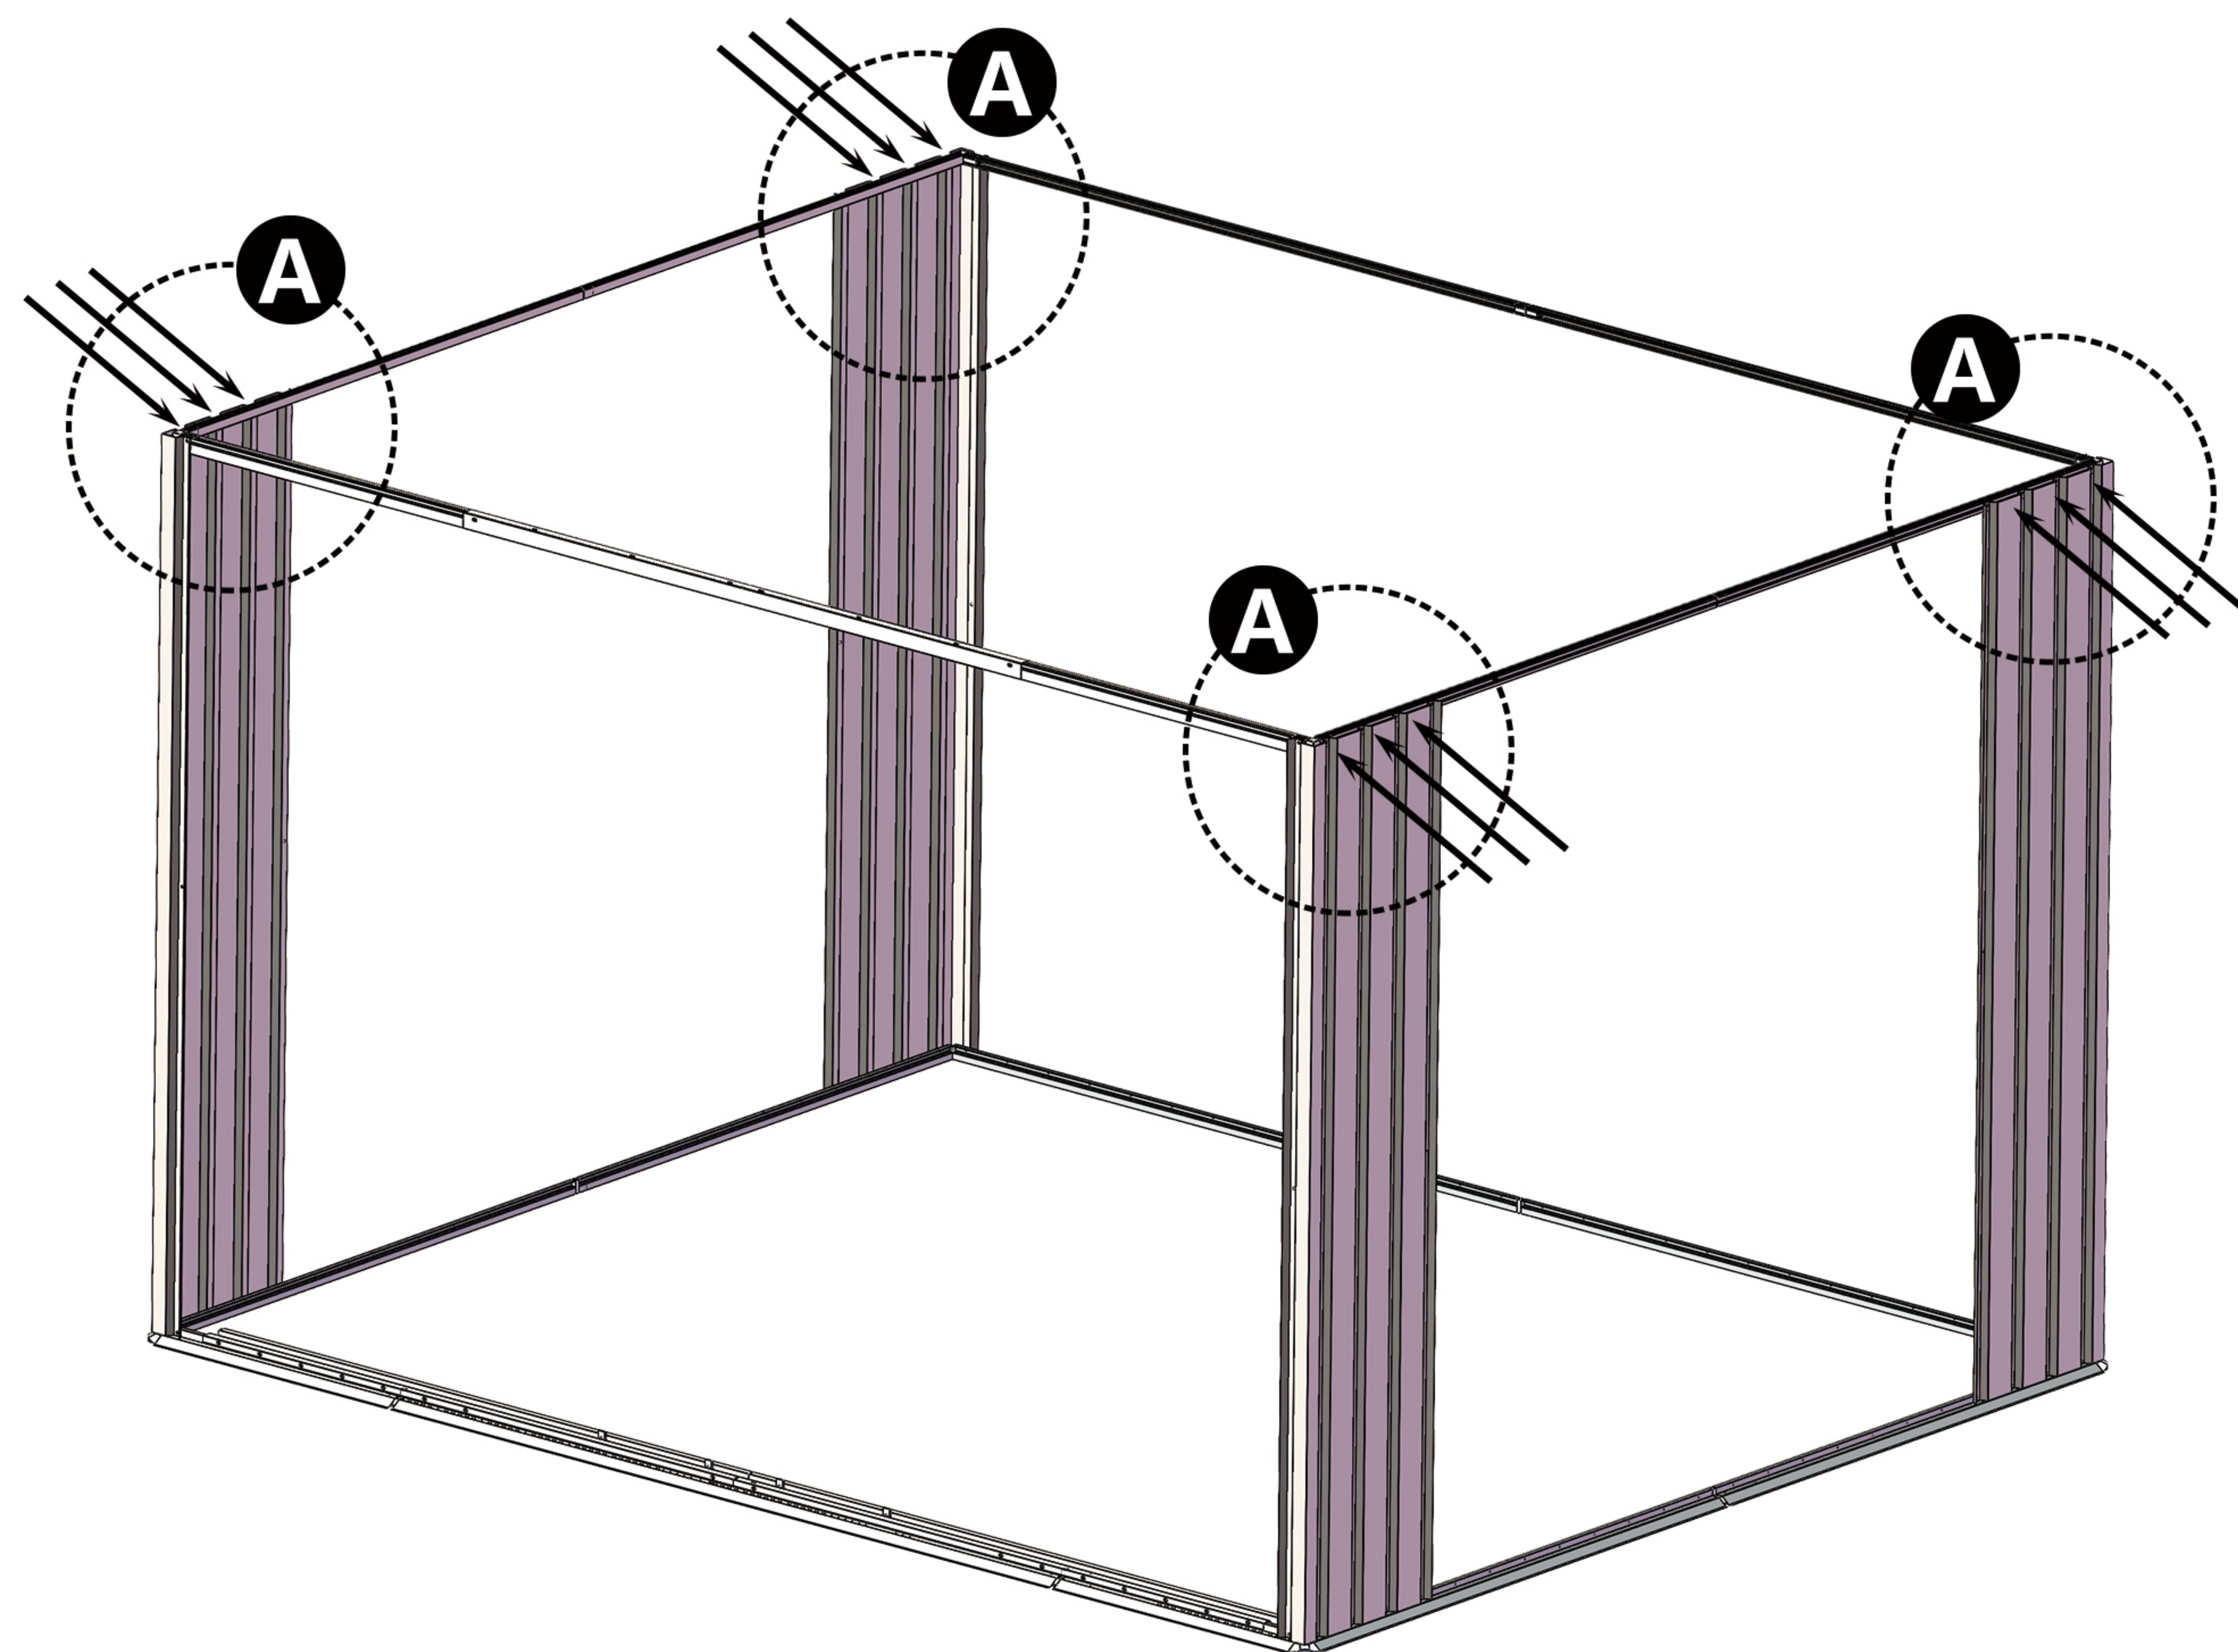






Notice:

In this step, only the middle three holes need to be installed, and both sides need to be reserved.

The reserved hole is shared with other steps.

The walls are tiled on the outside and framed on the inside

NO.	PART	Qty.
Q1		16
Q3		3
F3		
F1		




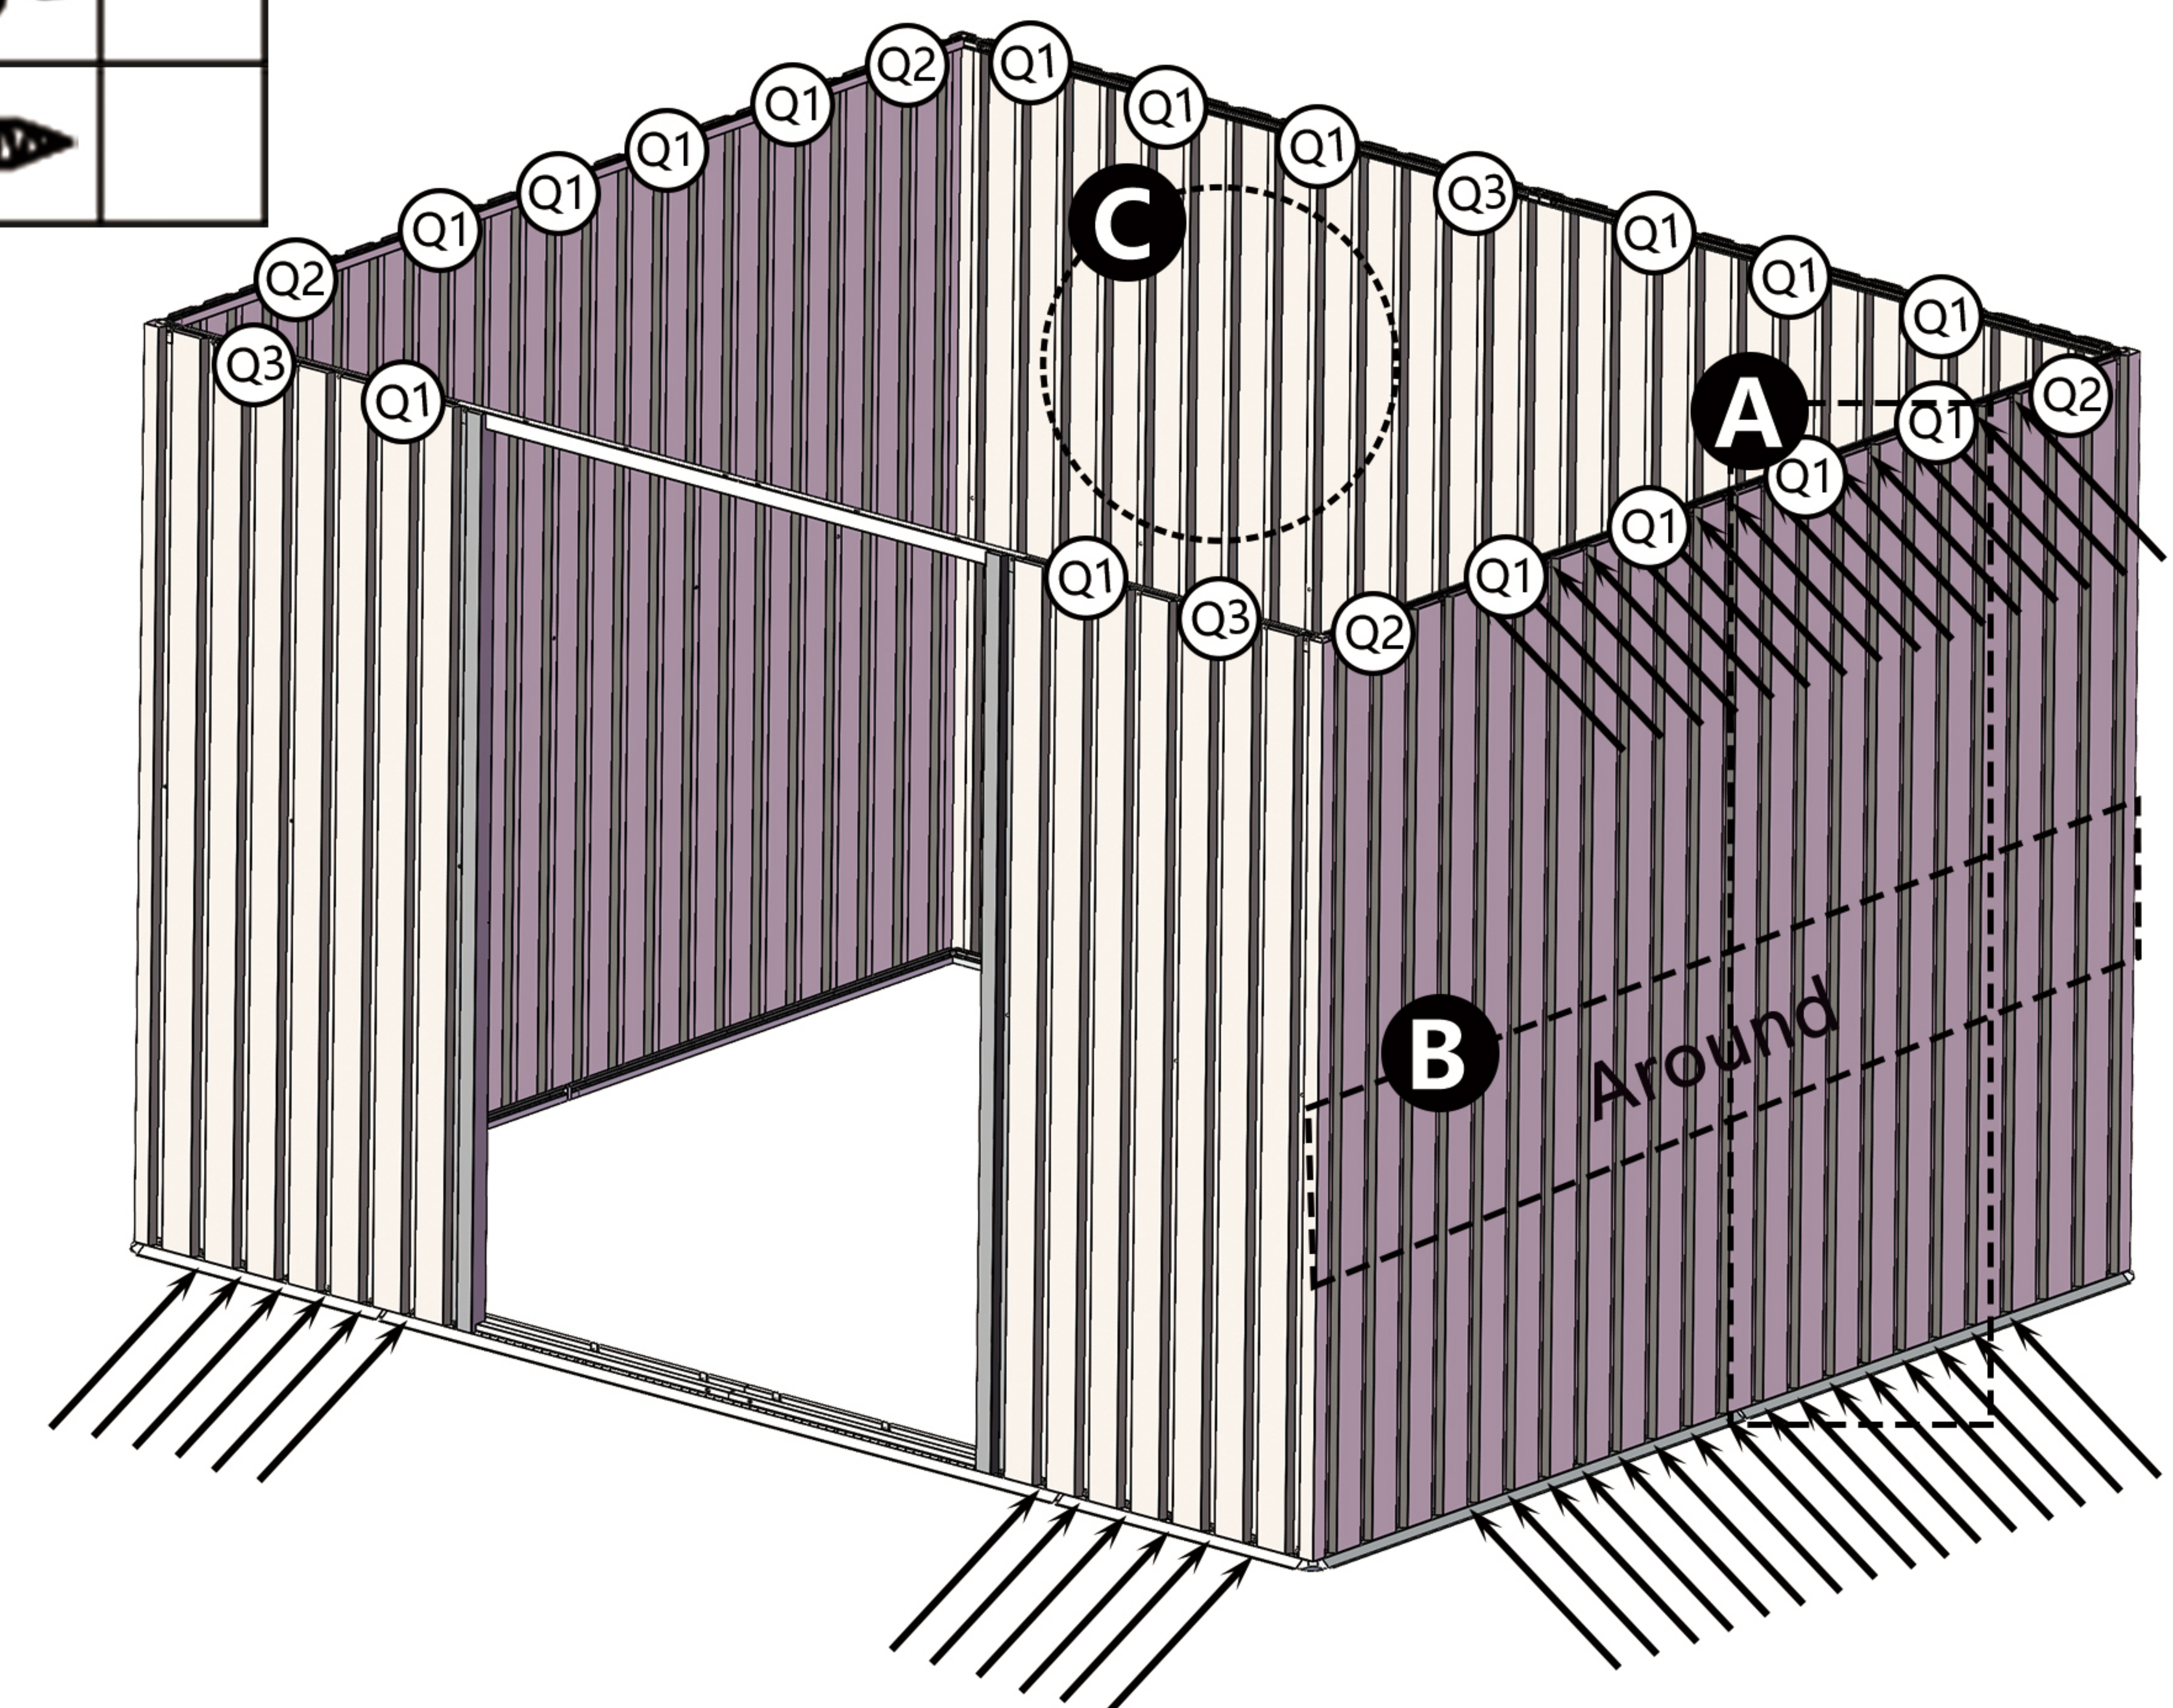






Notice:


As shown in the picture, assemble the wall tiles in turn, Q1\Q3, The top, middle and bottom

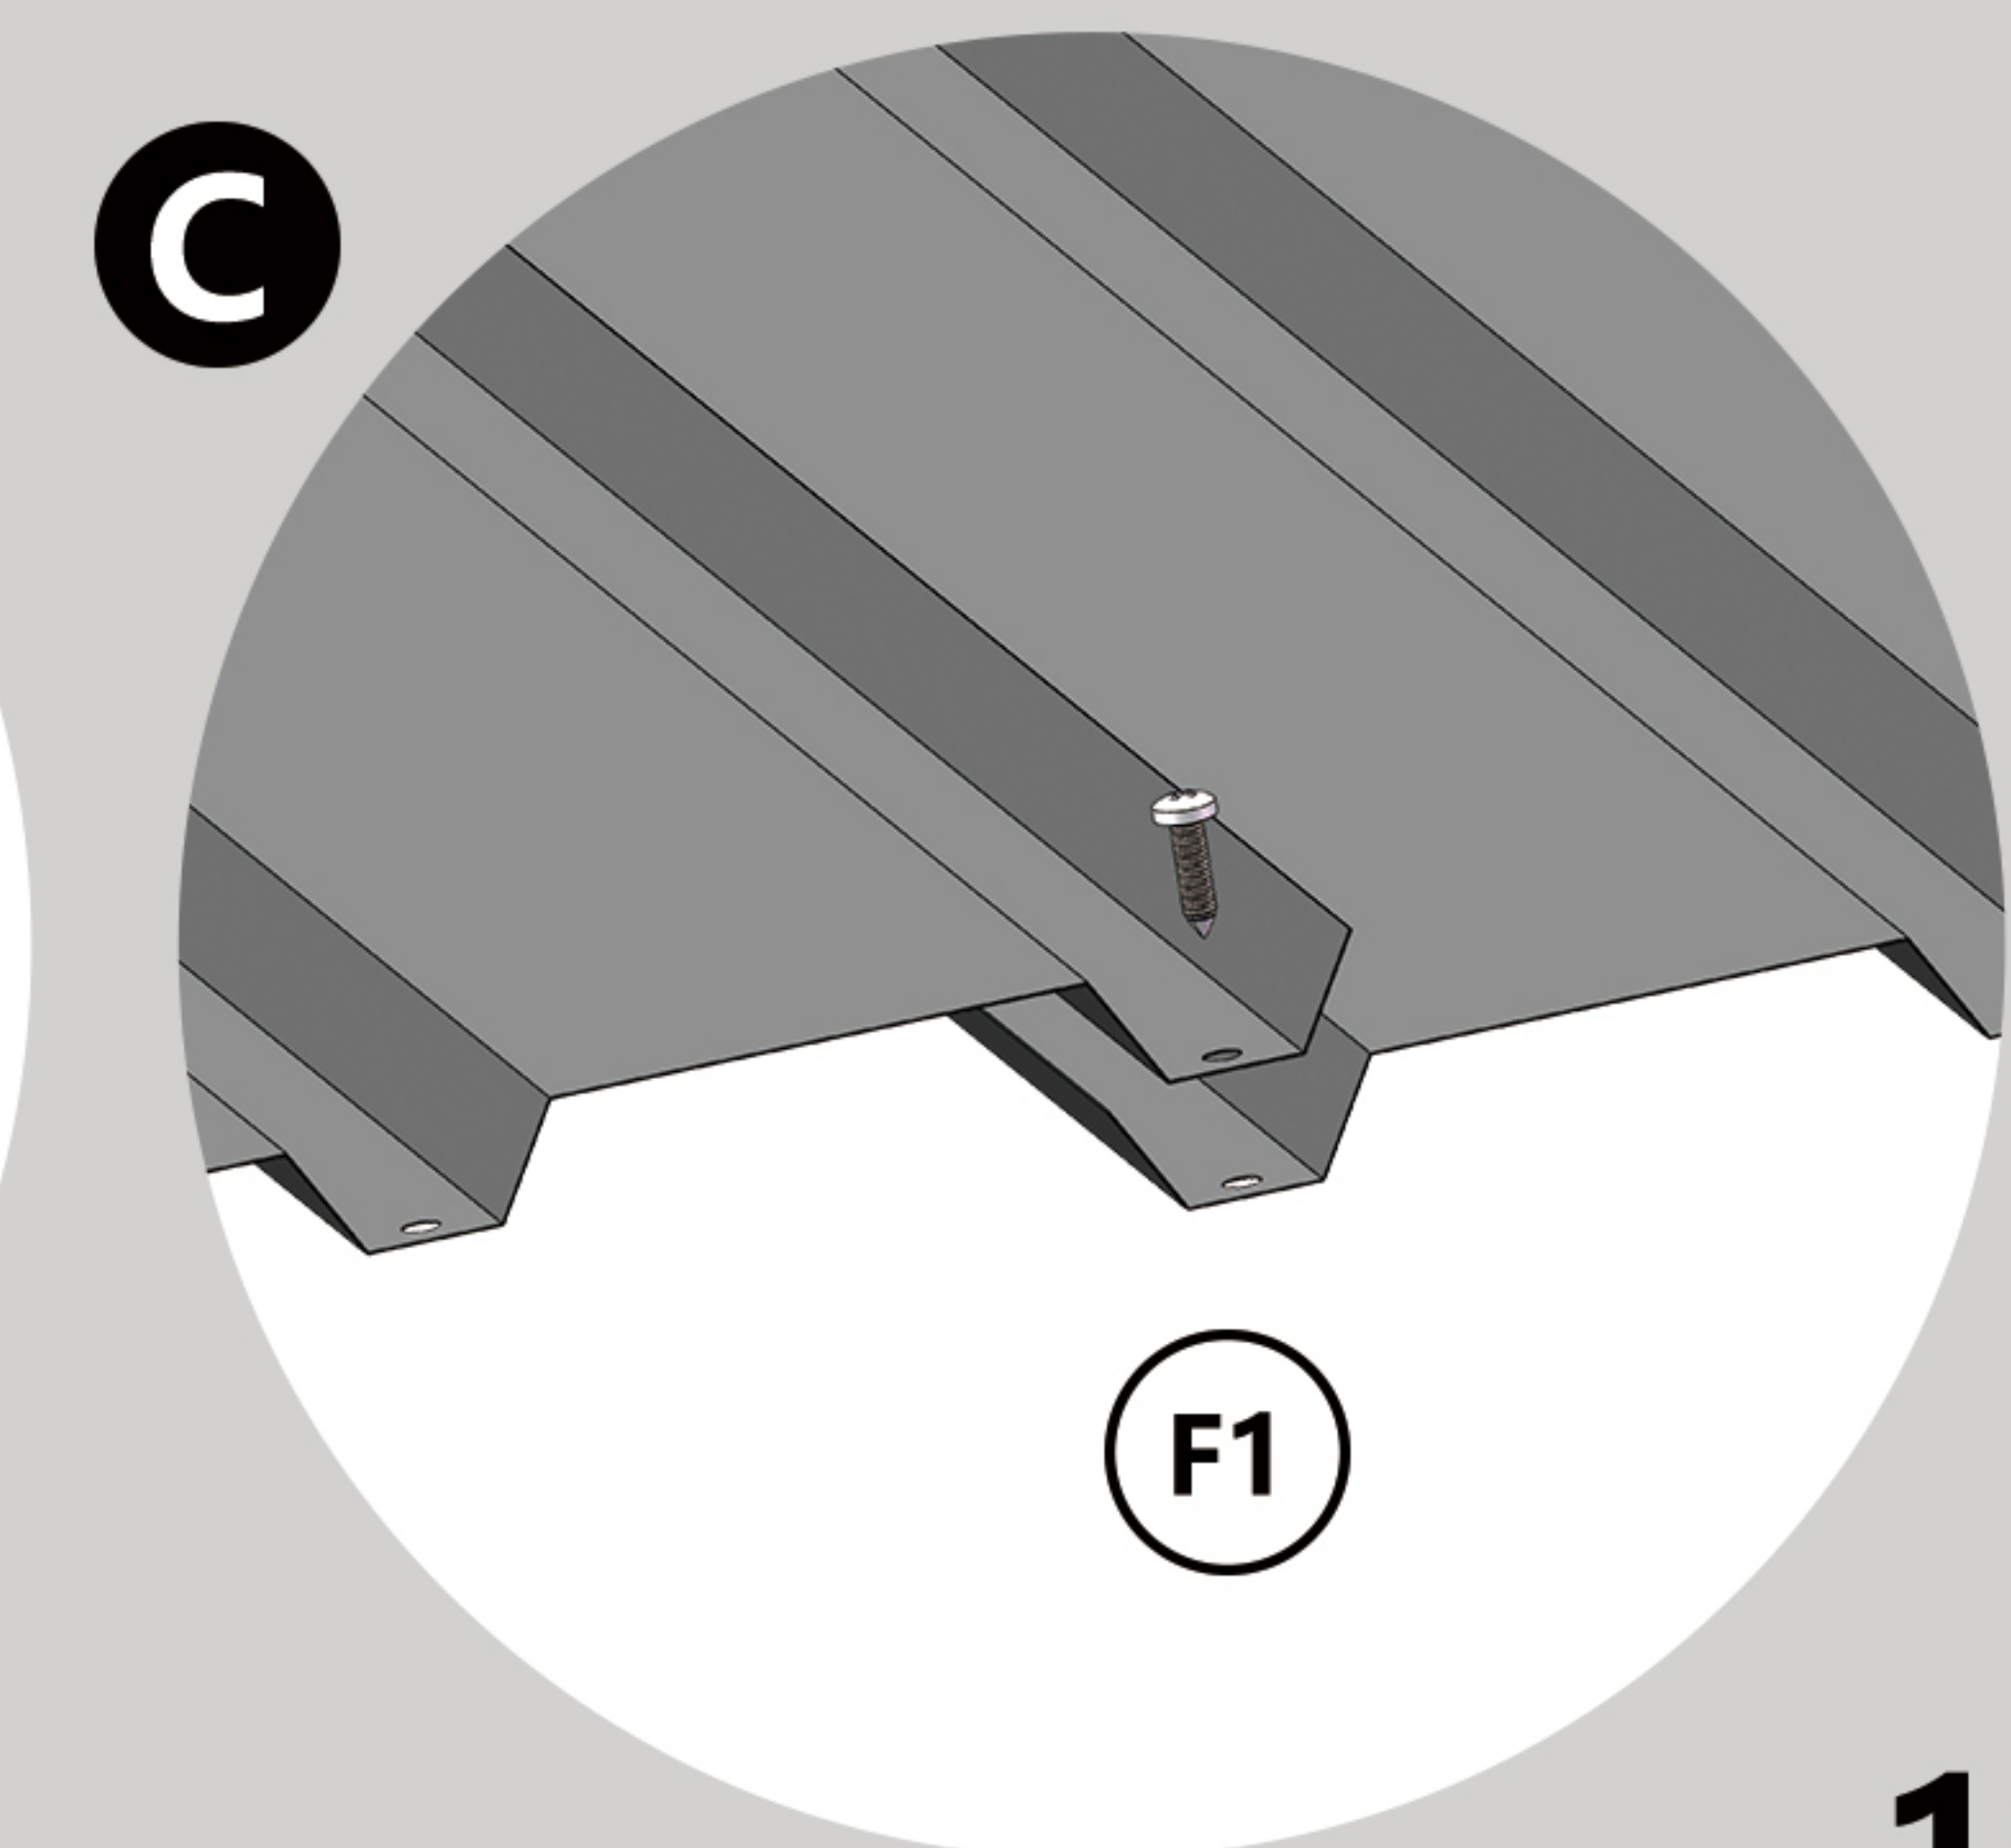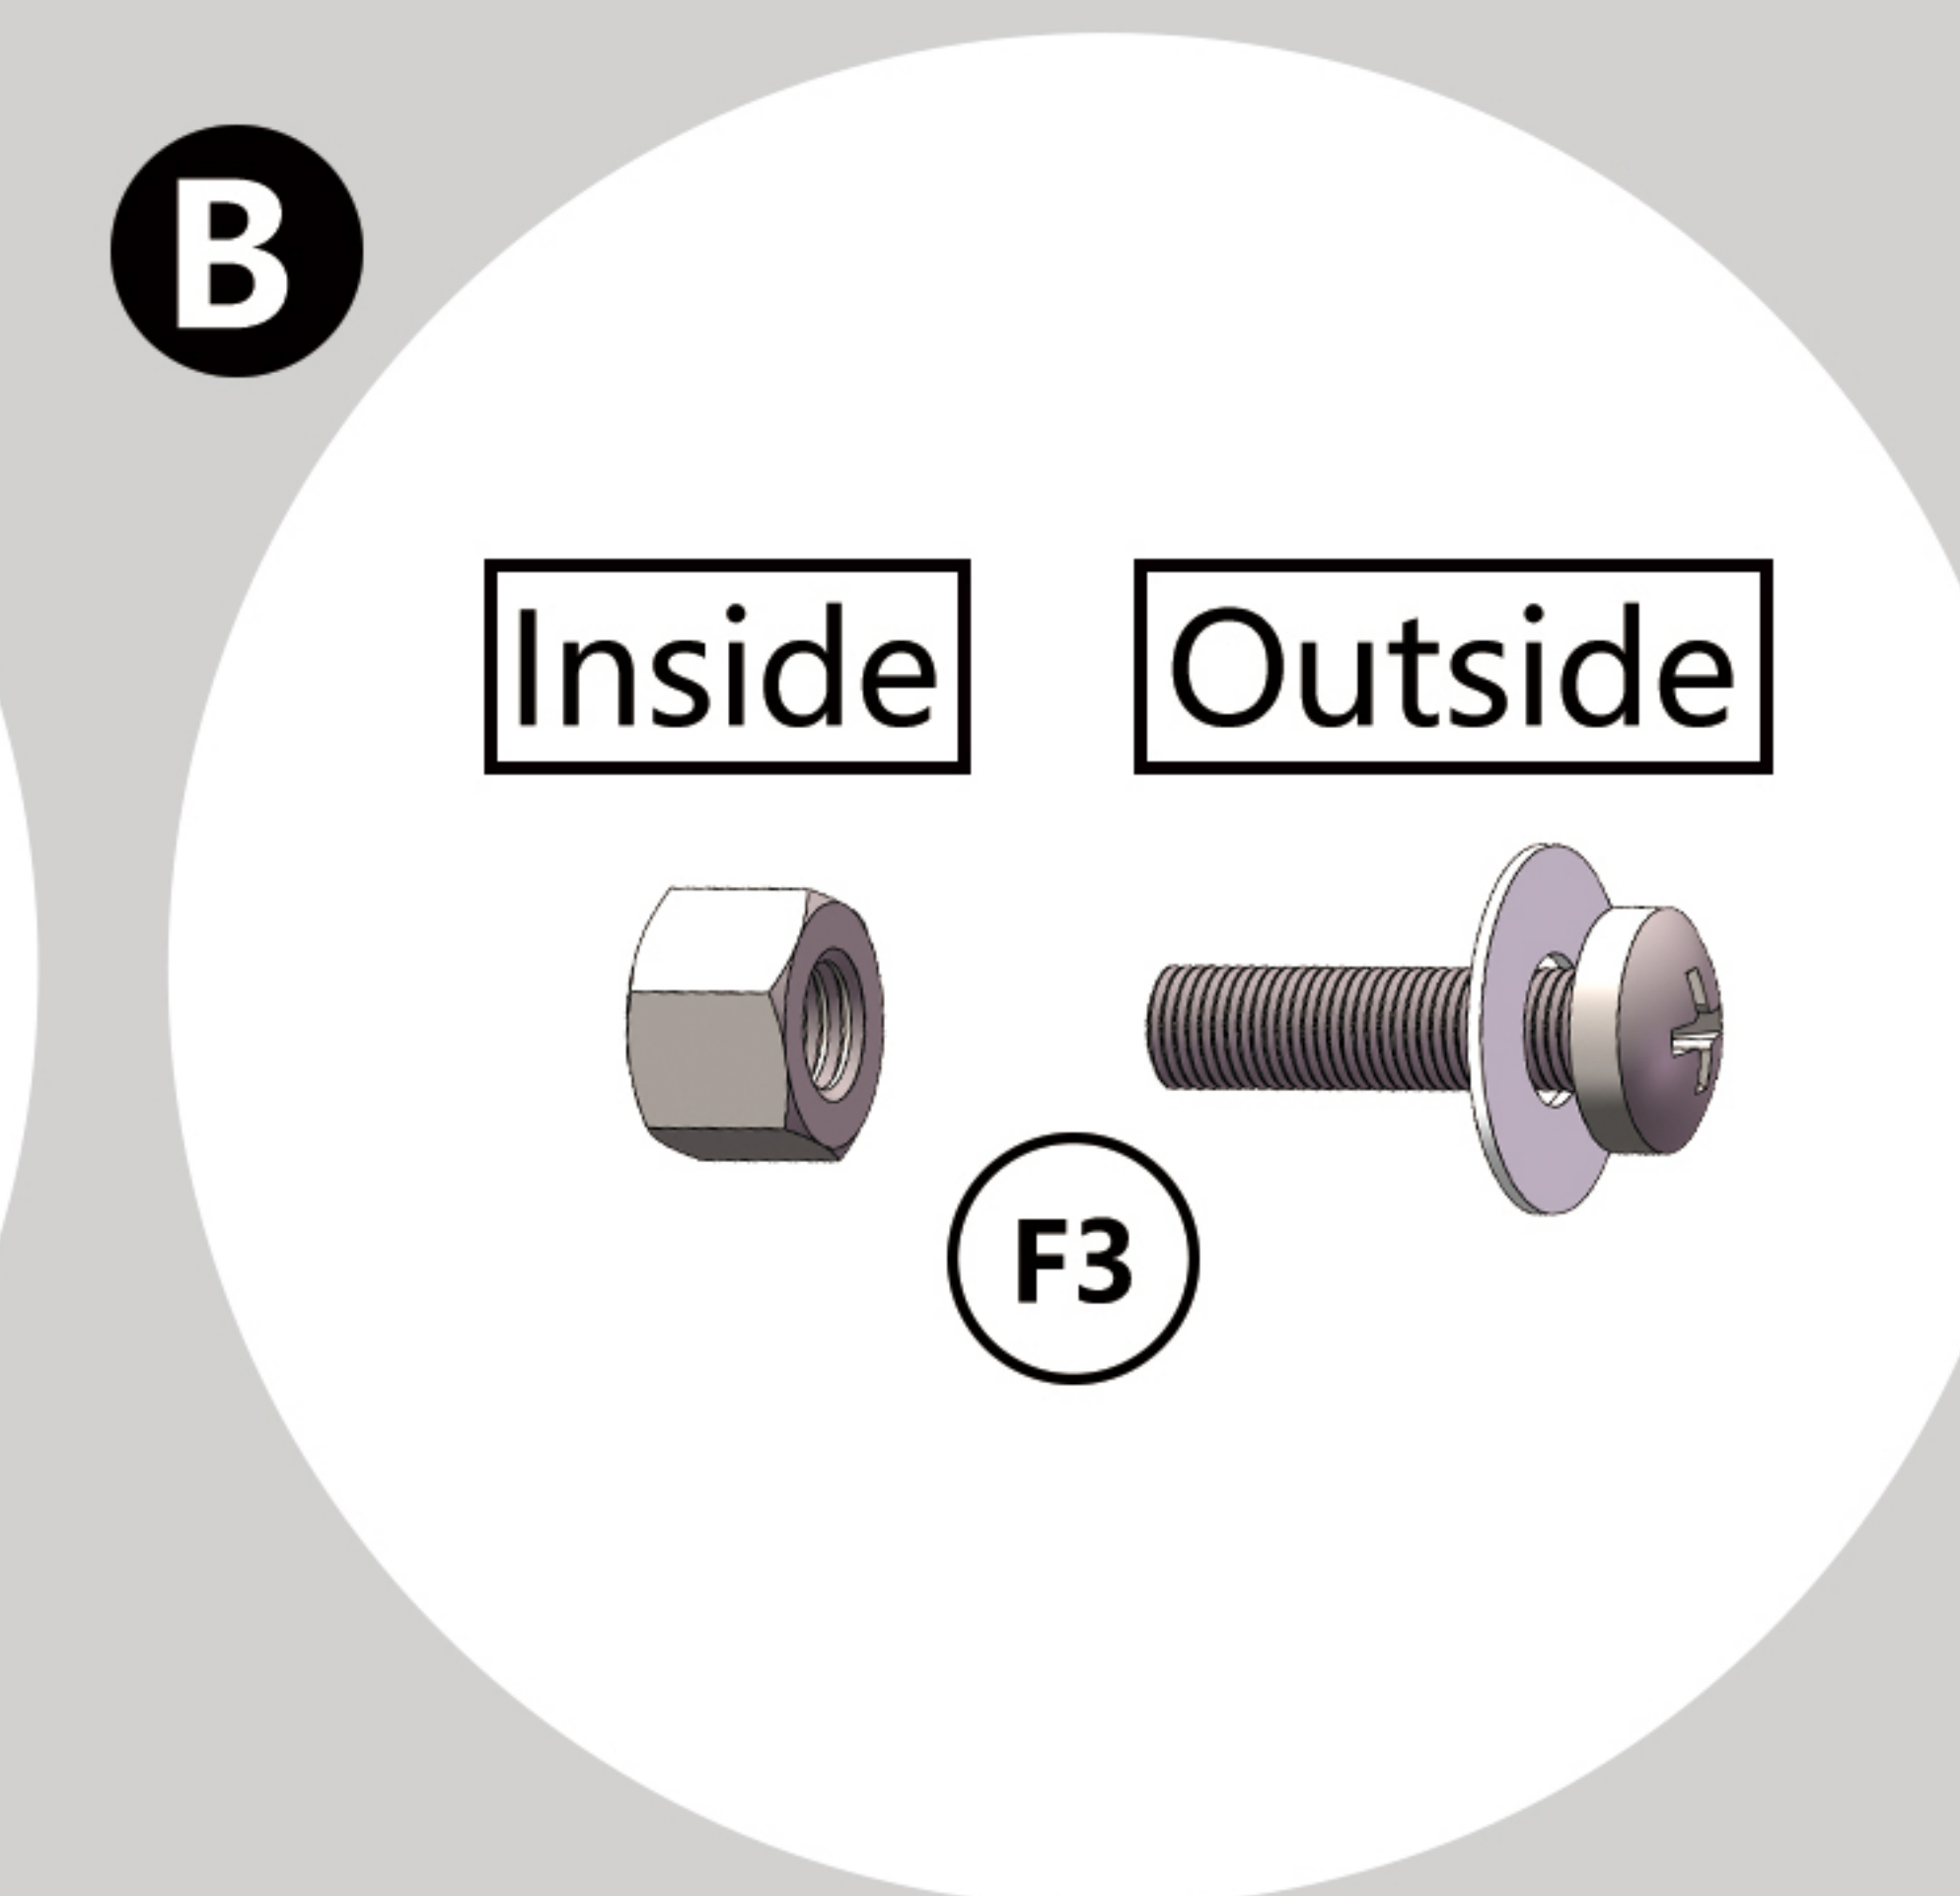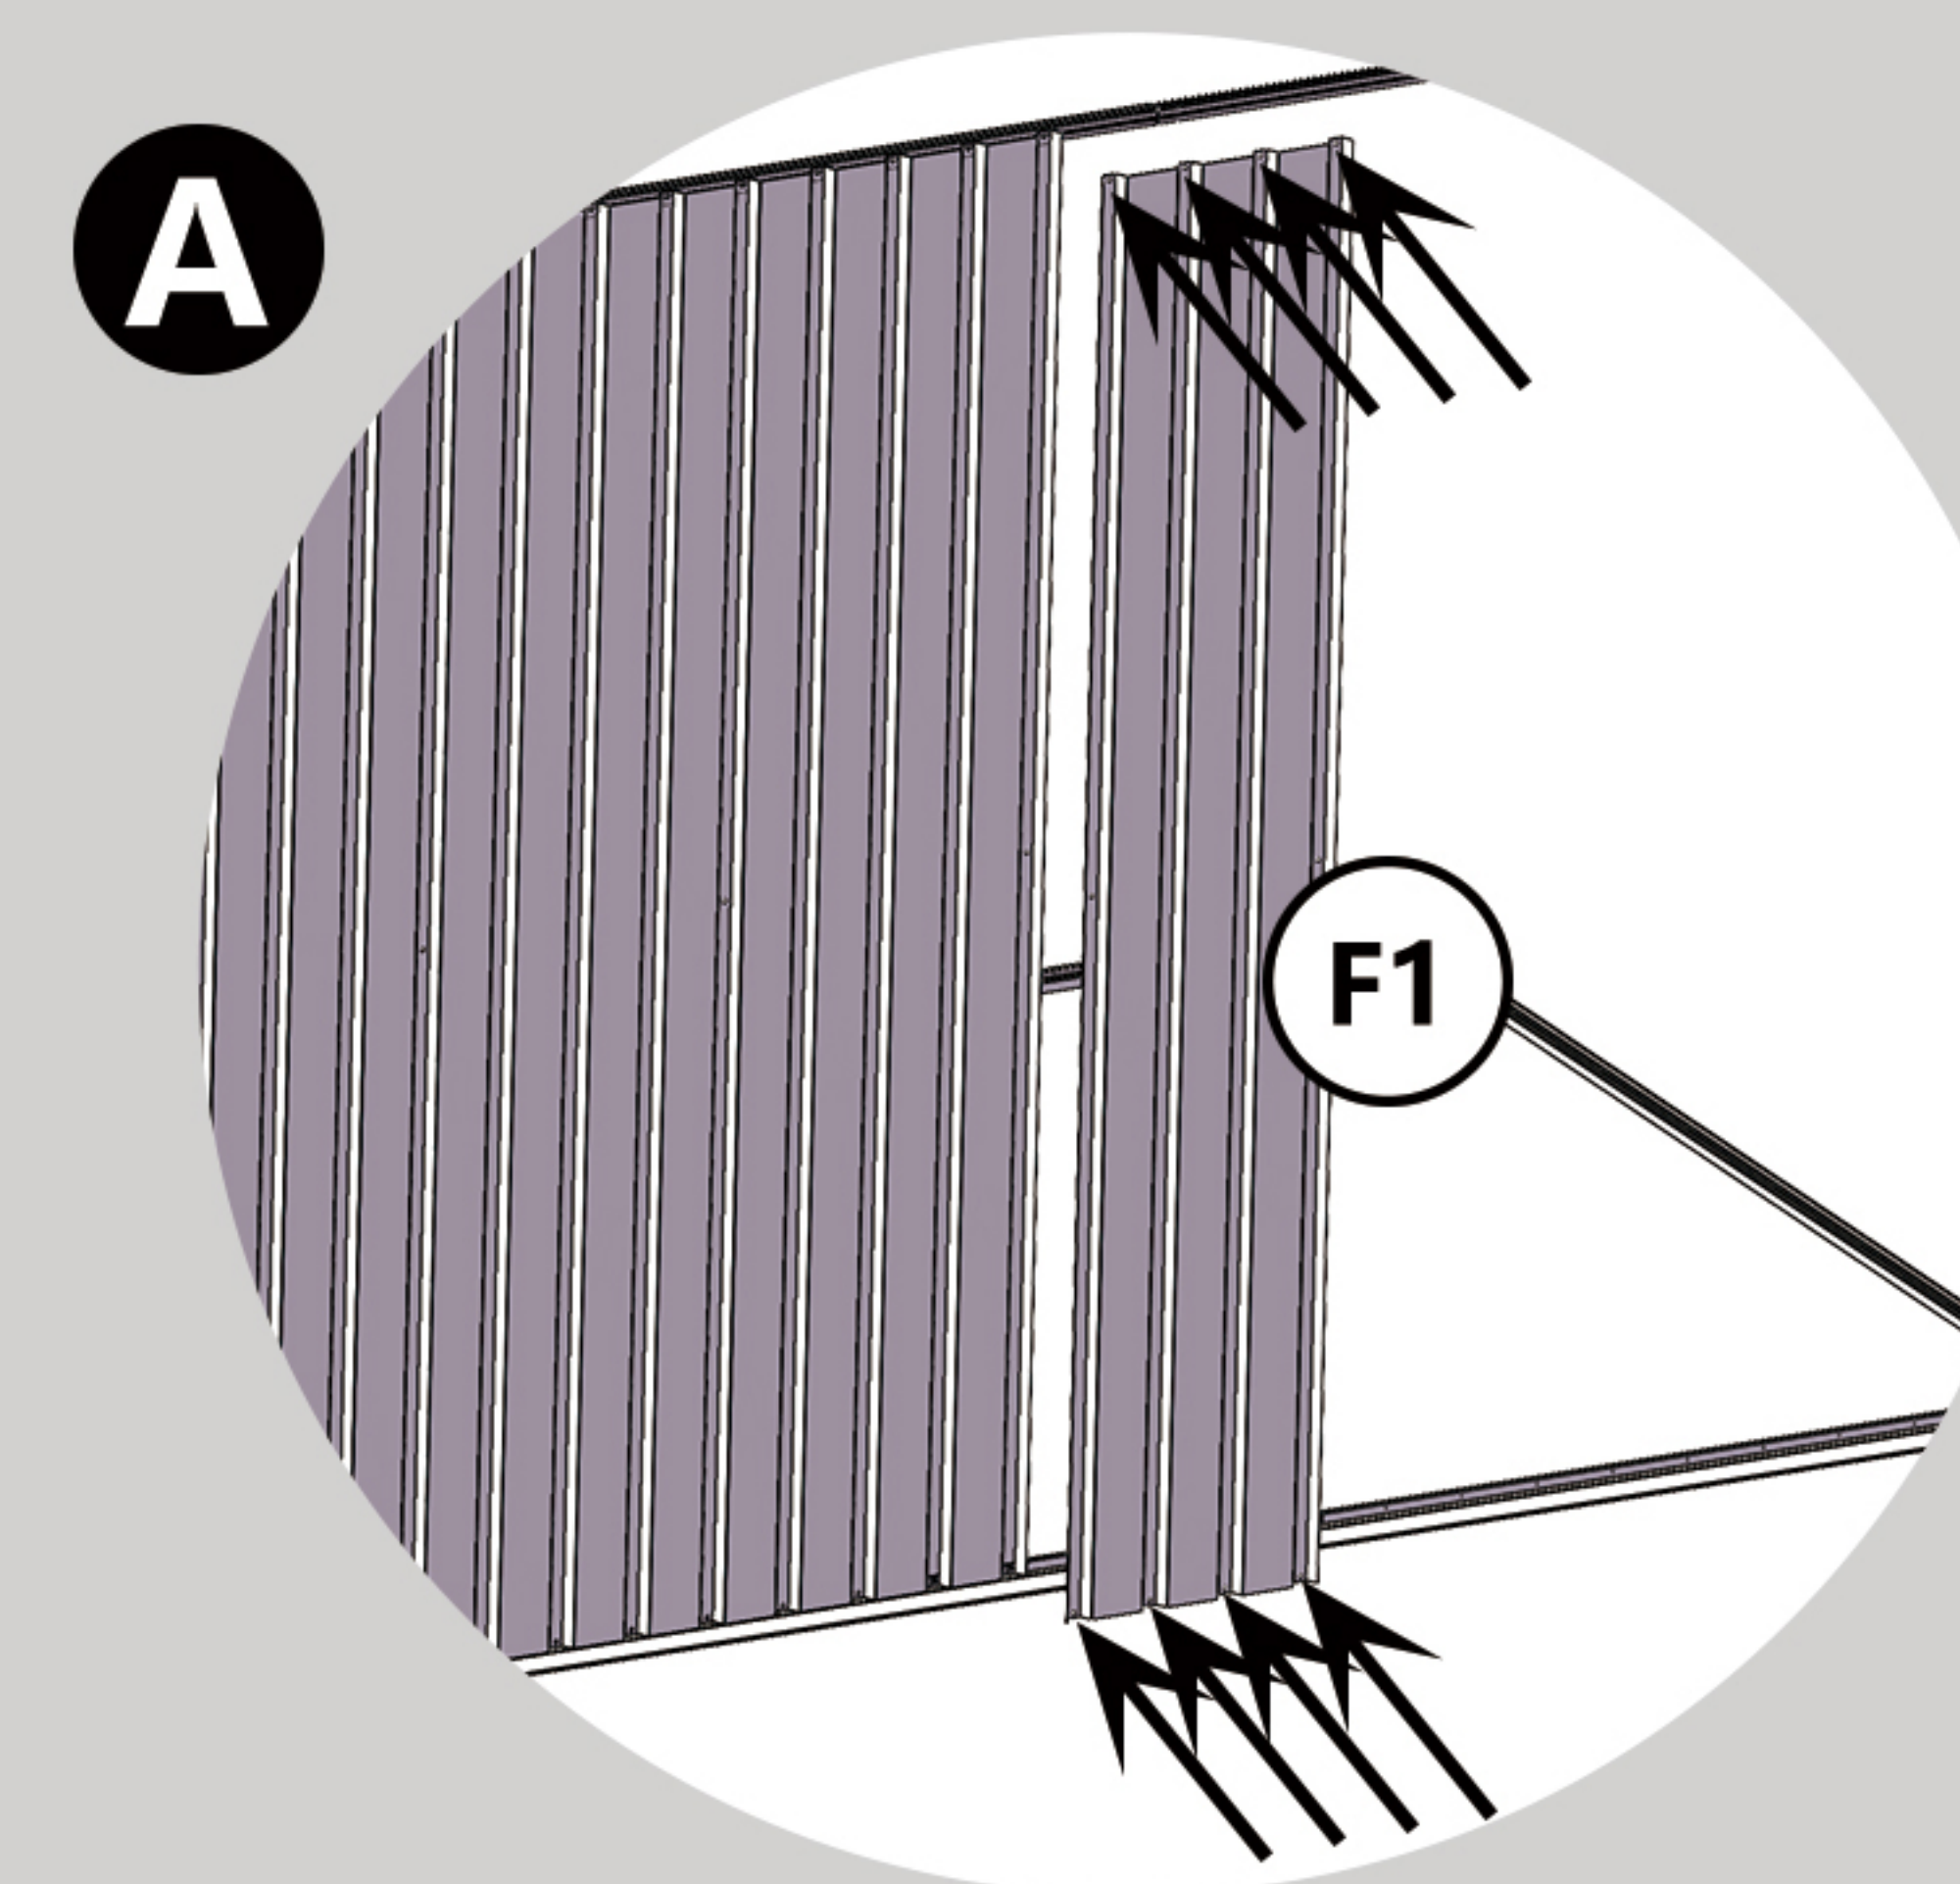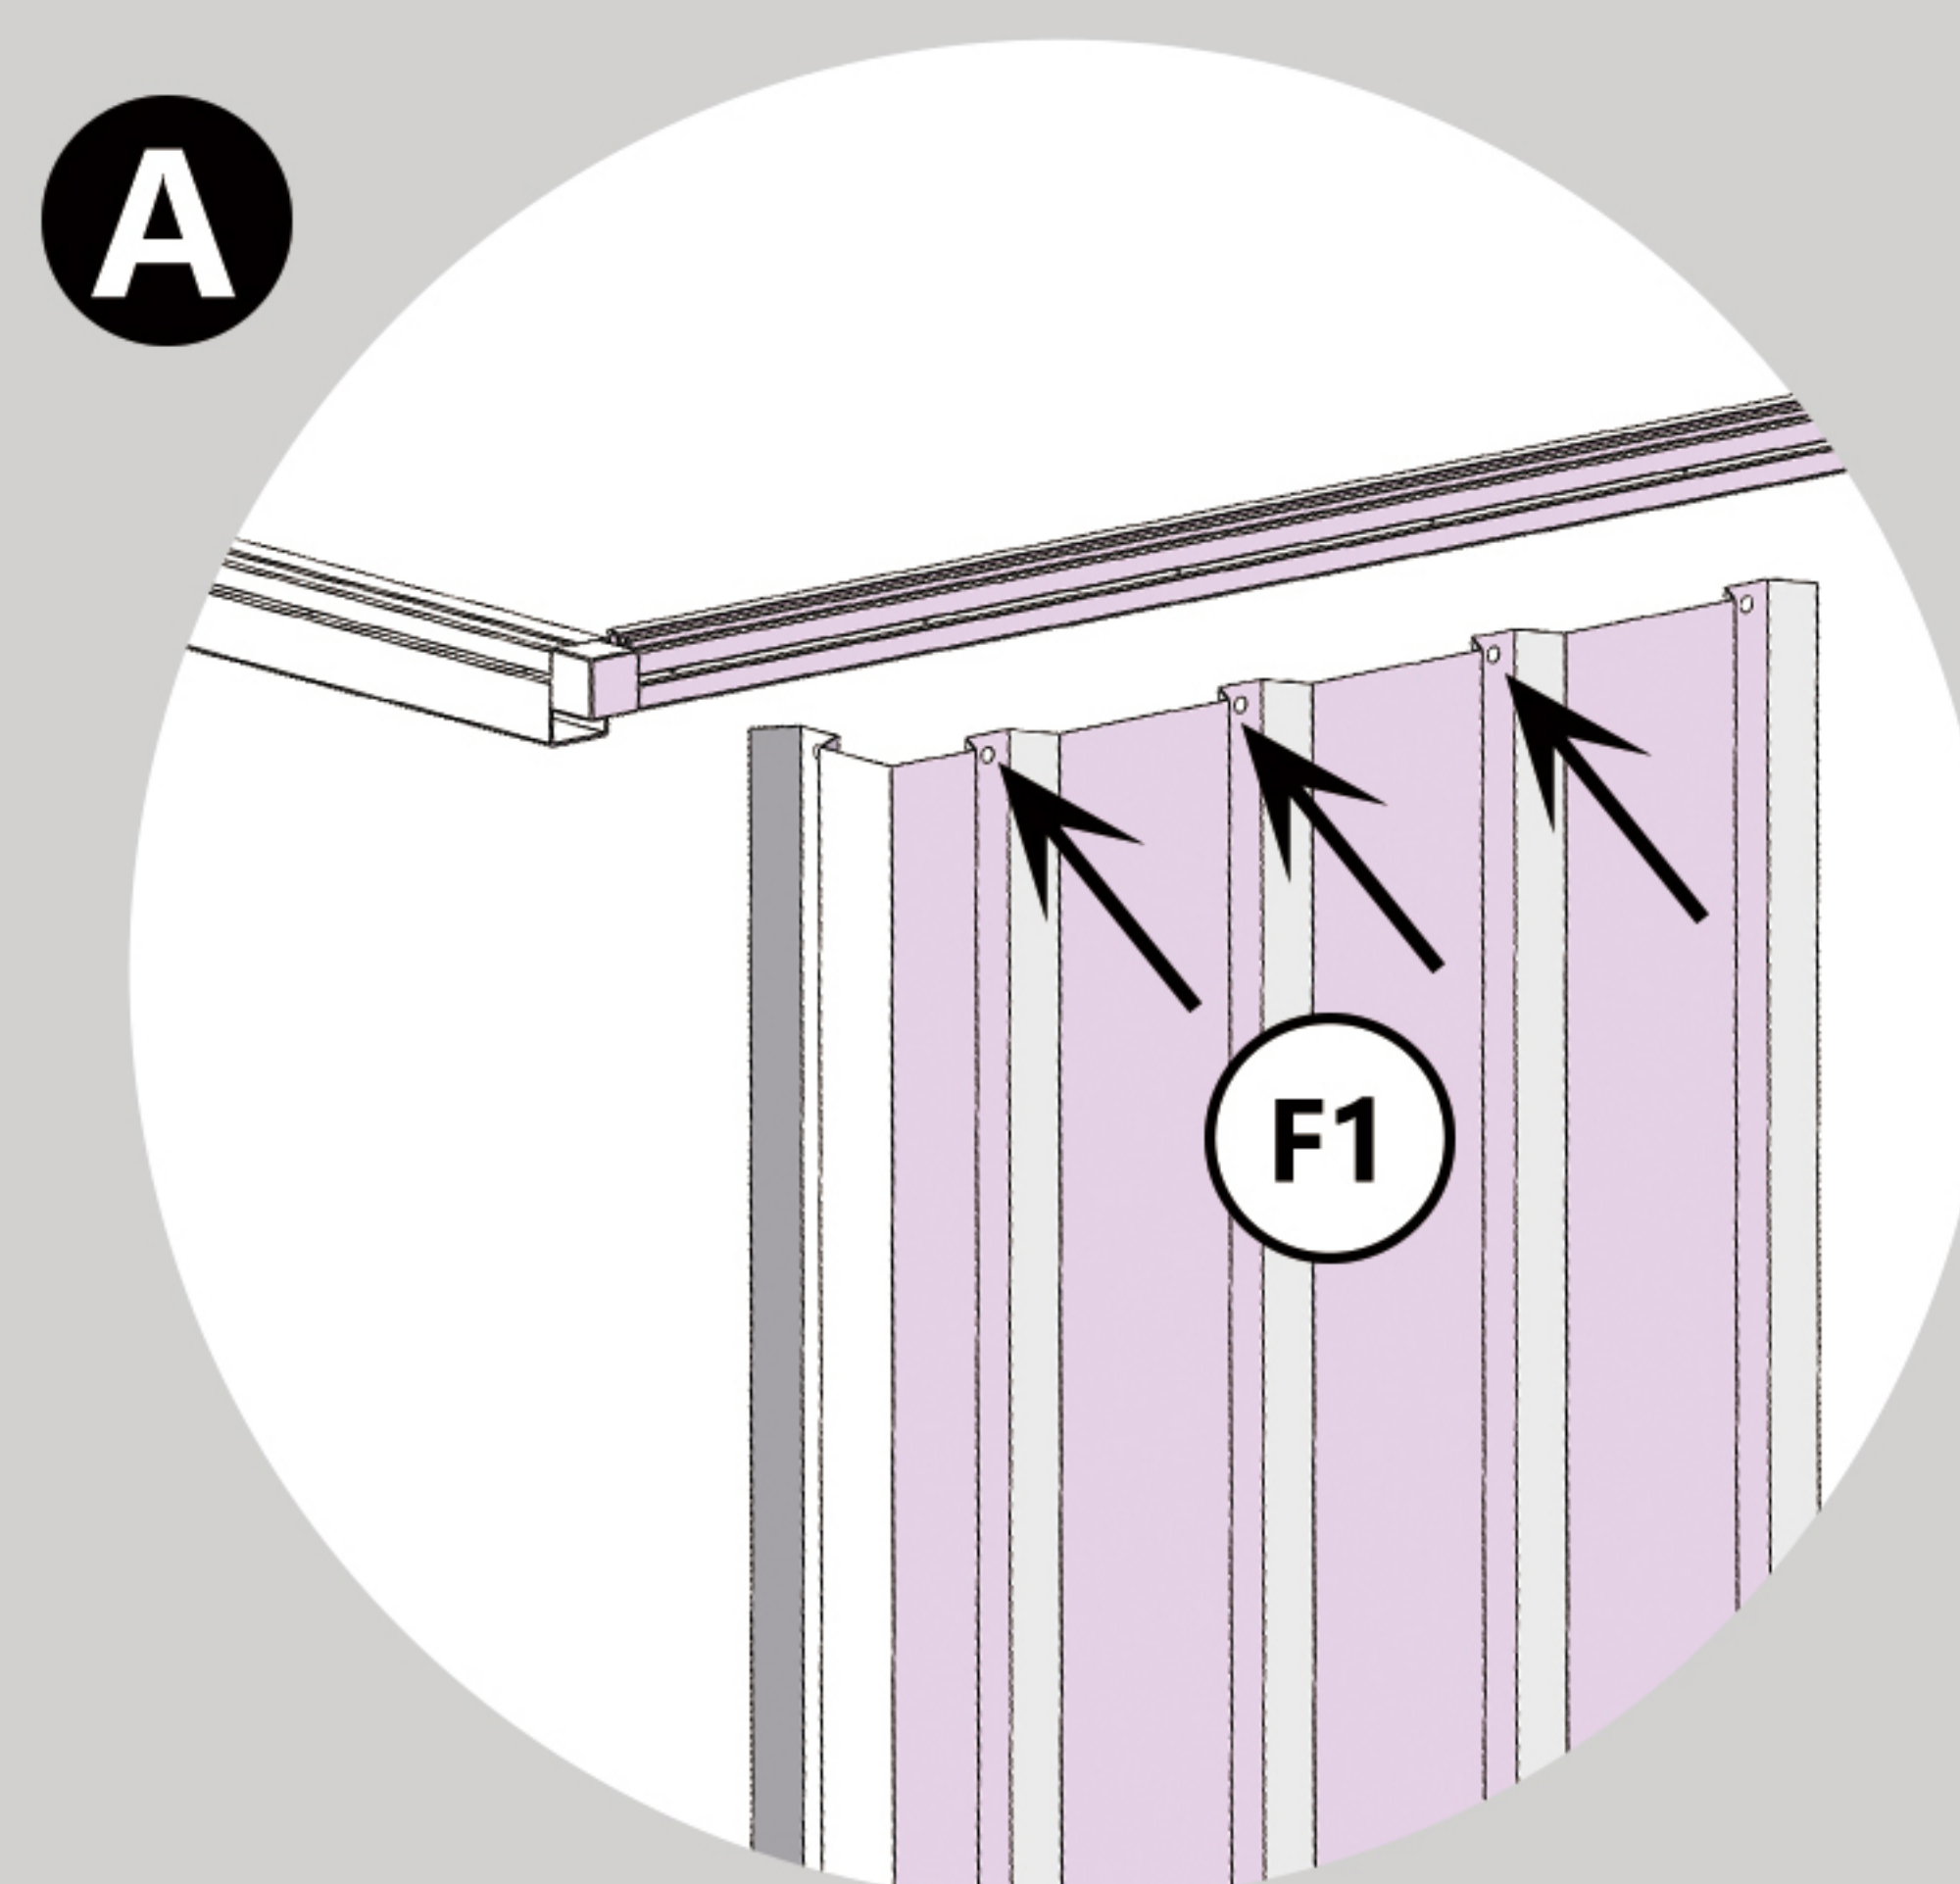of the wall tiles need to be screwed,

The upper and lower ends are fixed with F1, and the middle is fixed with F3.



NO.	PART	Qty.
KL		1
KR		1
F1		
F3		

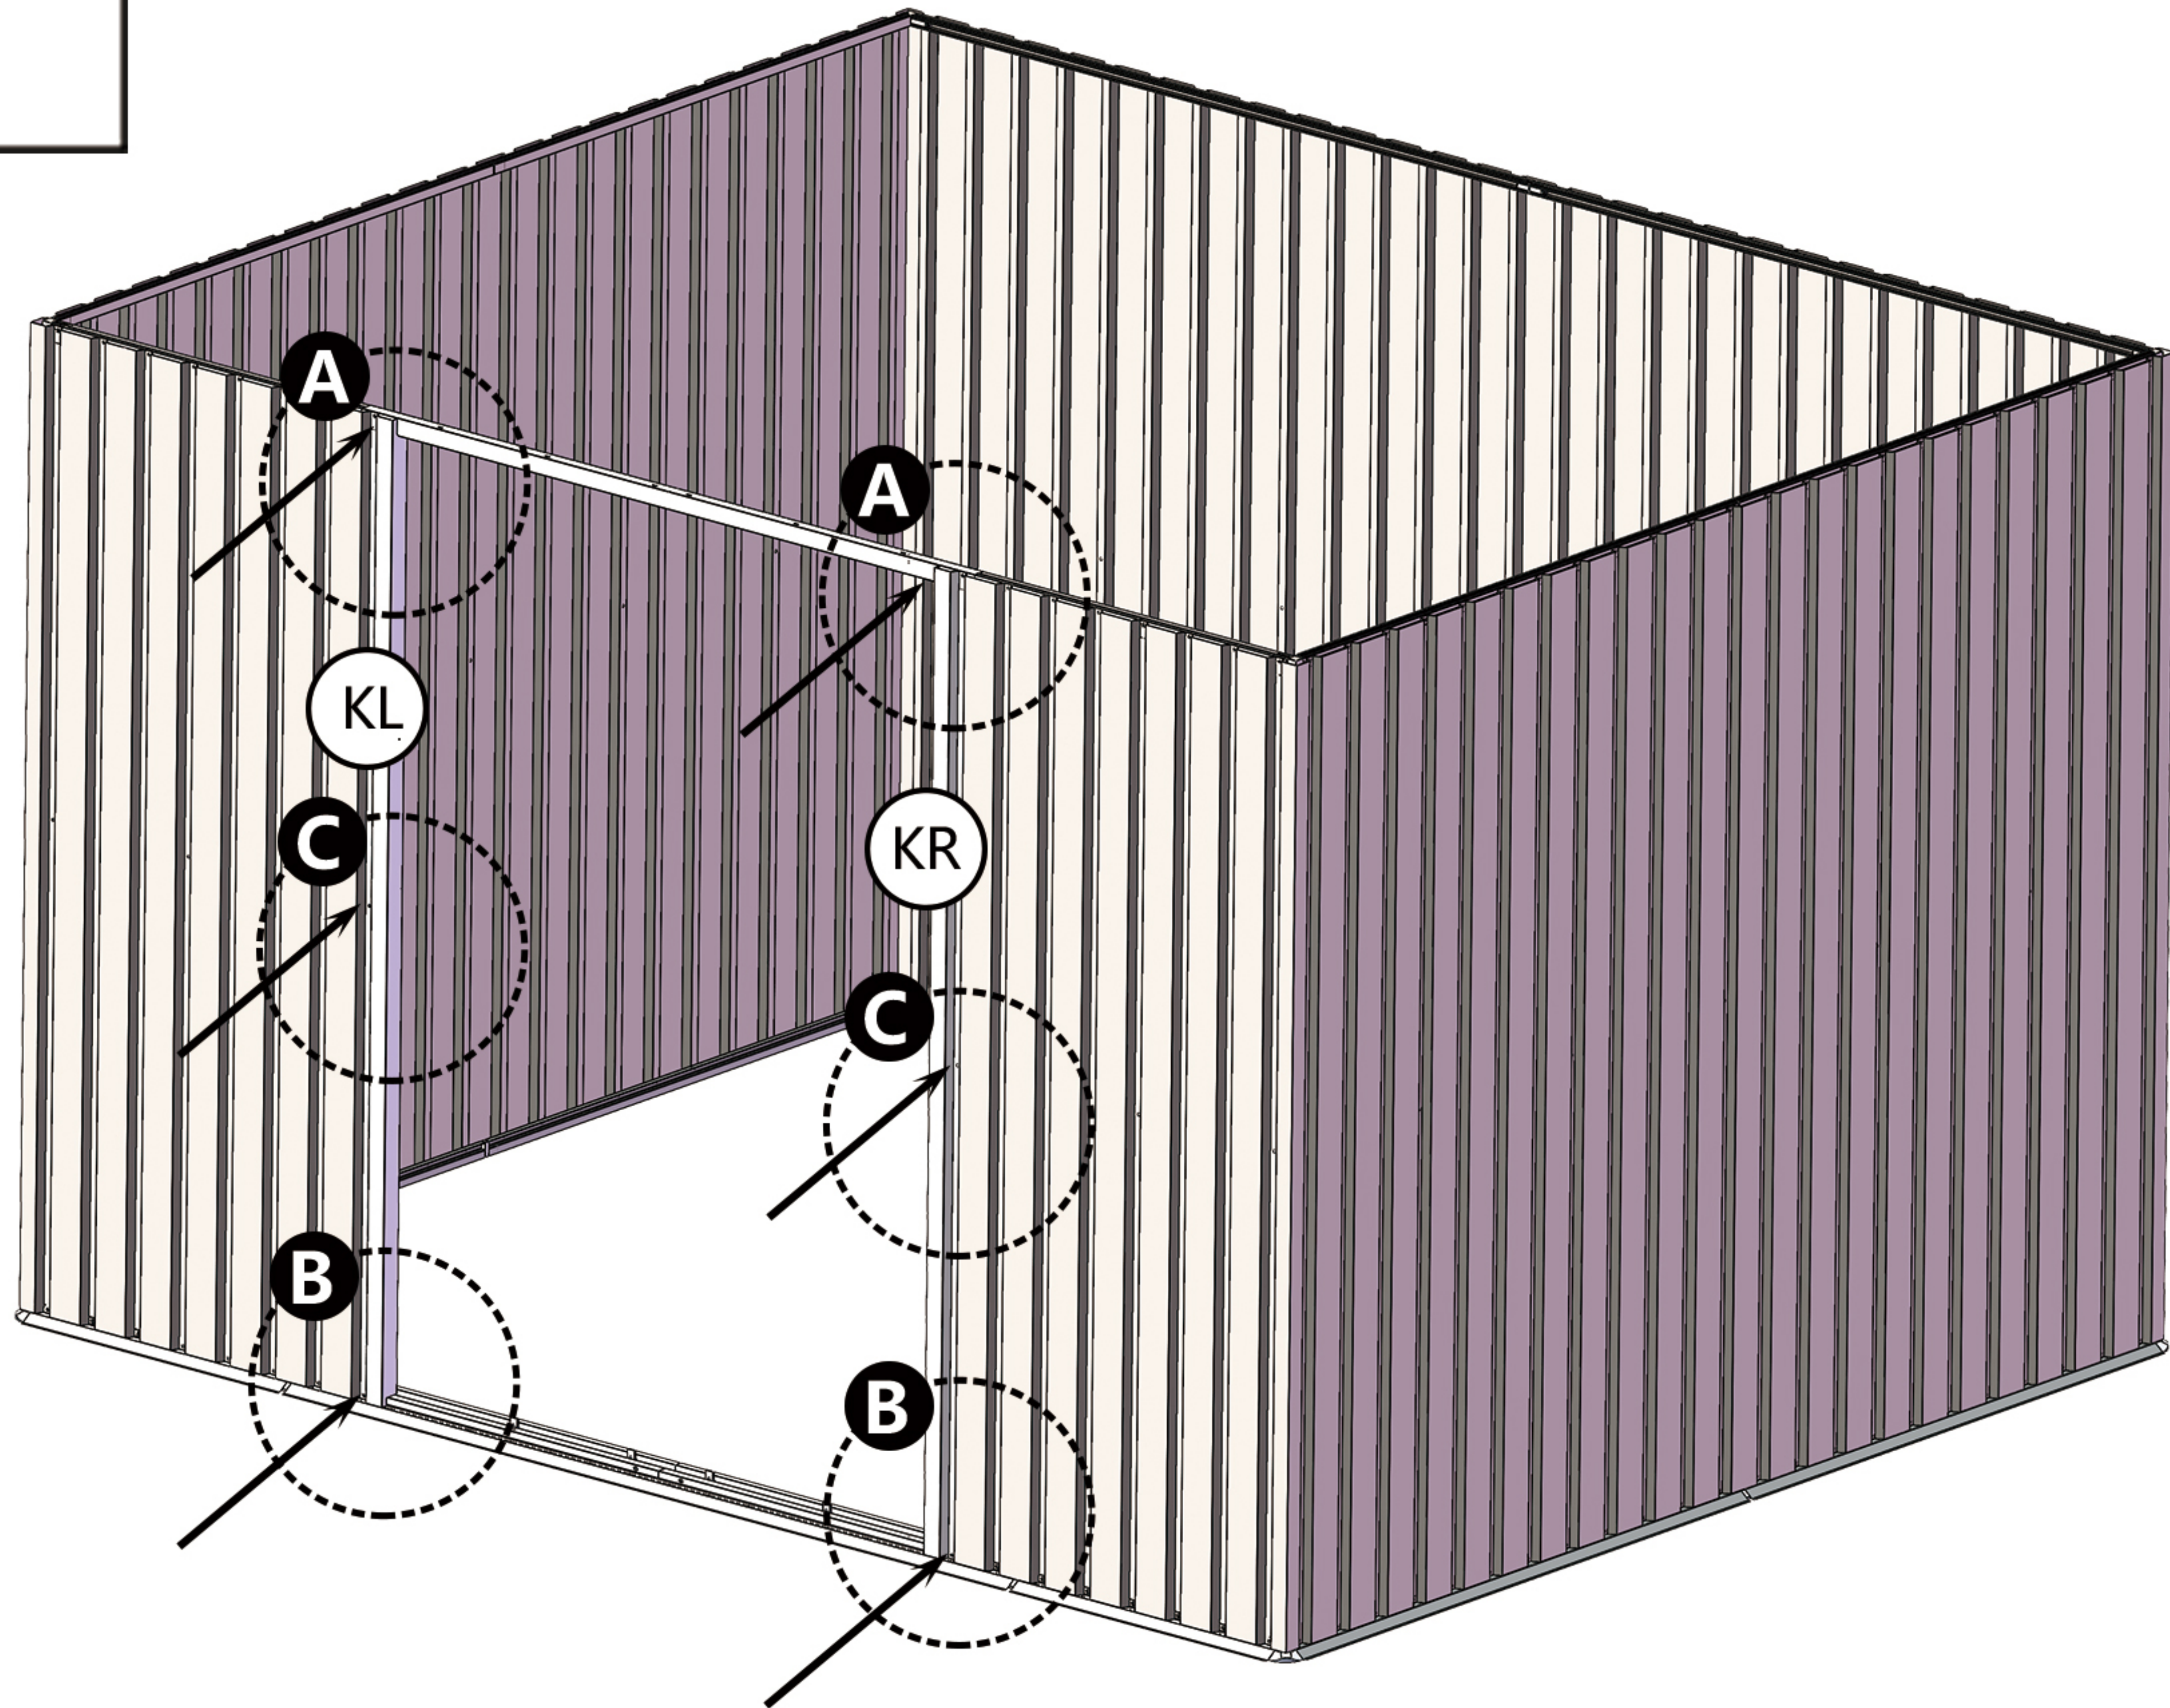









Notice:

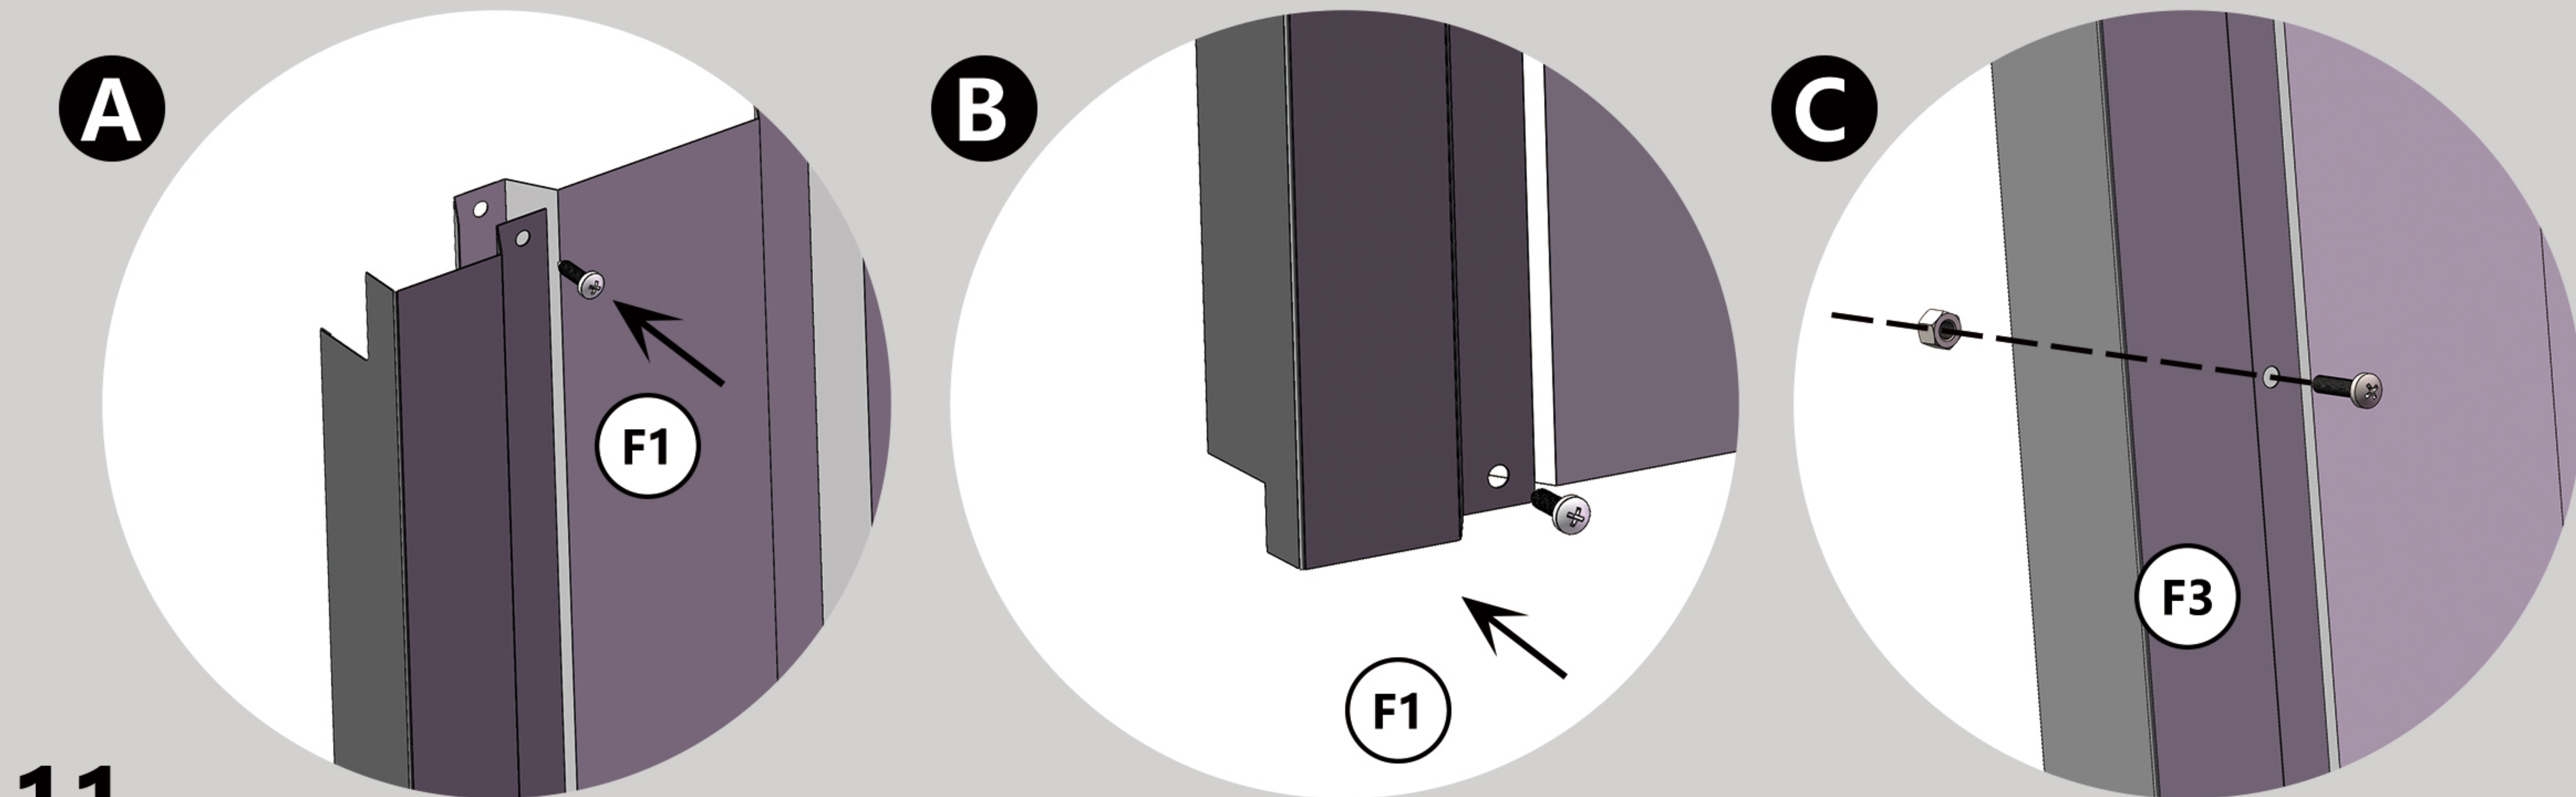
As shown in the picture, the steps of door frame and wall tile installation are the same.

The upper, middle and lower parts of KR and KL need screws.

The upper and lower ends are fixed with F1, and the middle is fixed with F3.



NO.	PART	Qty.	NO.	PART	Qty.
B1		4	F3		
B2L		2	F1		
B2R		2			
L1L		2			
L1R		2			

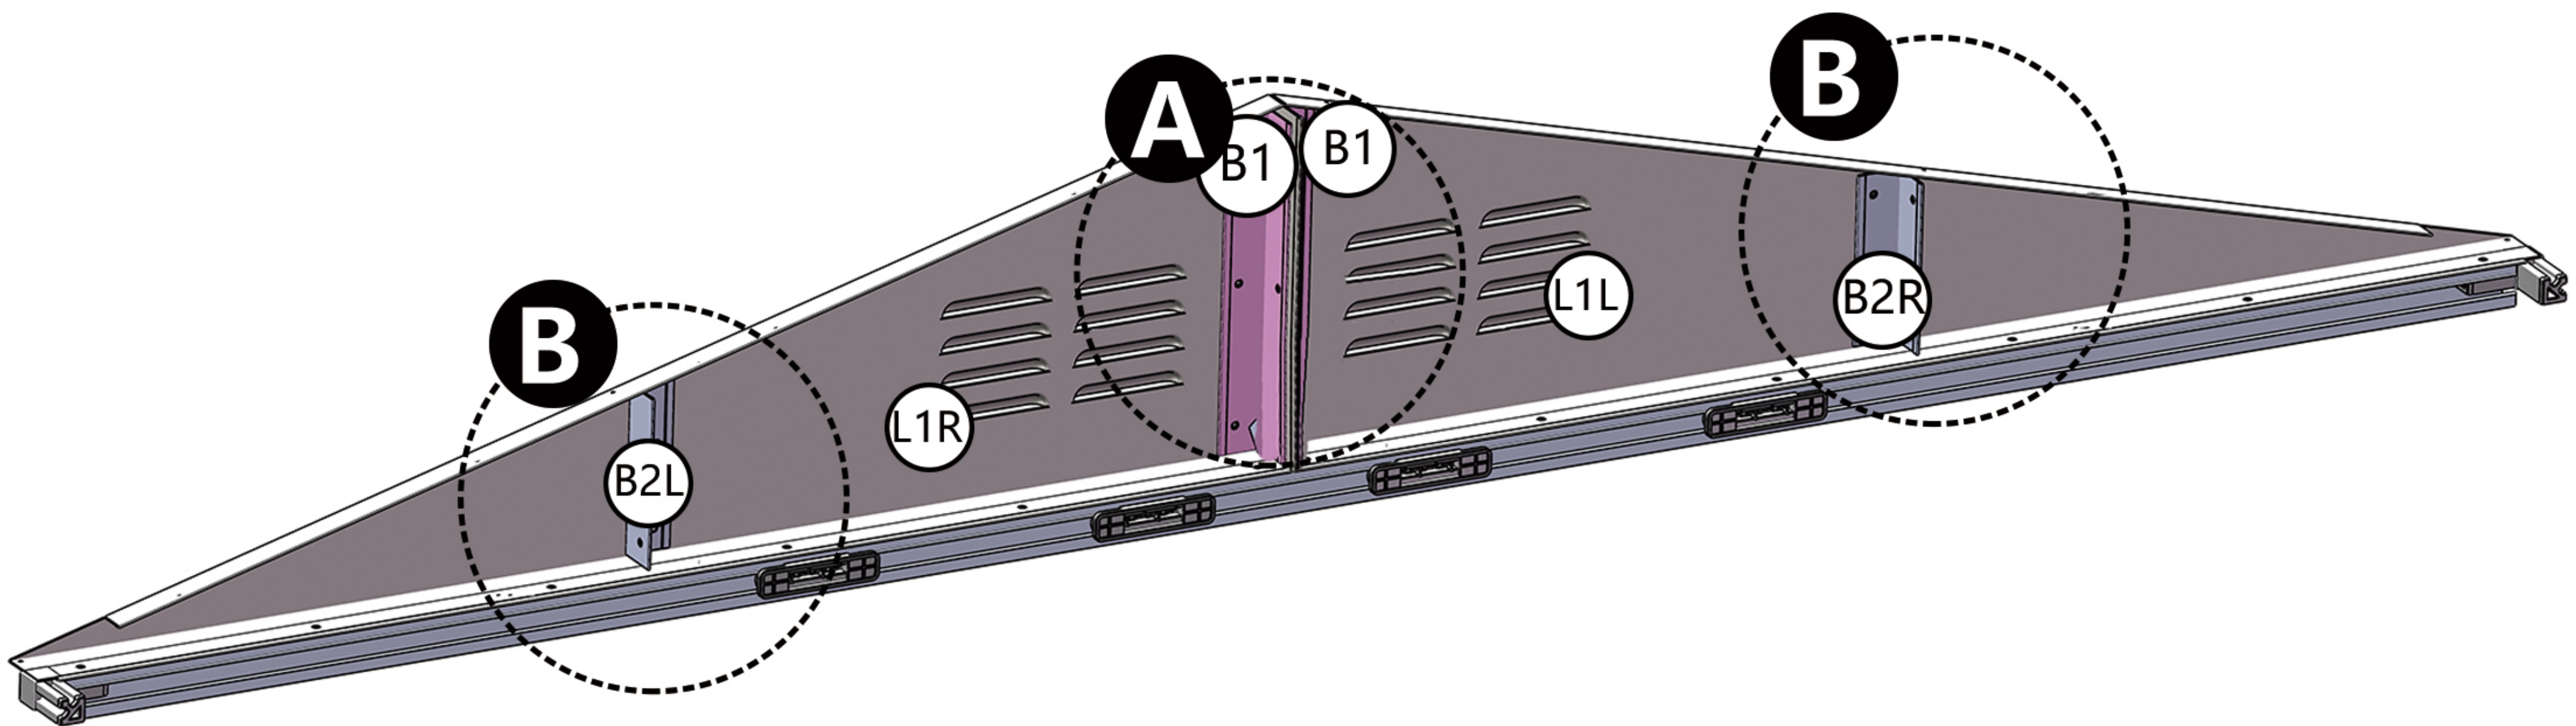


Notice:


B1 has holes on both sides, and the large holes are 2 B1s, L1R, and L1L joined together.


The small holes are 2 B1s connected to L1R and L1L respectively.

B2R and B2L have holes on both sides, and the large holes are B2R and B2L connected to L4L and L4R.


The small holes are B2R and B2L, which are connected to L1R and L1L respectively.

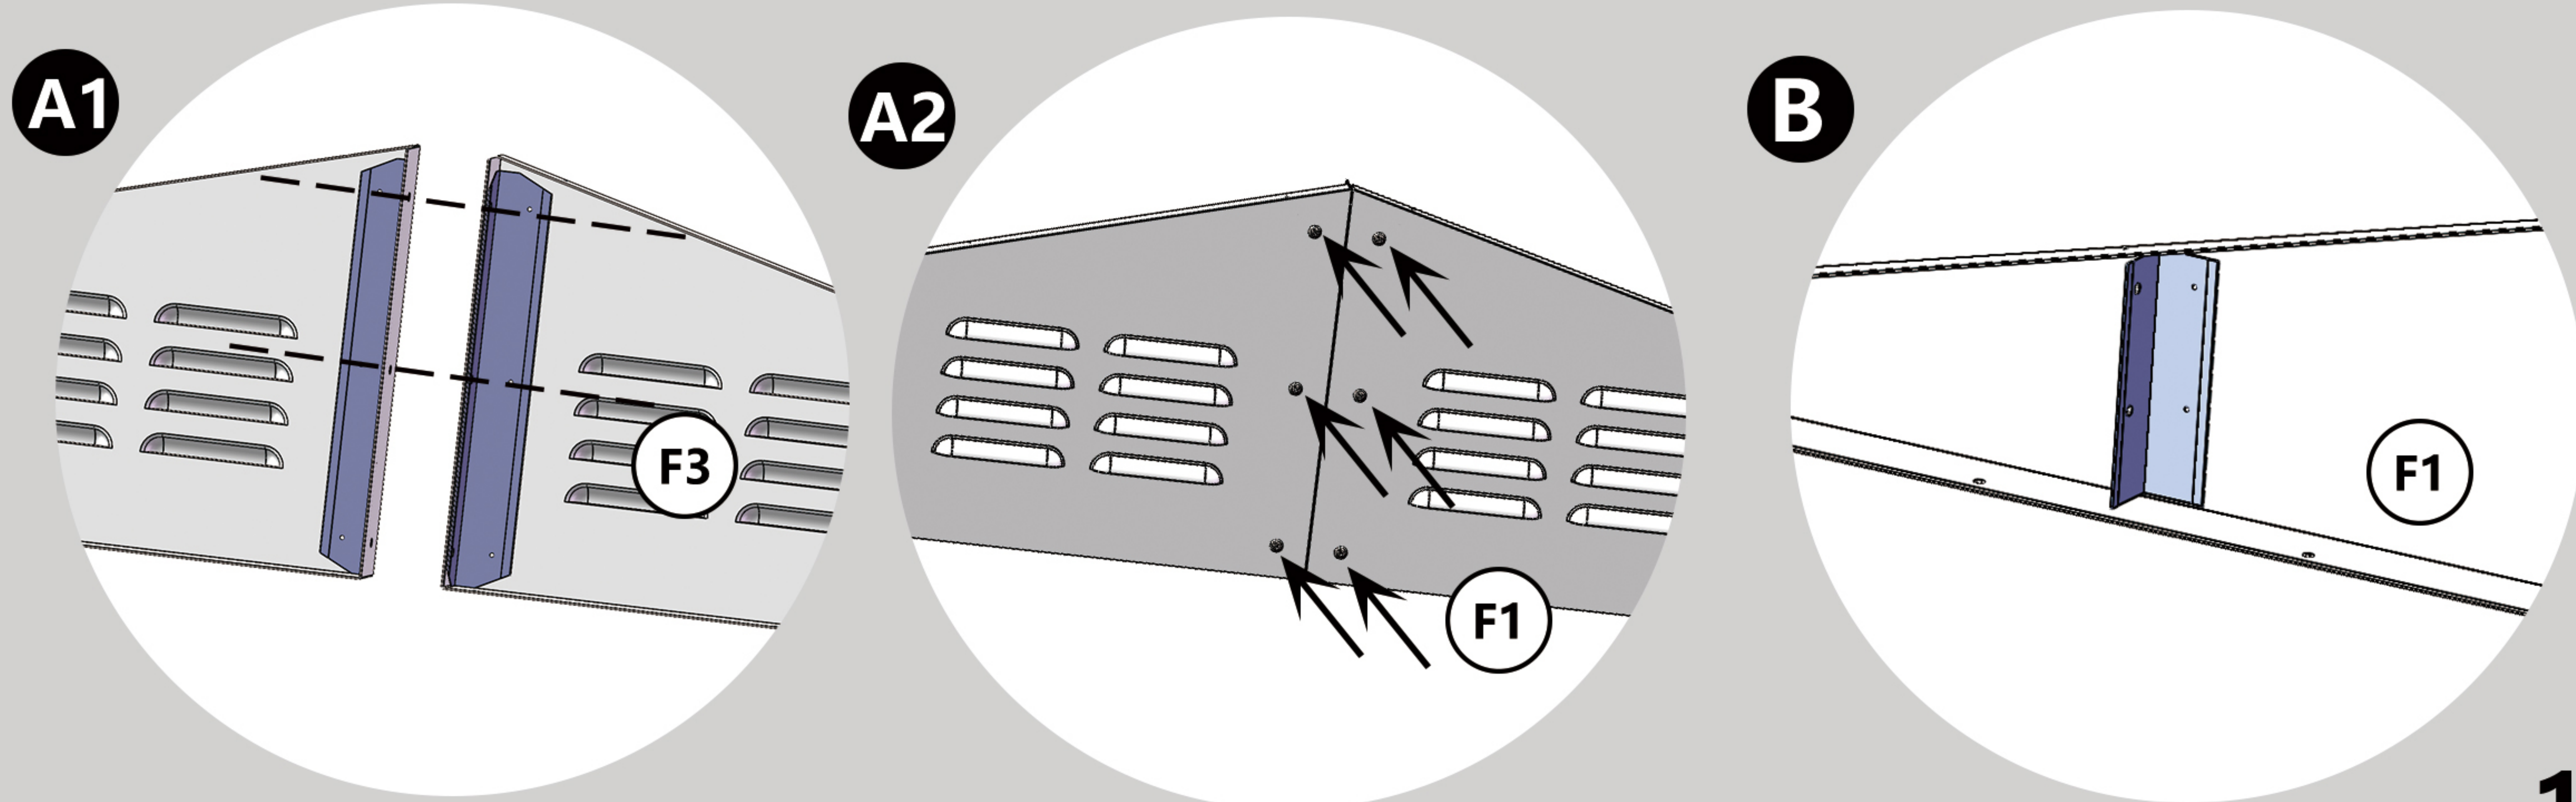



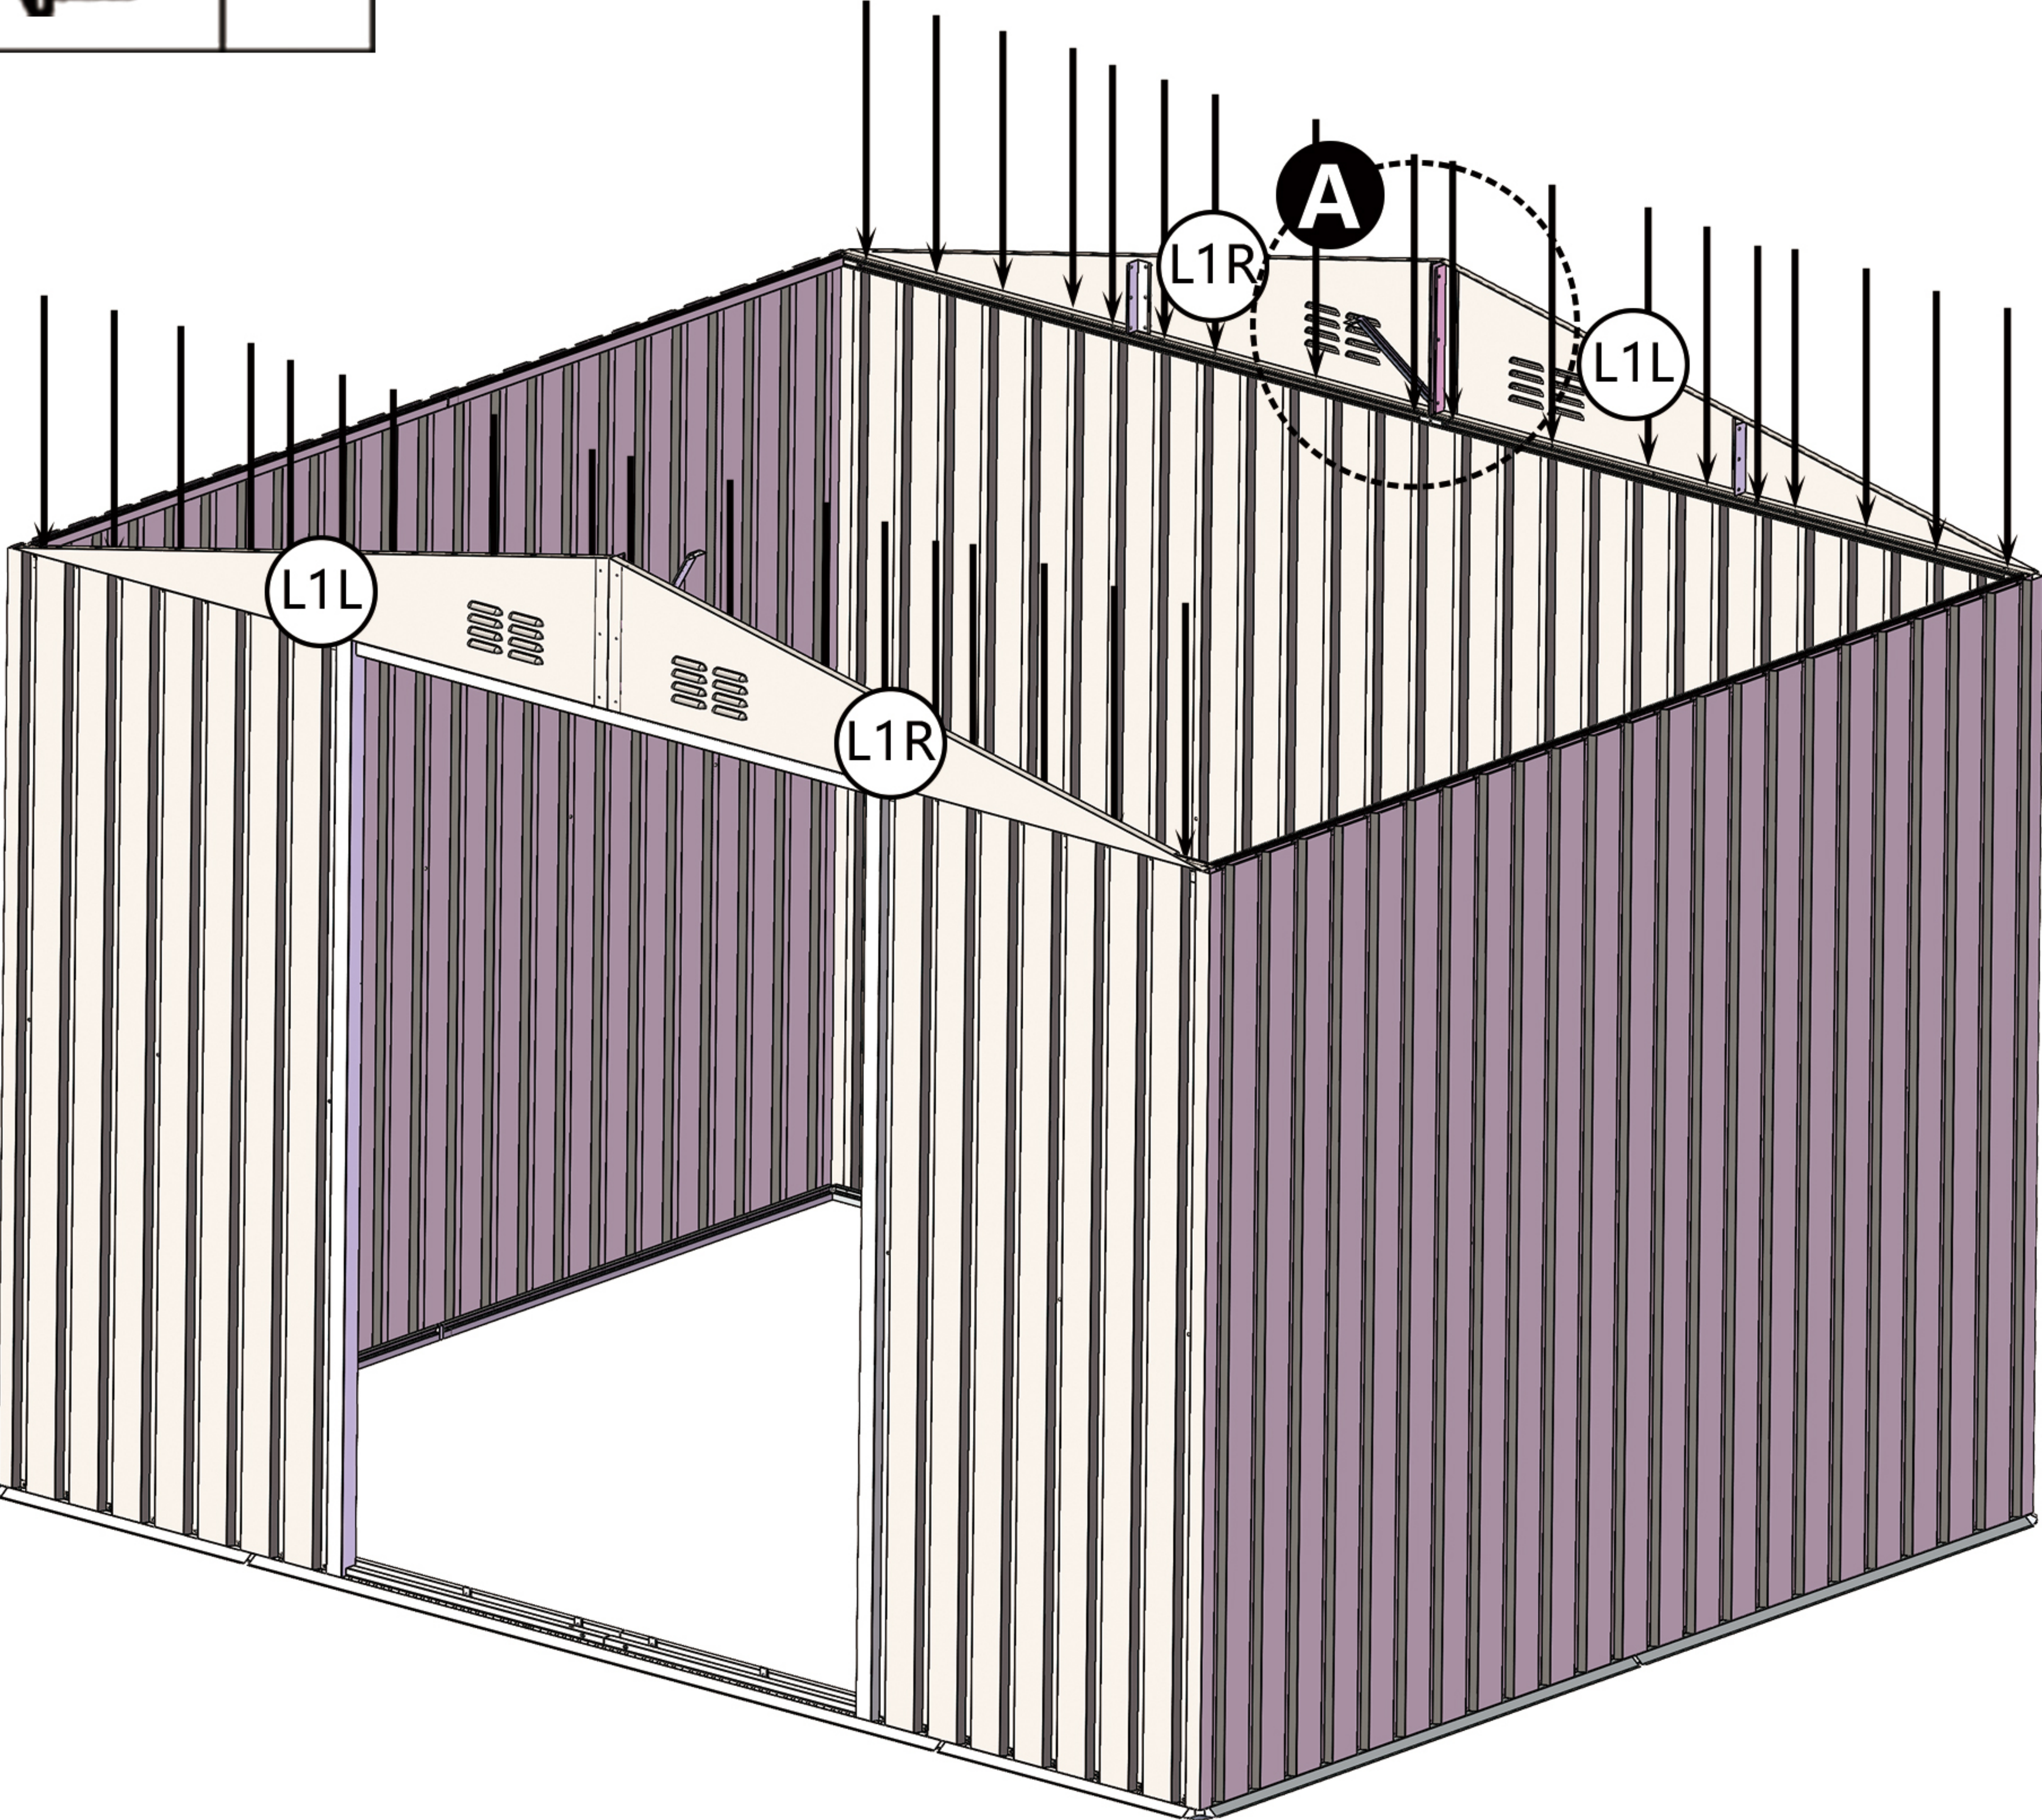


NO.	PART	Qty.
F1		

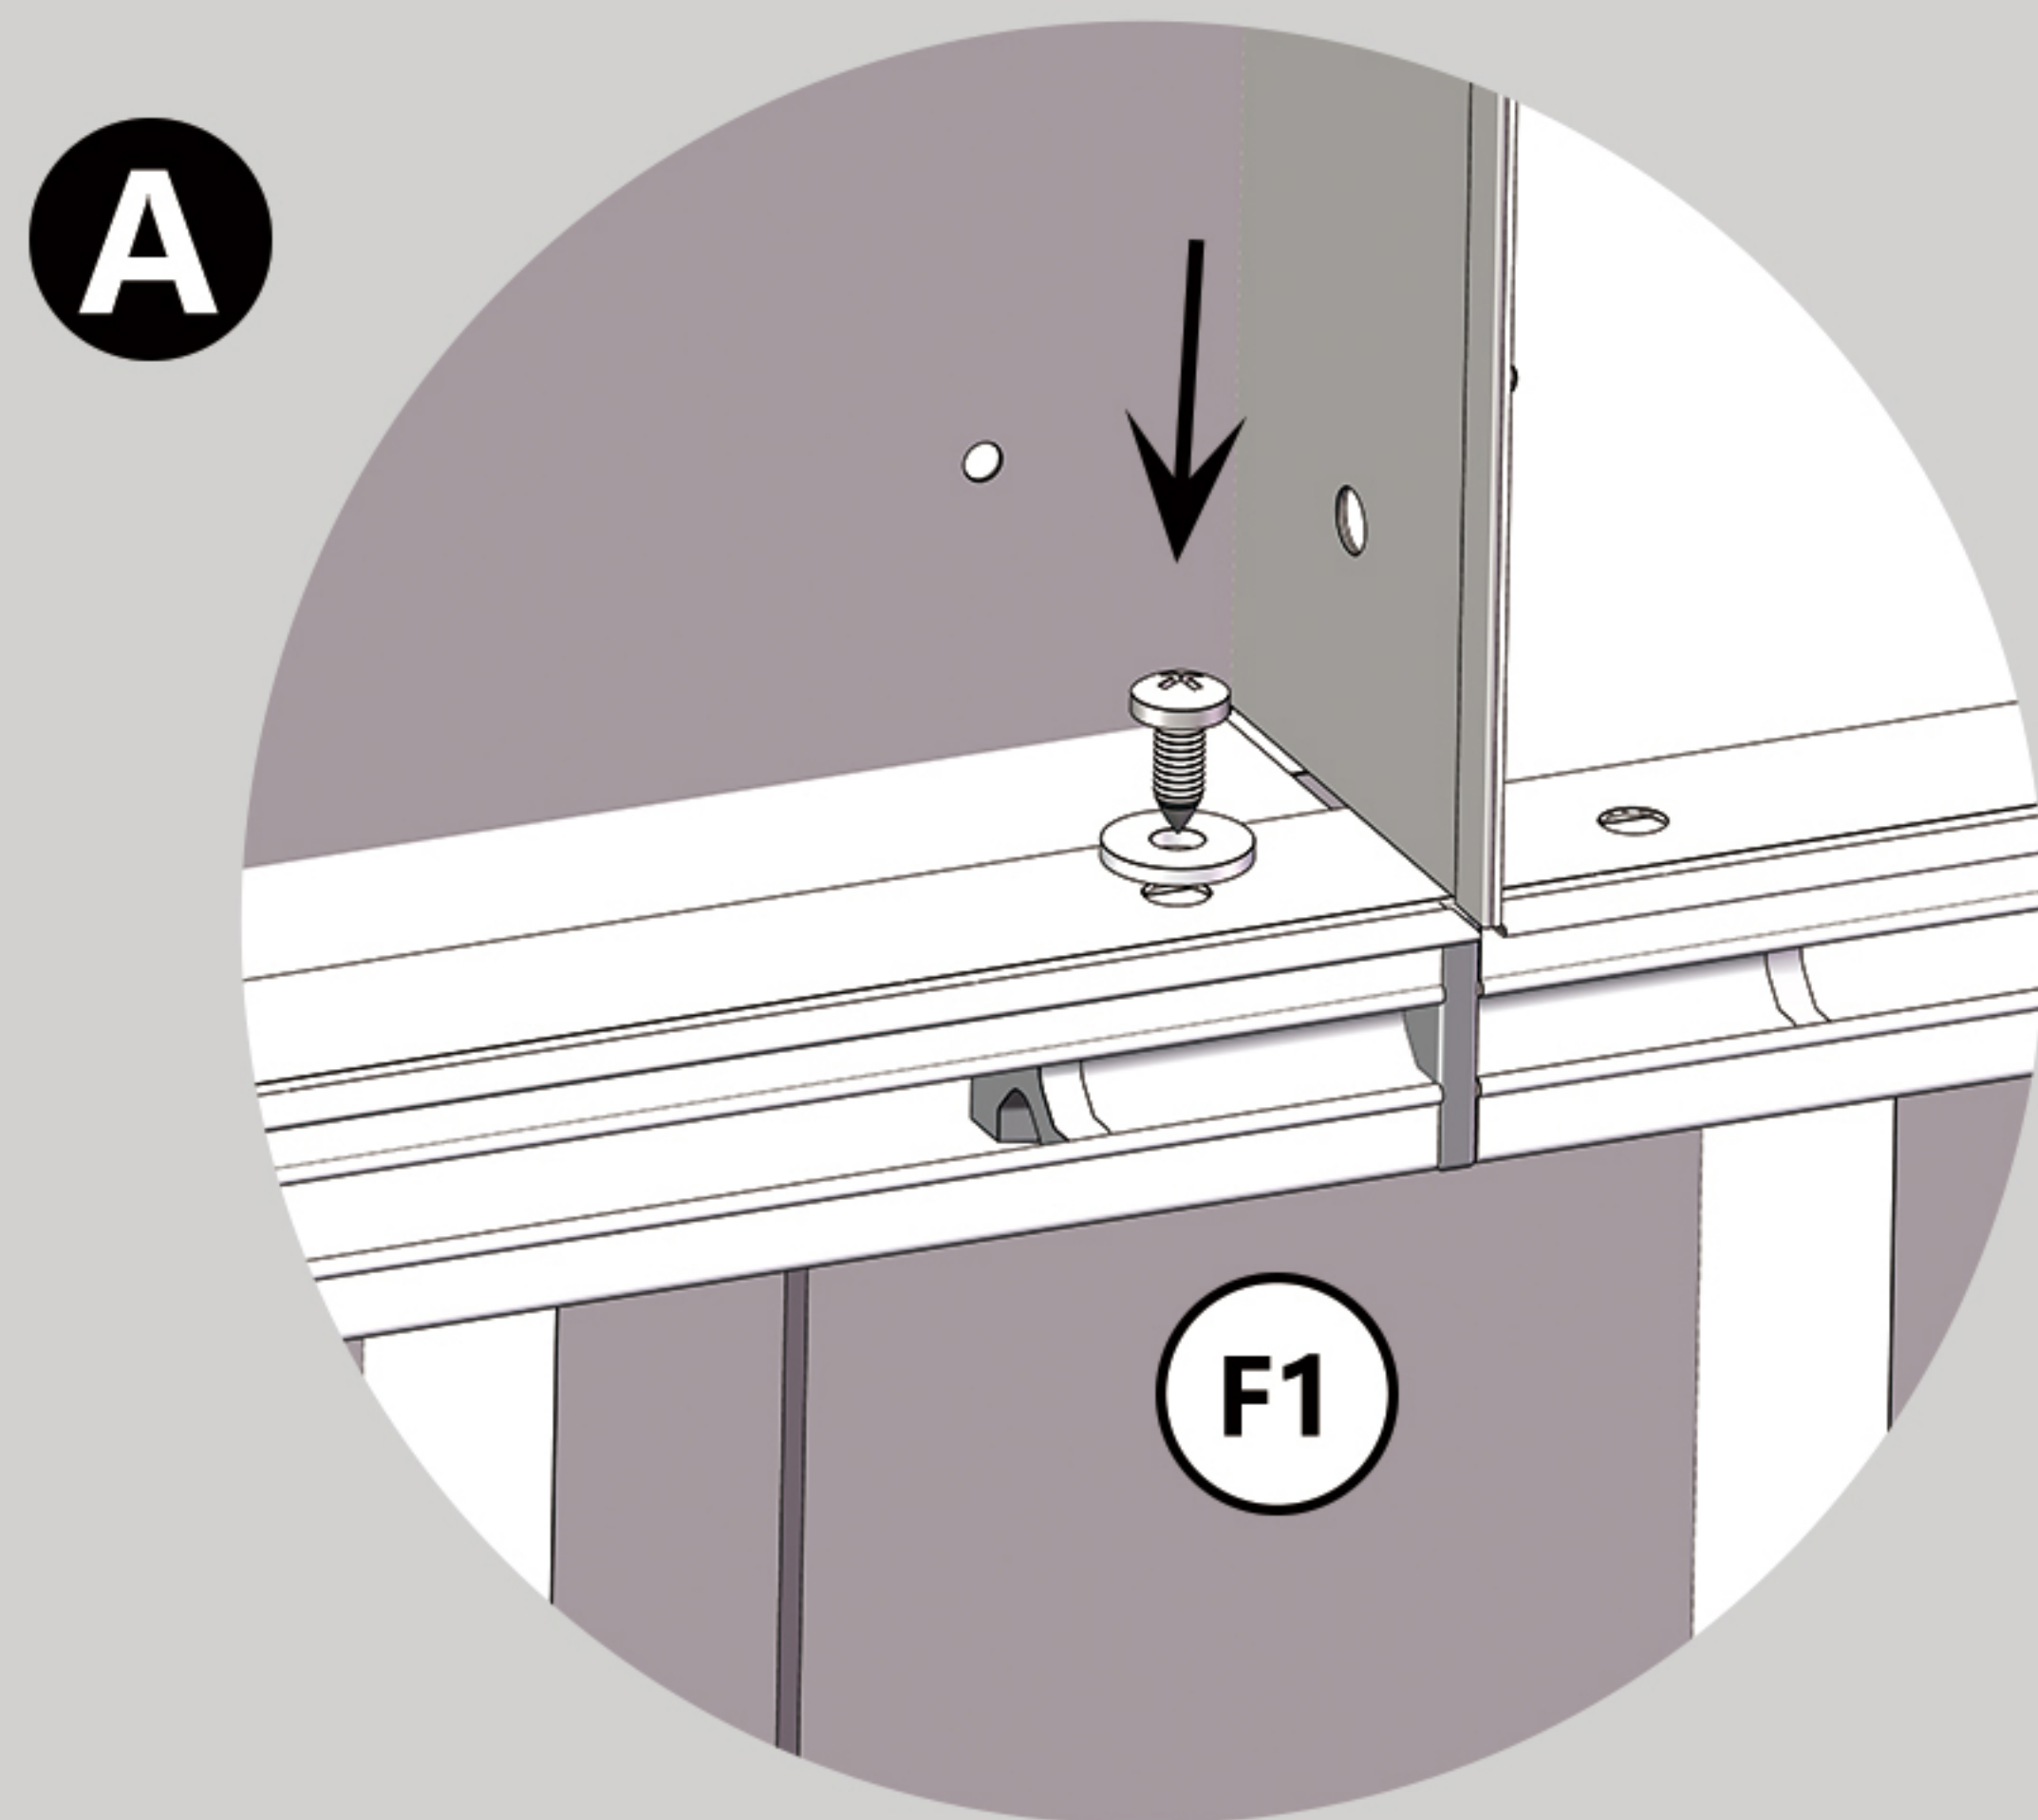


Notice:
The assembled roof support parts are successively installed on the wall tiles with F1





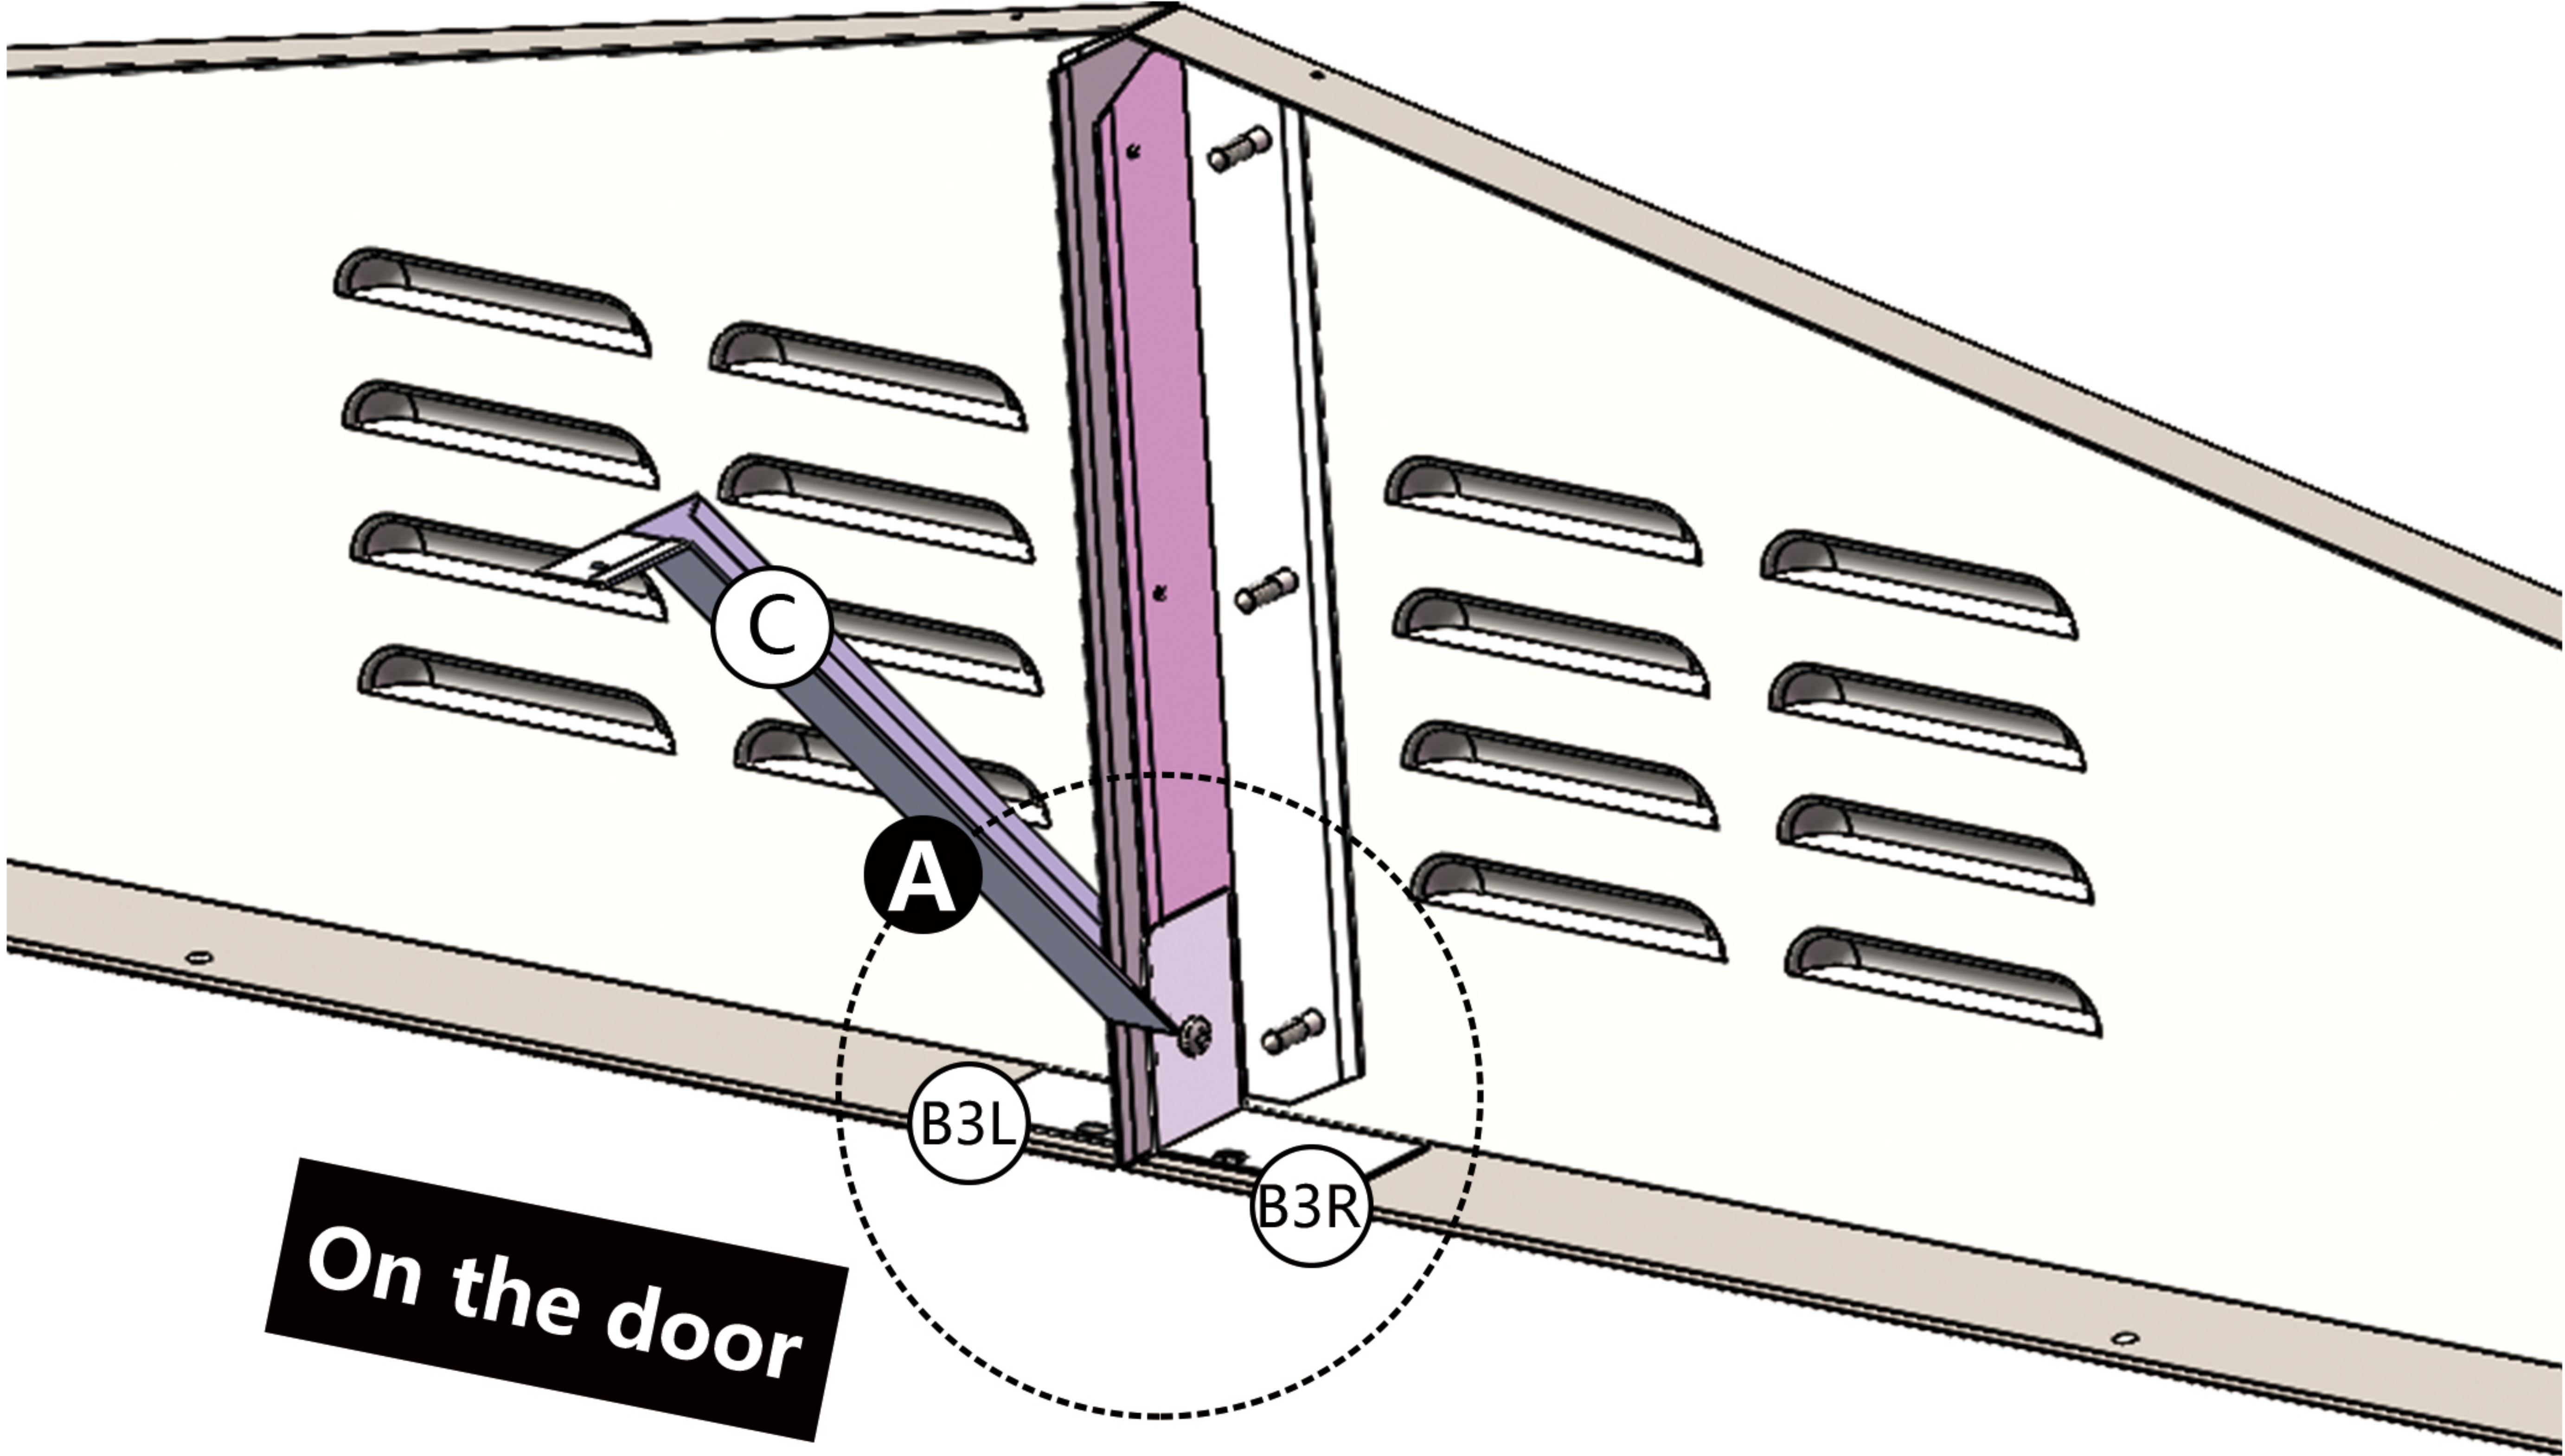


NO.	PART	Qty.
C		2
F3		
B3R		1
B3L		1

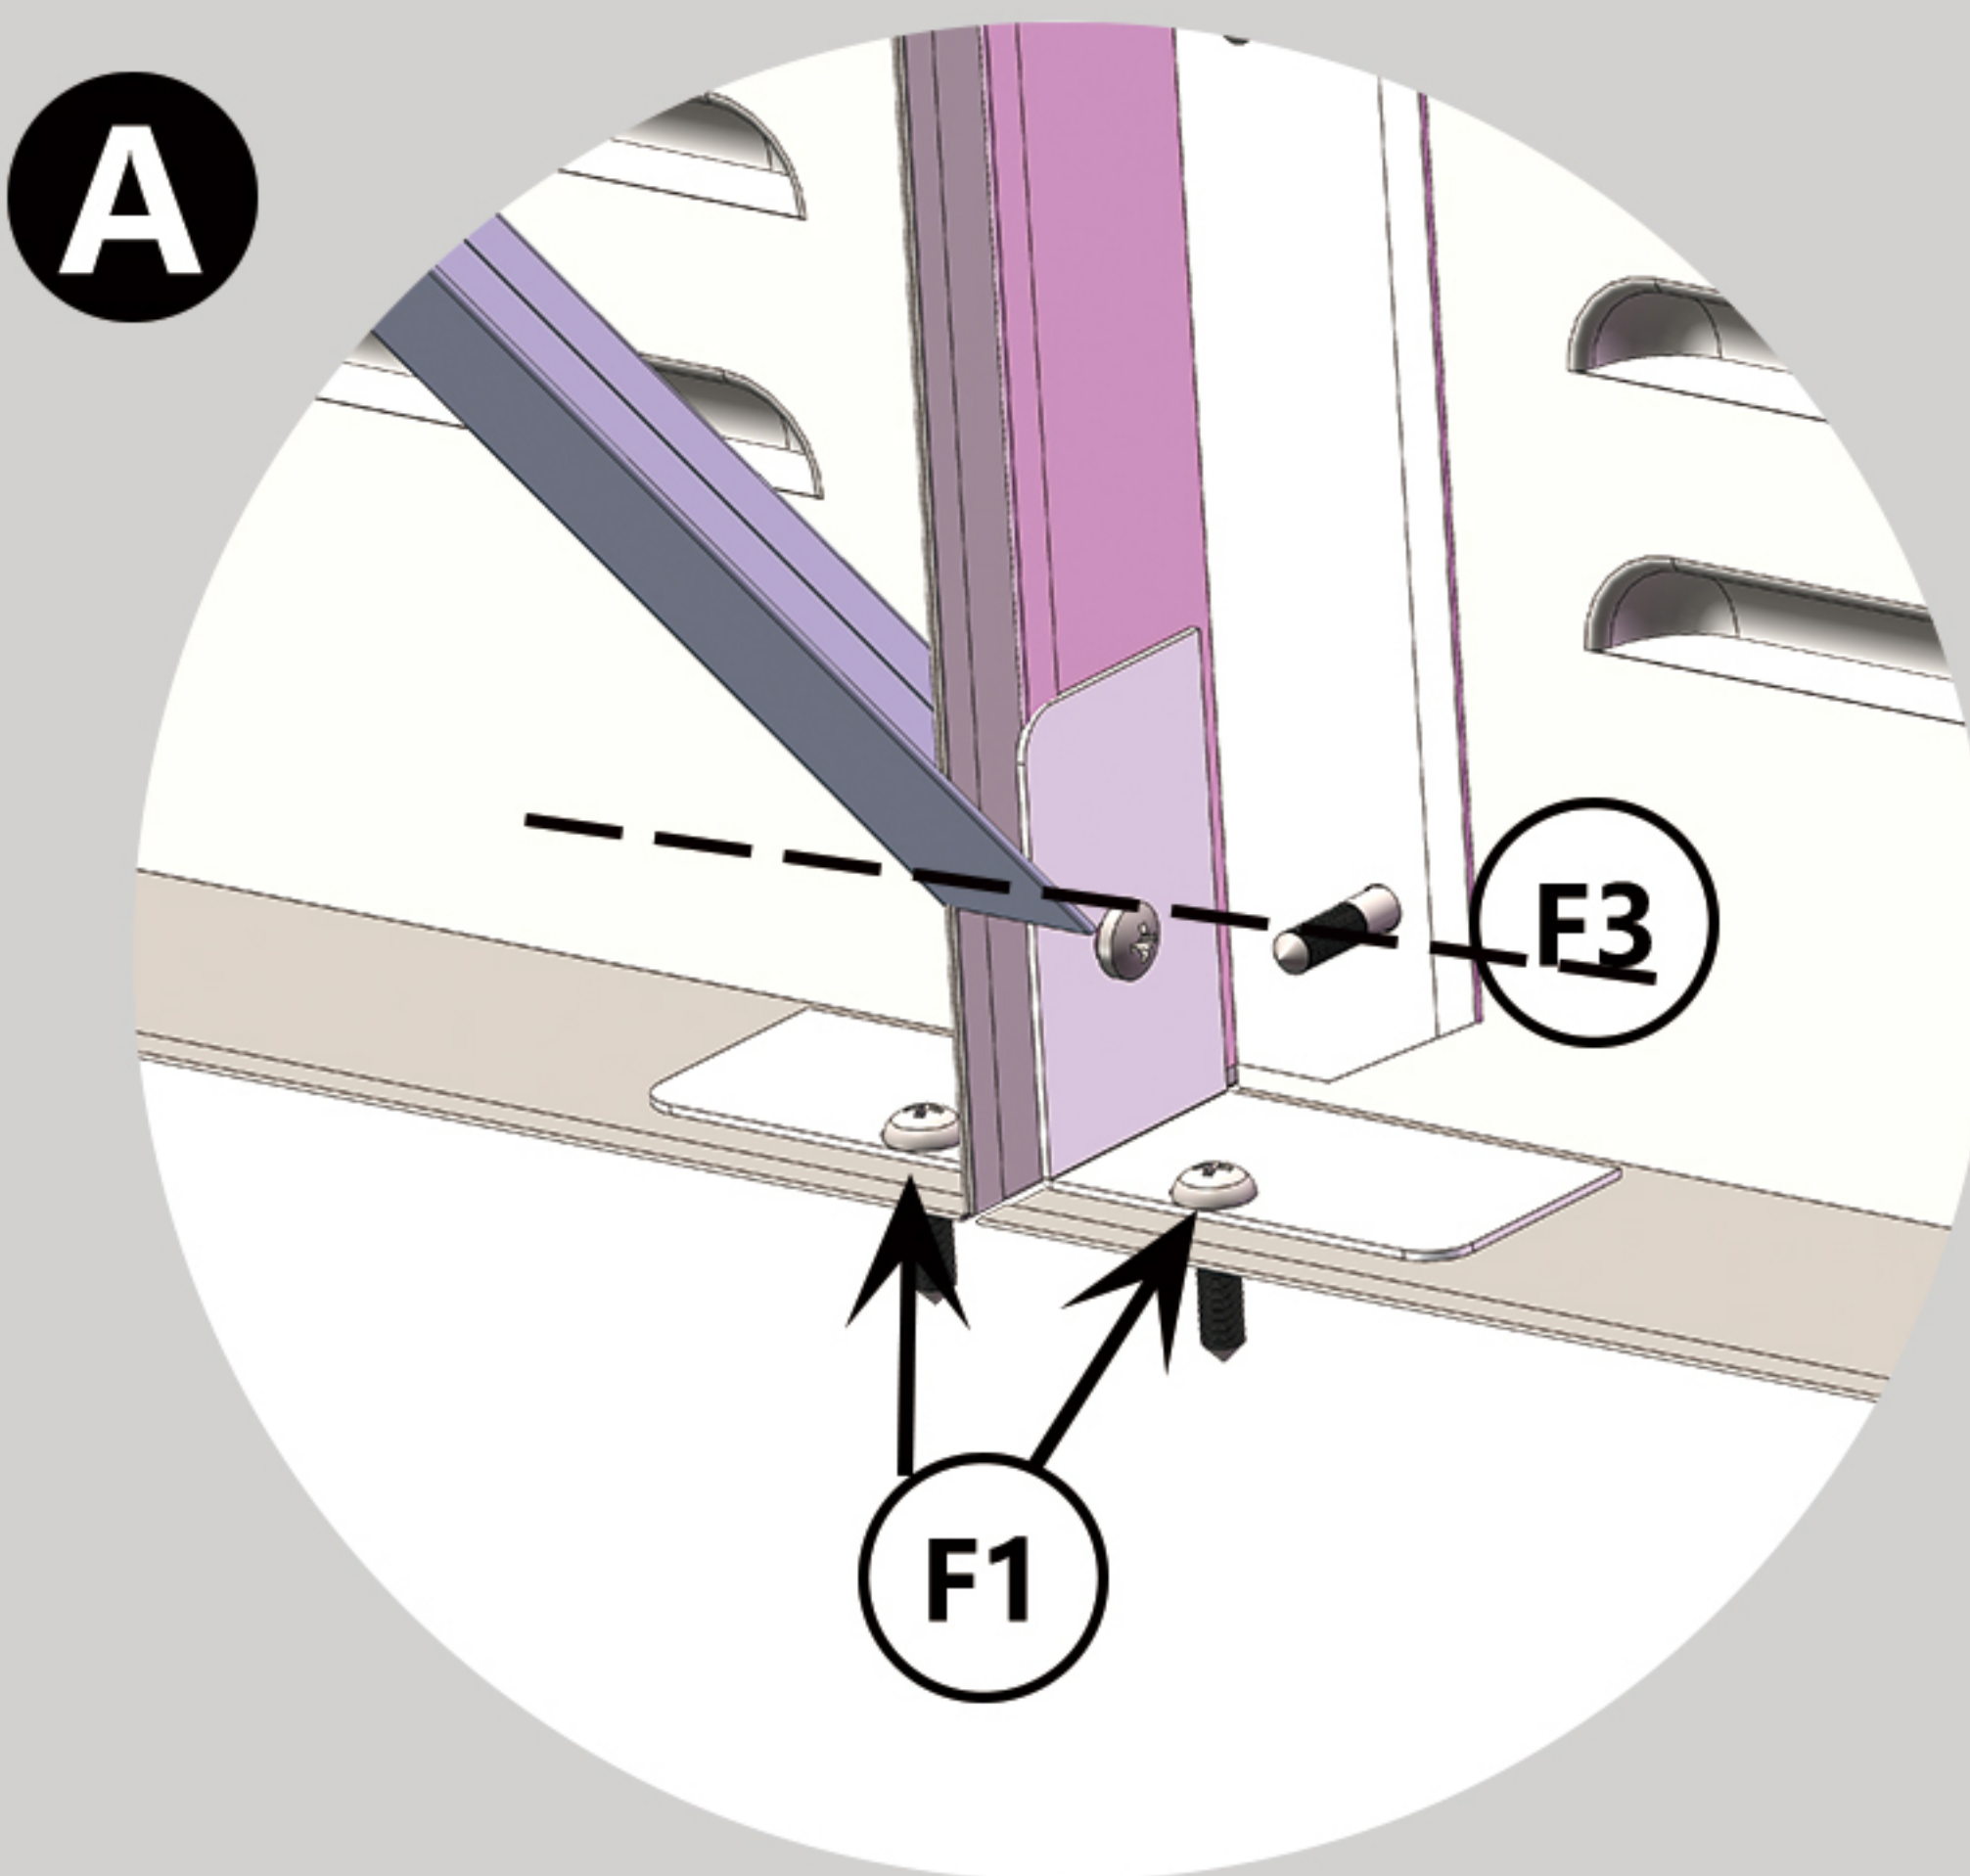

Notice:
Connect C and B1L and B1R and L1L and L1R and B3L and B3R together, fixed with F3,
After completing step A, bend the other end of C by about 45° to connect it to the bottom of L1.



NO.	PART	Qty.	NO.	PART	Qty.
L3		2	F3		
L4L		2			
L4R		2			

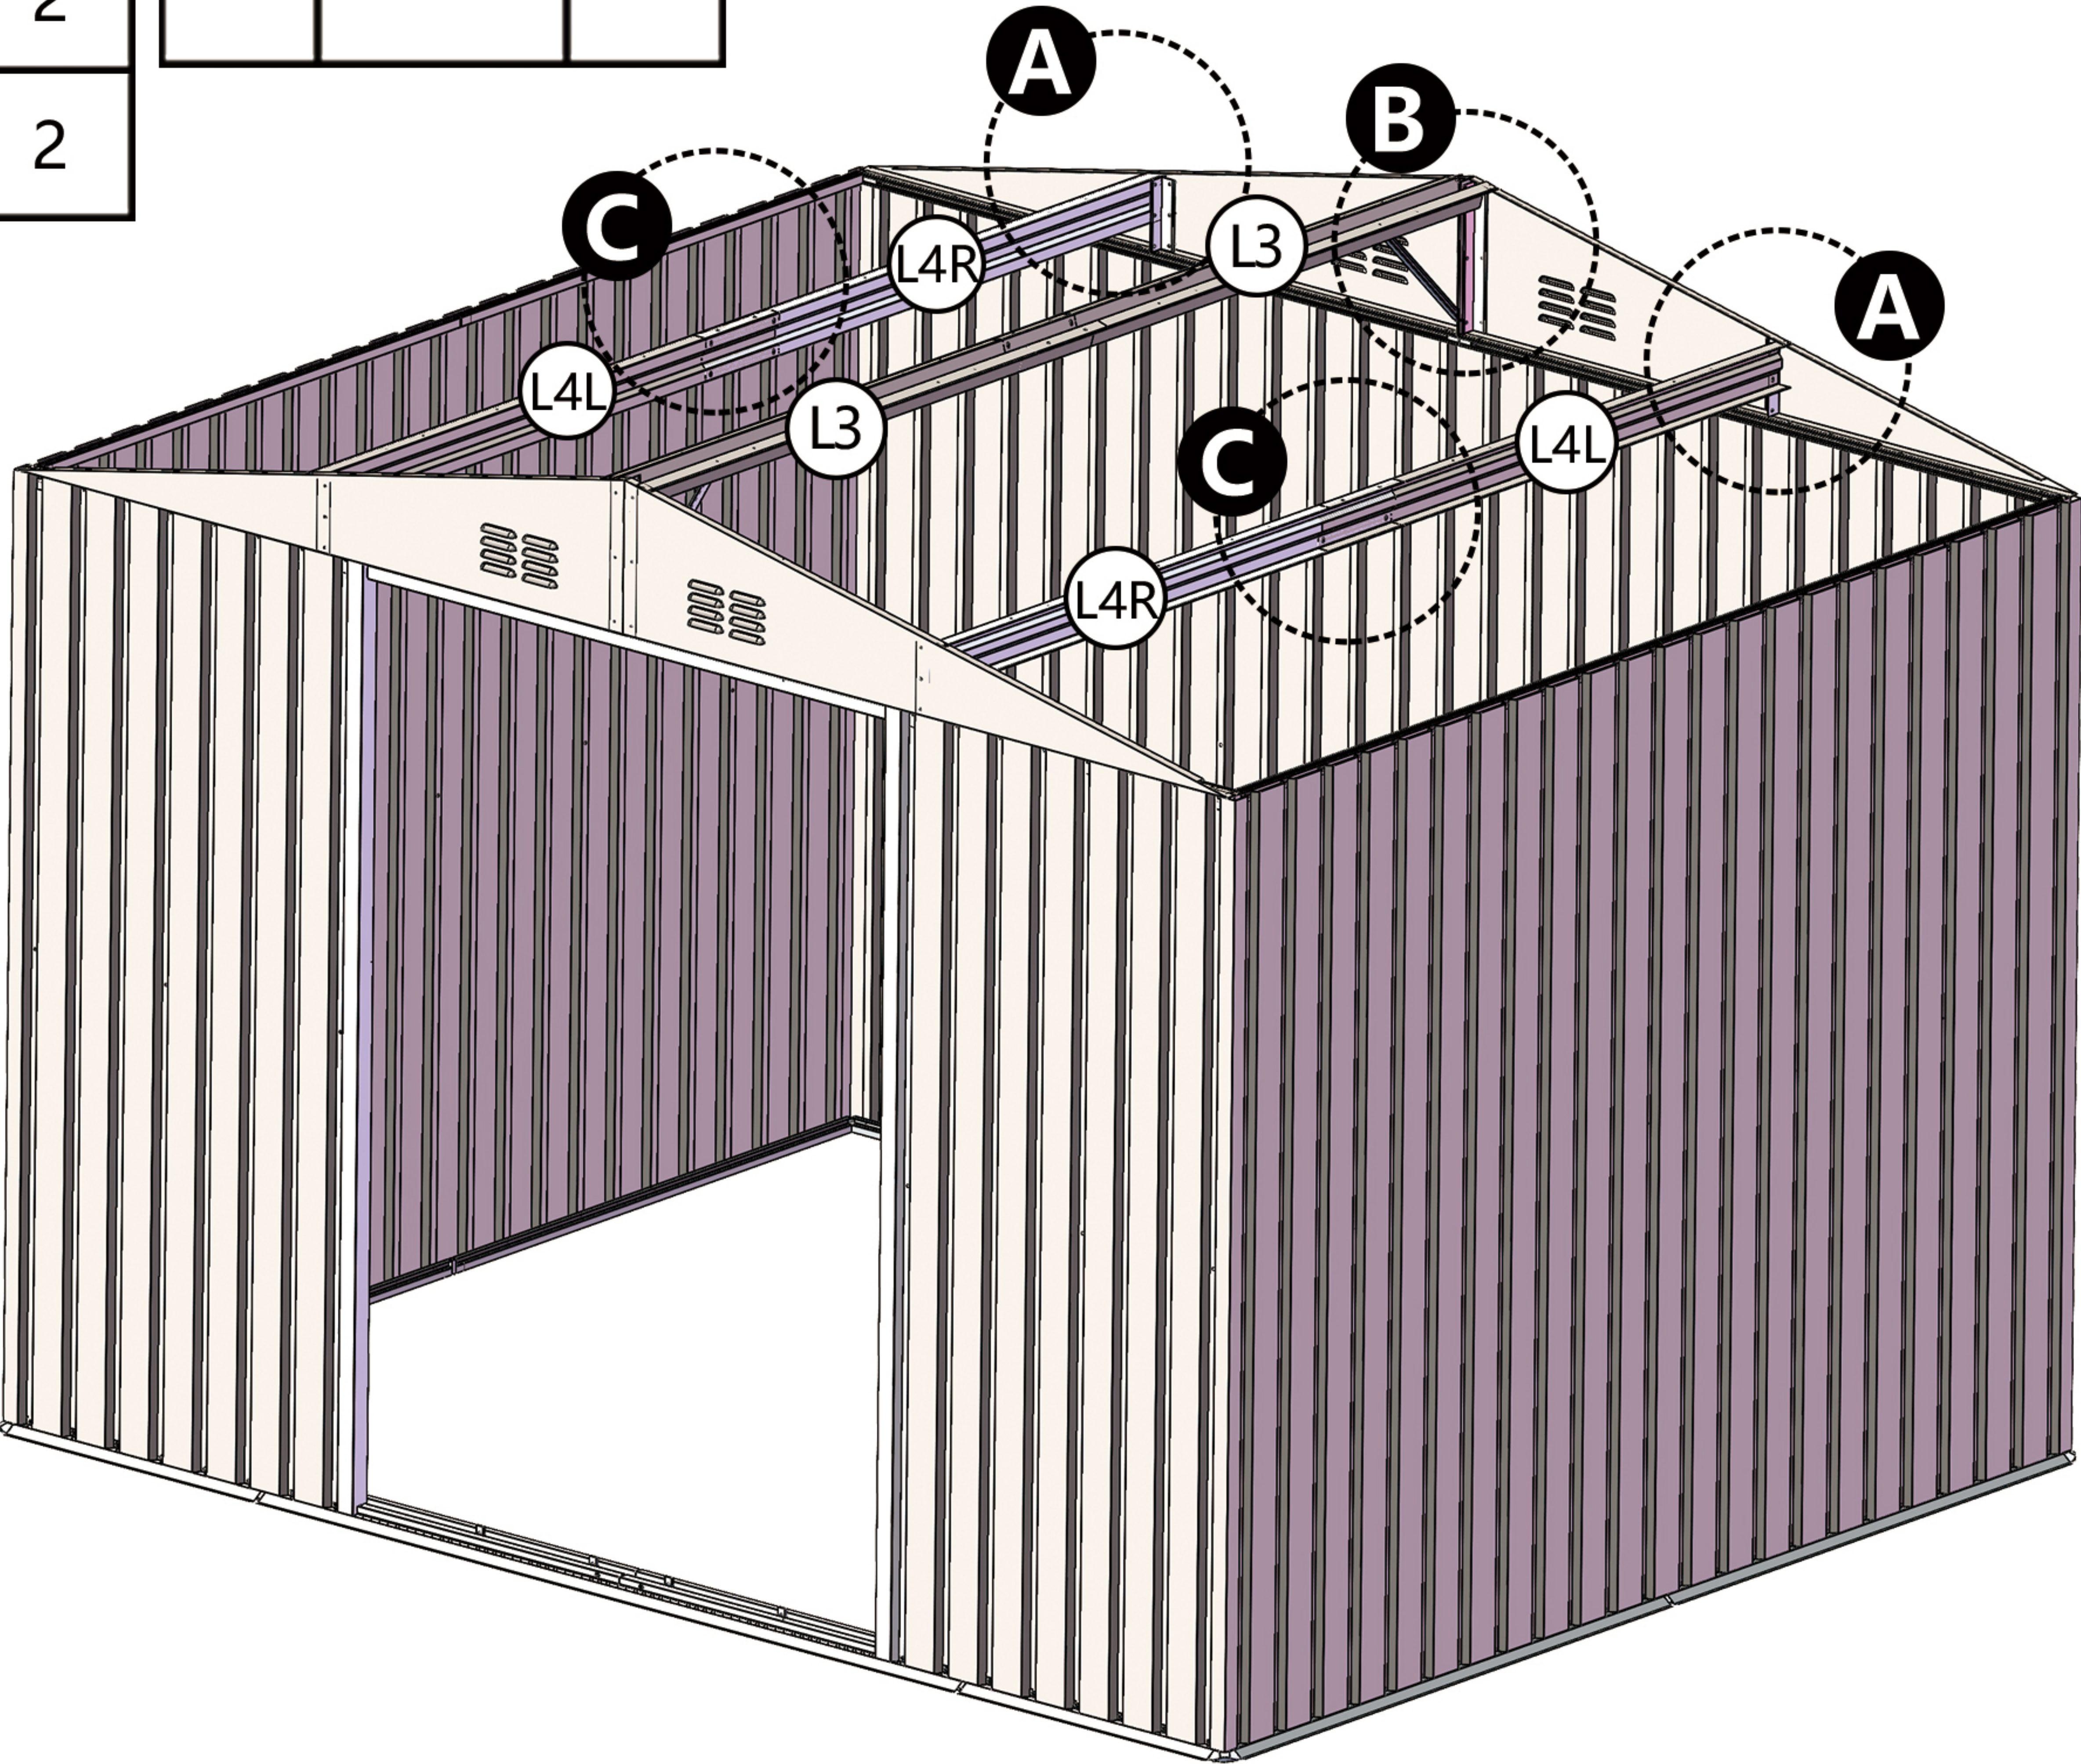



Notice:


Step A: Connect the connected L4R and L4L to the B2L and B2R large holes.

Step B: Connect 2 L3s and place them on L1R and L1L.

Installation is not required for the time being, and the holes are shared with Q4.



Step C: Connect the L4R and L4L, and install the two sides outwards, as shown in the figure.

NO.	PART	Qty.
Q4		16
F1		

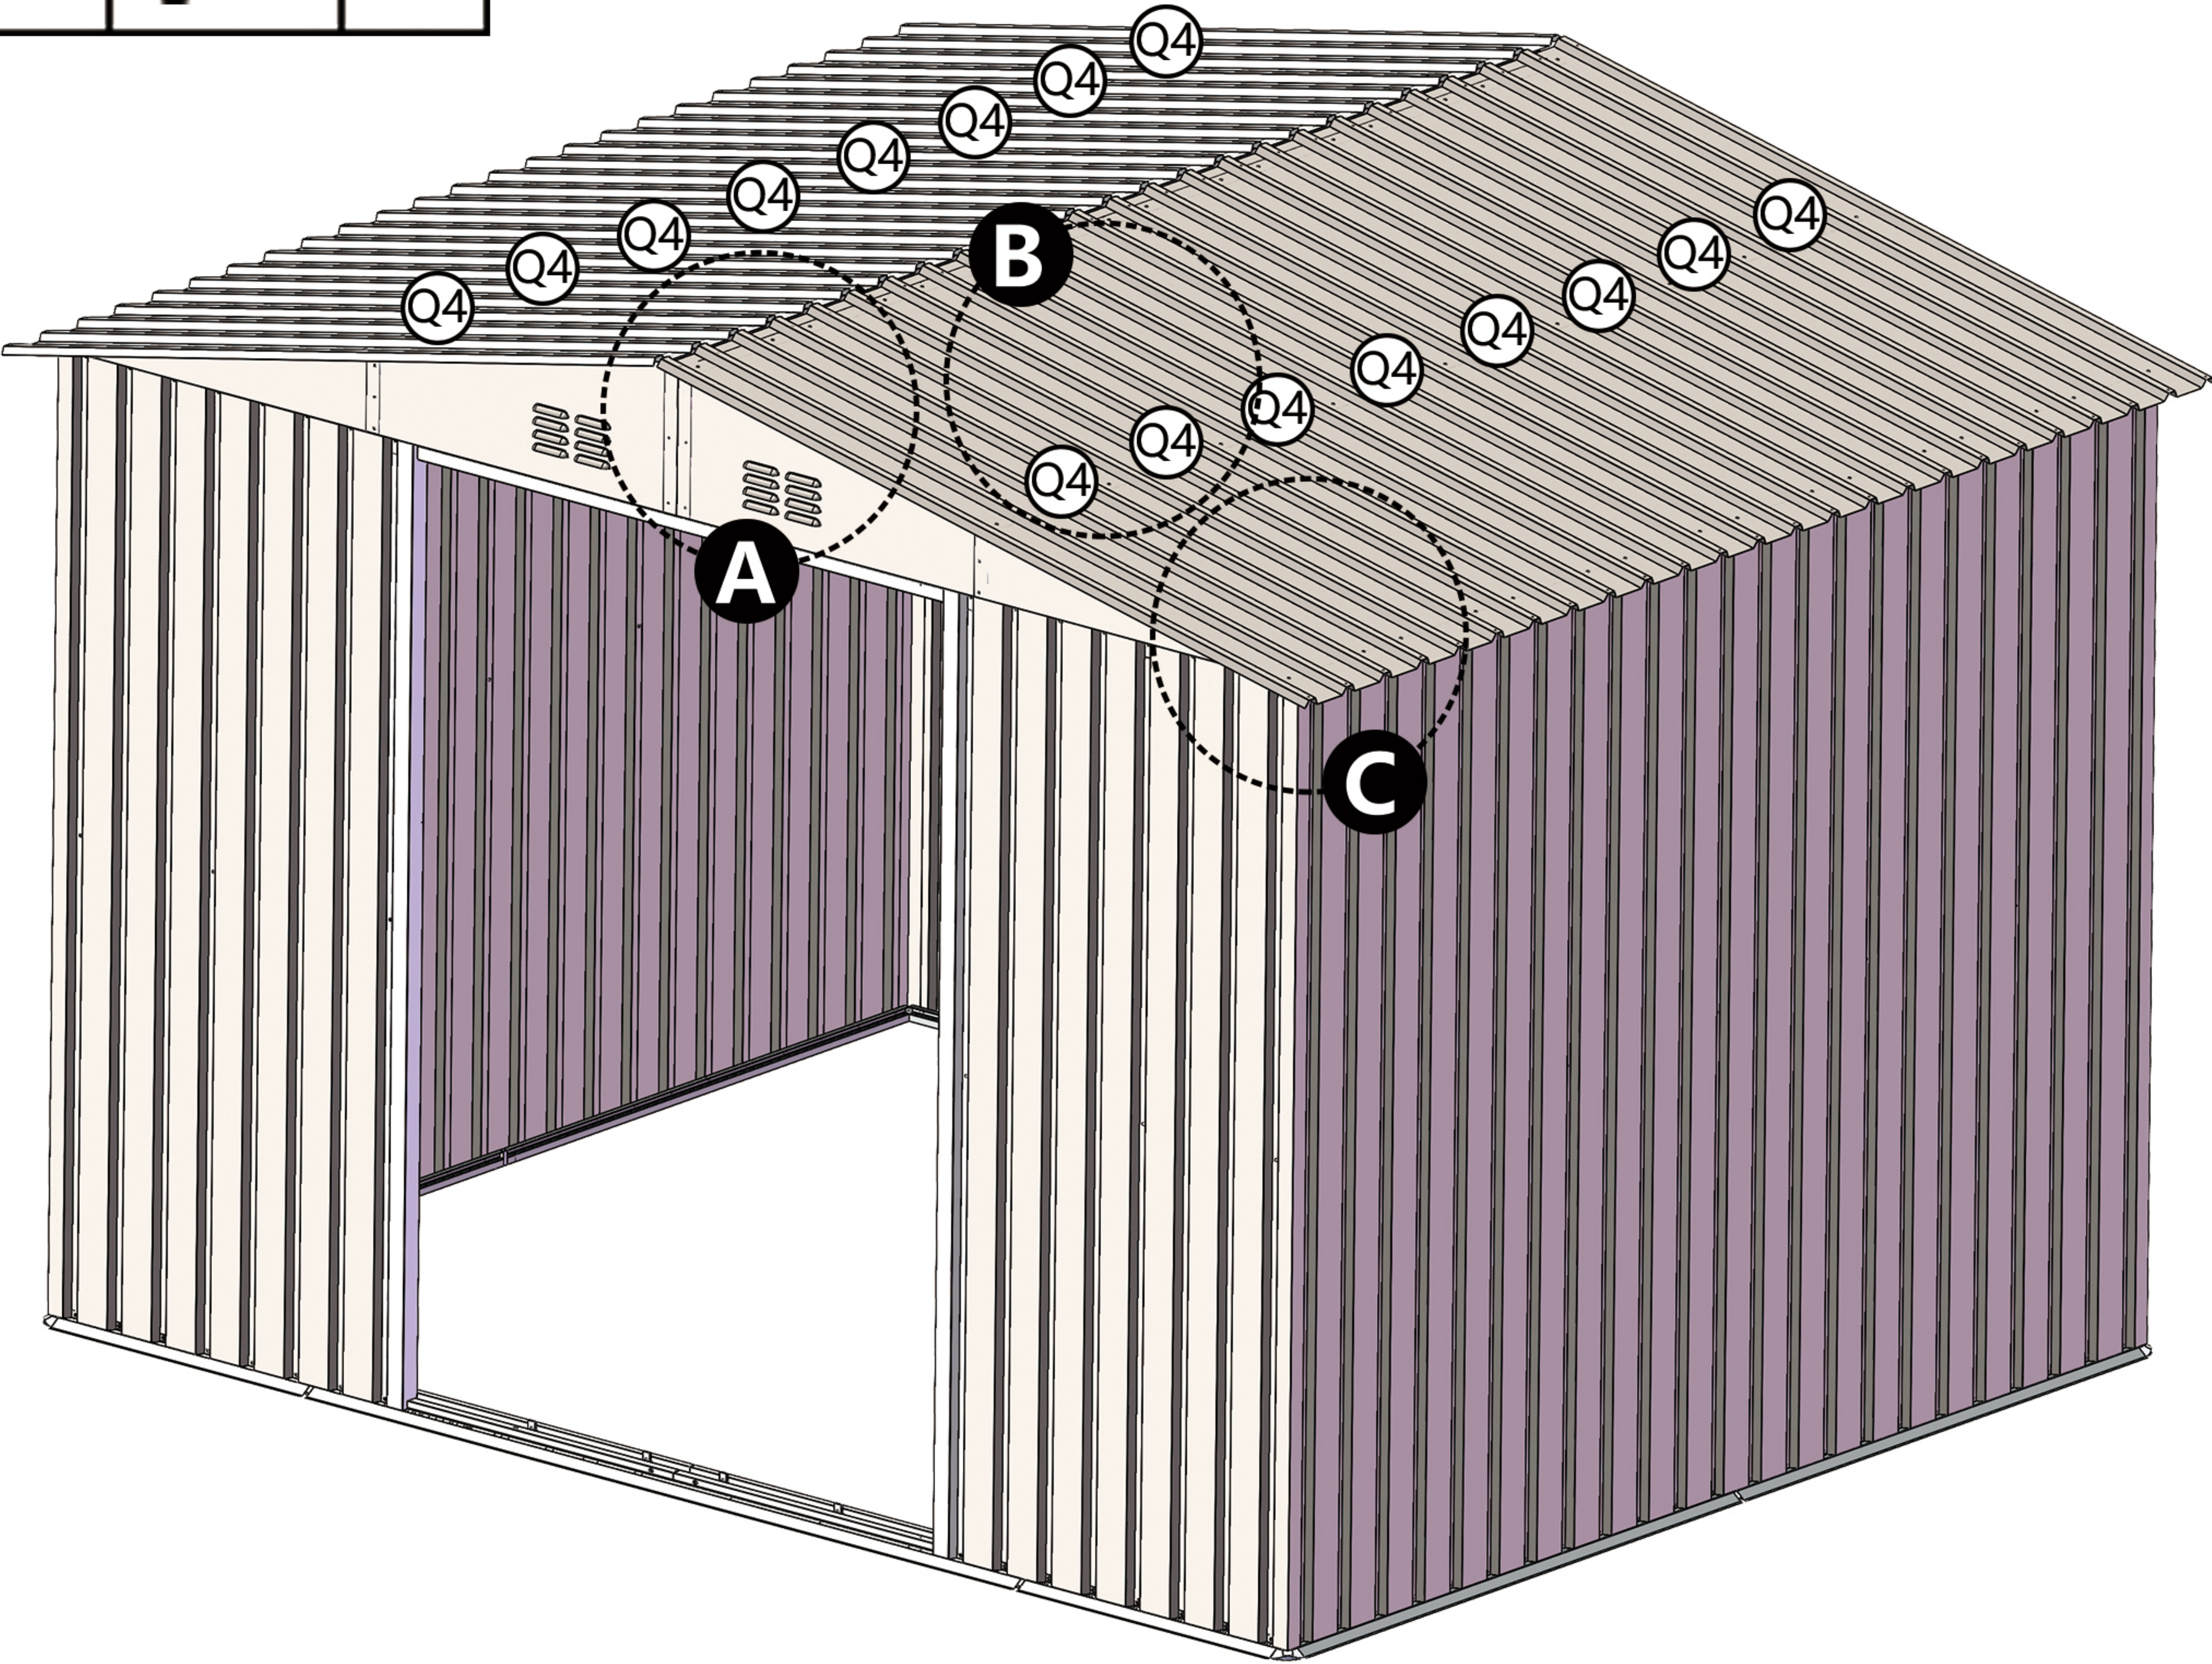


Notice:

Install Q4 in sequence, overlap between every 2 pieces, and each Q4 needs 3 rows of F1 fixed.

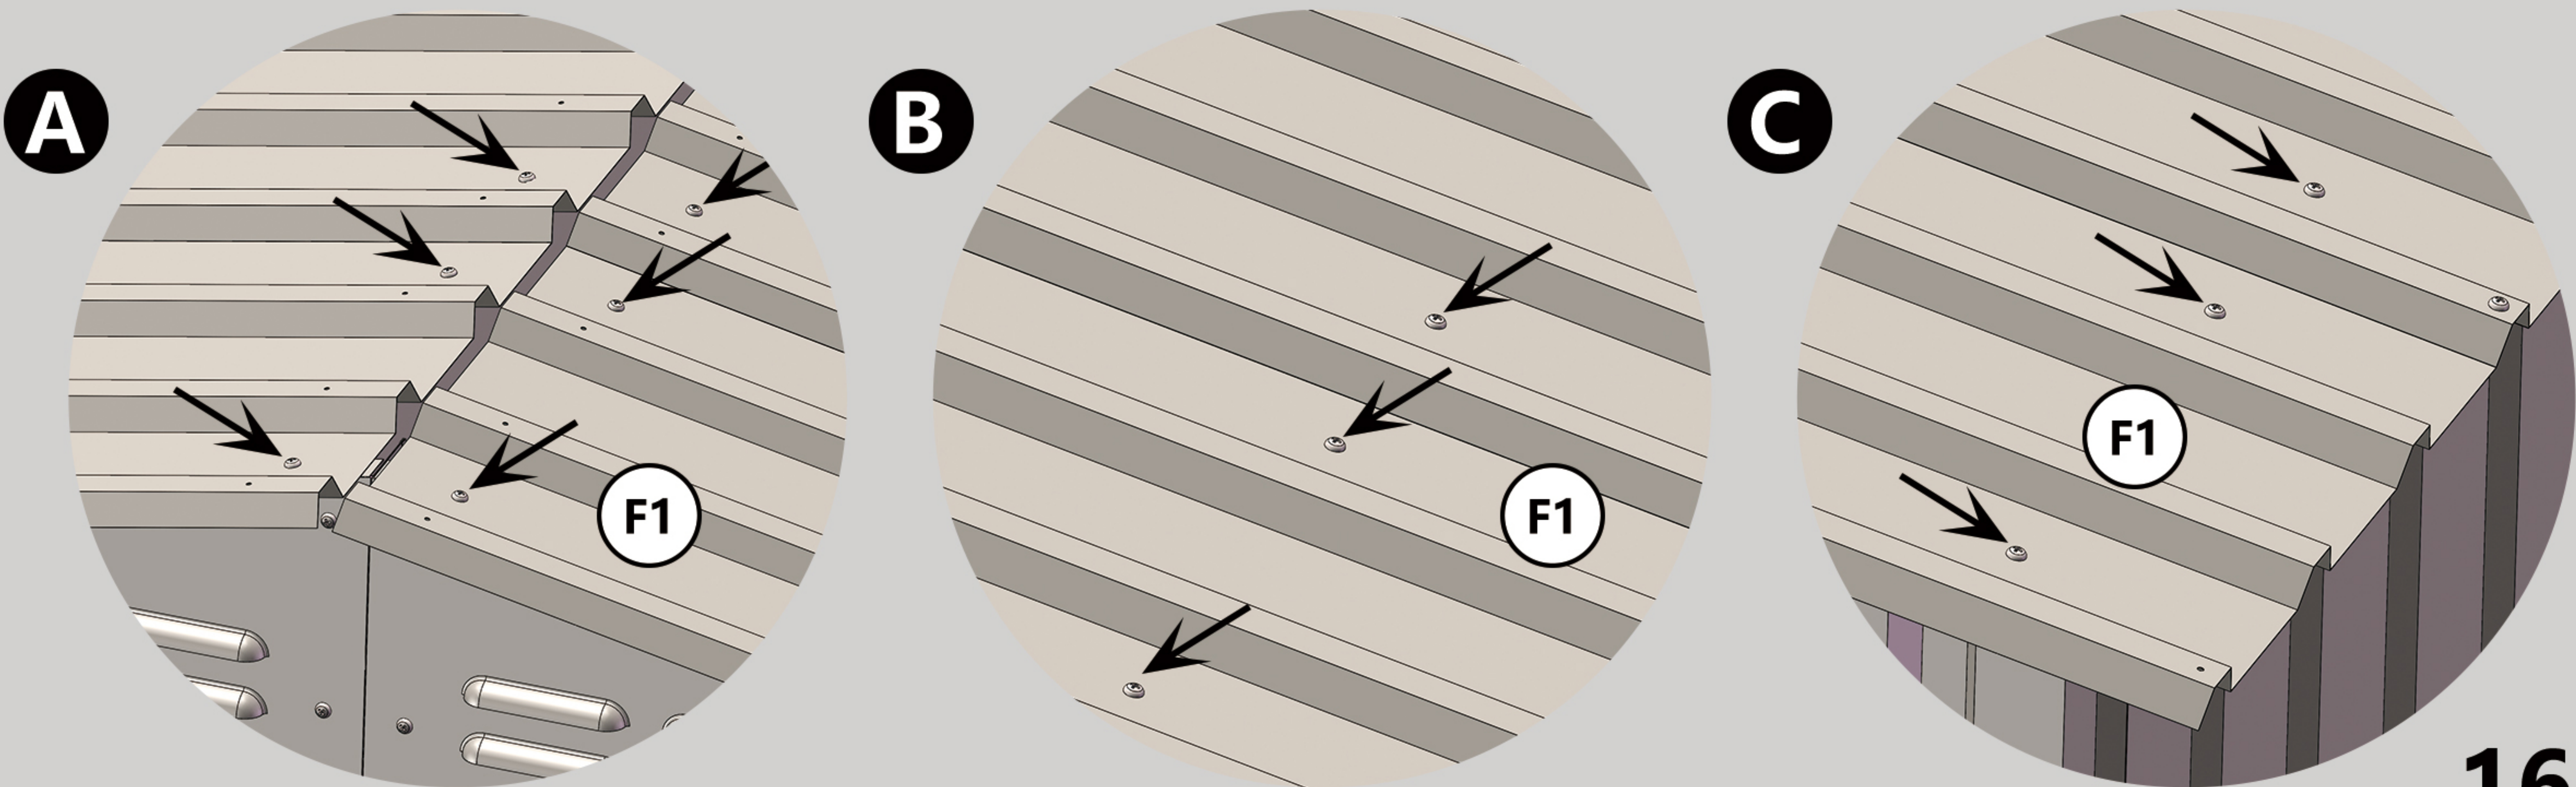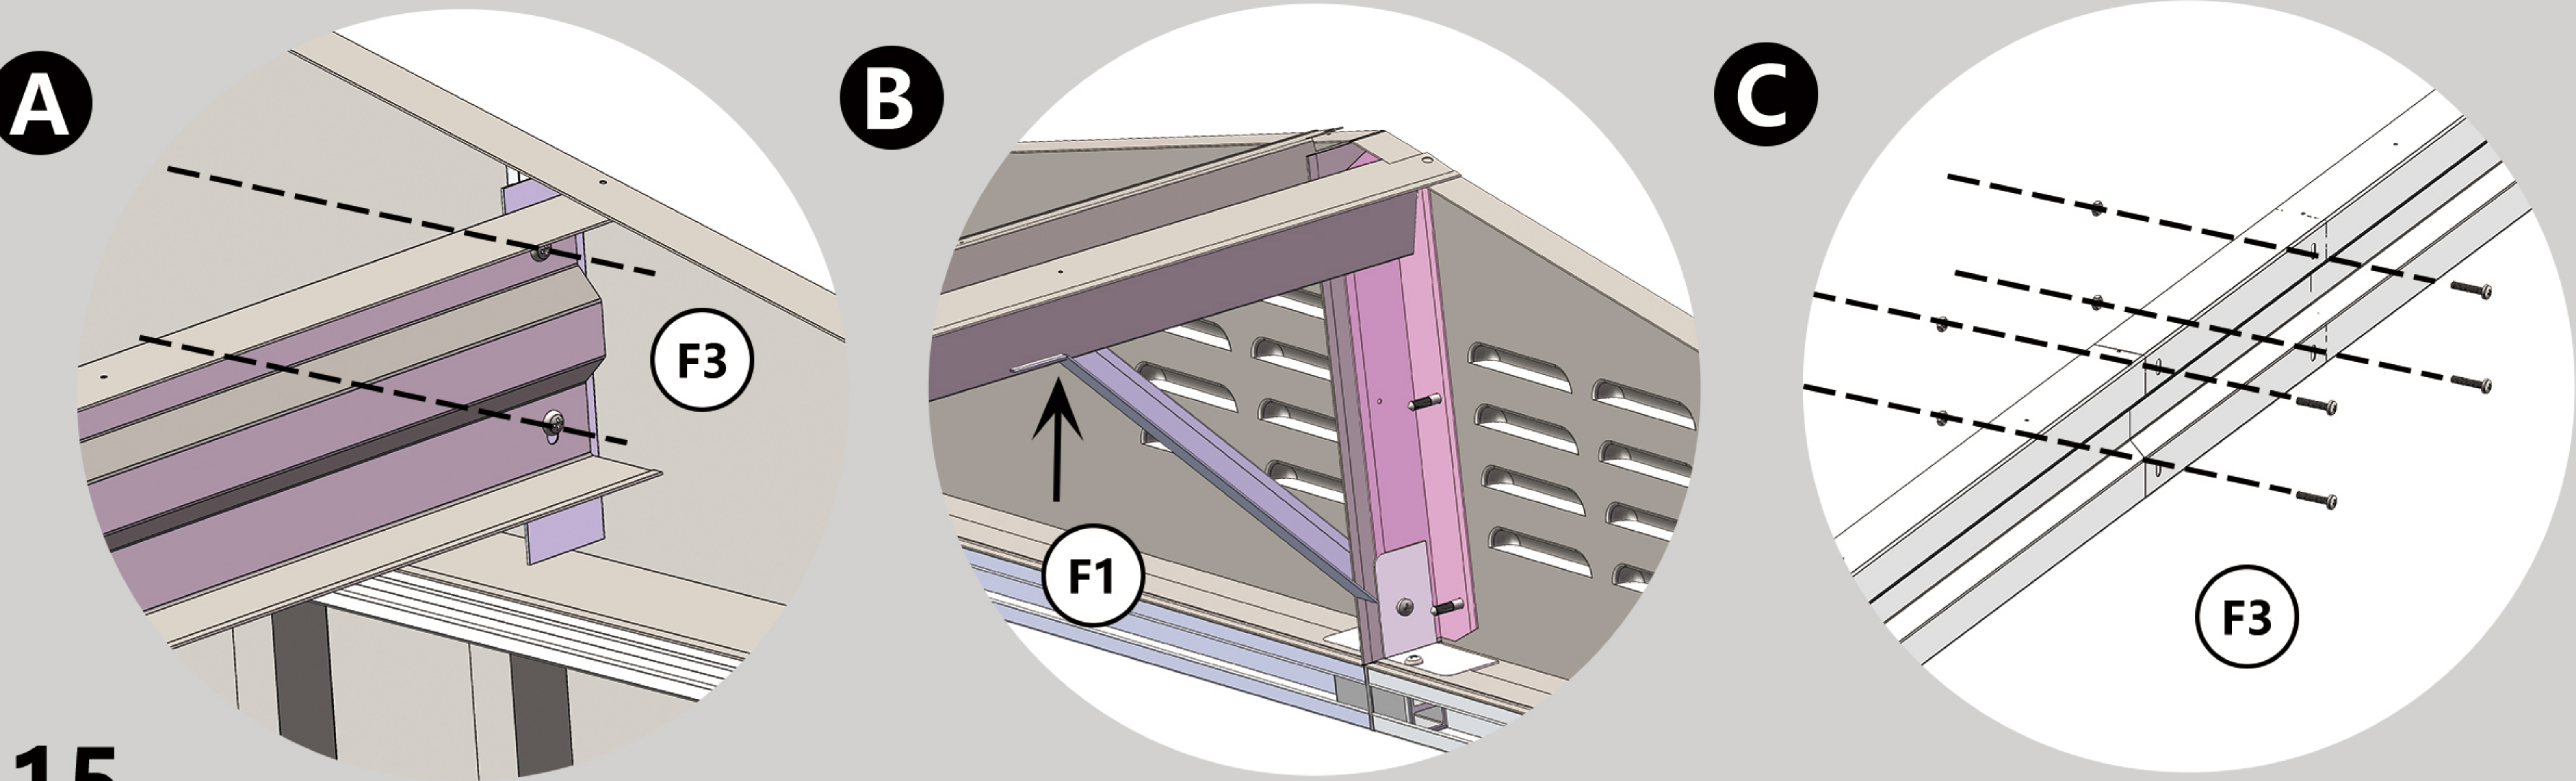



NO.	PART	Qty.	NO.	PART	Qty.
GB1		4	F1		
GB2		4	J1		4

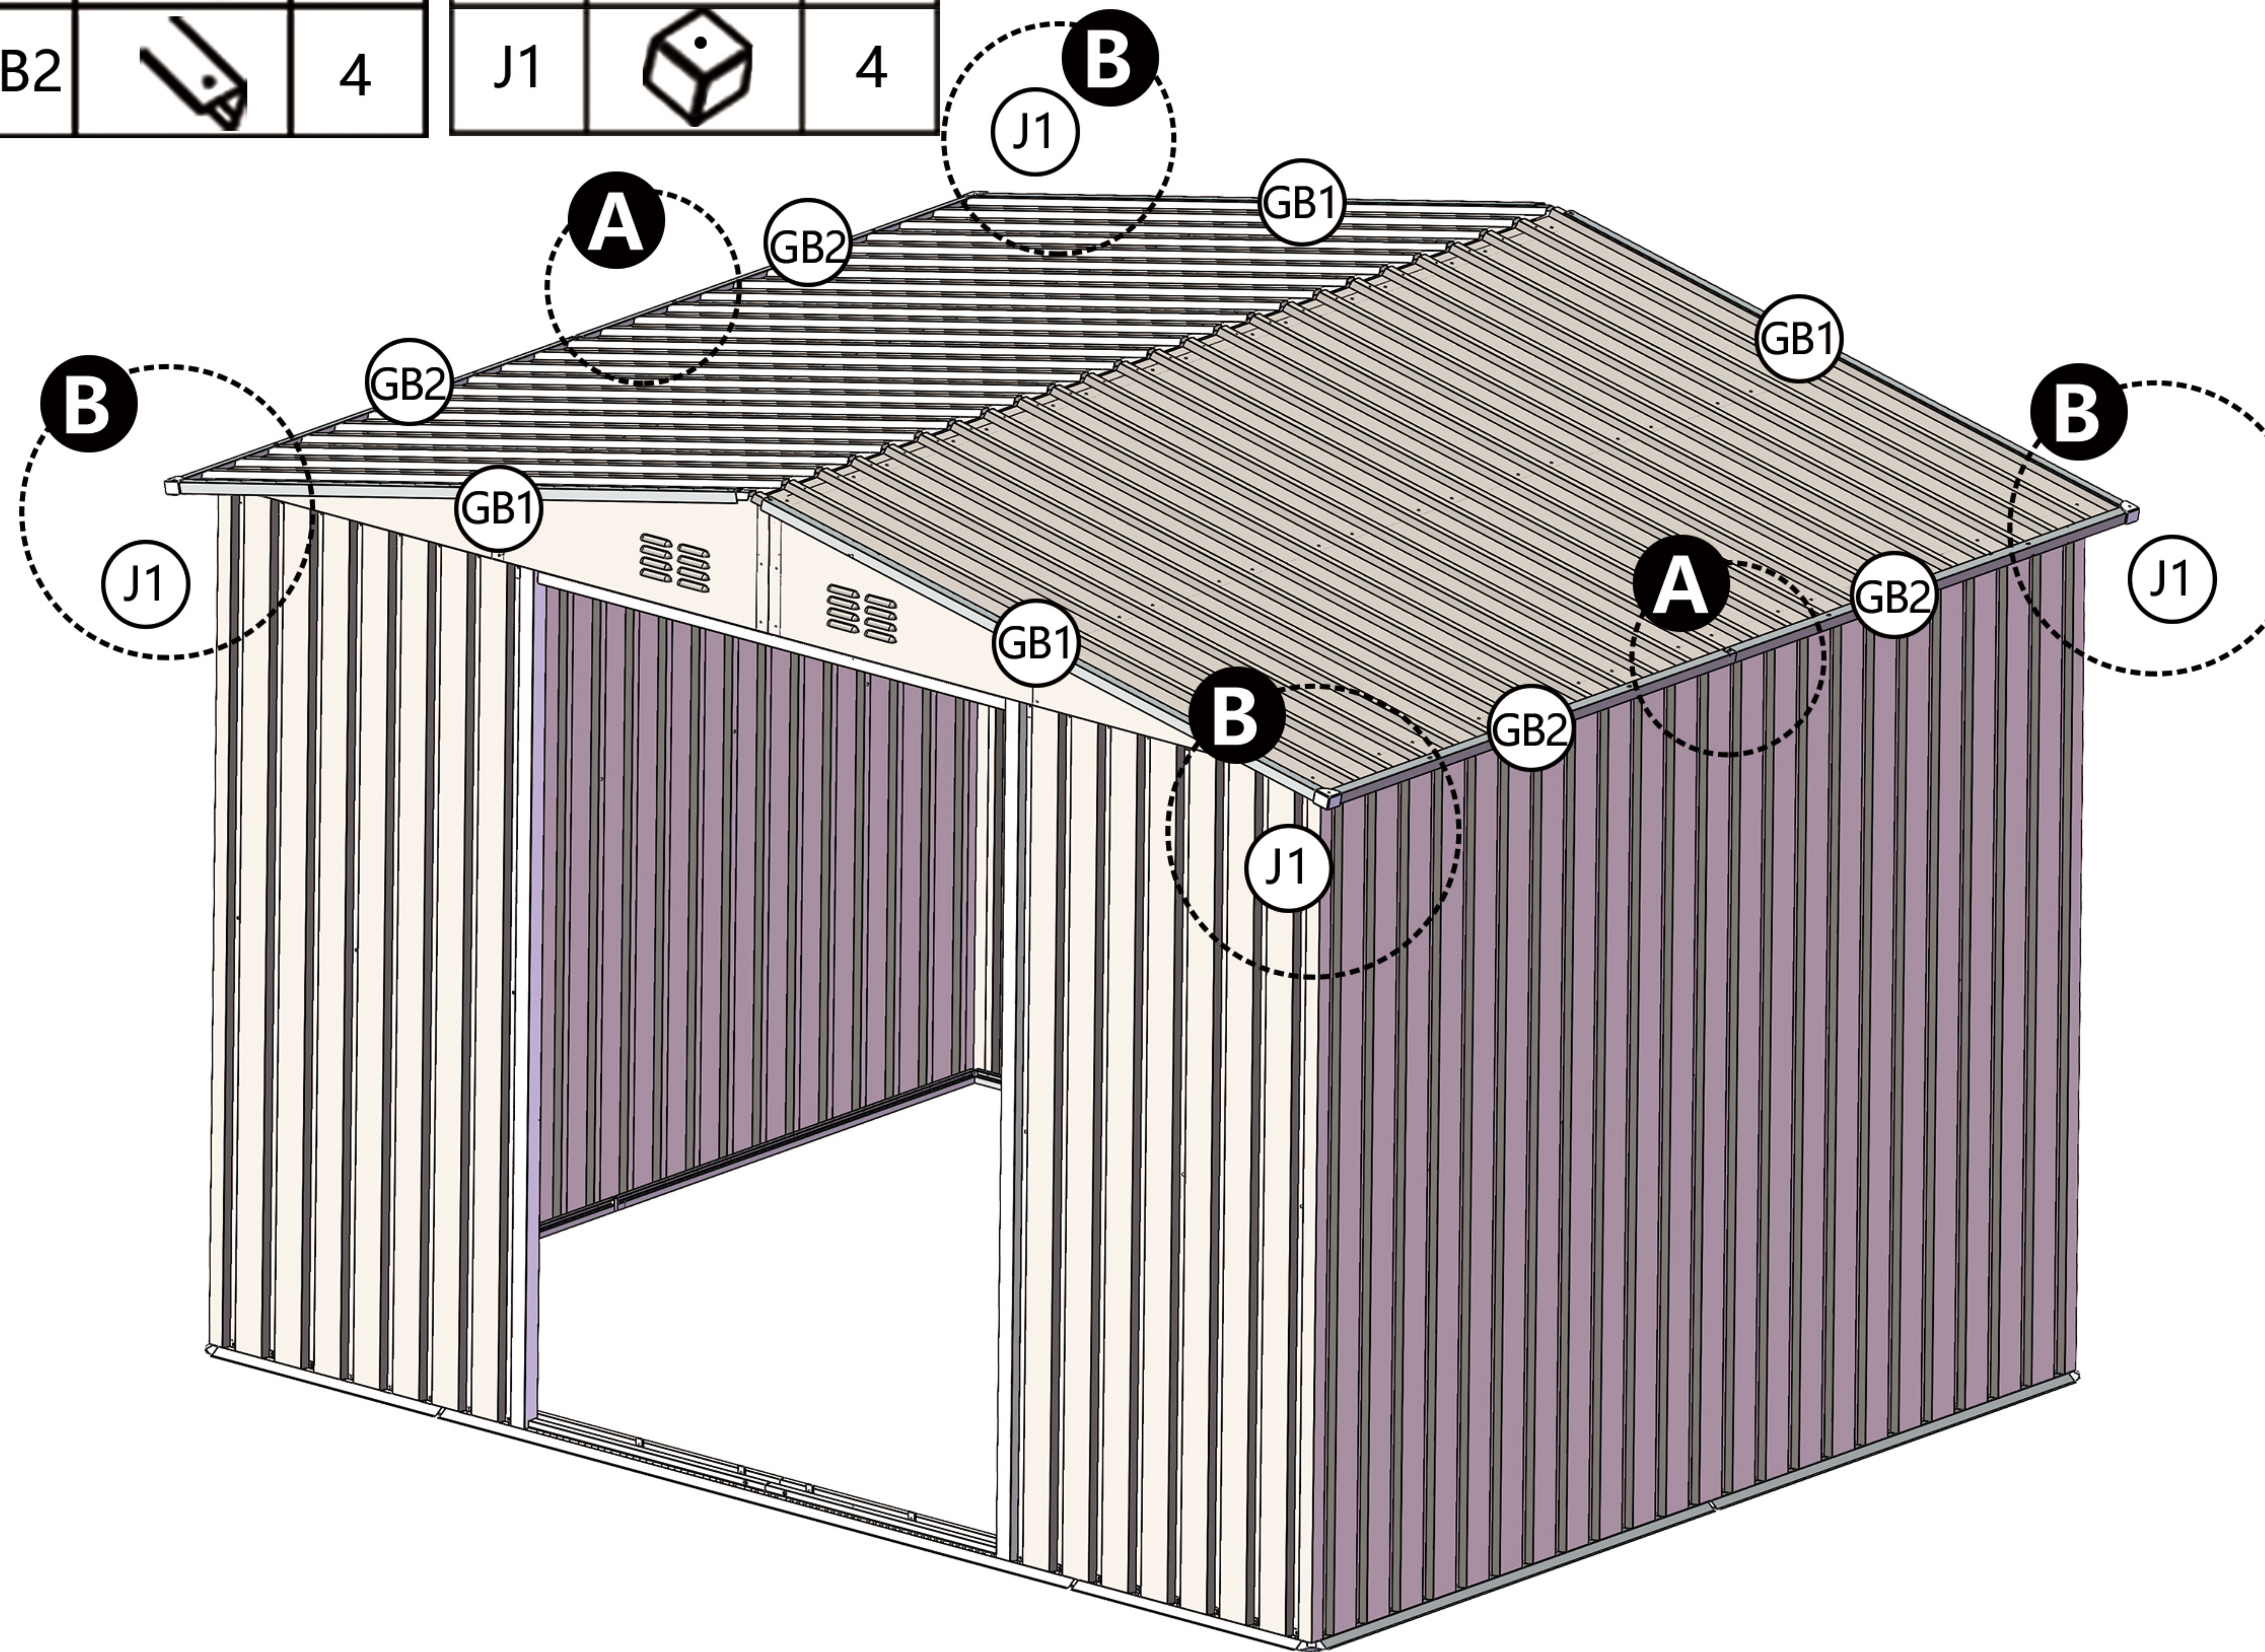





Notice:

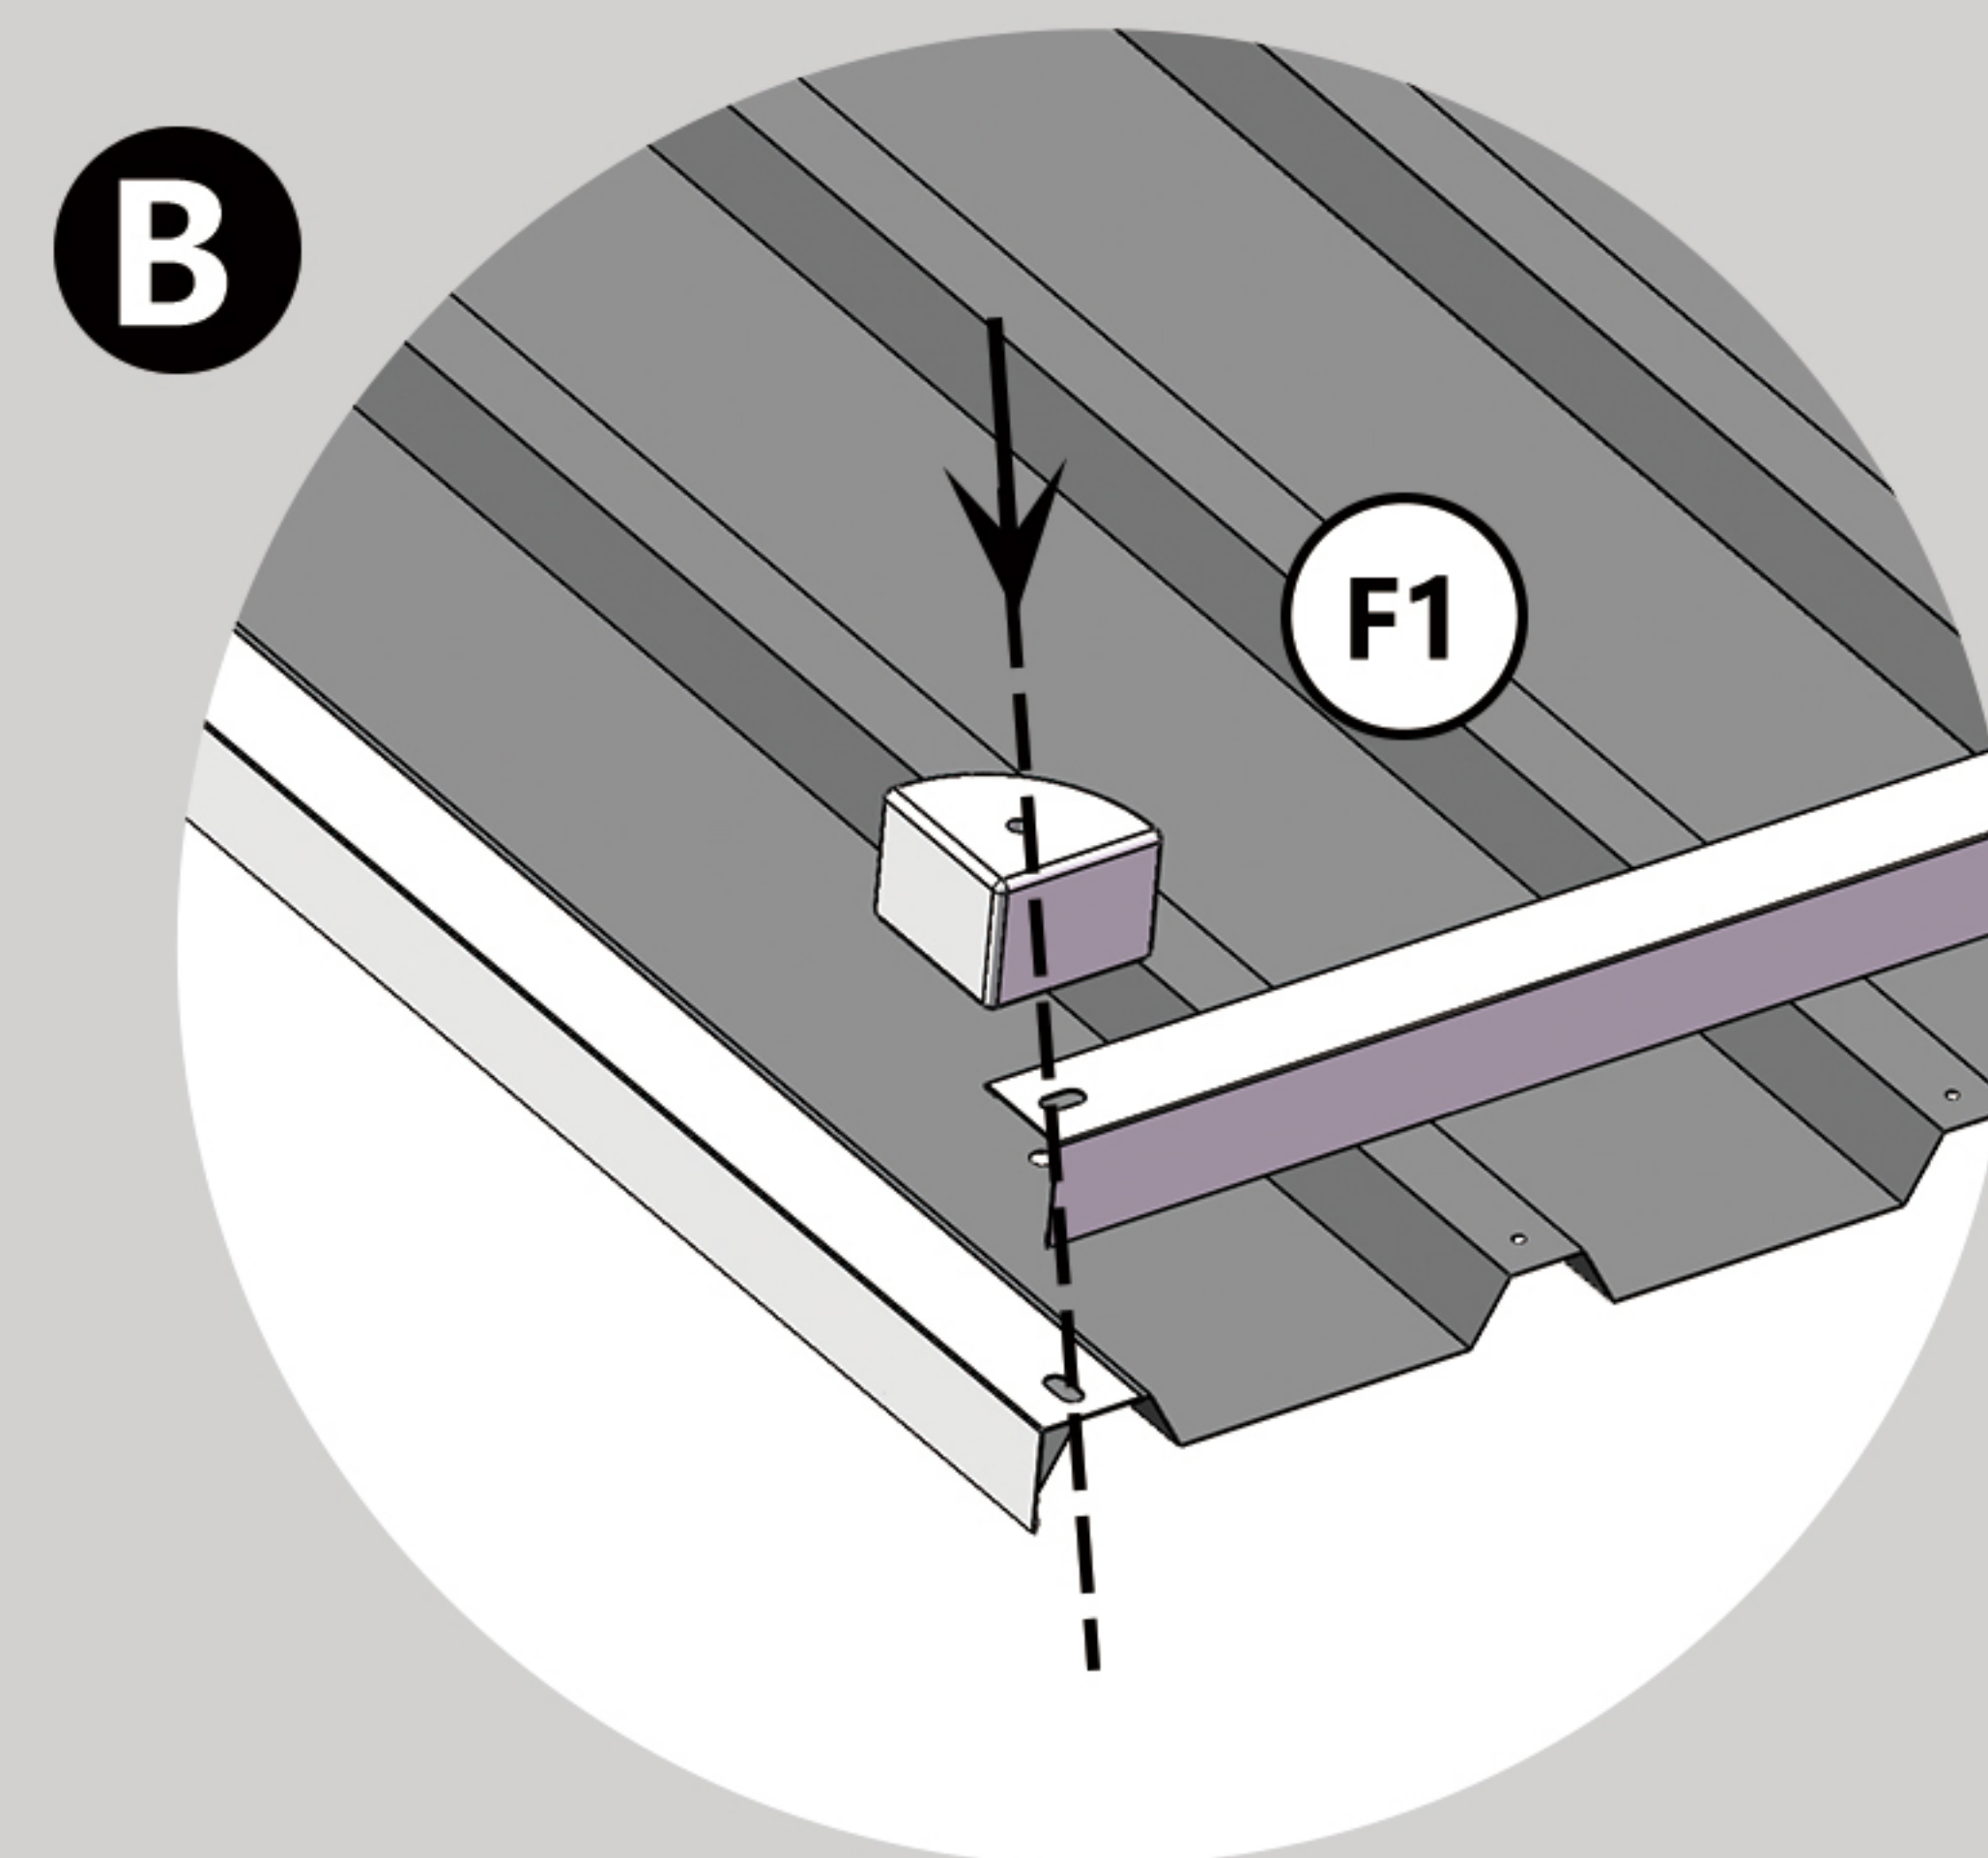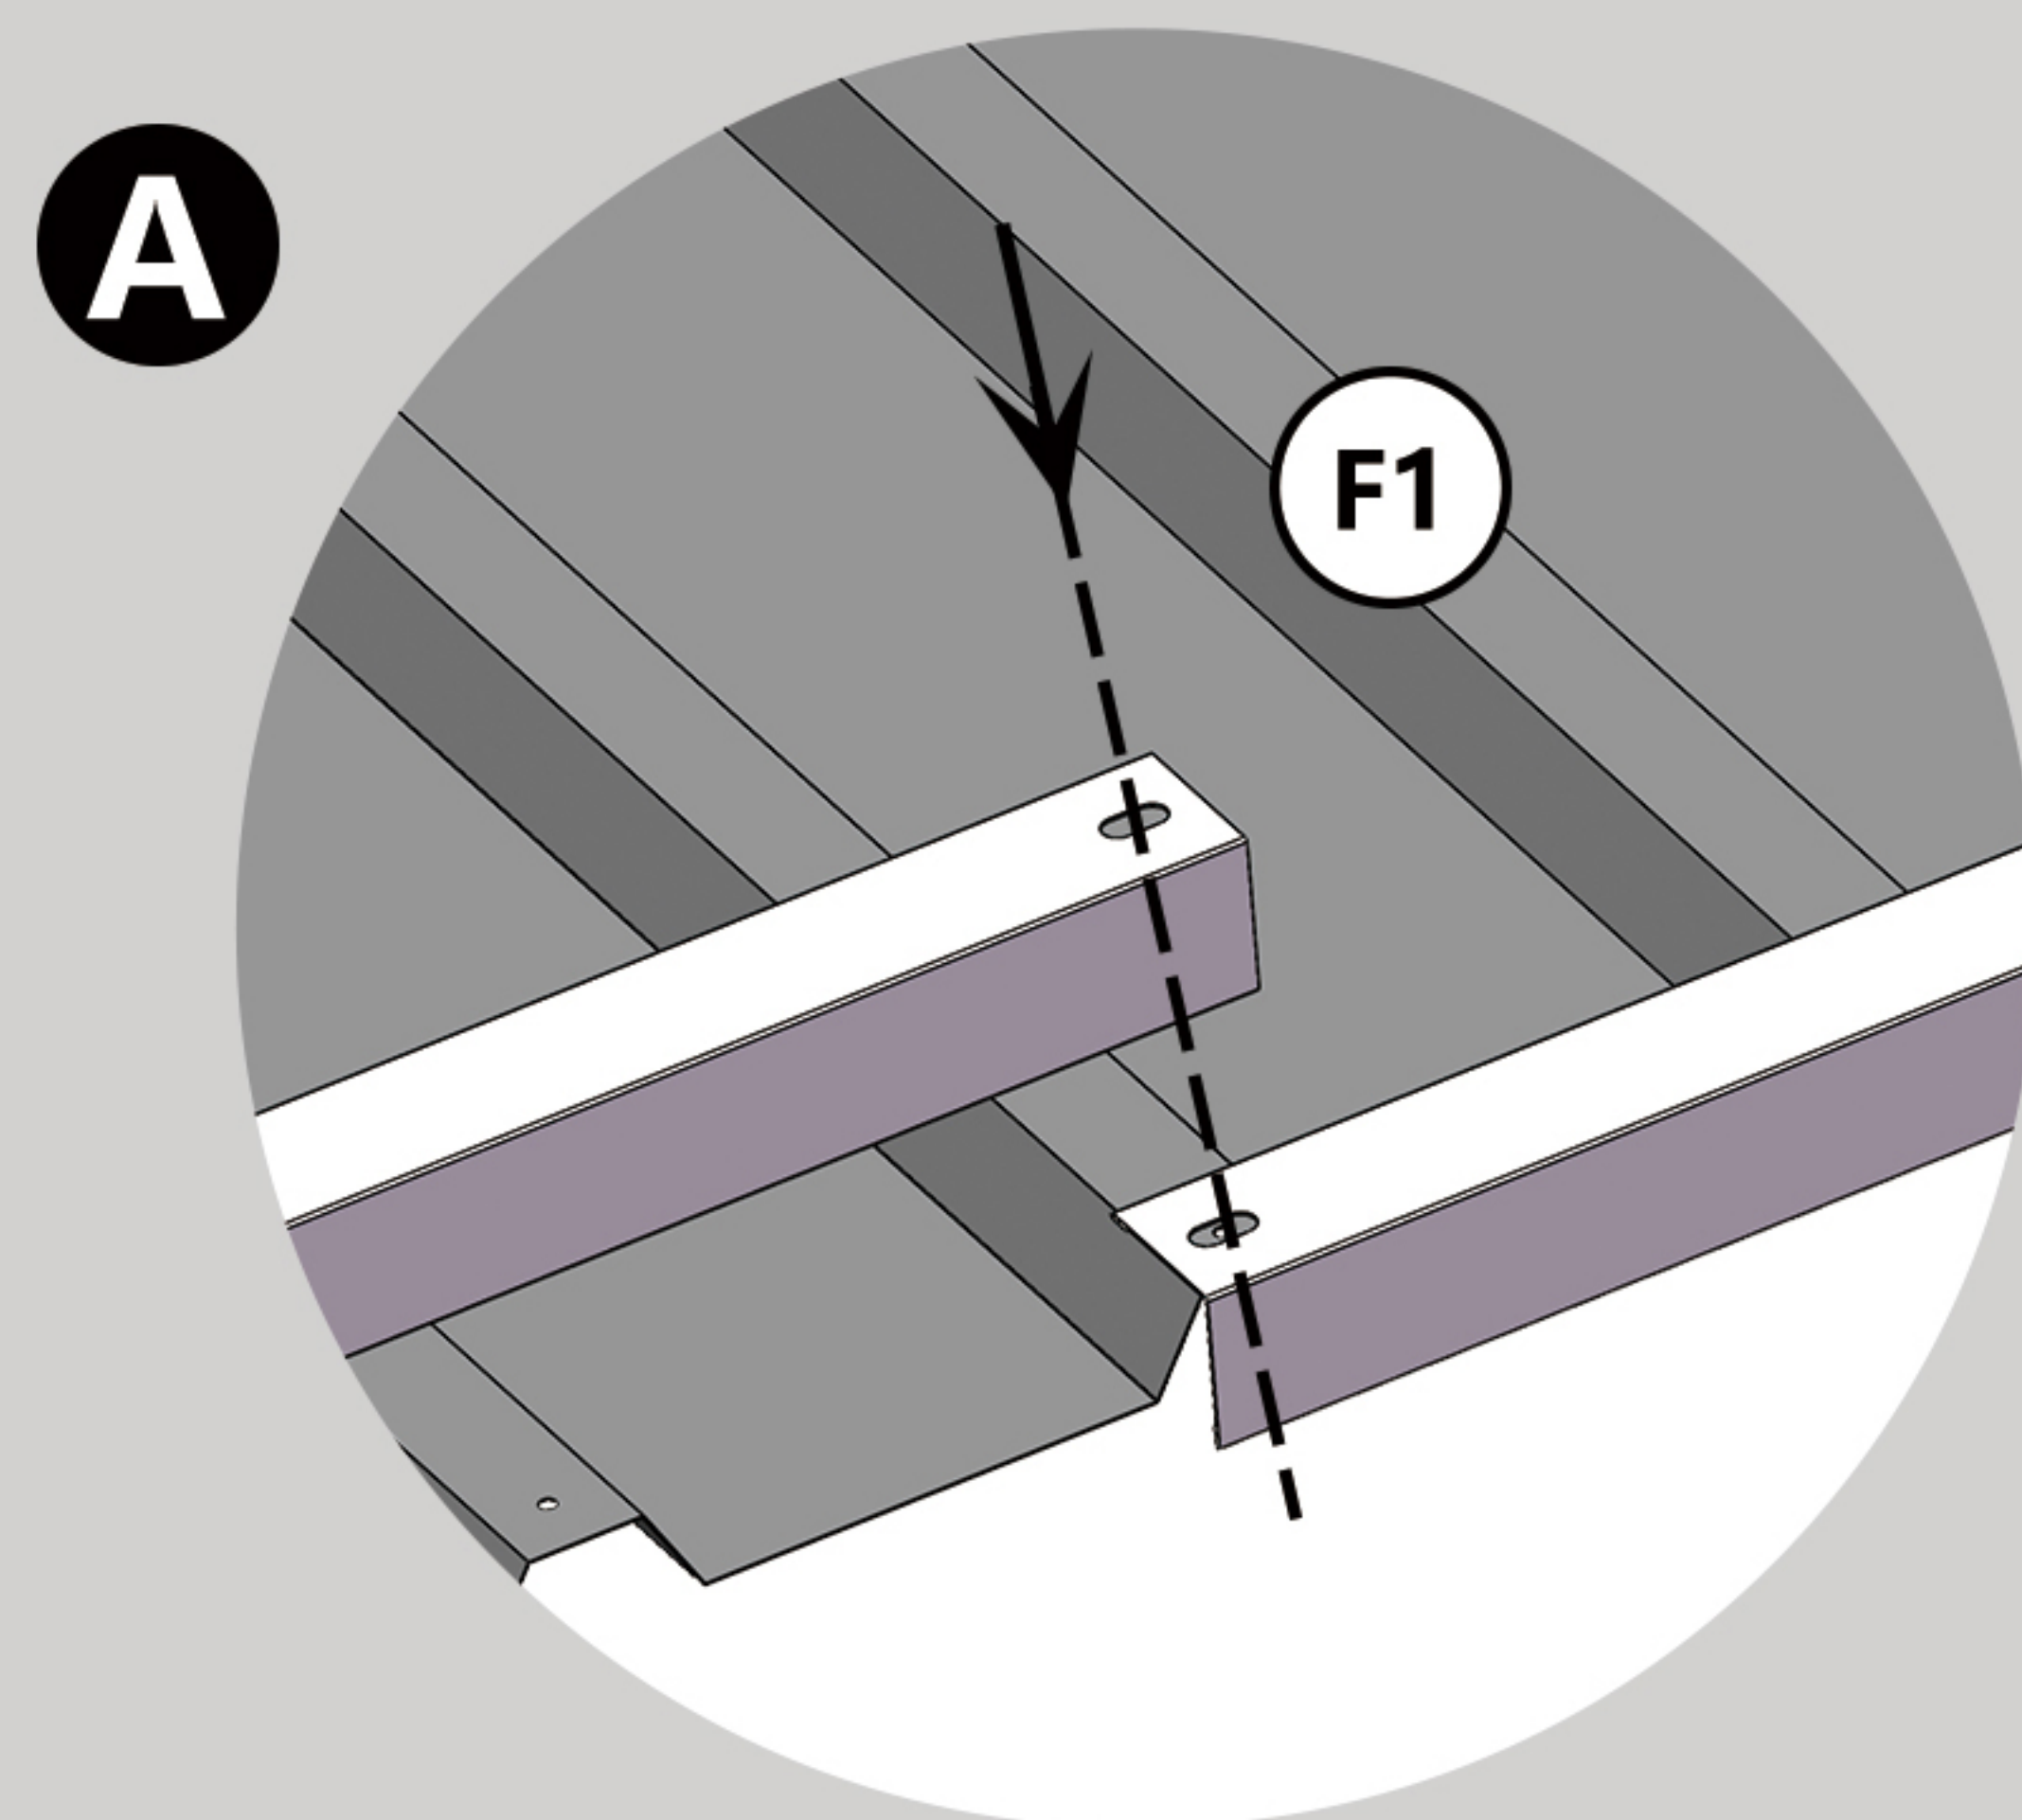
Step A: Fix 2 GB2 parts with F1, fix other holes with F1.

Step B: Fix GB1, GB2, J1 parts with F1.



NO.	PART	Qty.	NO.	PART	Qty.
GW1		2	GE		2
GW2		1	F1		

Special note: The installation of F1 must add plastic gaskets, which can play the role of roof waterproof.


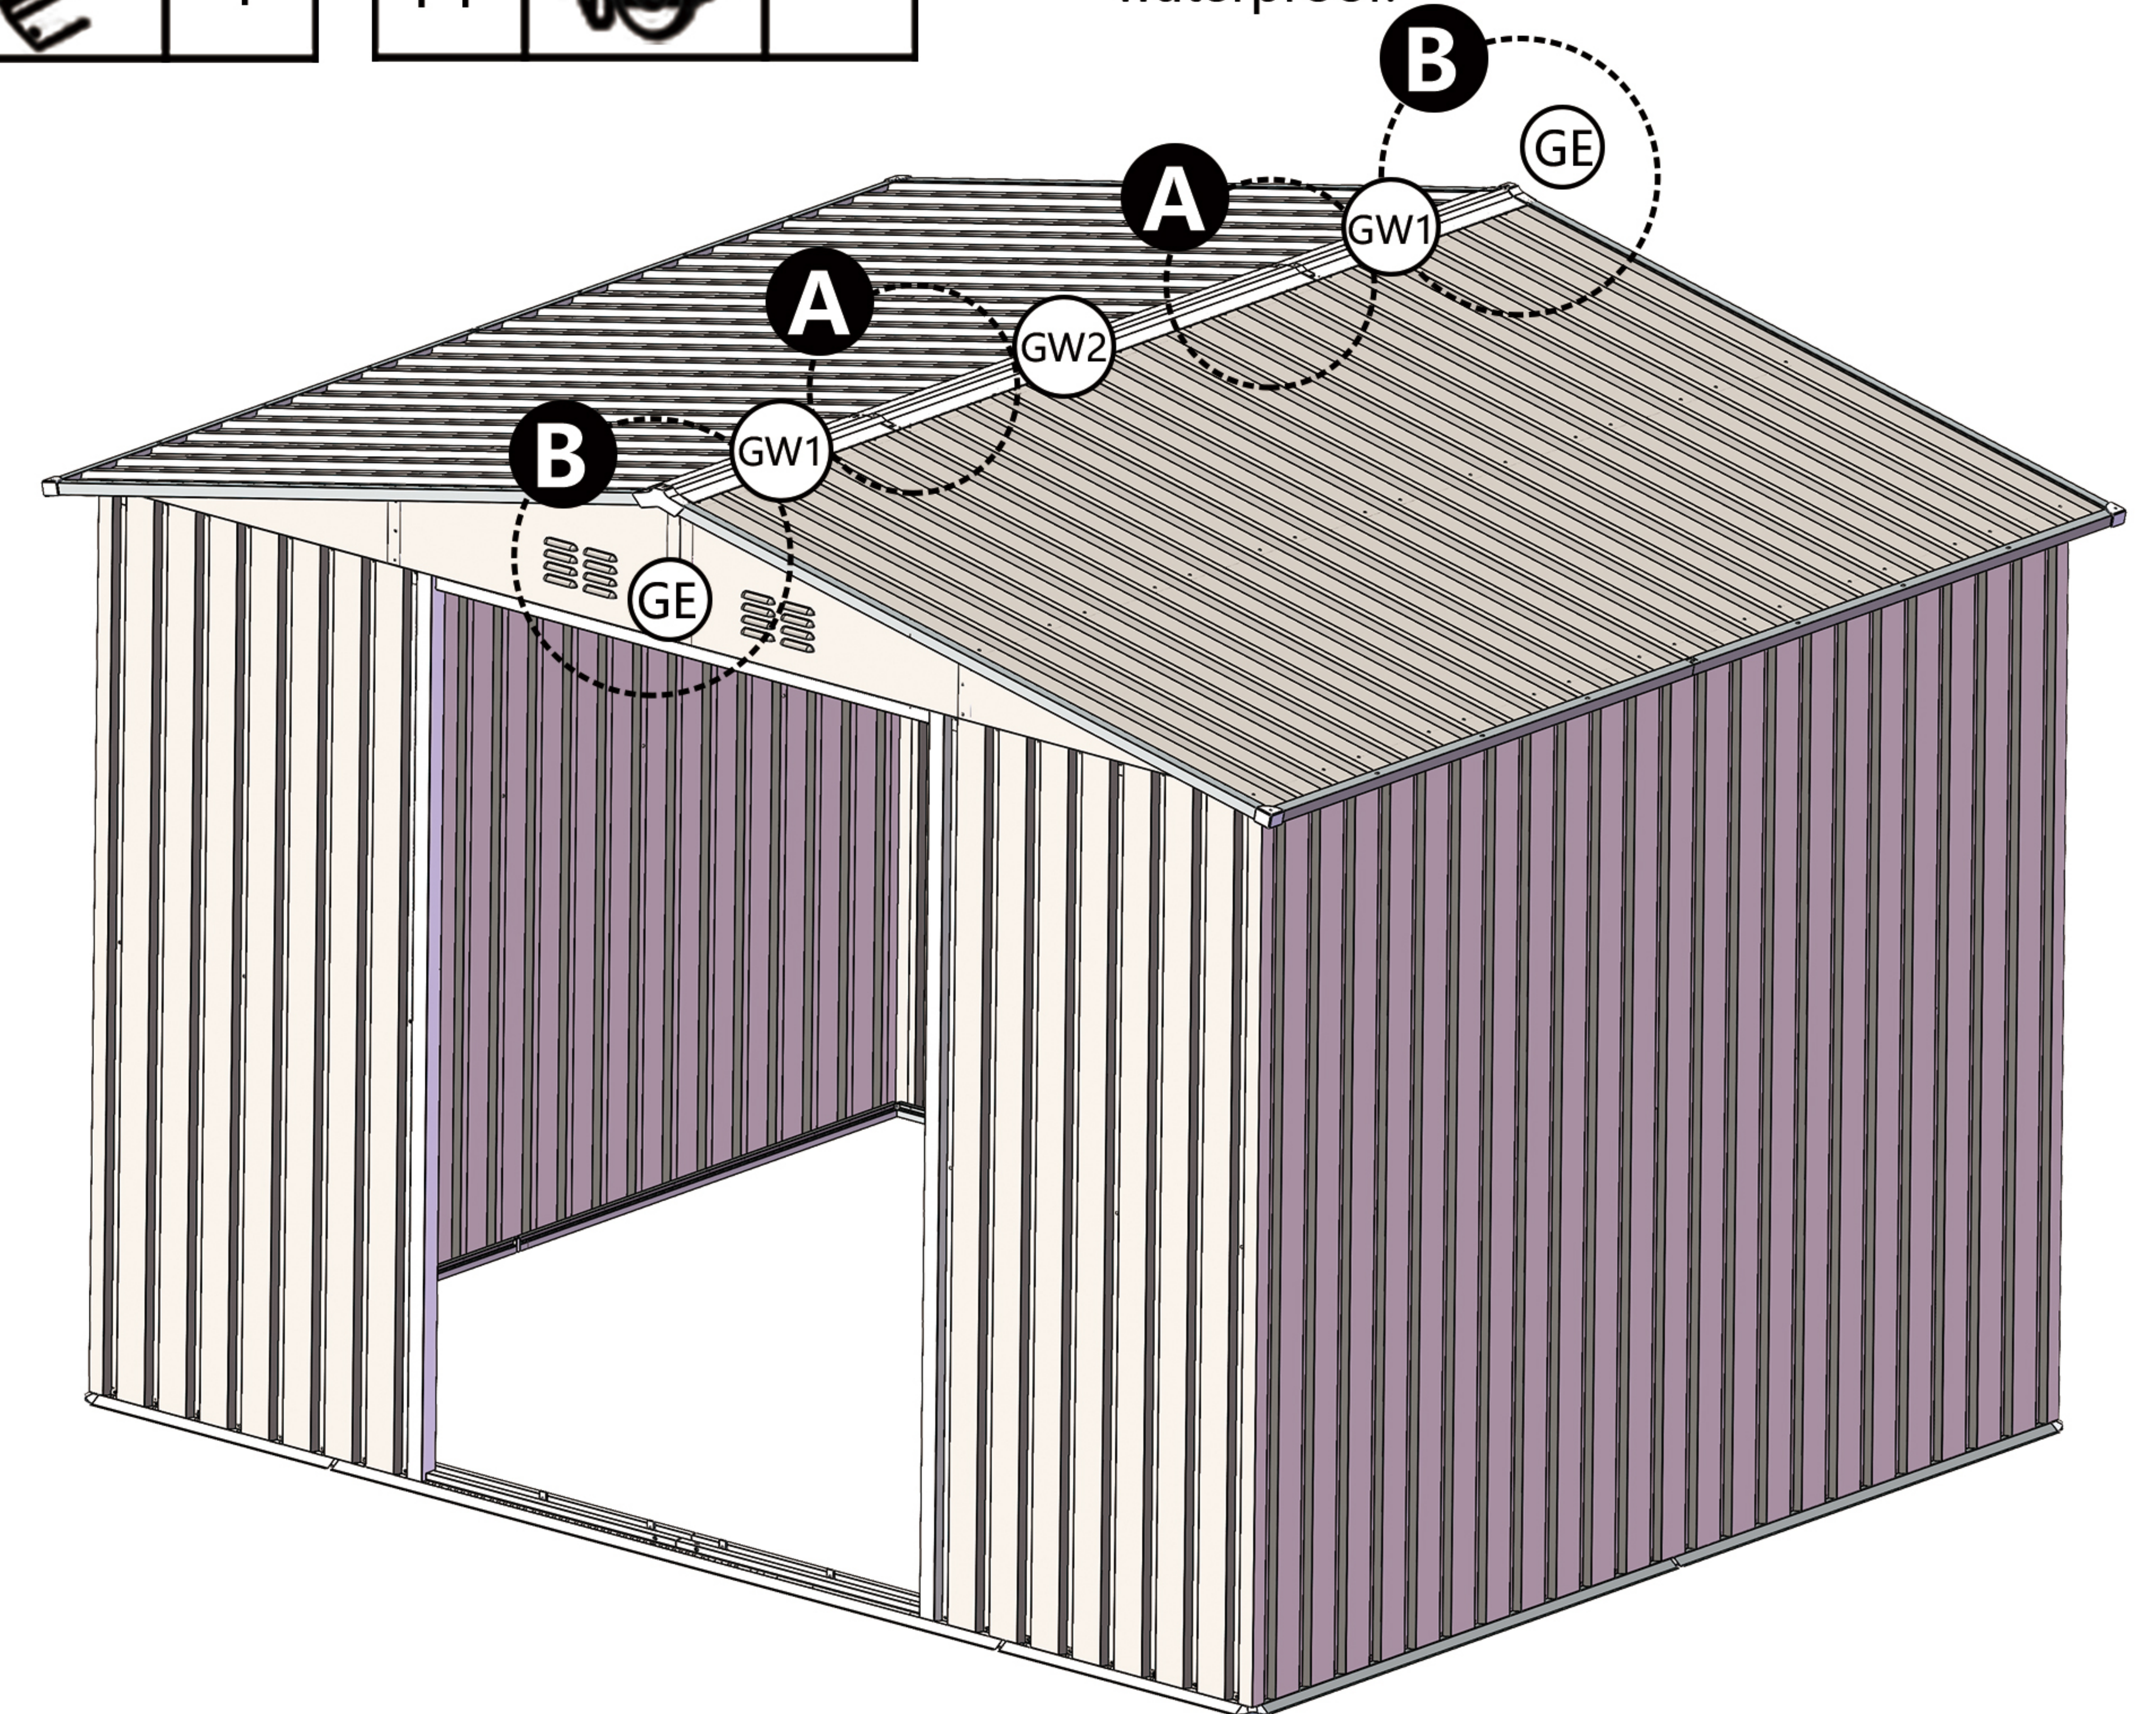


Notice:



Step A: GW1, and GW2 are fixed at the top with F1.




Step B: GE is fixed at both ends with F1.

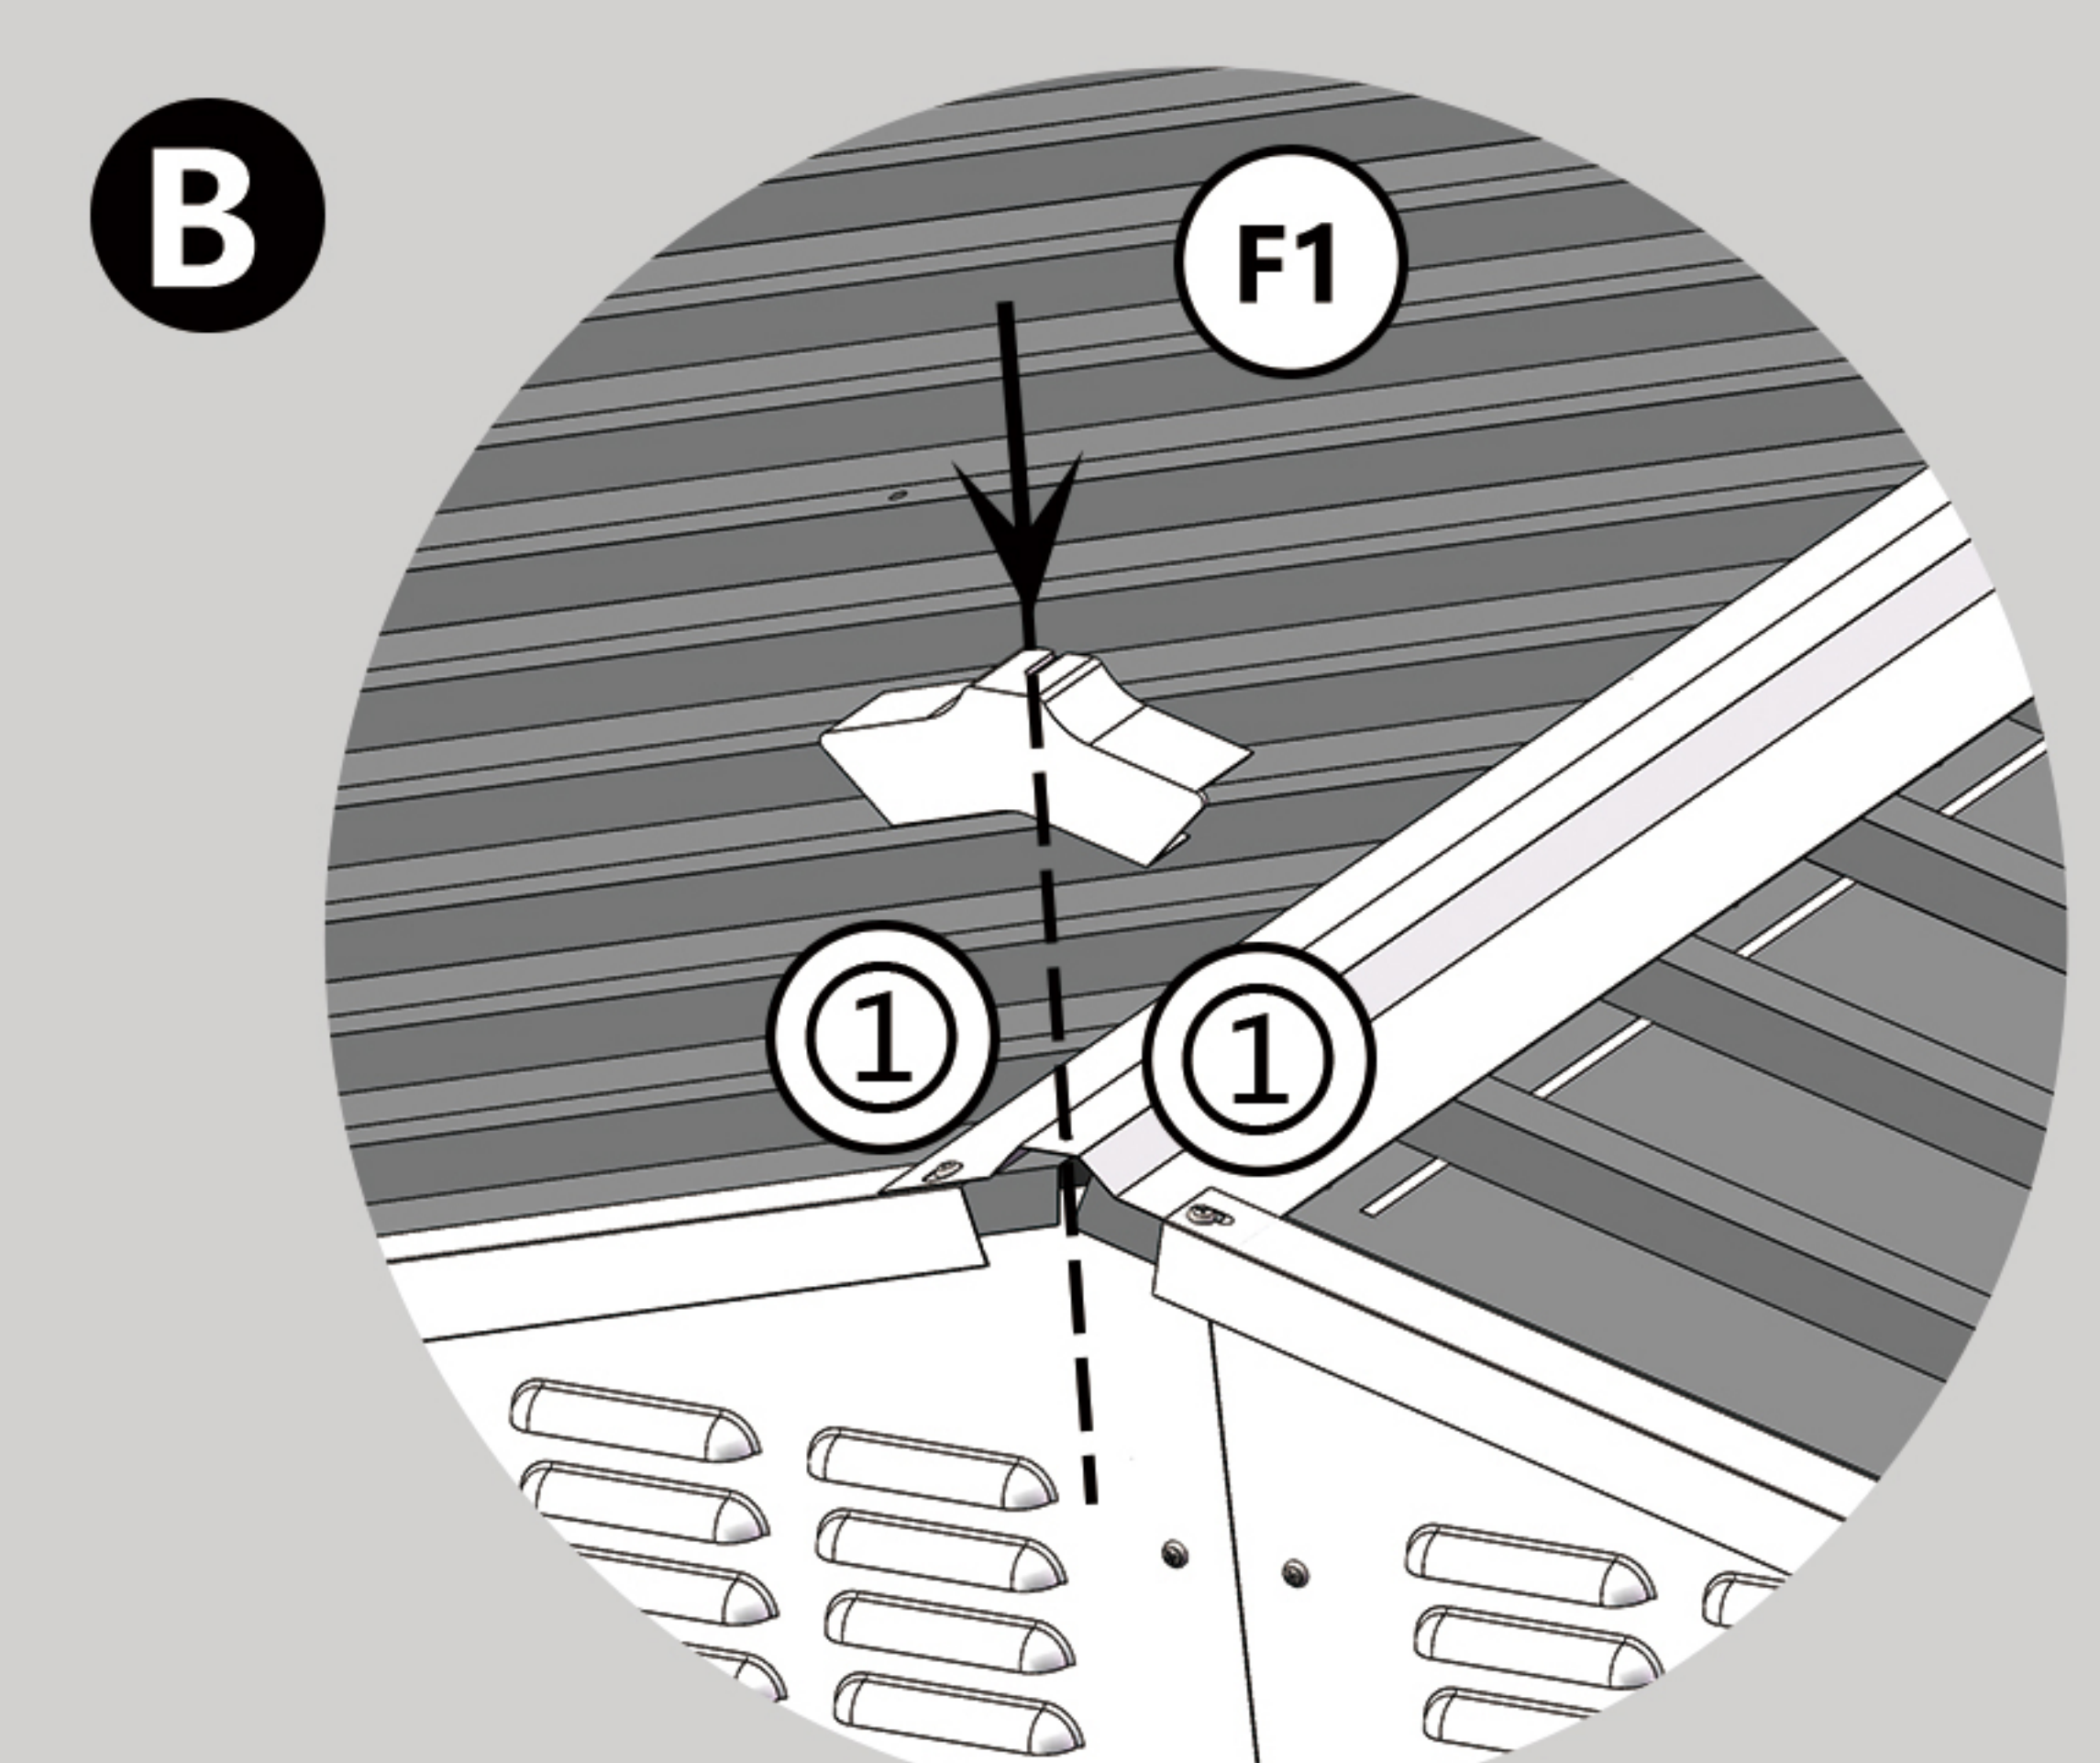
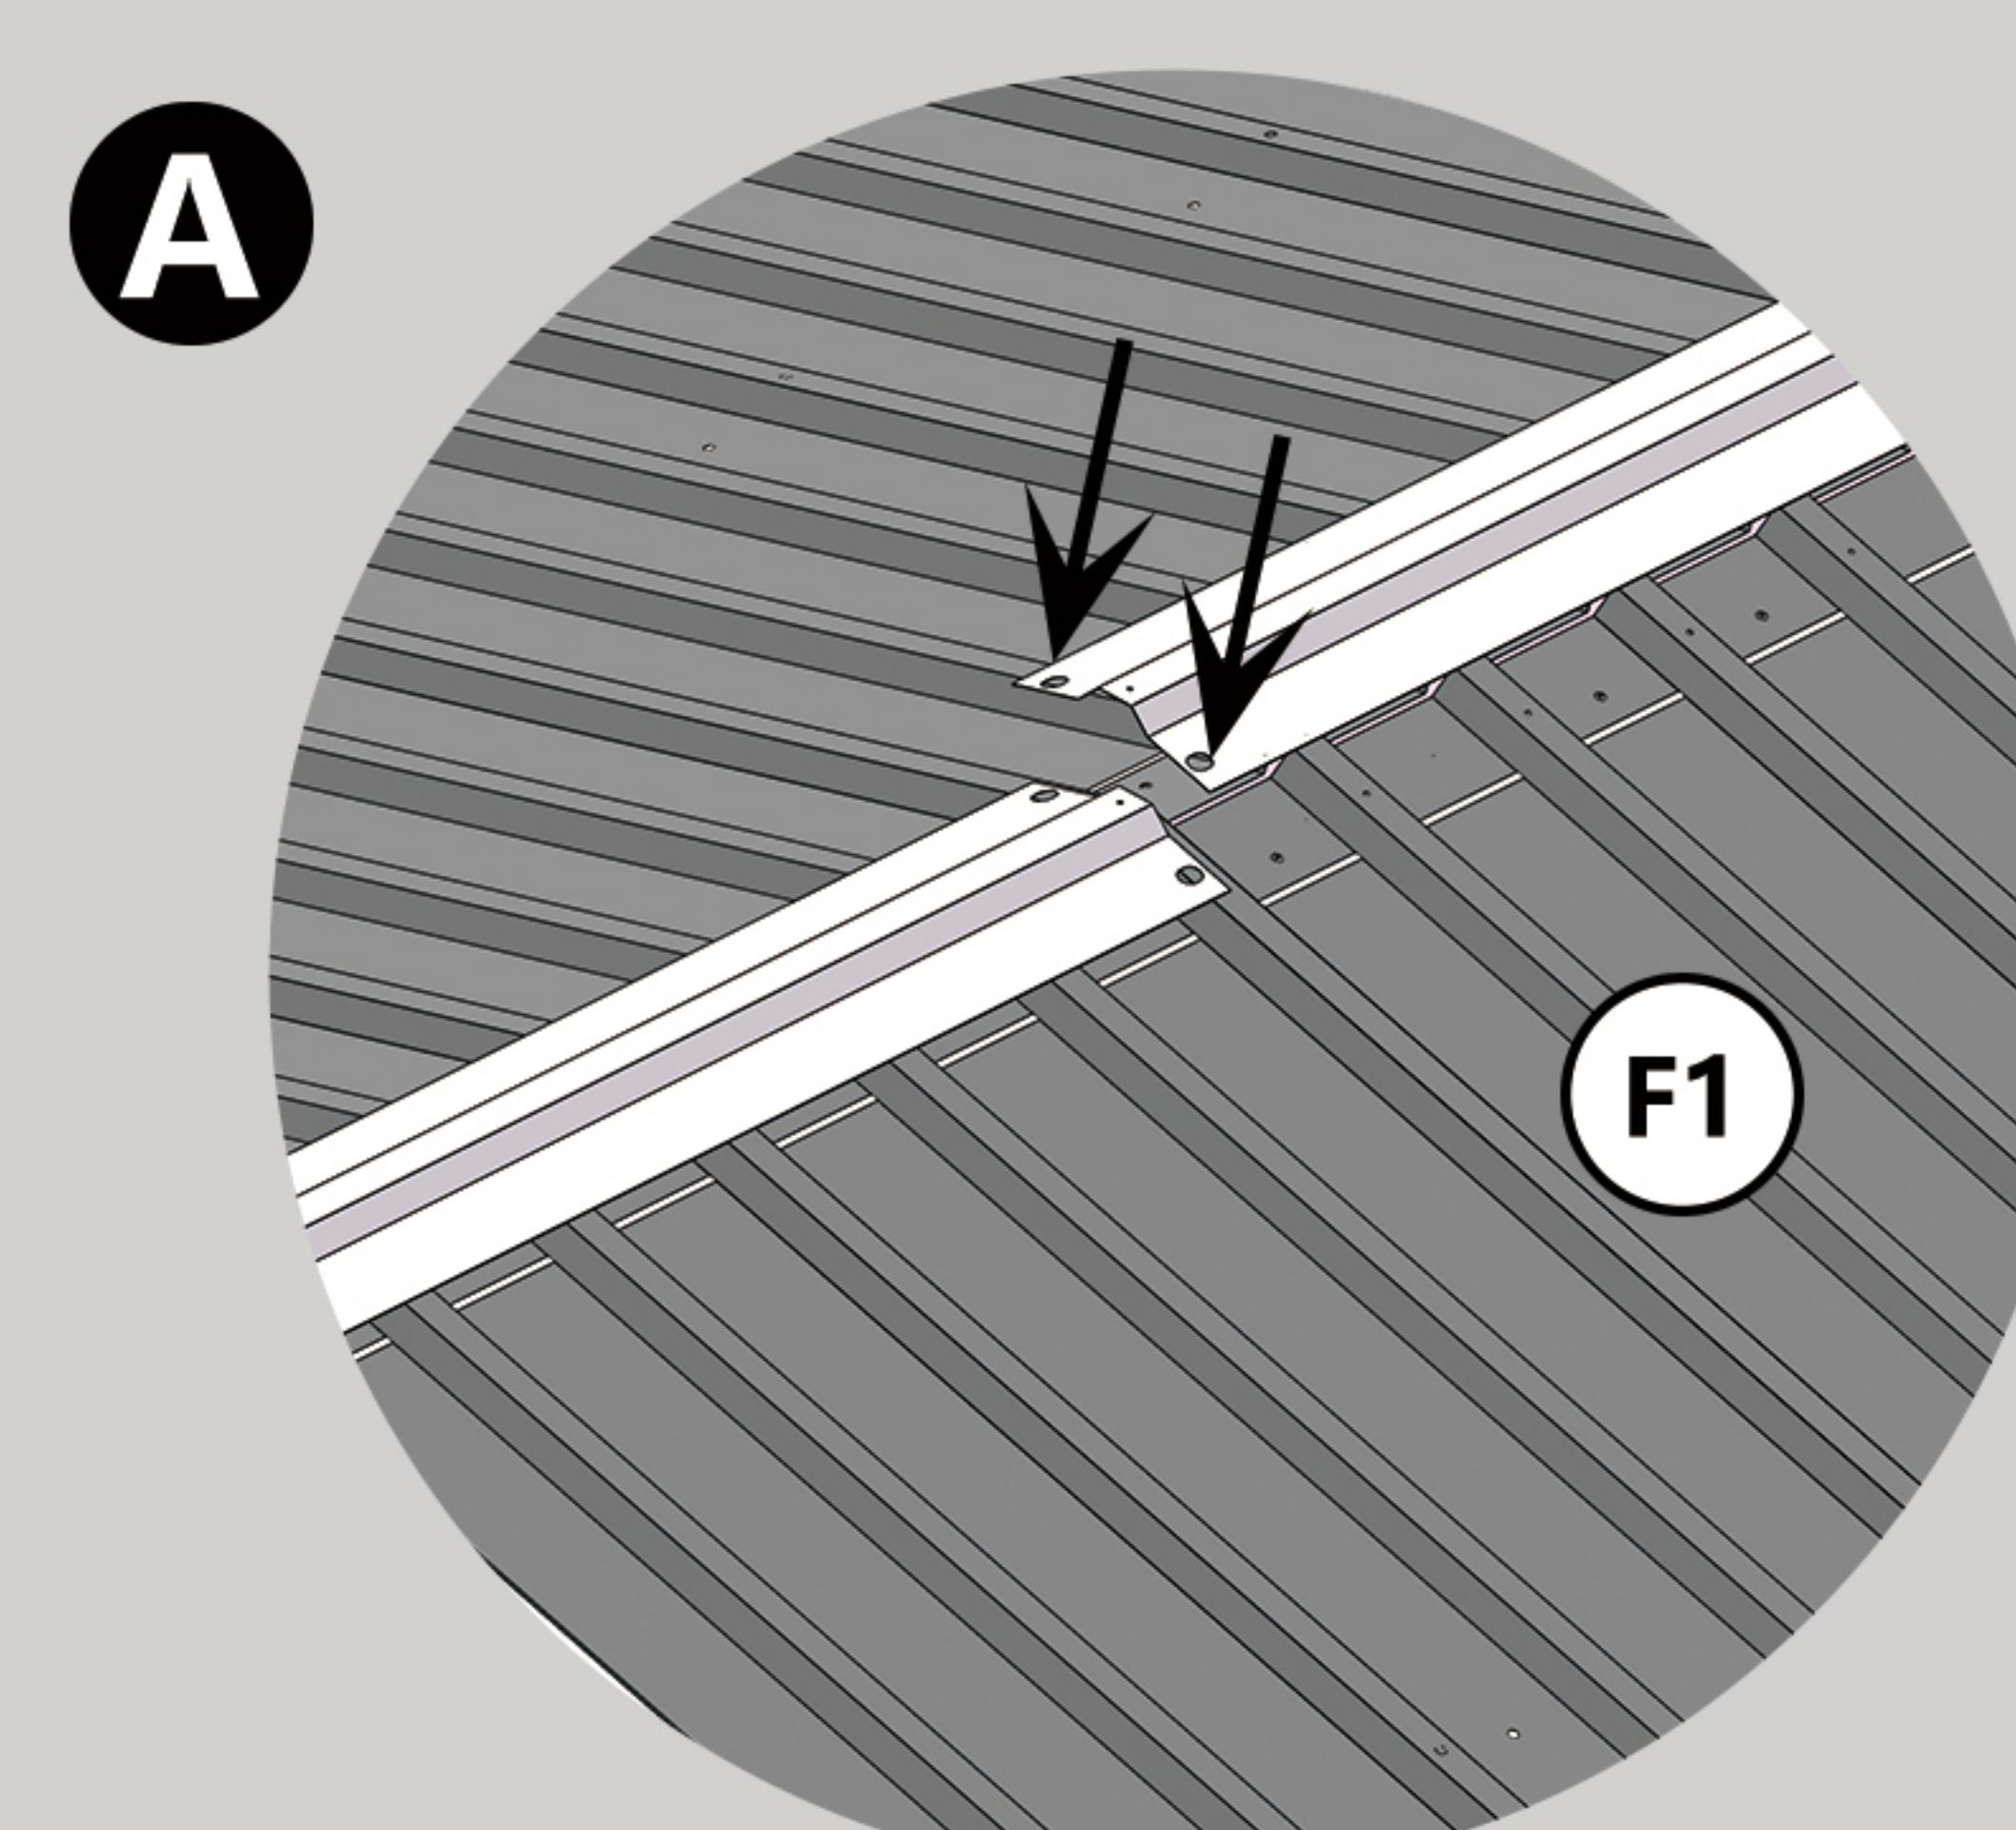
① Description: The holes on the most sides are shared by GW1, Q4 and GB1.



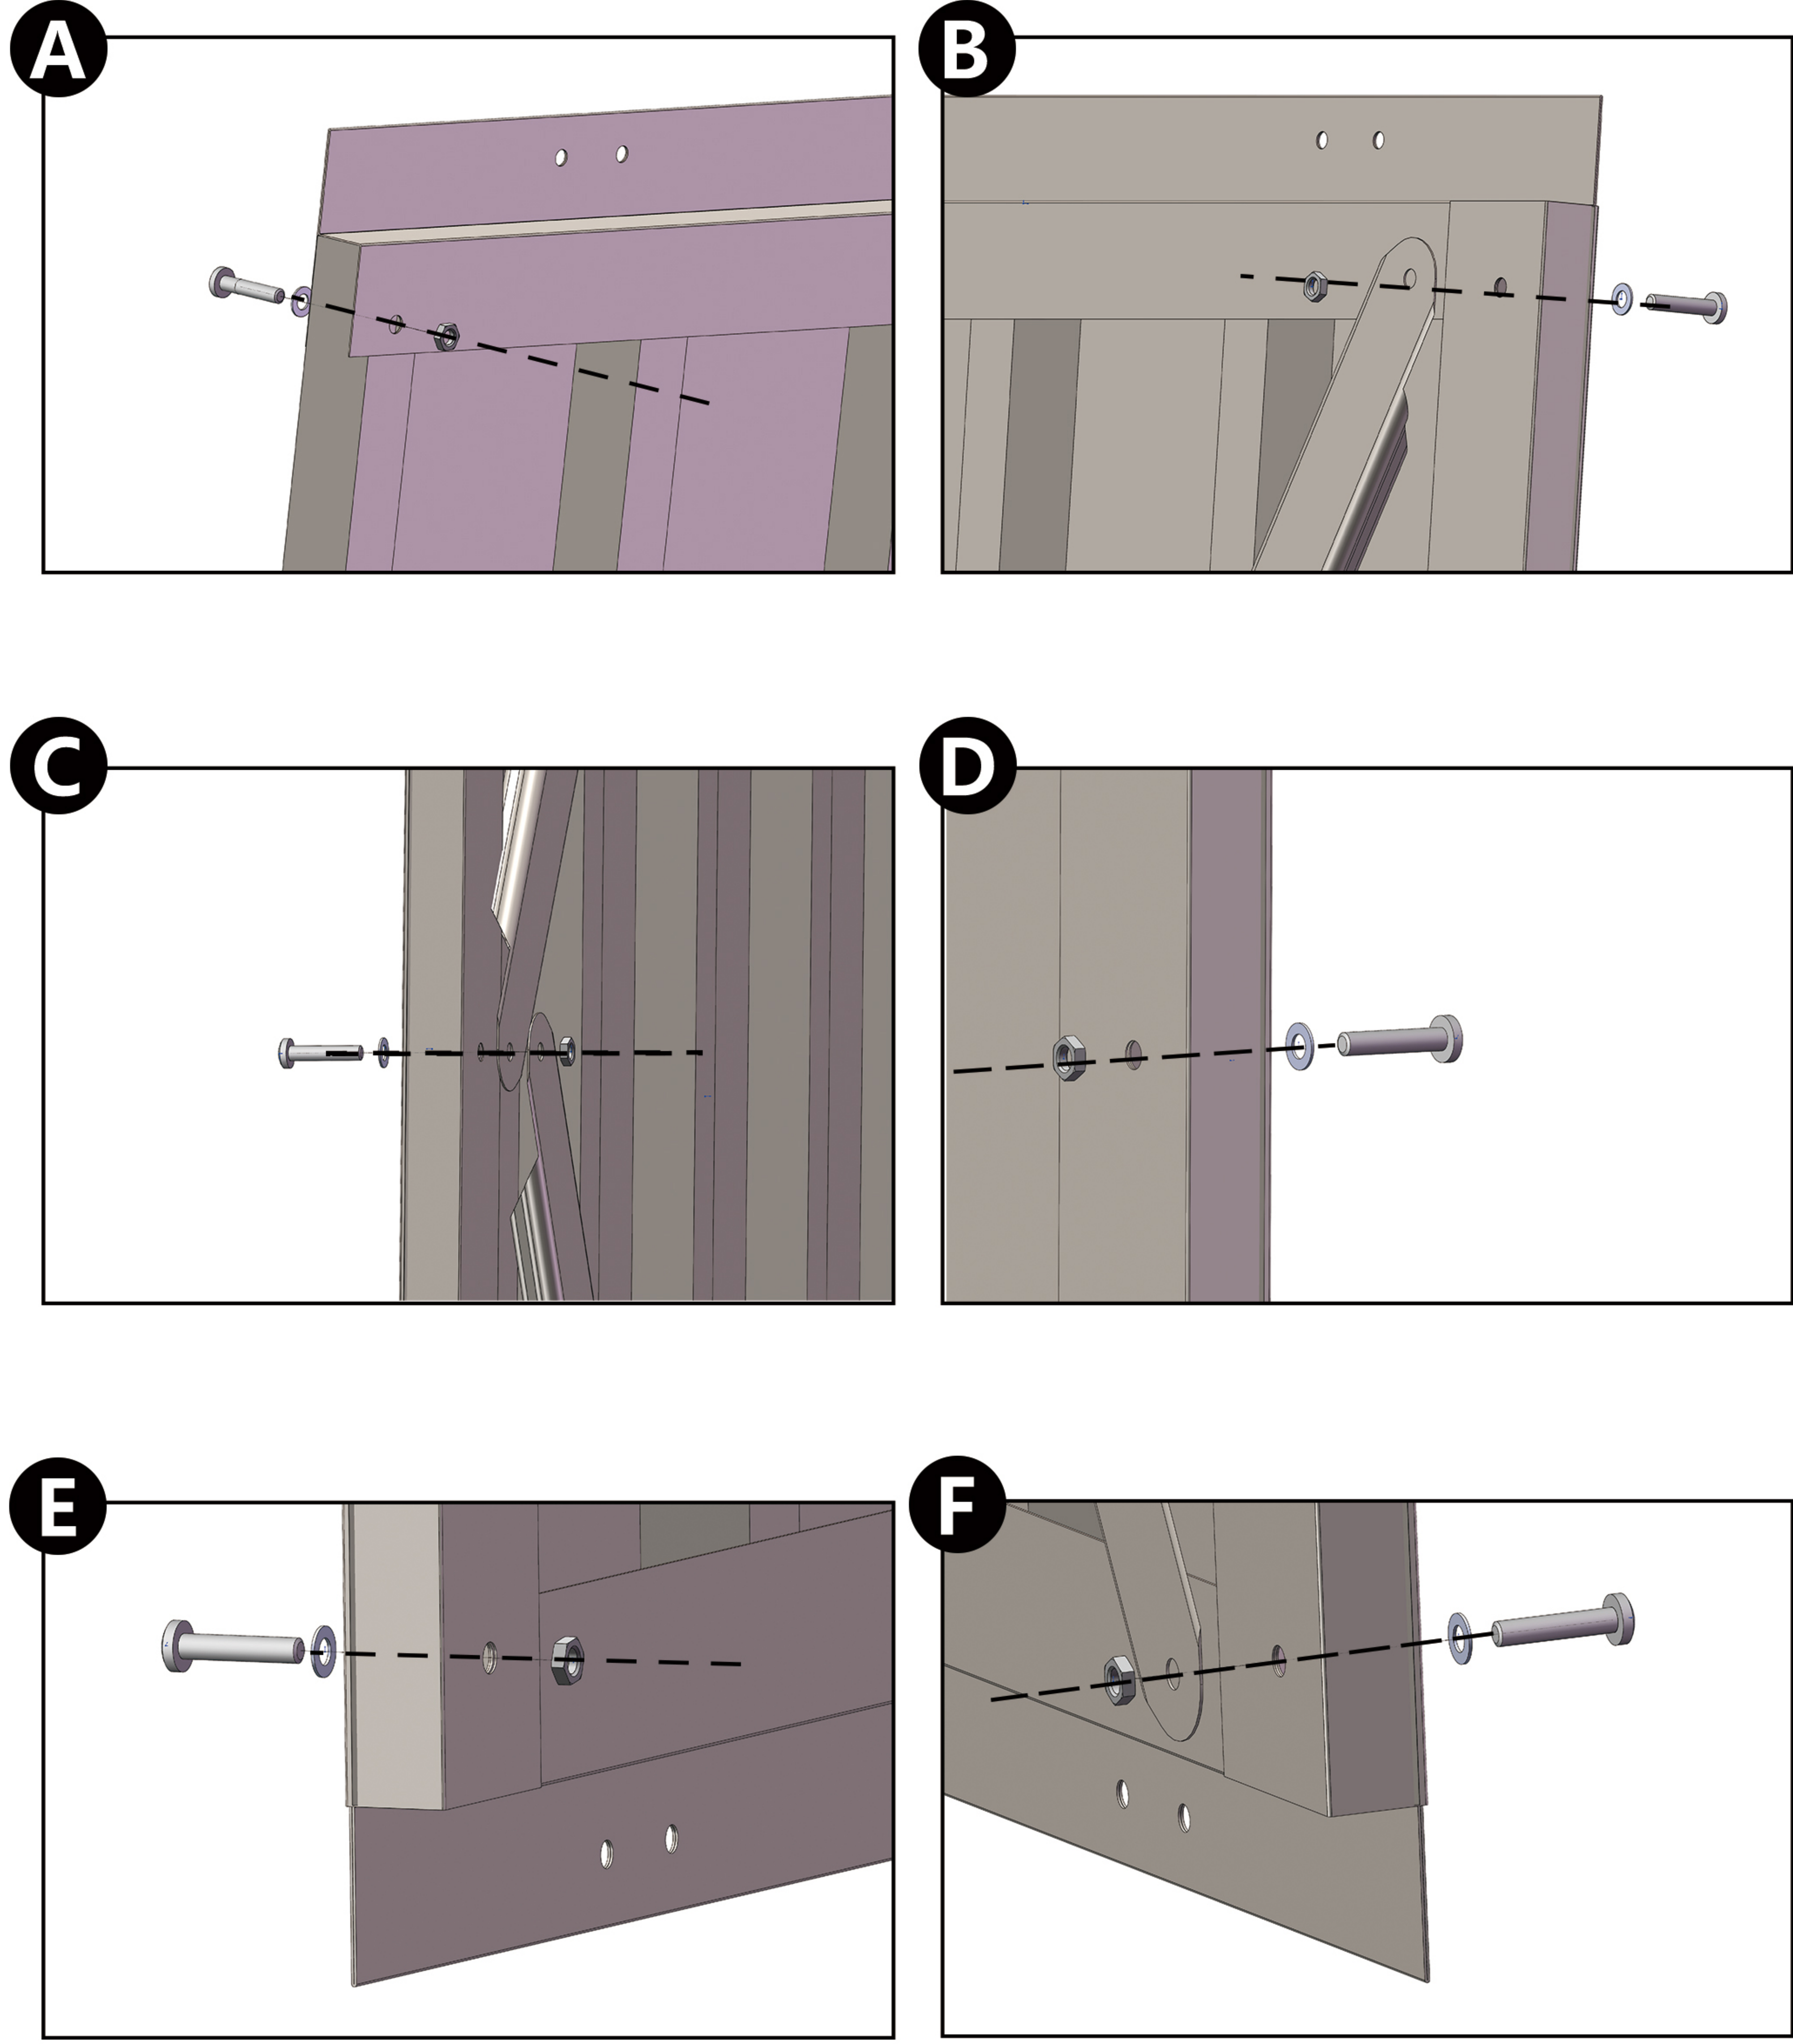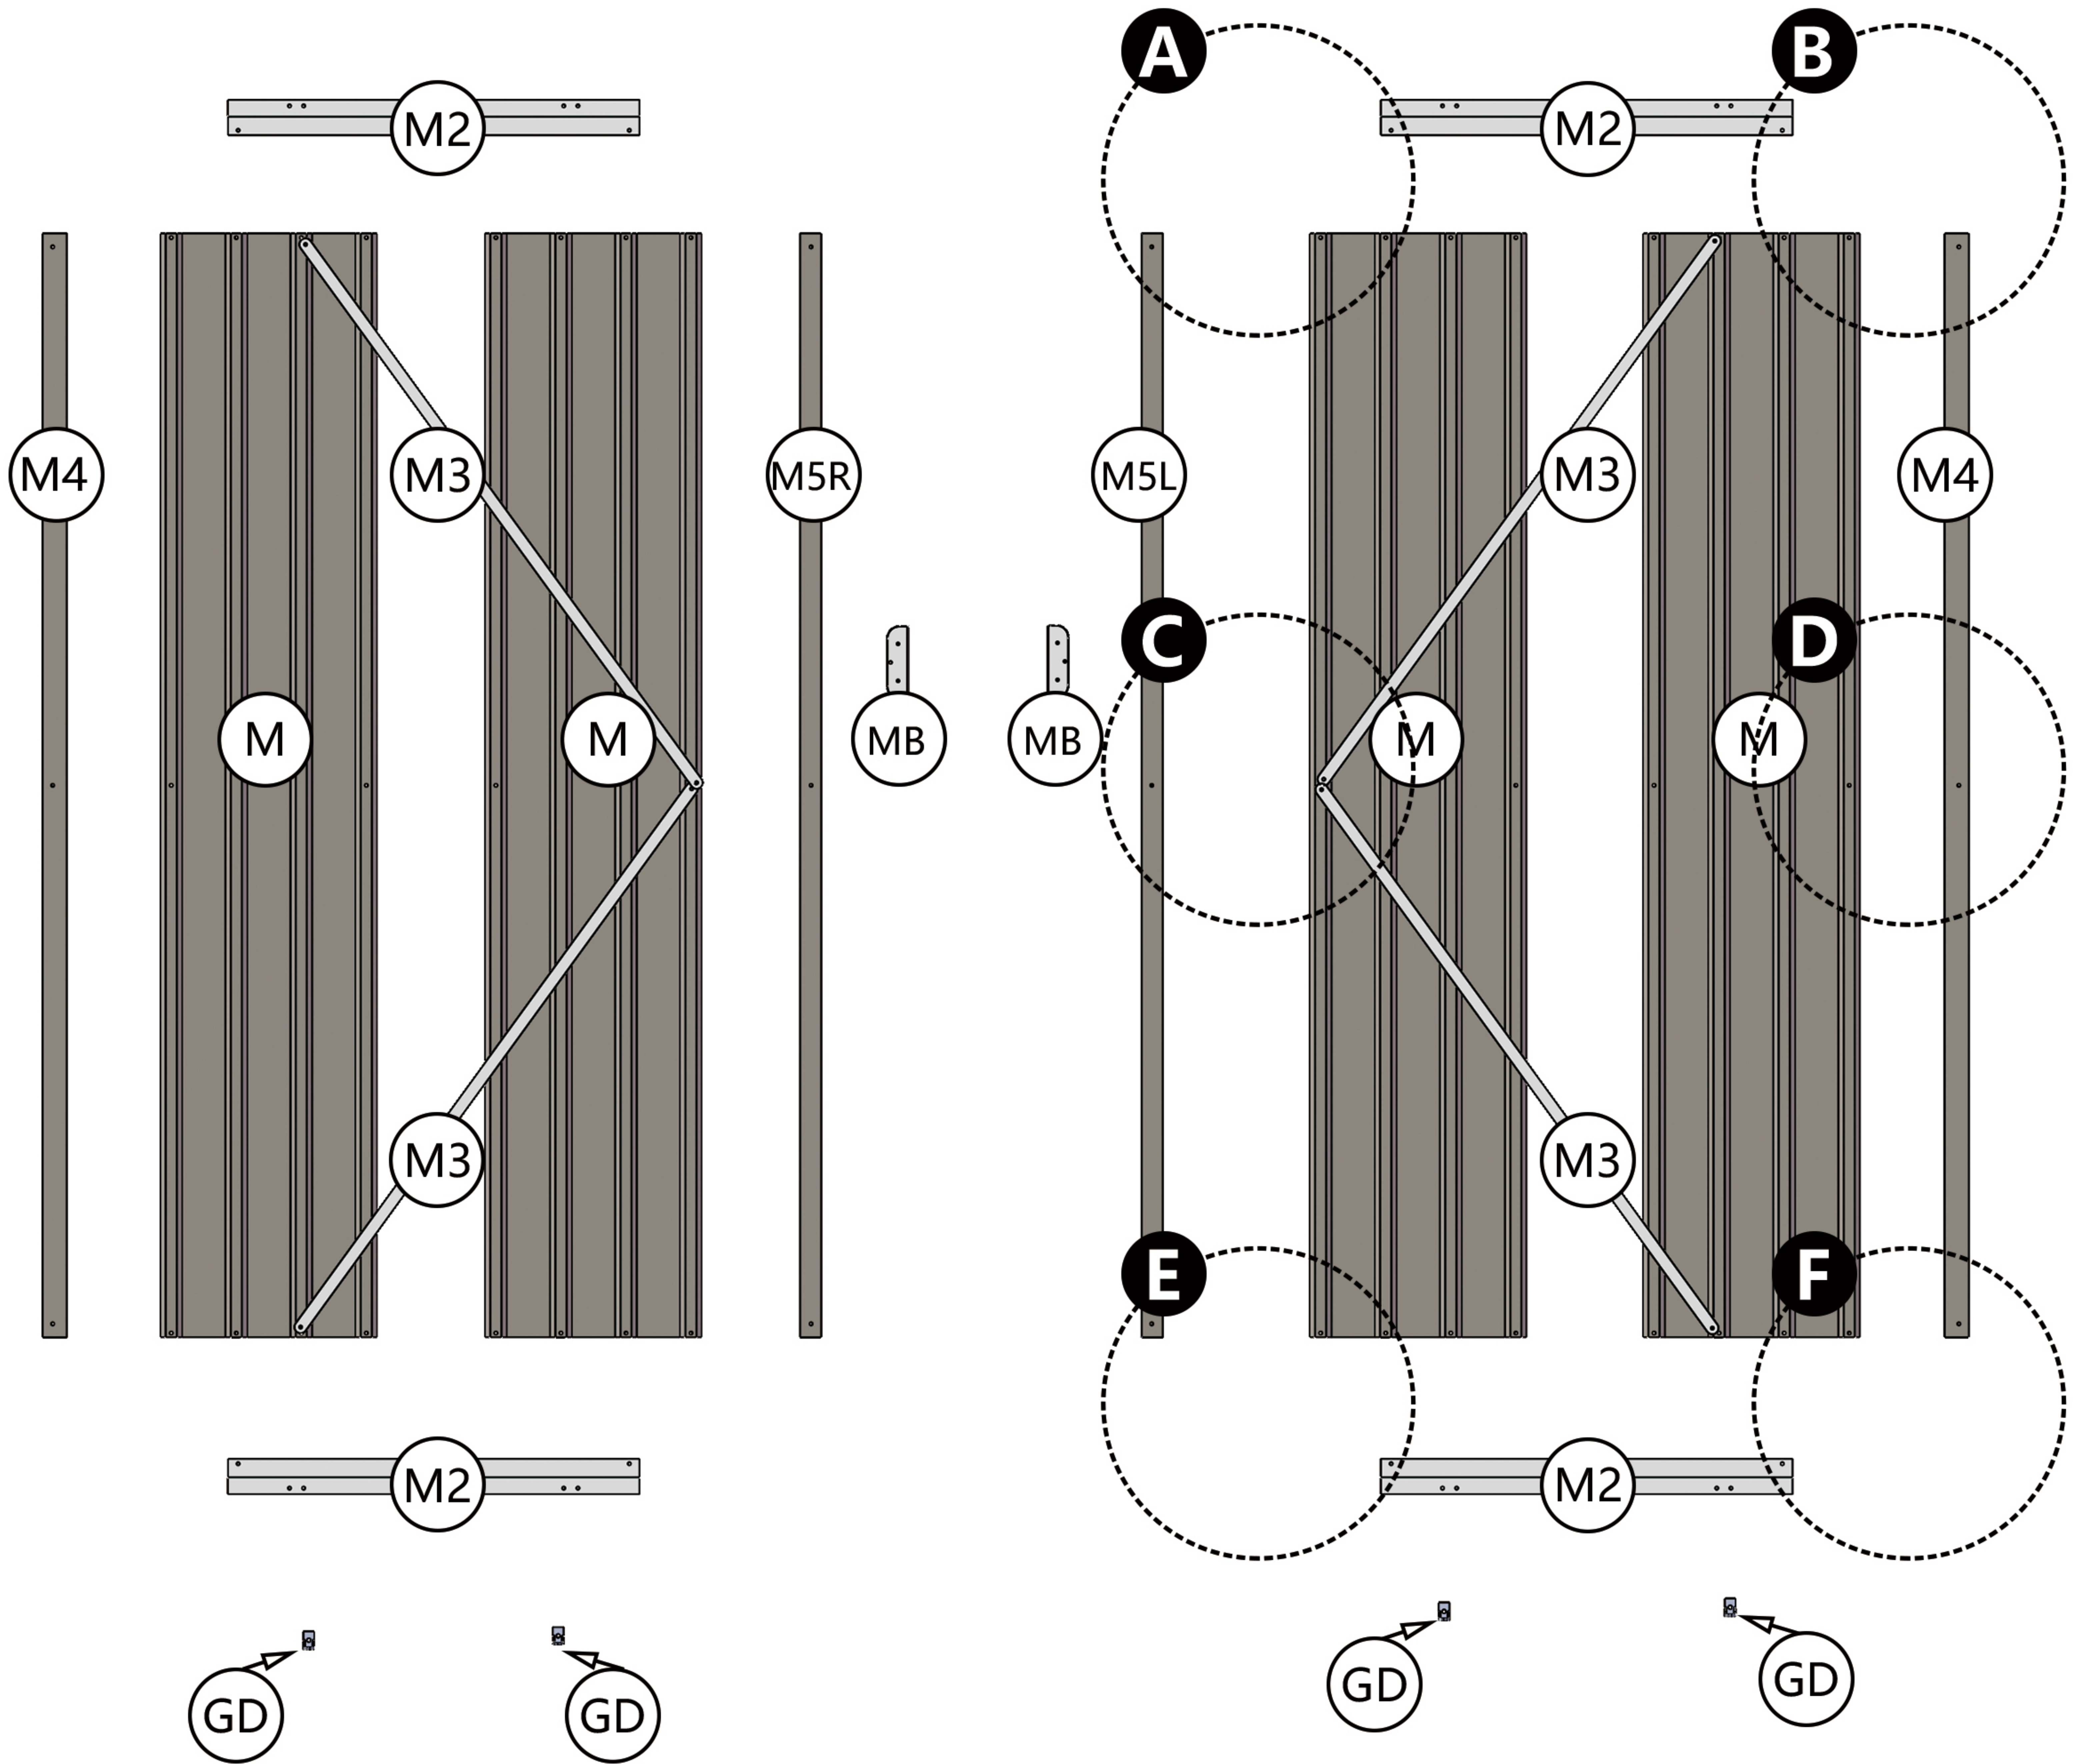


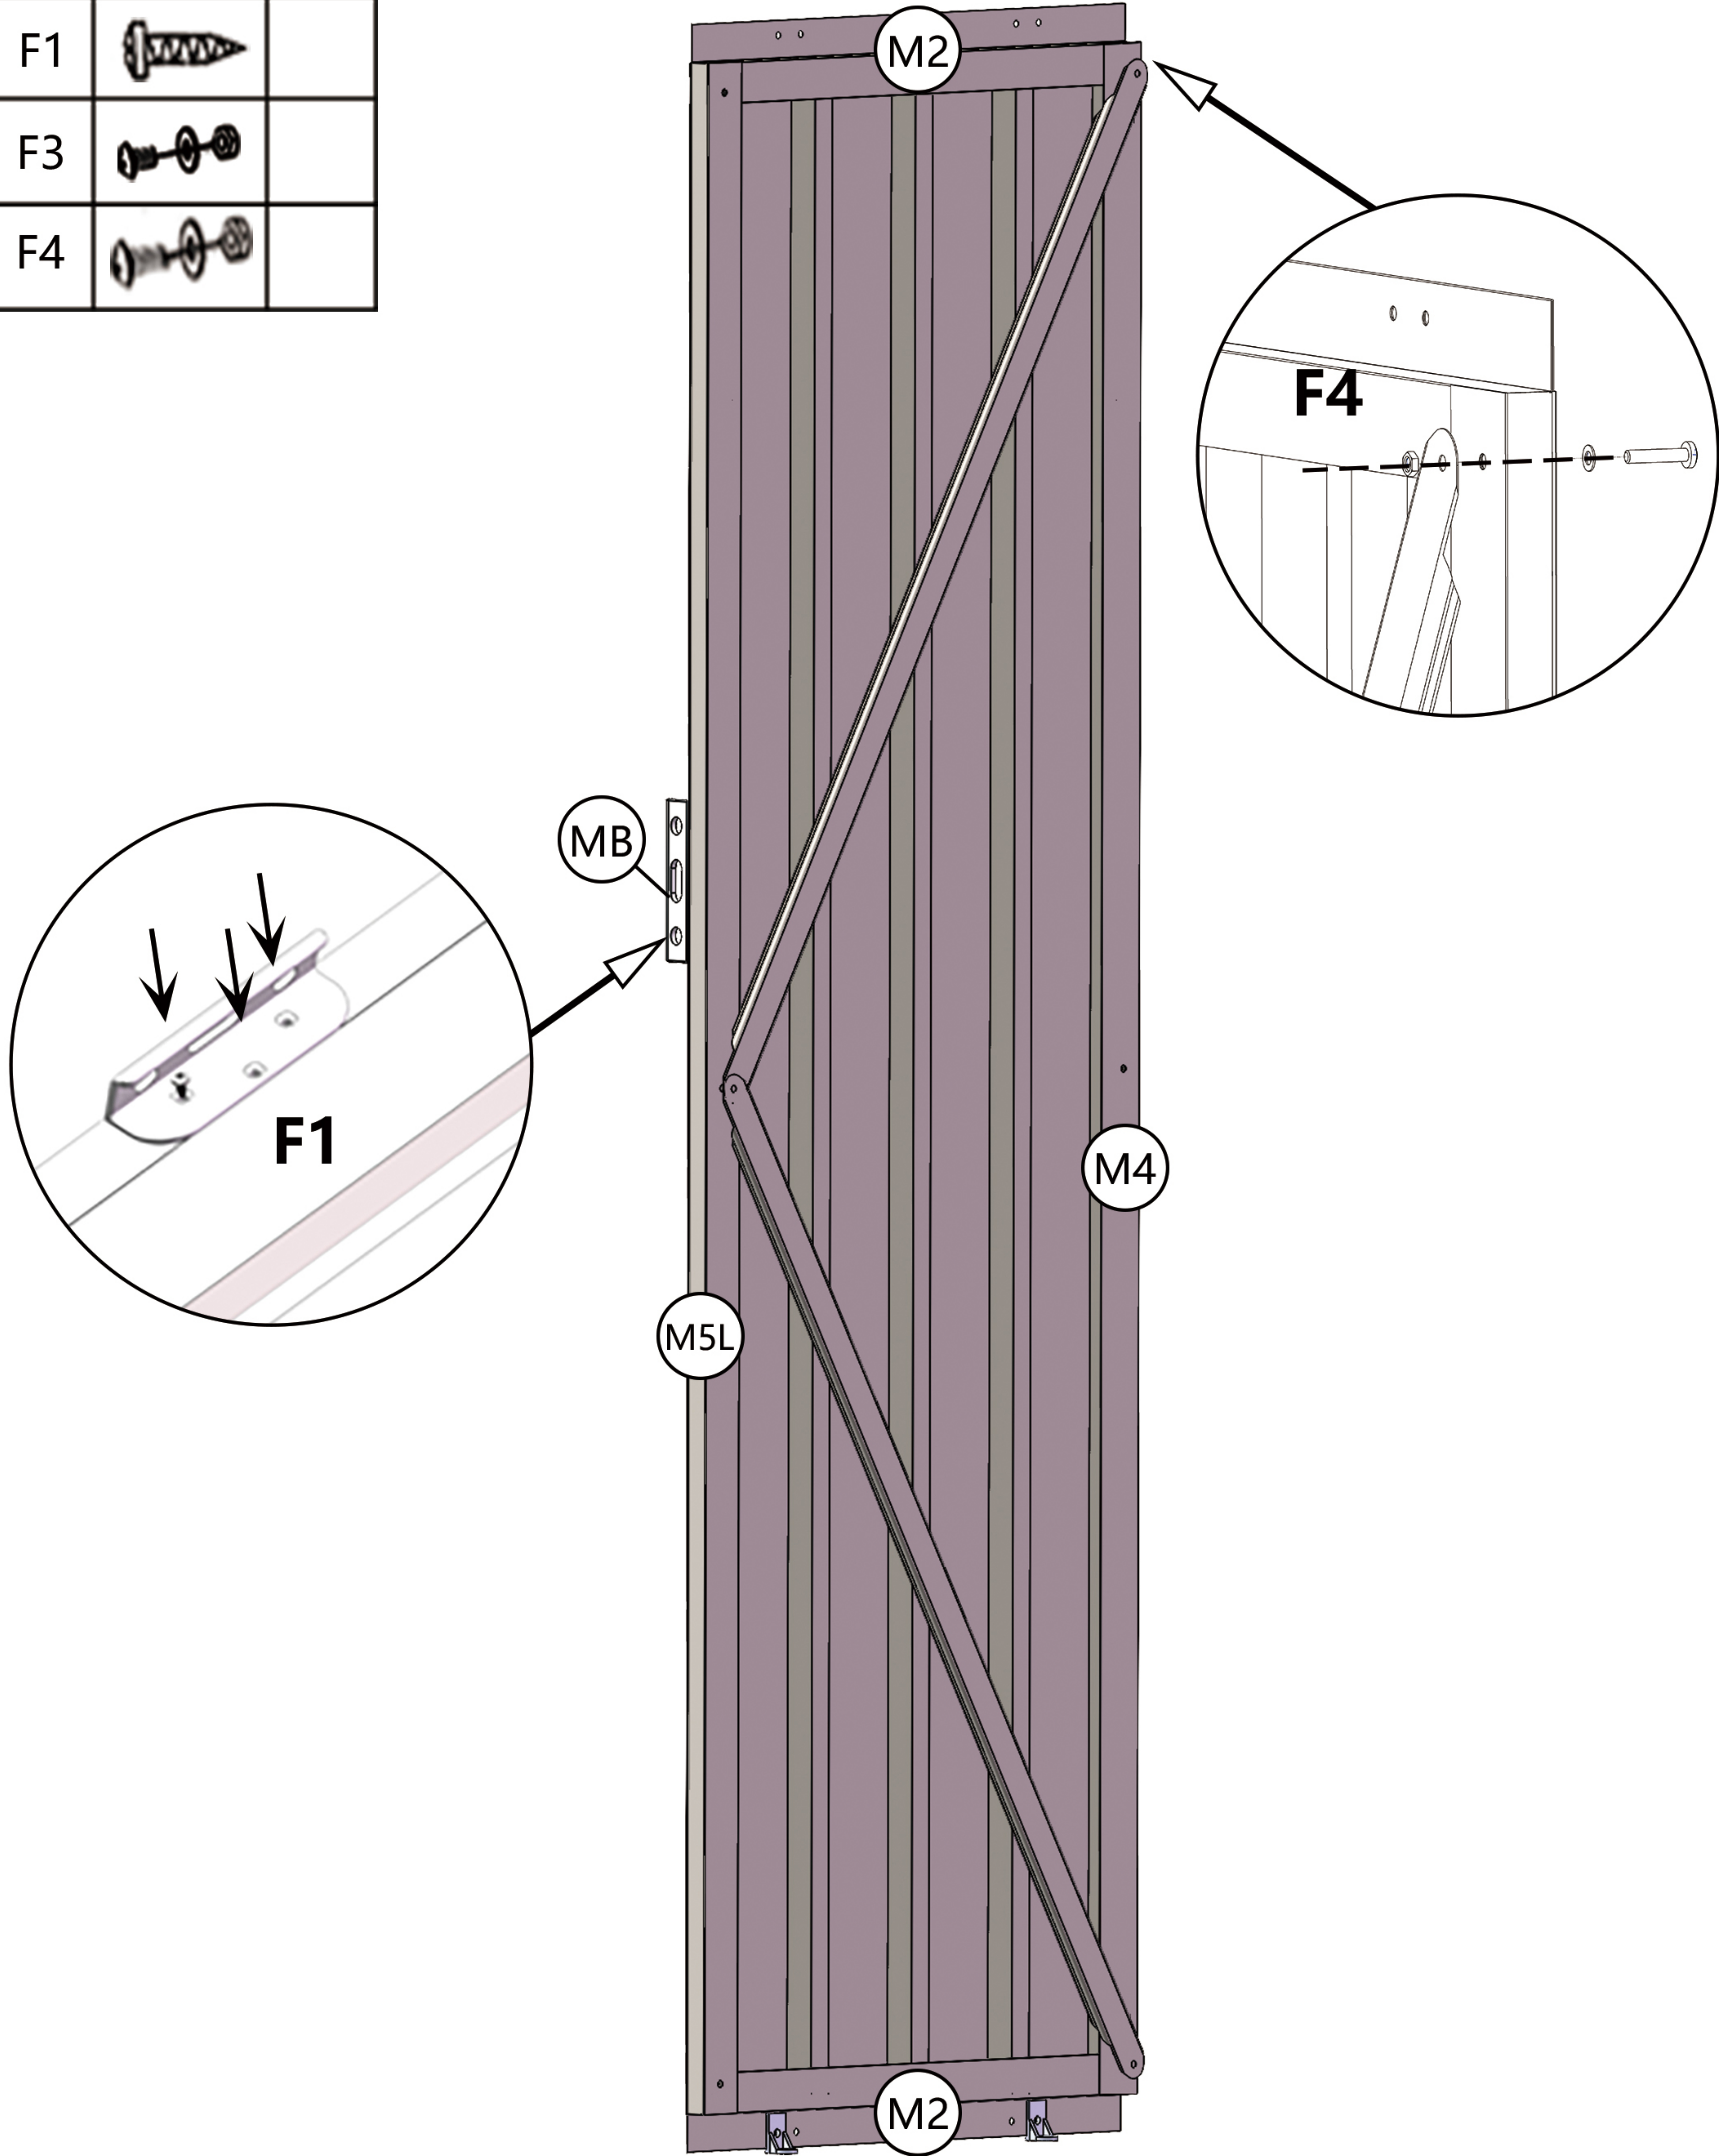
NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.	NO.	PART	Qty.
M2		4	M5L		1	M		4	F3		
M3		4	M5R		1	GD		4	F4		
M4		2	MB		2	F1					

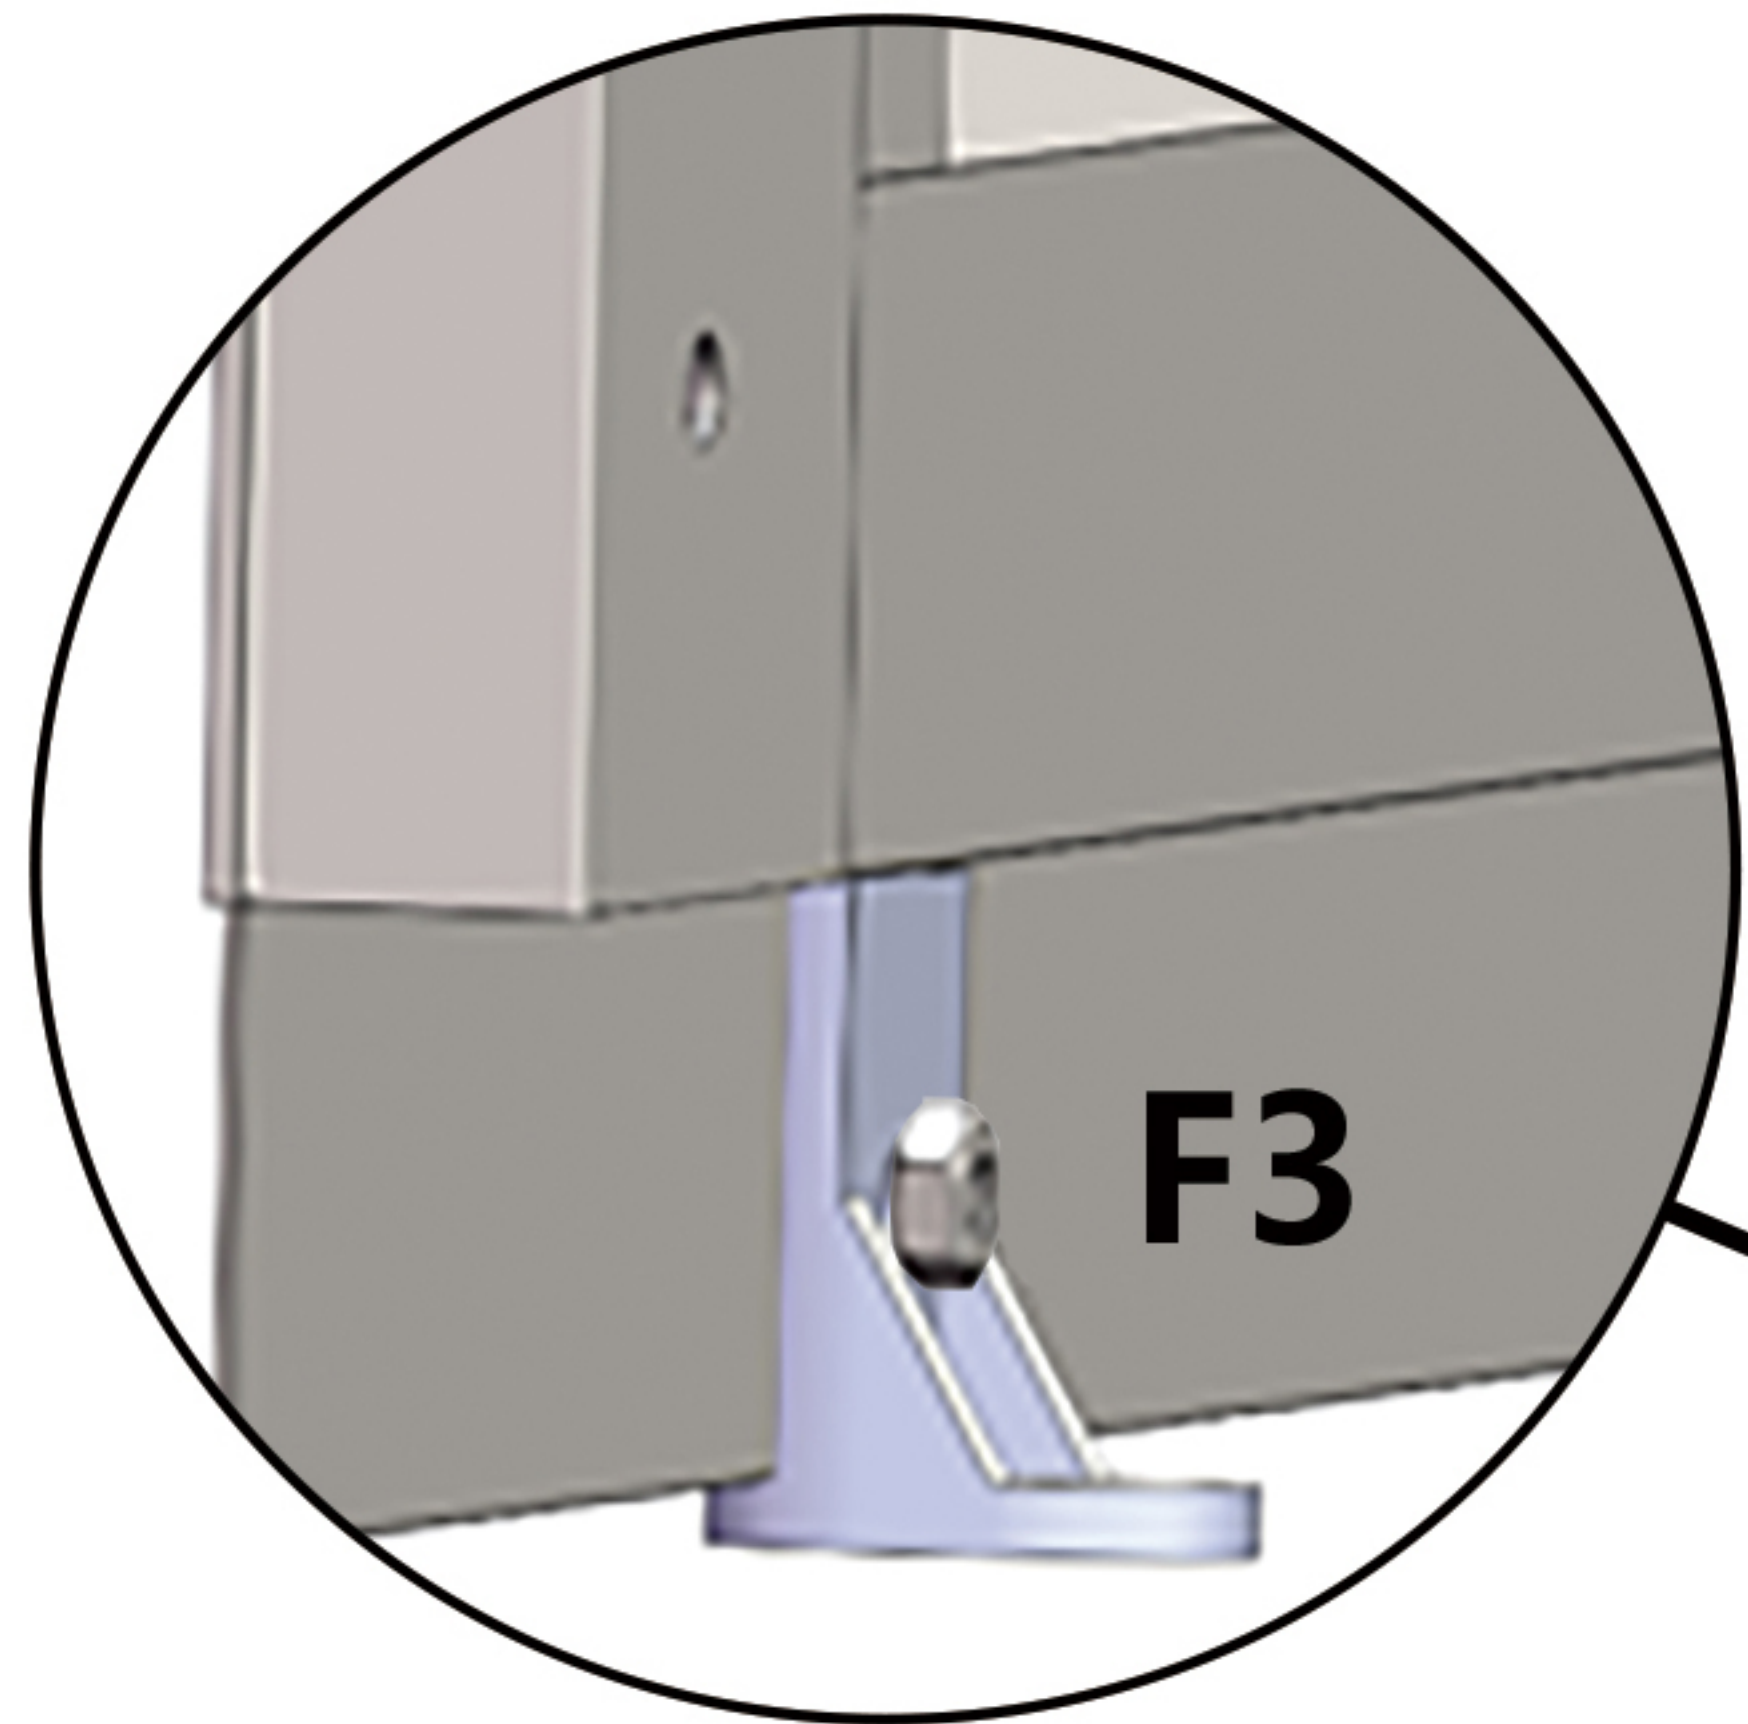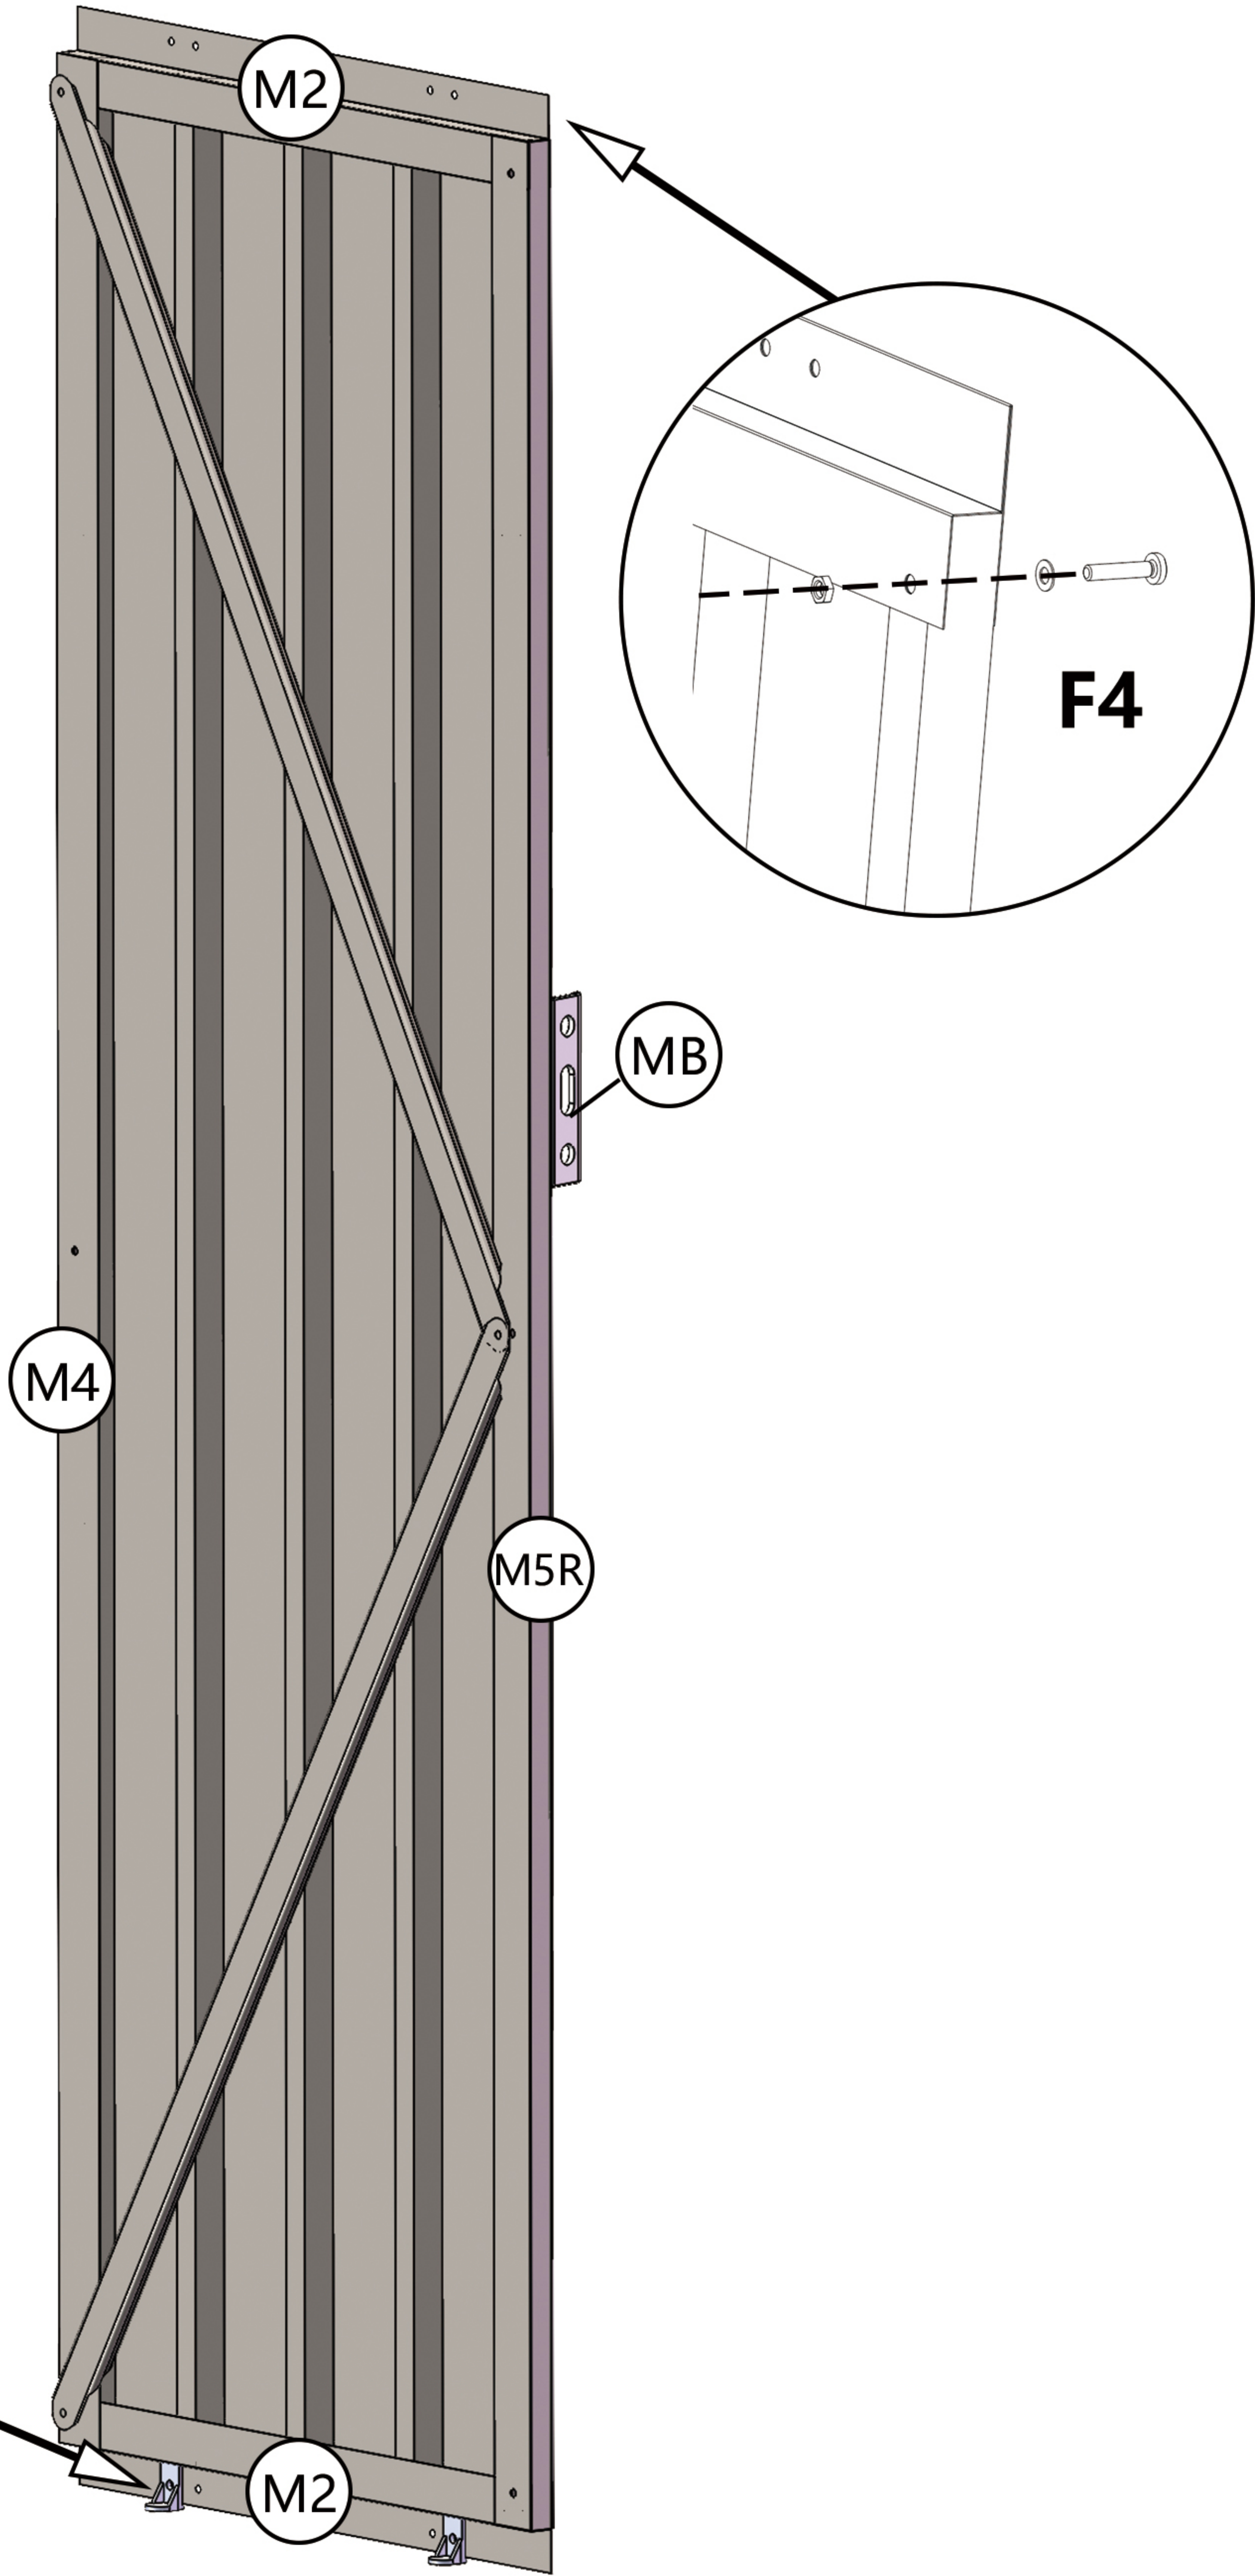


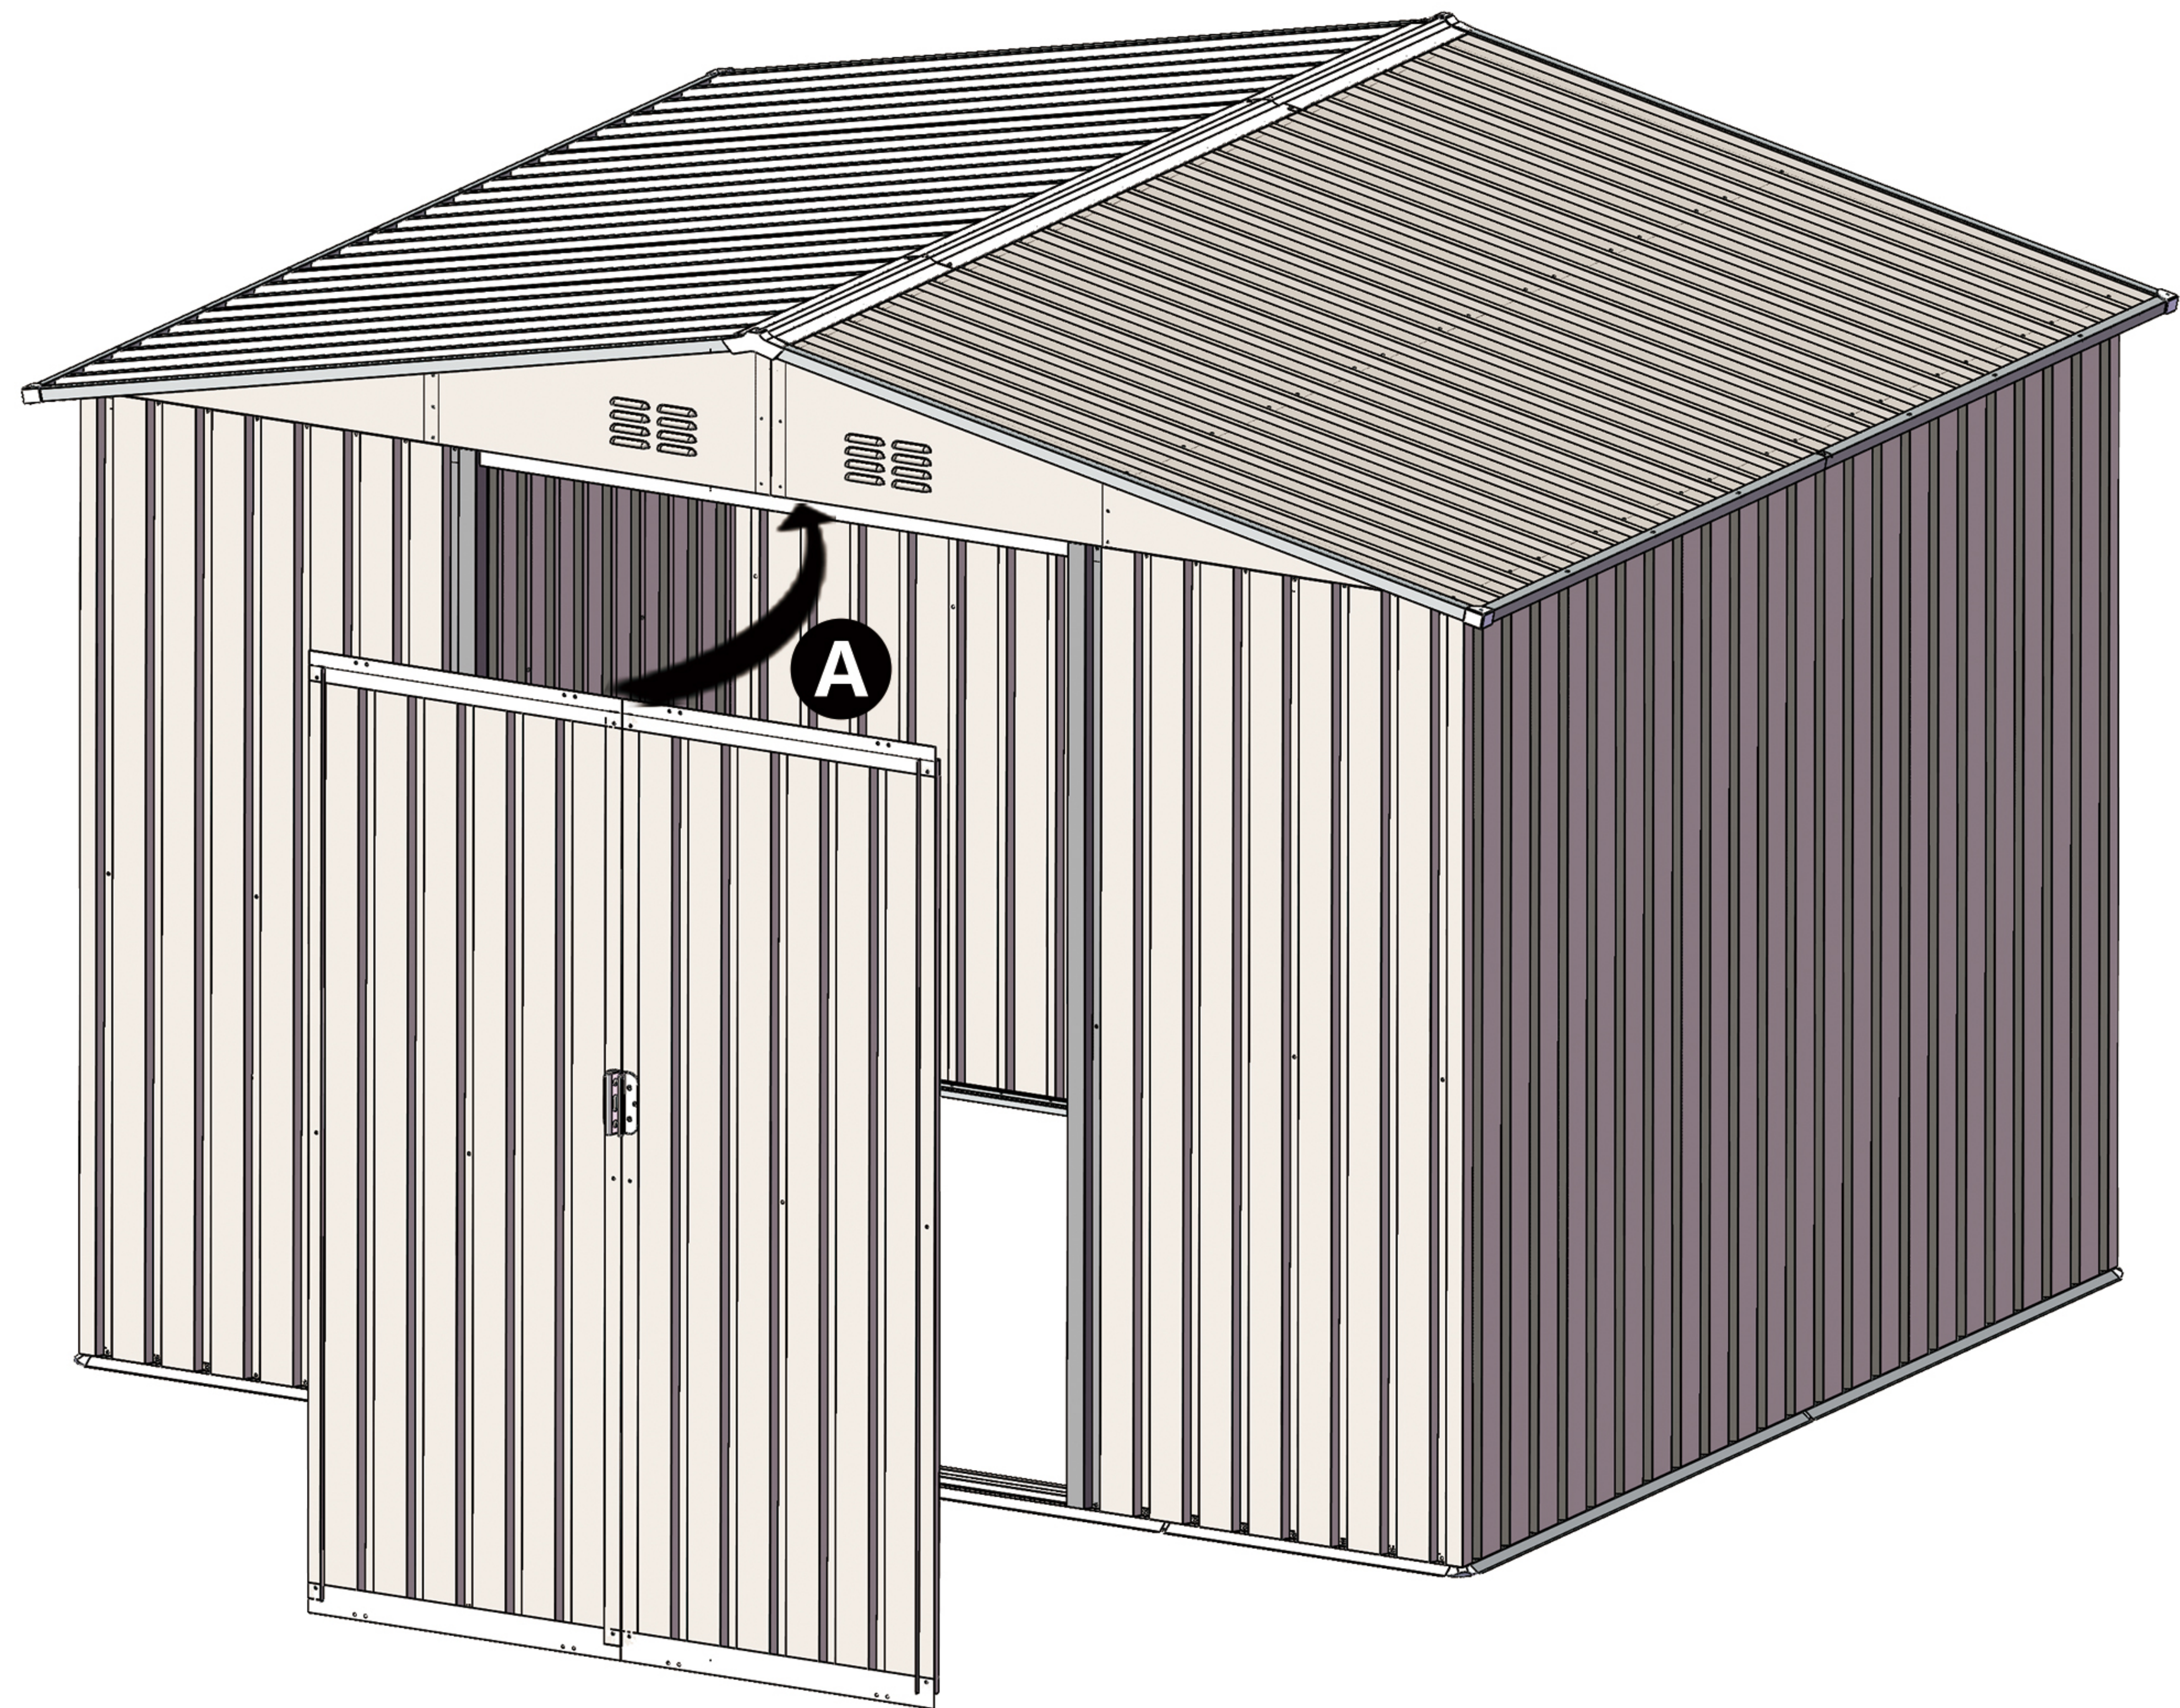
NO.	PART	Qty.
F1		
F3		
F4		



NO.	PART	Qty.
F1		
F3		
F4		



NO.	PART	Qty.
F1		



Notice:
Use F1 to secure the installed door to the pulley
The adjustment of the door can be achieved by the three holes of the pulley being at different heights

