

Metal Carport OWNER'S MANUAL Size 11 Ft X 19 Ft

PARTS LIST

Part number	Quantity	Part number	Quantity
A 1	2	Q3	4
A2	2	Q1	40
A3	10	H2	4
A5	2	H3	4
A6	2	Gloves	2
B1	32	screwdriver	2
C 2	6	specification	
C 3	3	screw:	
C4	3	F1	several
W1	8	F5	several
M11	15	F6	8
GB1	Place at the joint of the 2 tiles Play a sealing and waterproof role		
GB2	Placed on the outermost tile of the garage, To prevent edge collisions.		

Warning & Attention:

- -Take care of sharp edges; Please wear gloves;
- -You are advised to read the whole procedure before installing it;
- -Try to assemble this product on the flat ground, otherwise it is difficult tocarry out;
- -It would be much easier to assemble the product with three or morepeople;
- -All panels are clearly marked and care should be taken to use the bcorrect one. It is important that these instructions are followed step by step;
- -Each screw has a surplus quantity, which can be used in reserve;
- -After assembly, please check whether all screws are tightened, to preventparts from falling apart.

Tools:




Gloves



Ladder



Electric drill

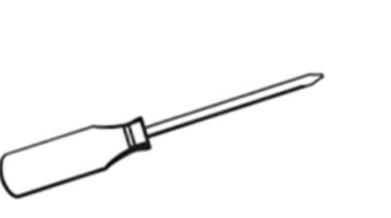


Phillips screwdriver




Safety Helmet Hat


goggles

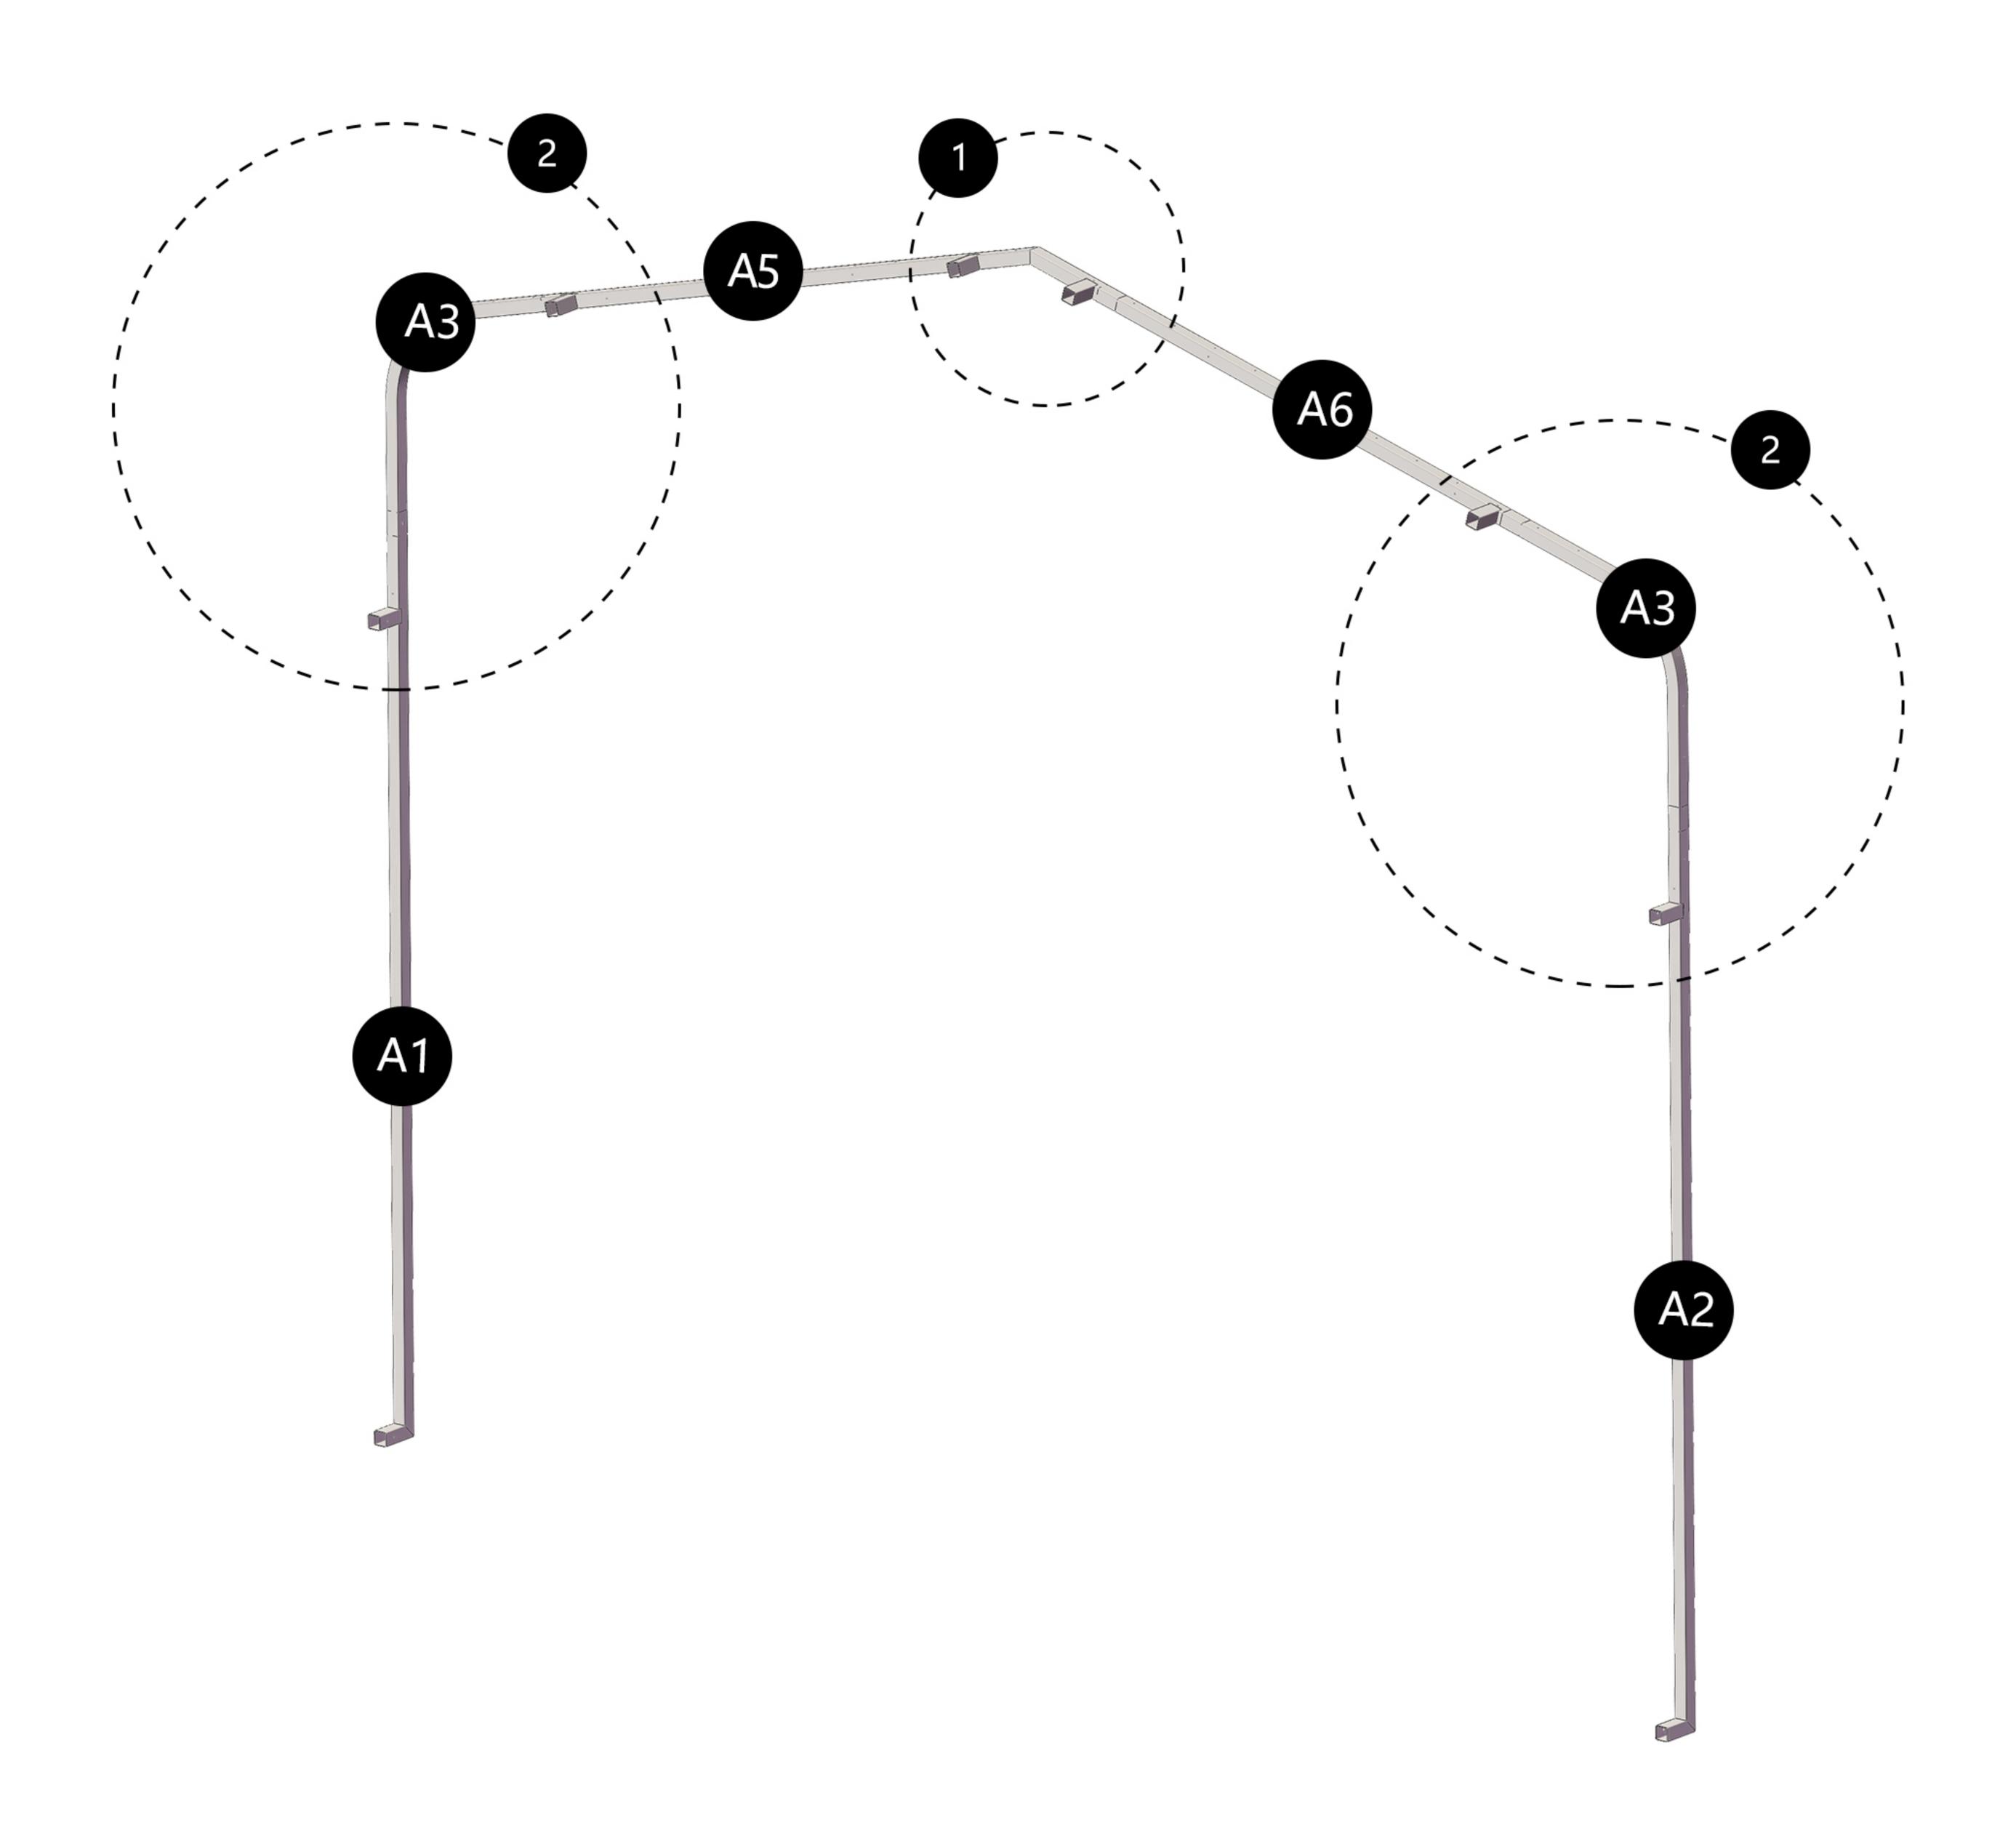



Notice:

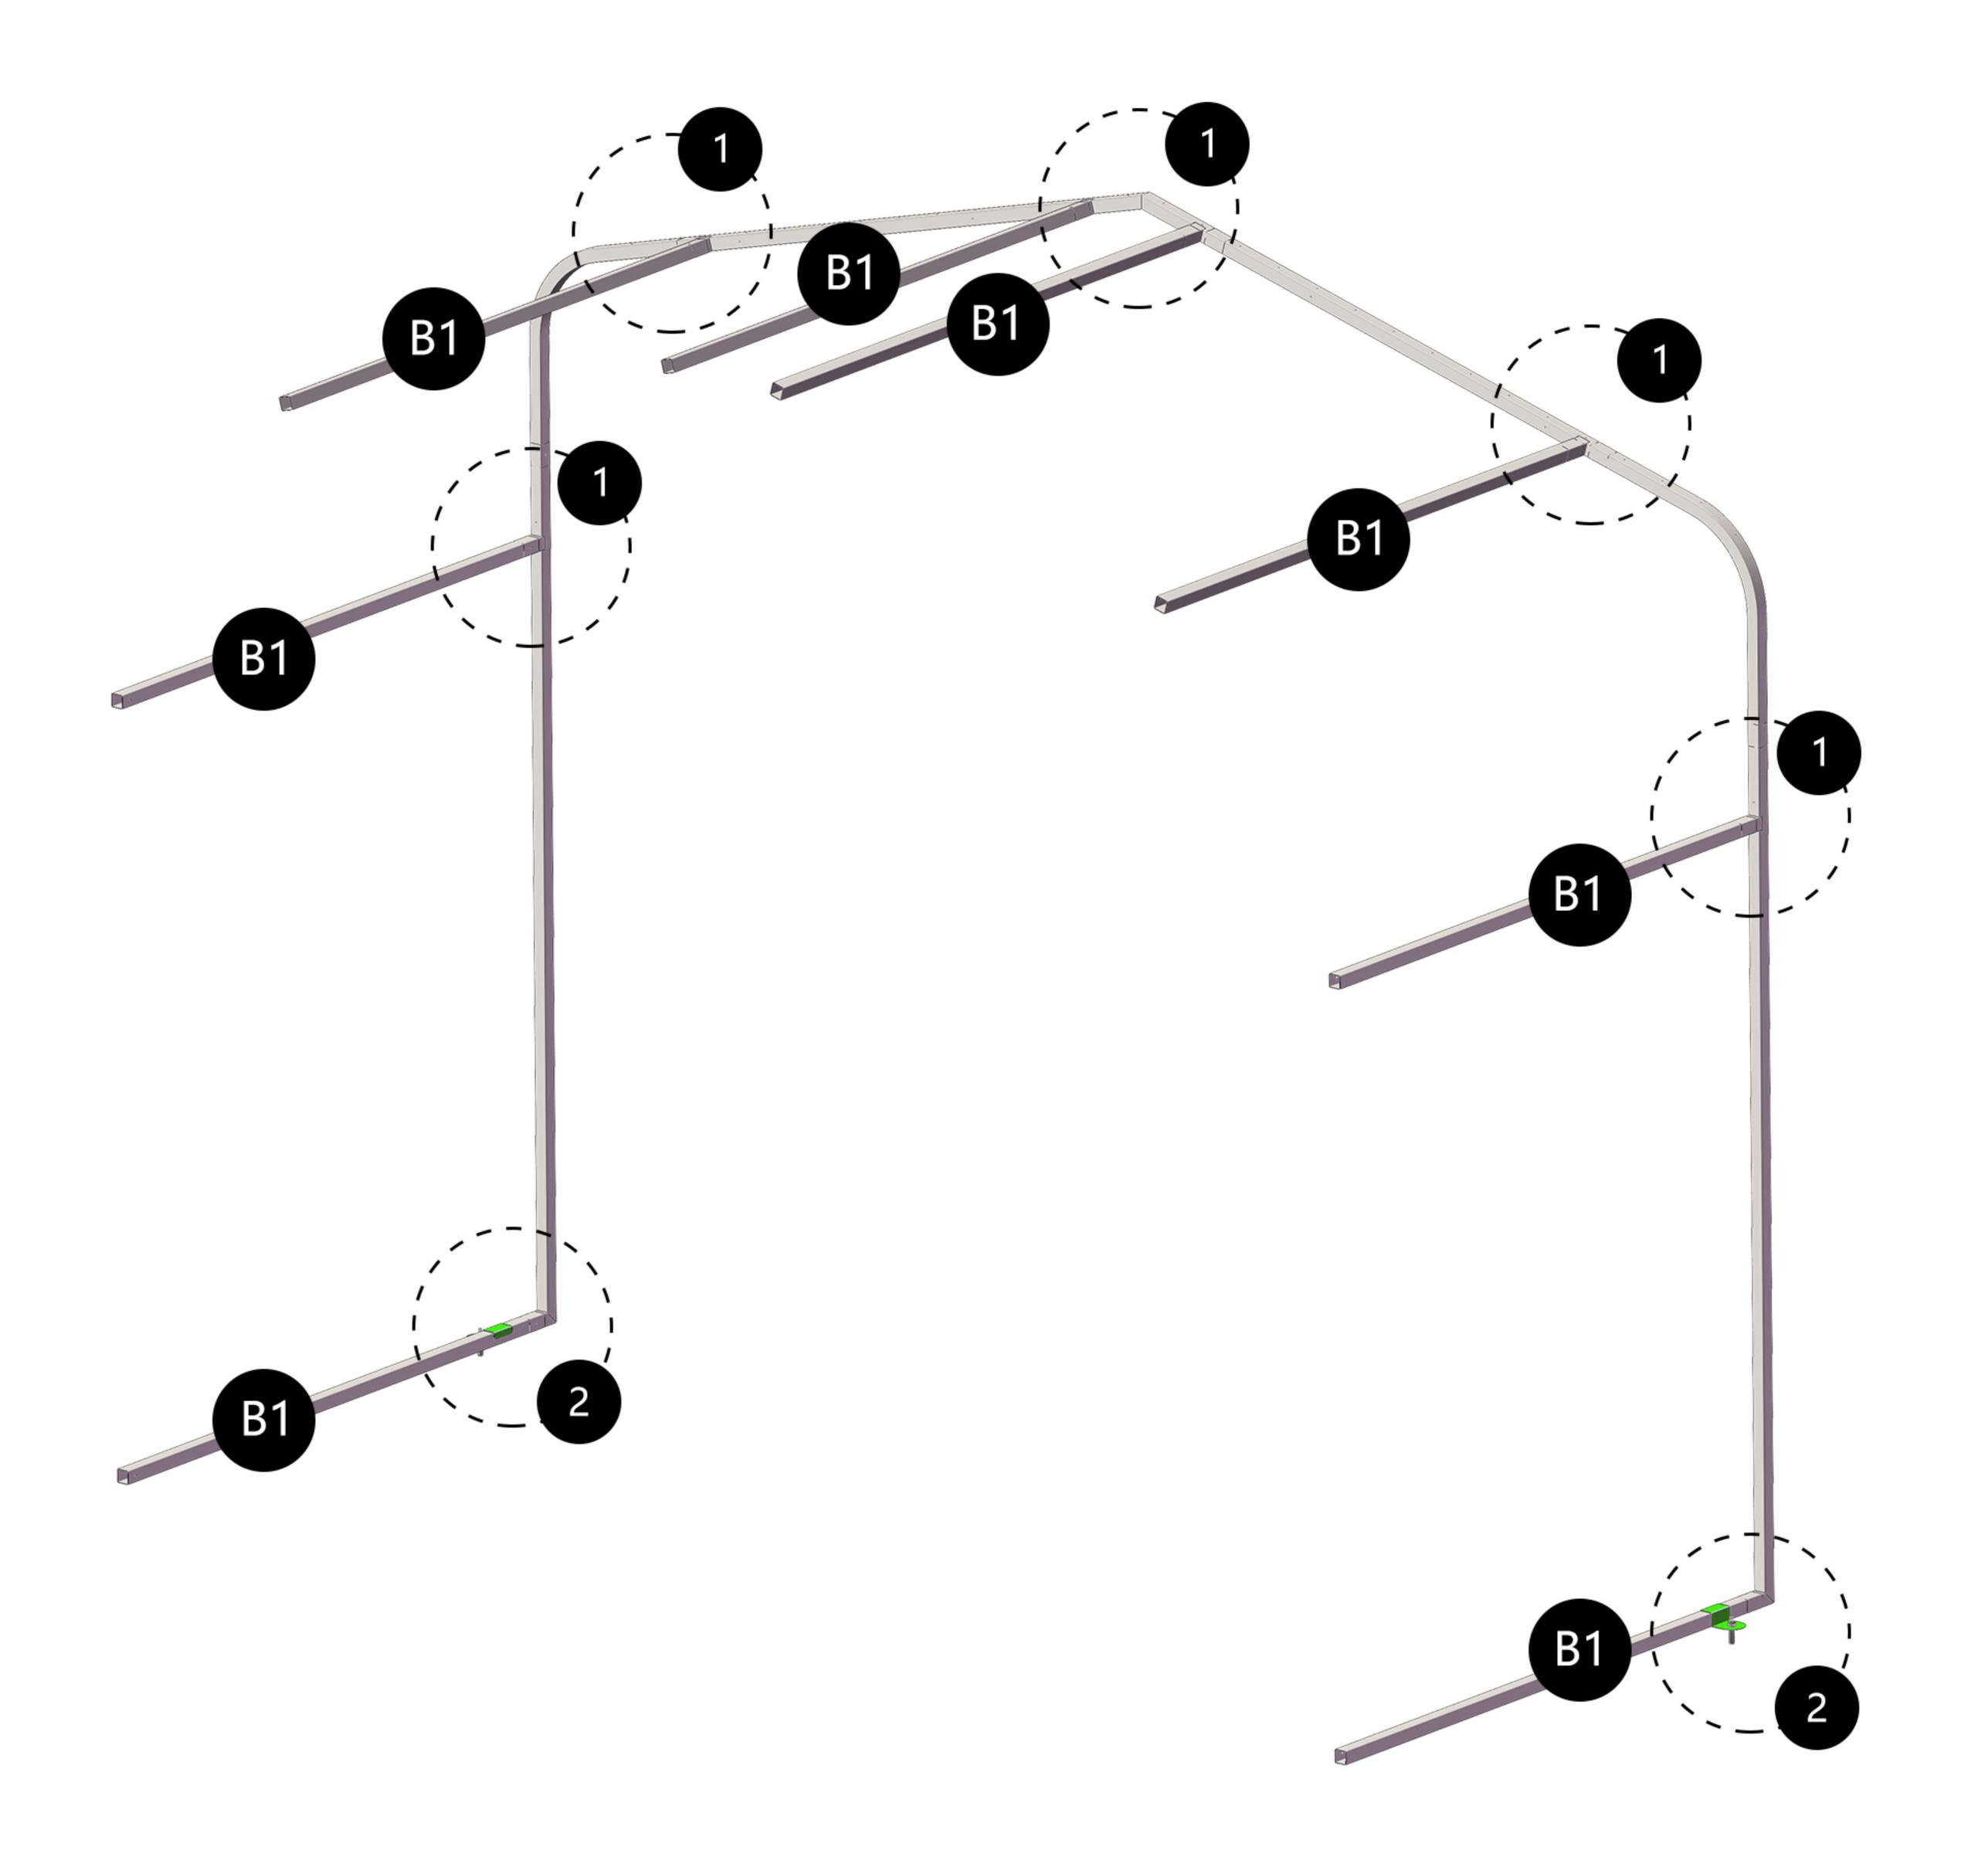


- 1 Description: As shown in the figure, connect the two adjacent parts and fix them with F1.
- 2 Description: Fix W1 to the ground with F6 as shown in the picture.

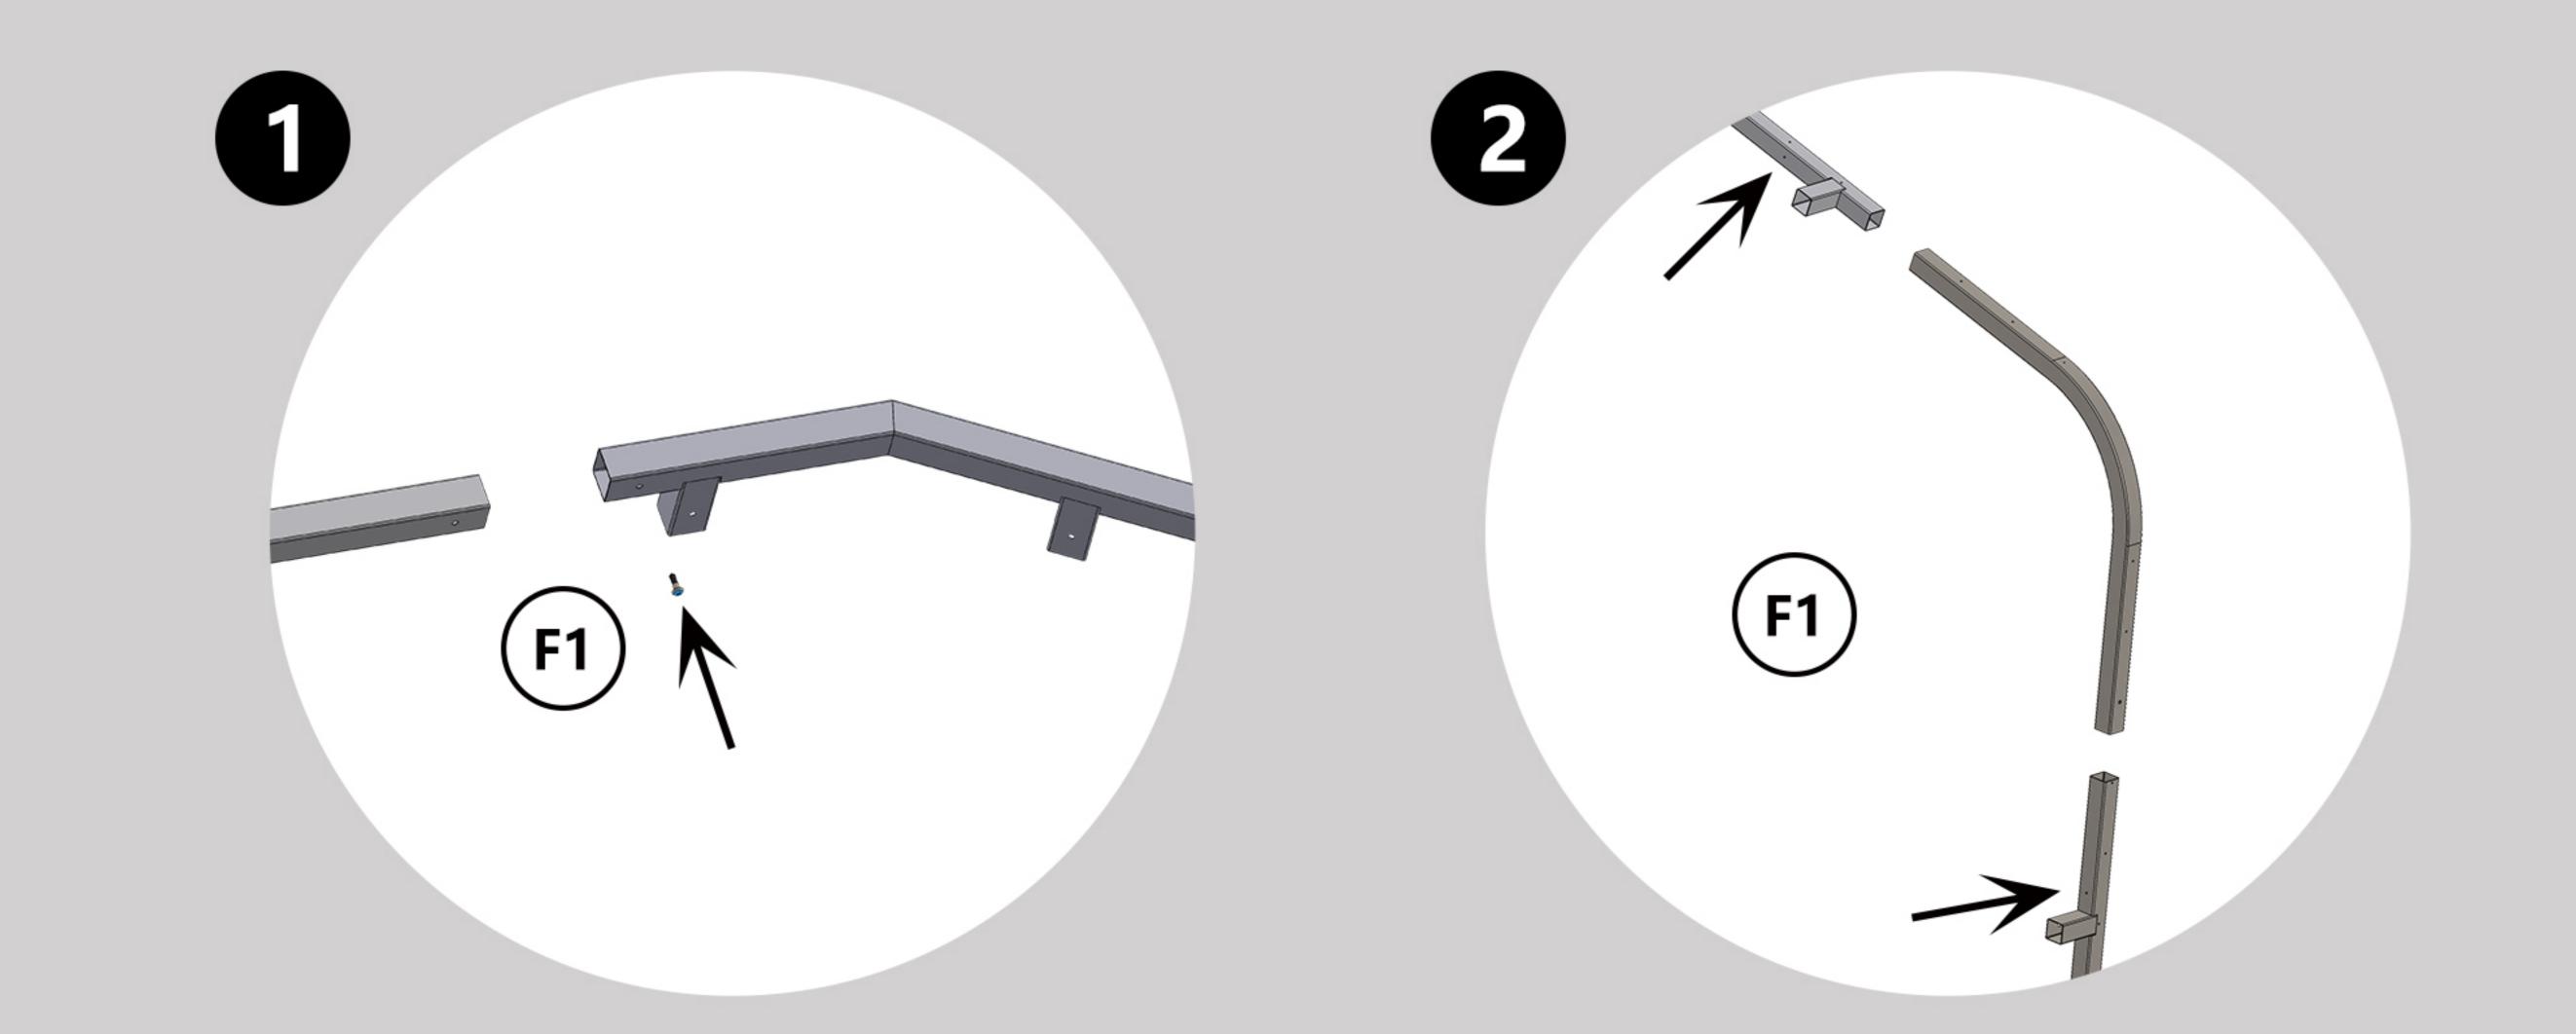

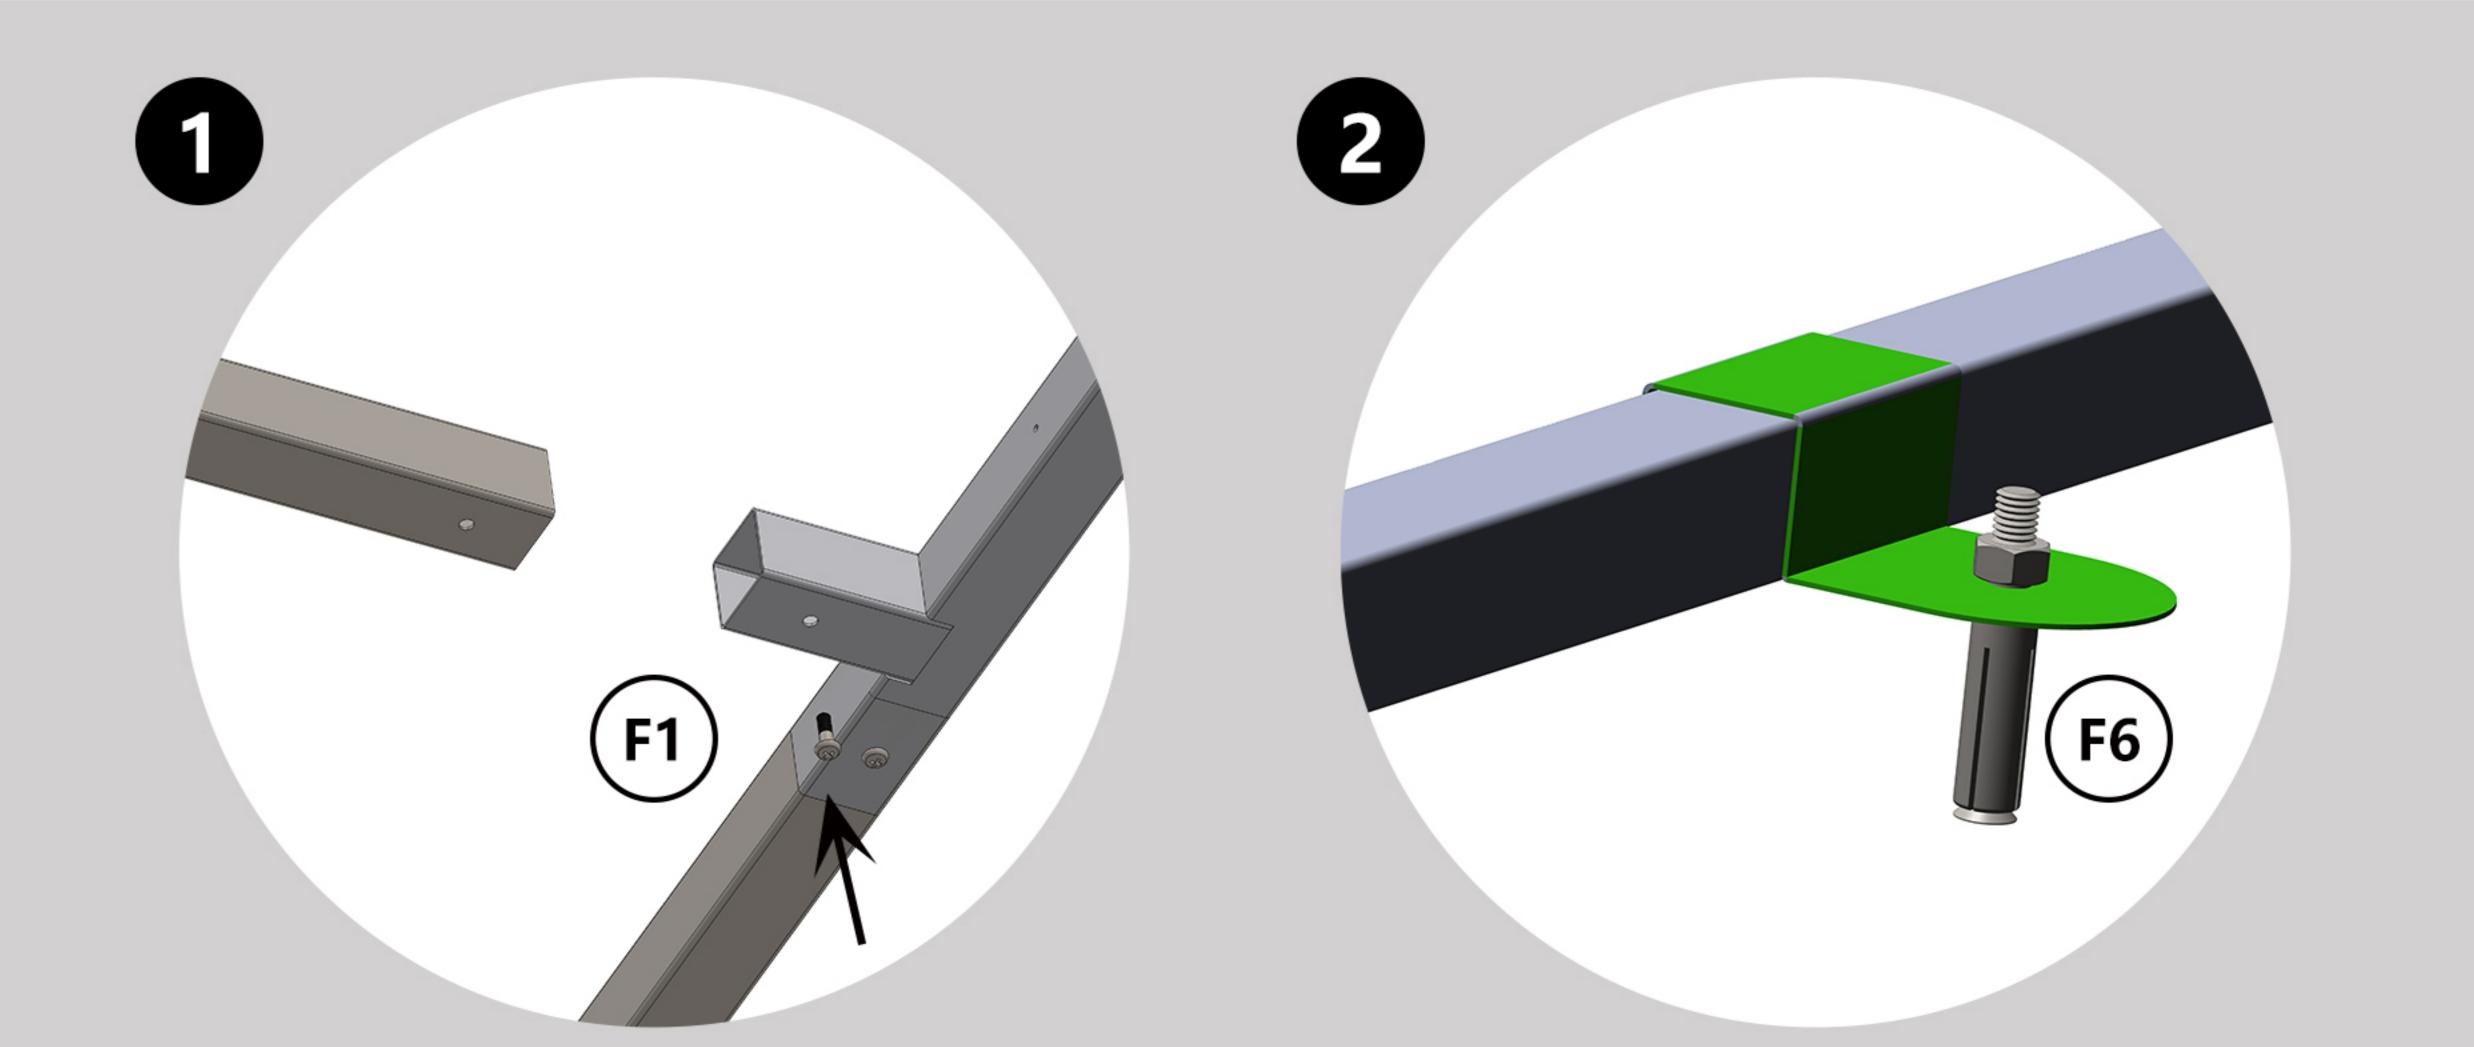


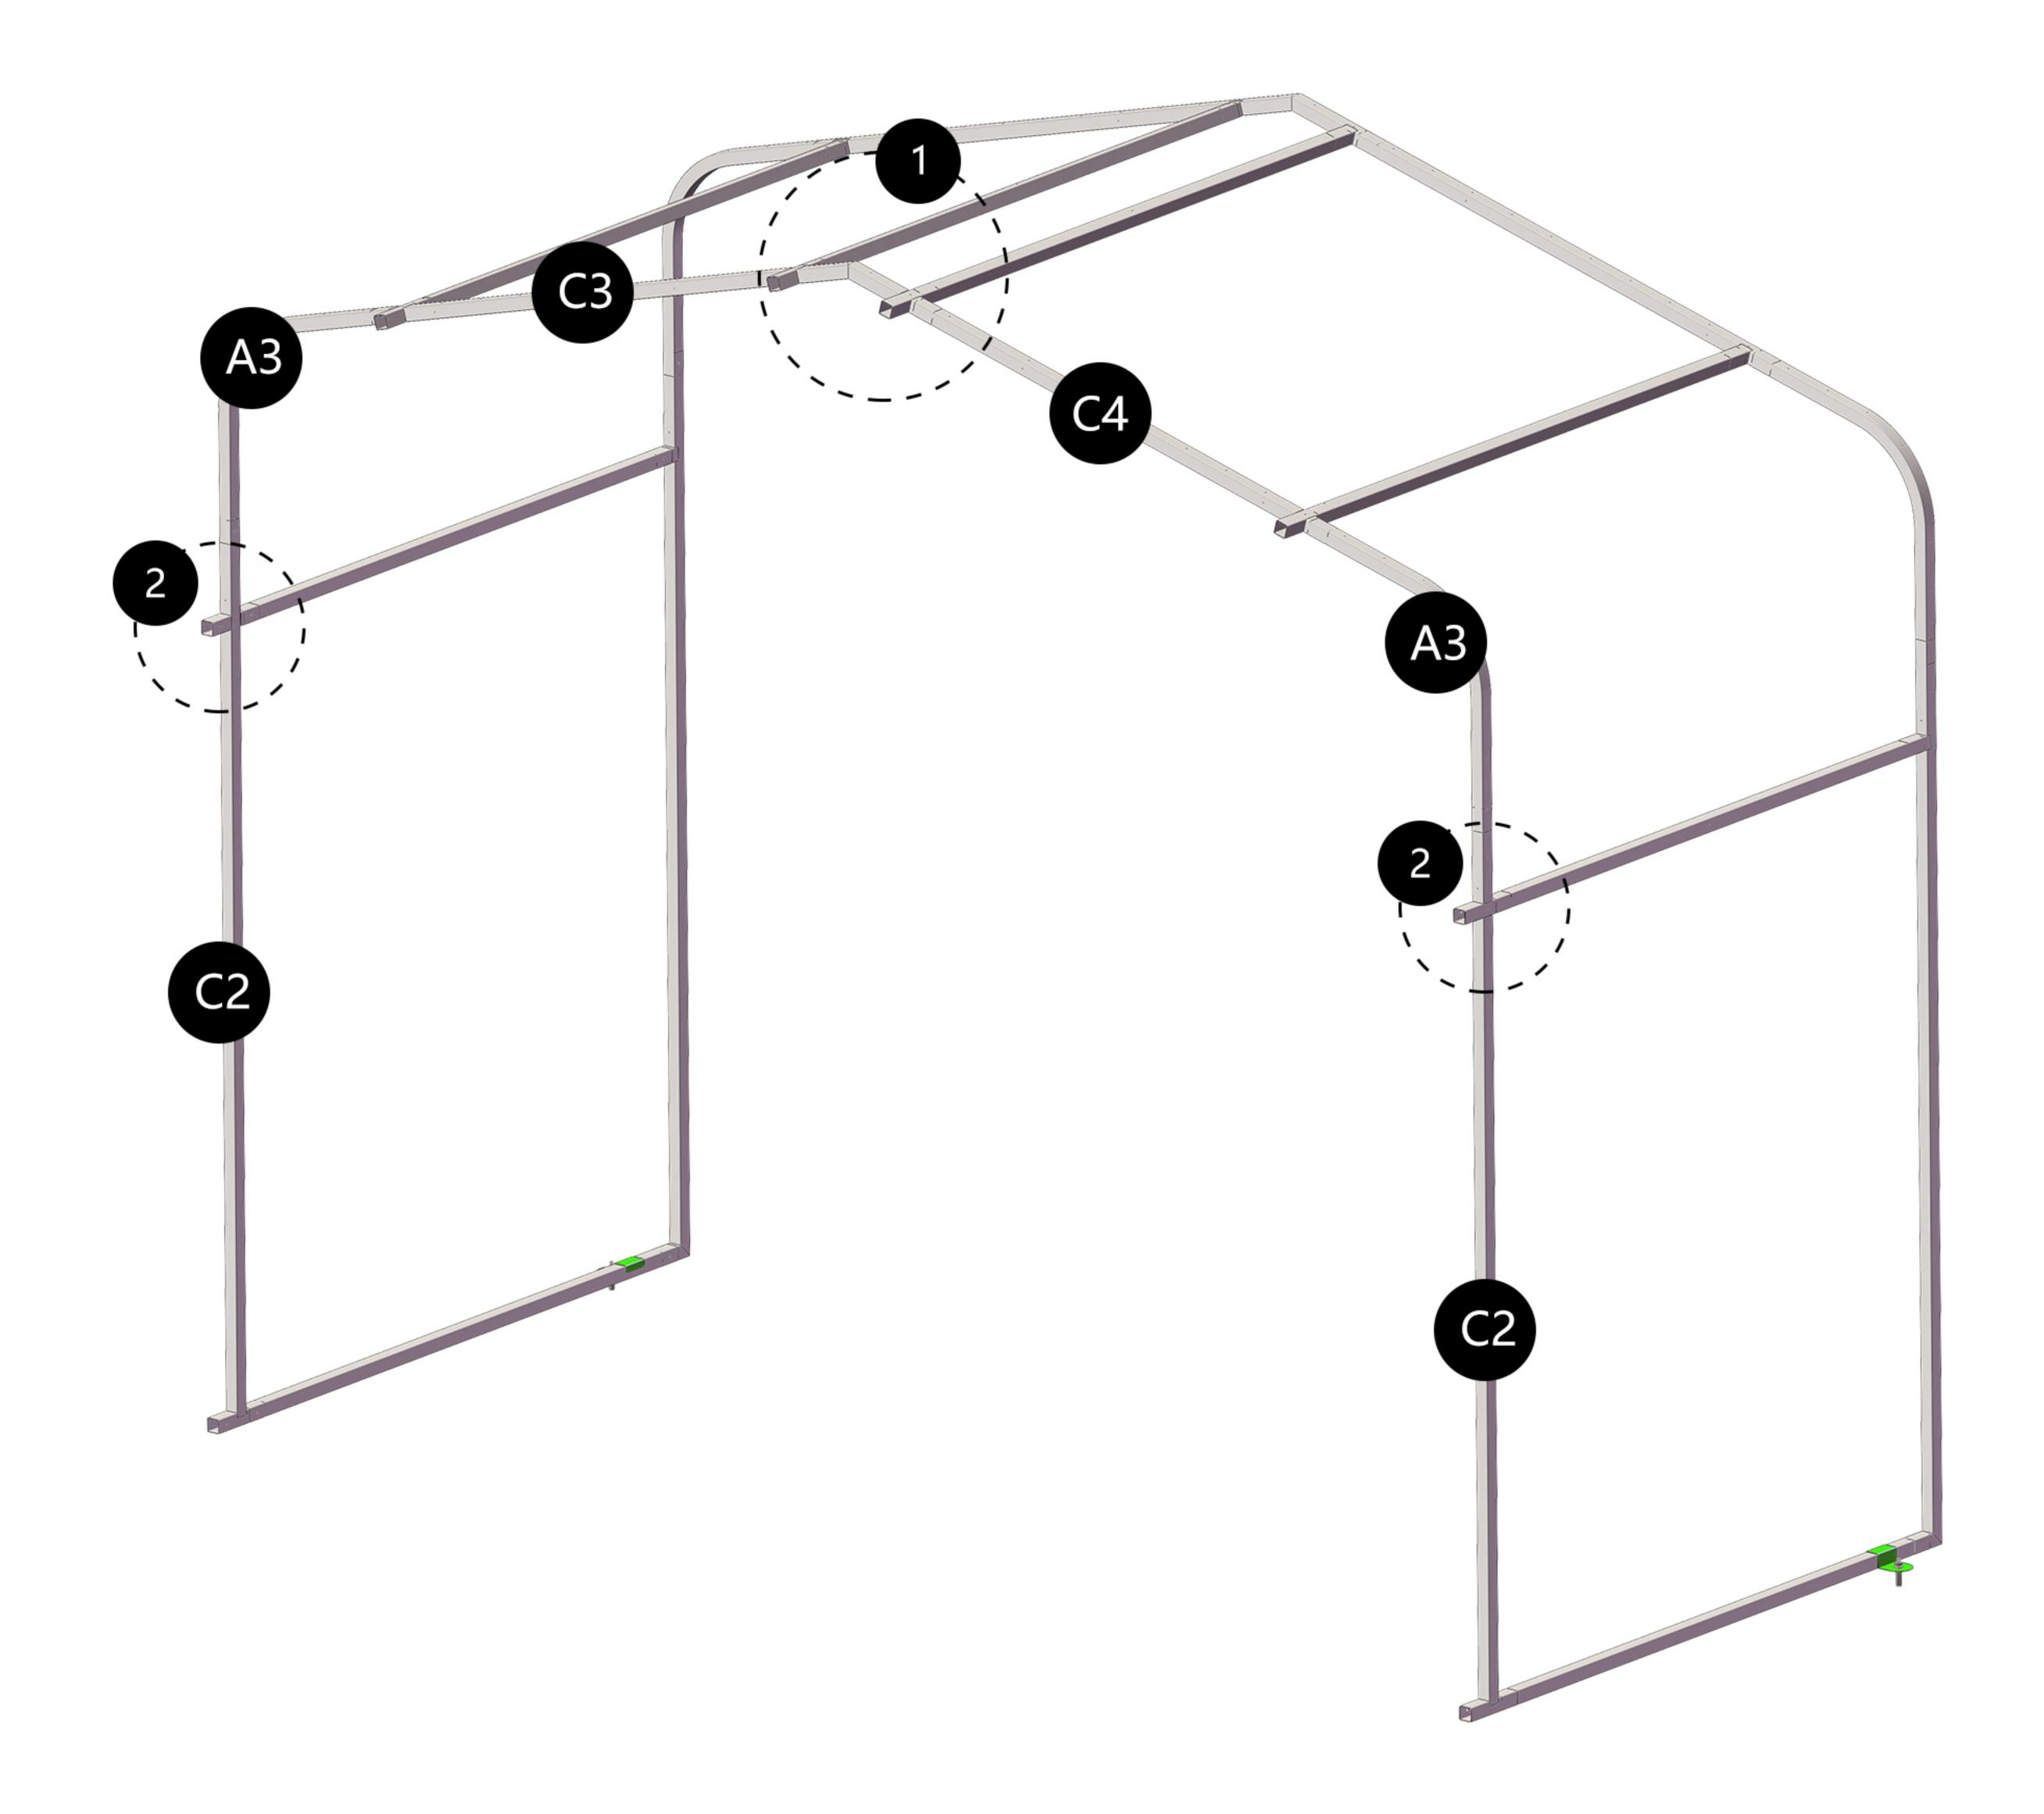



Notice:

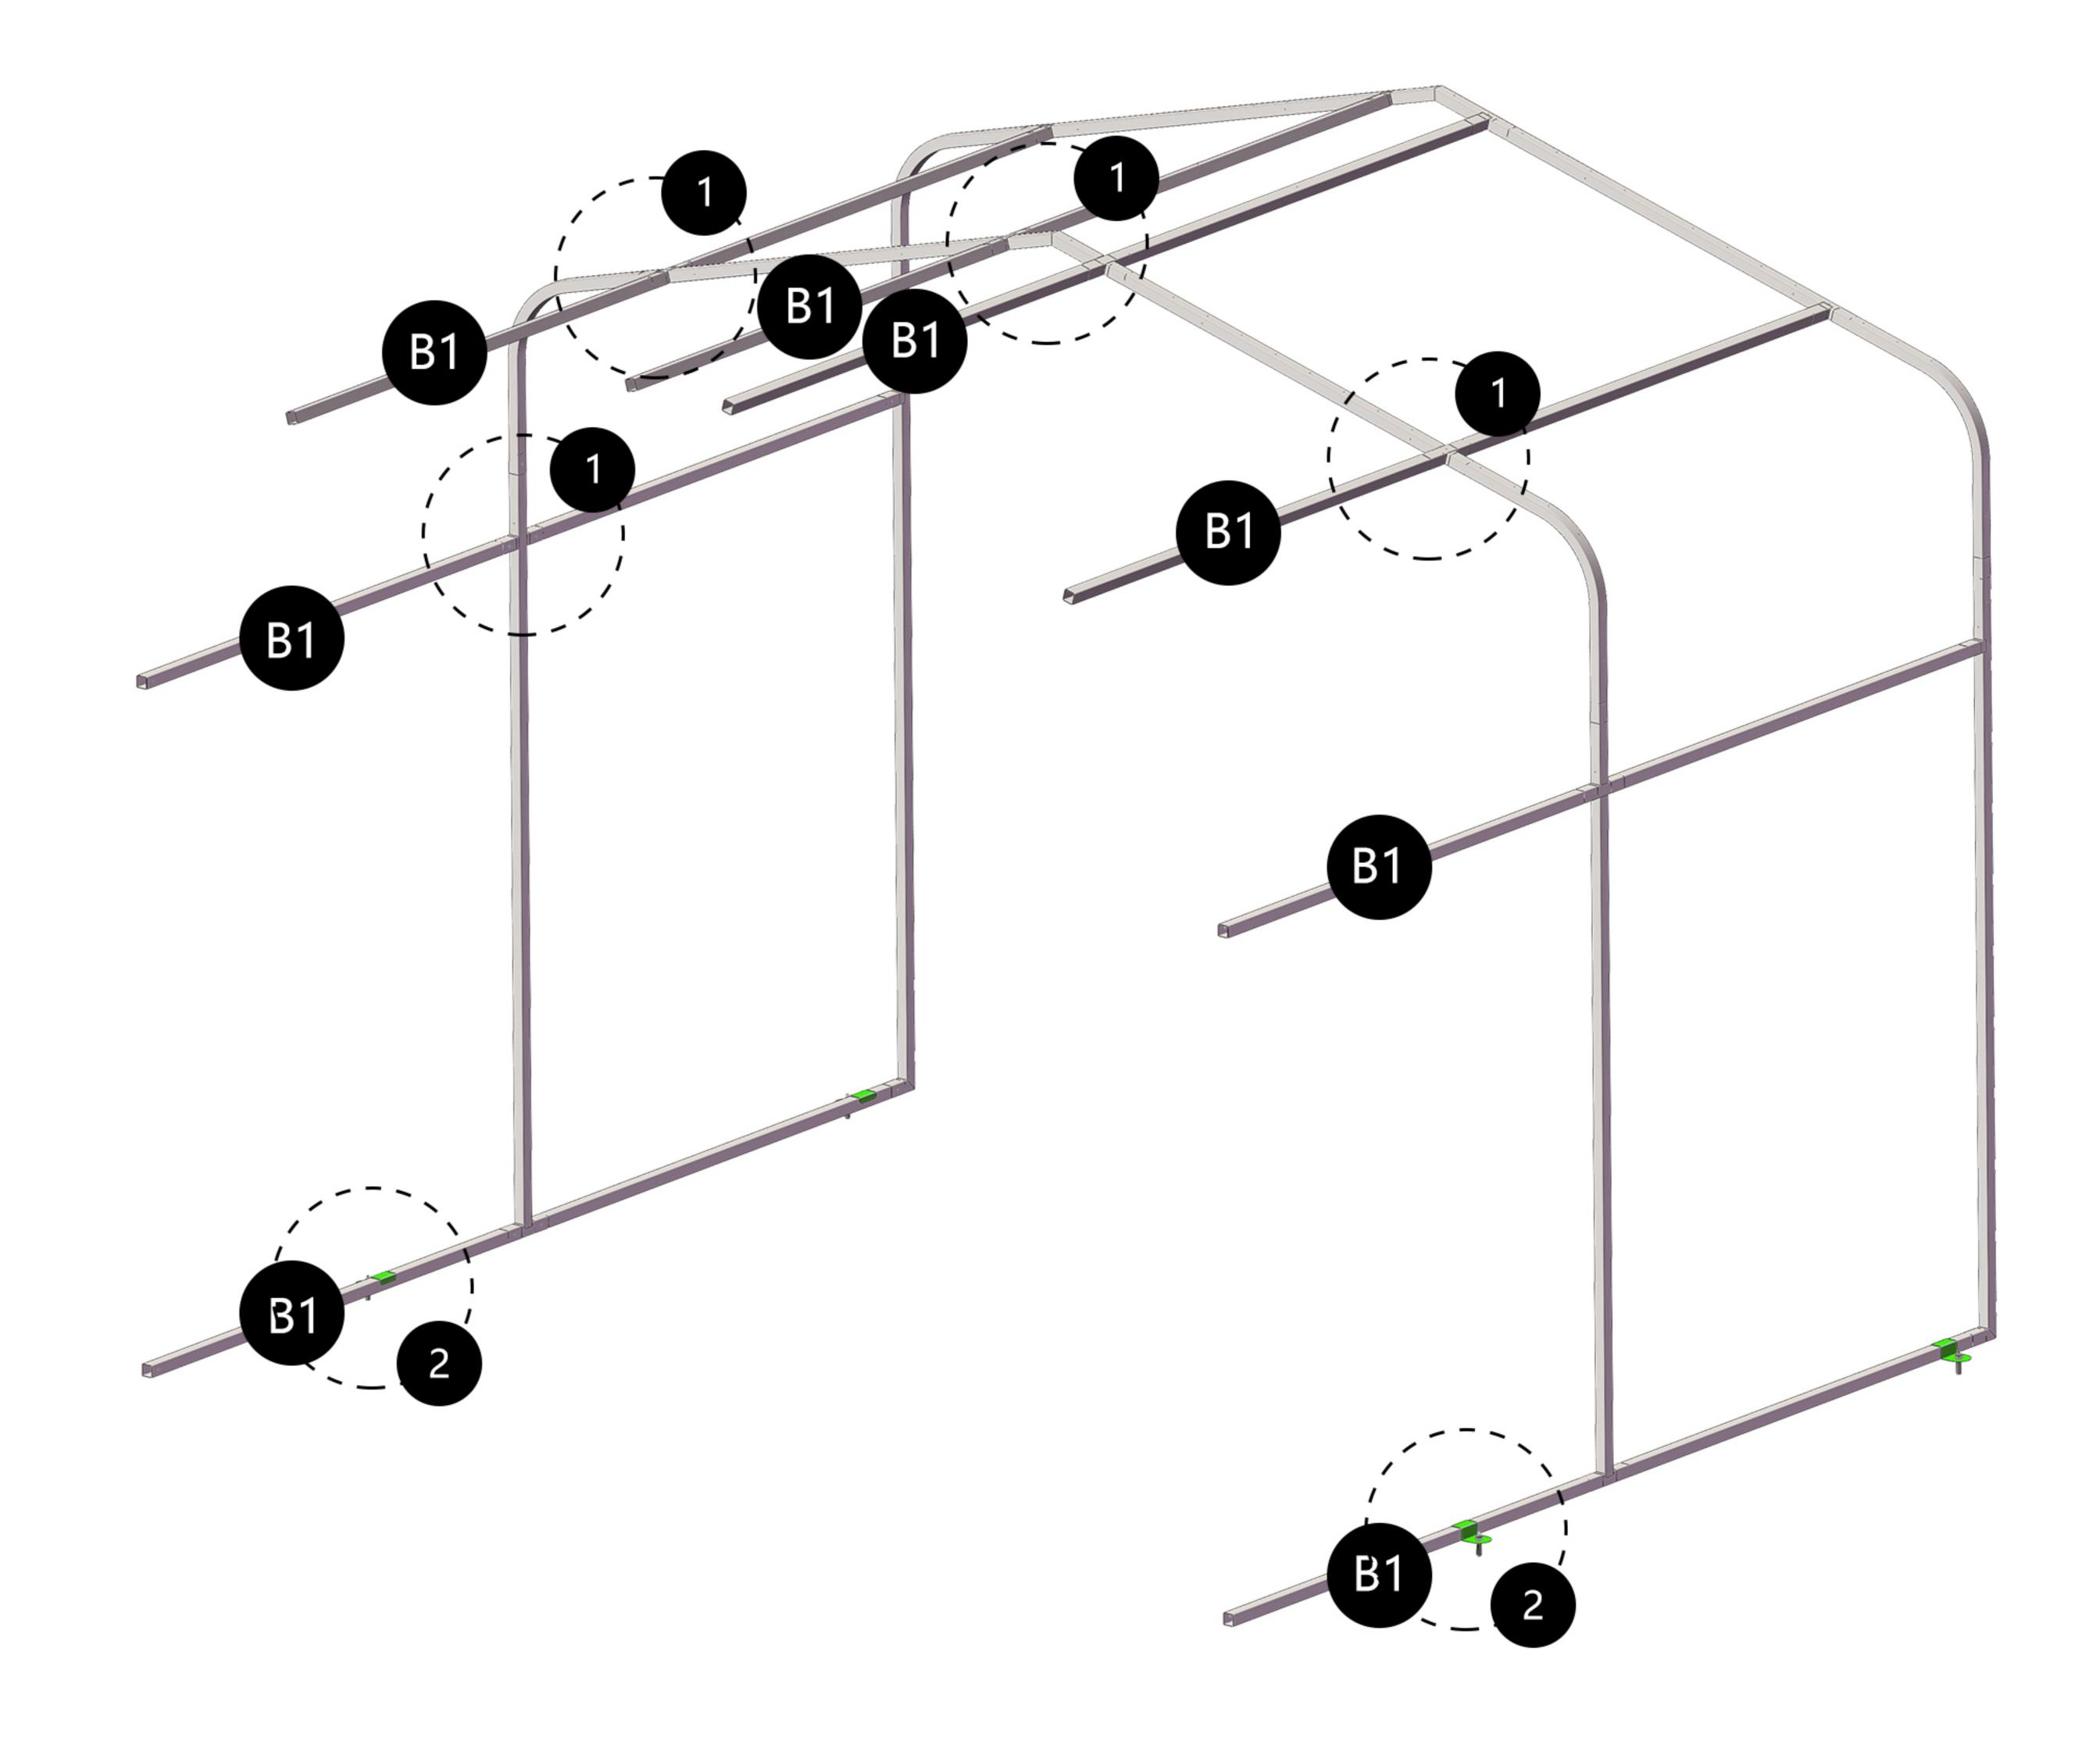


- 1 Description: As shown in the figure, connect the two adjacent parts and fix them with F1.
- 2 Description: Fix W1 to the ground with F6 as shown in the picture.

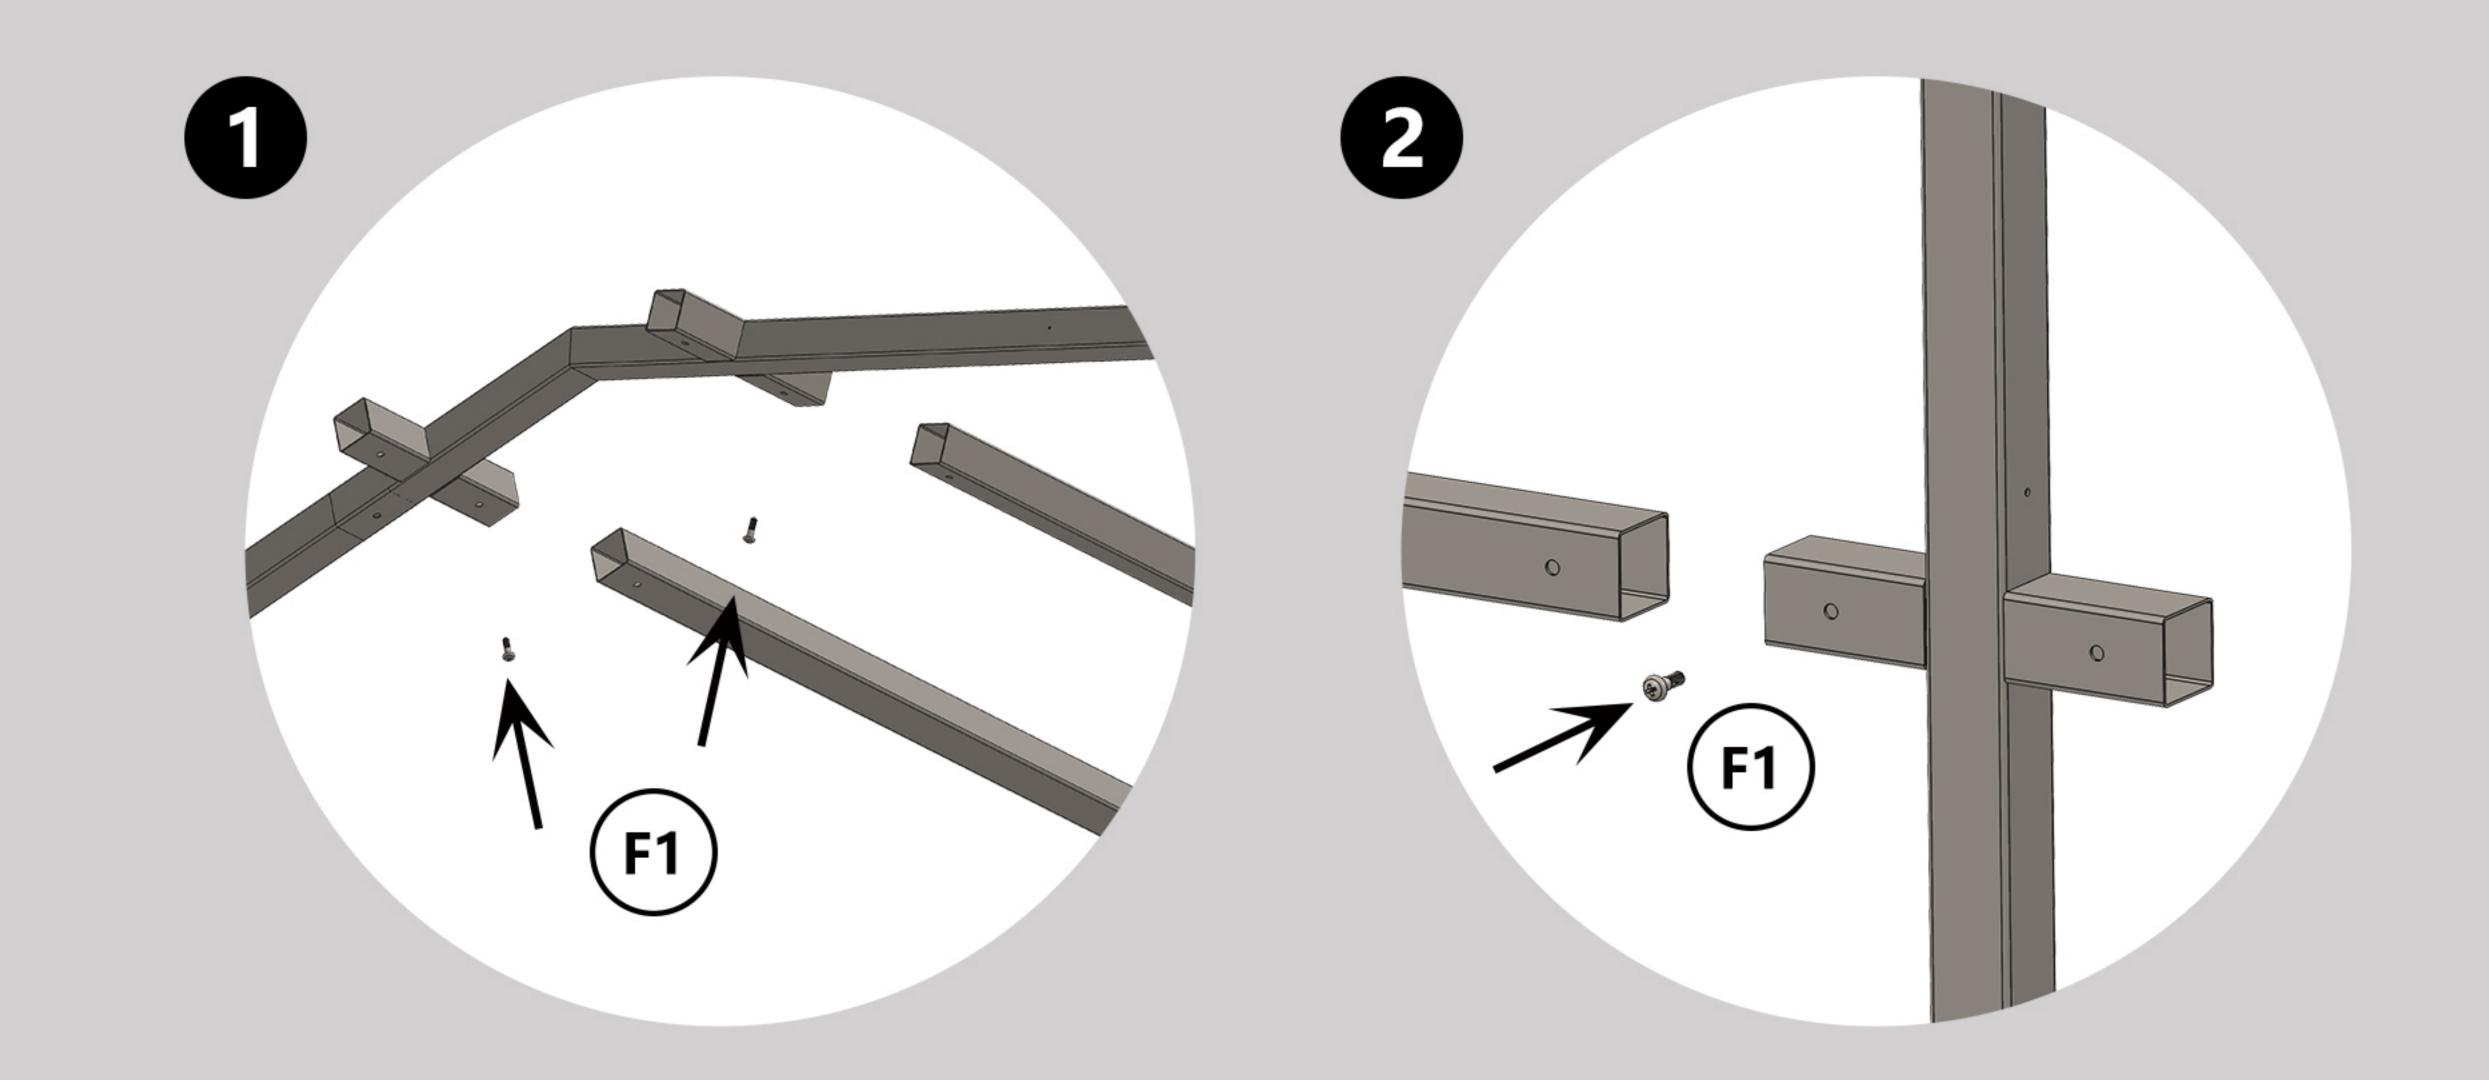

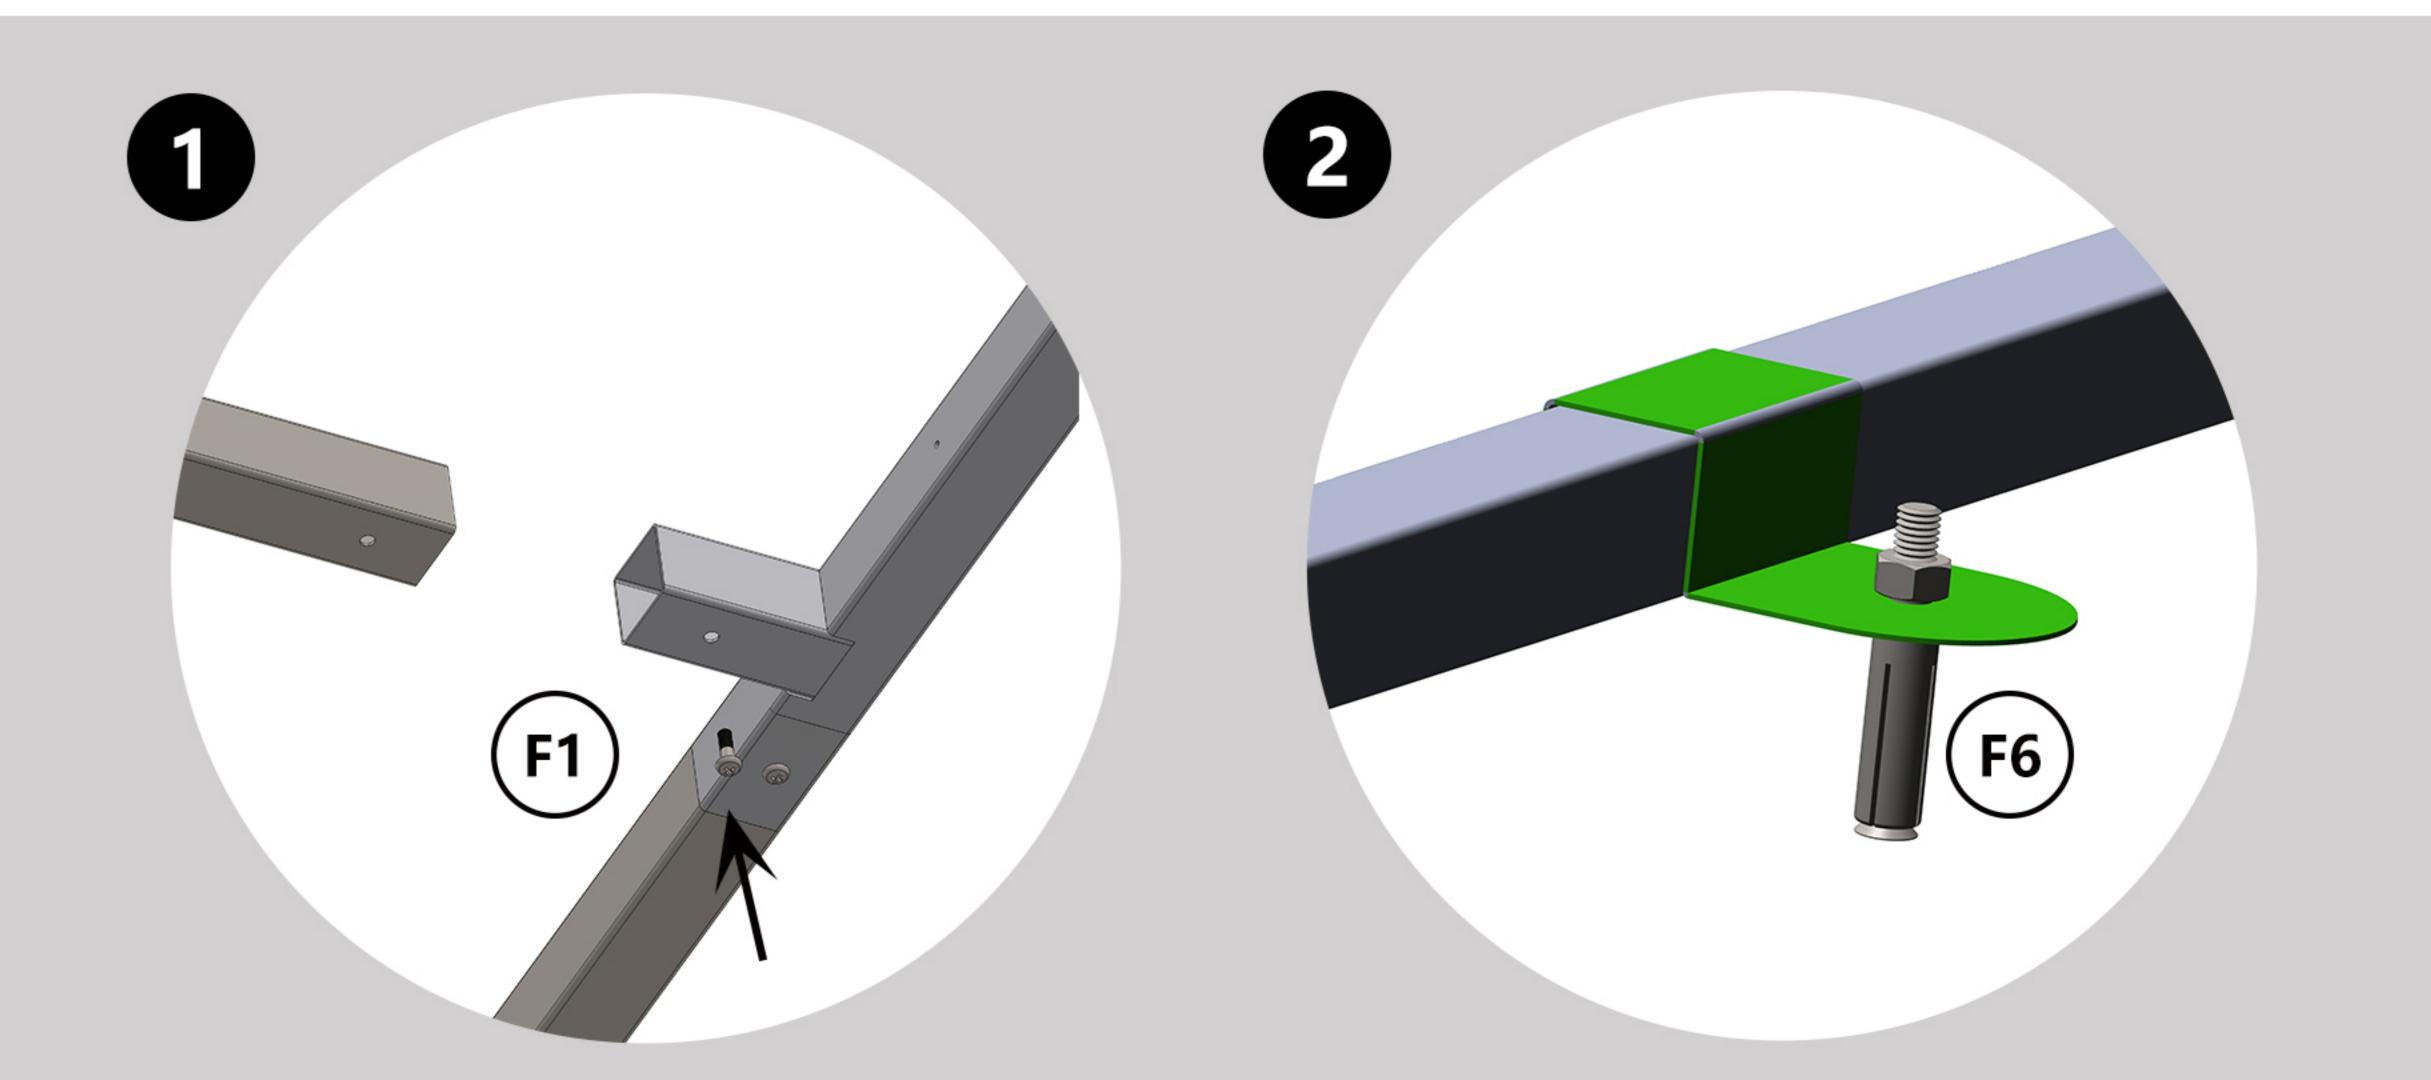


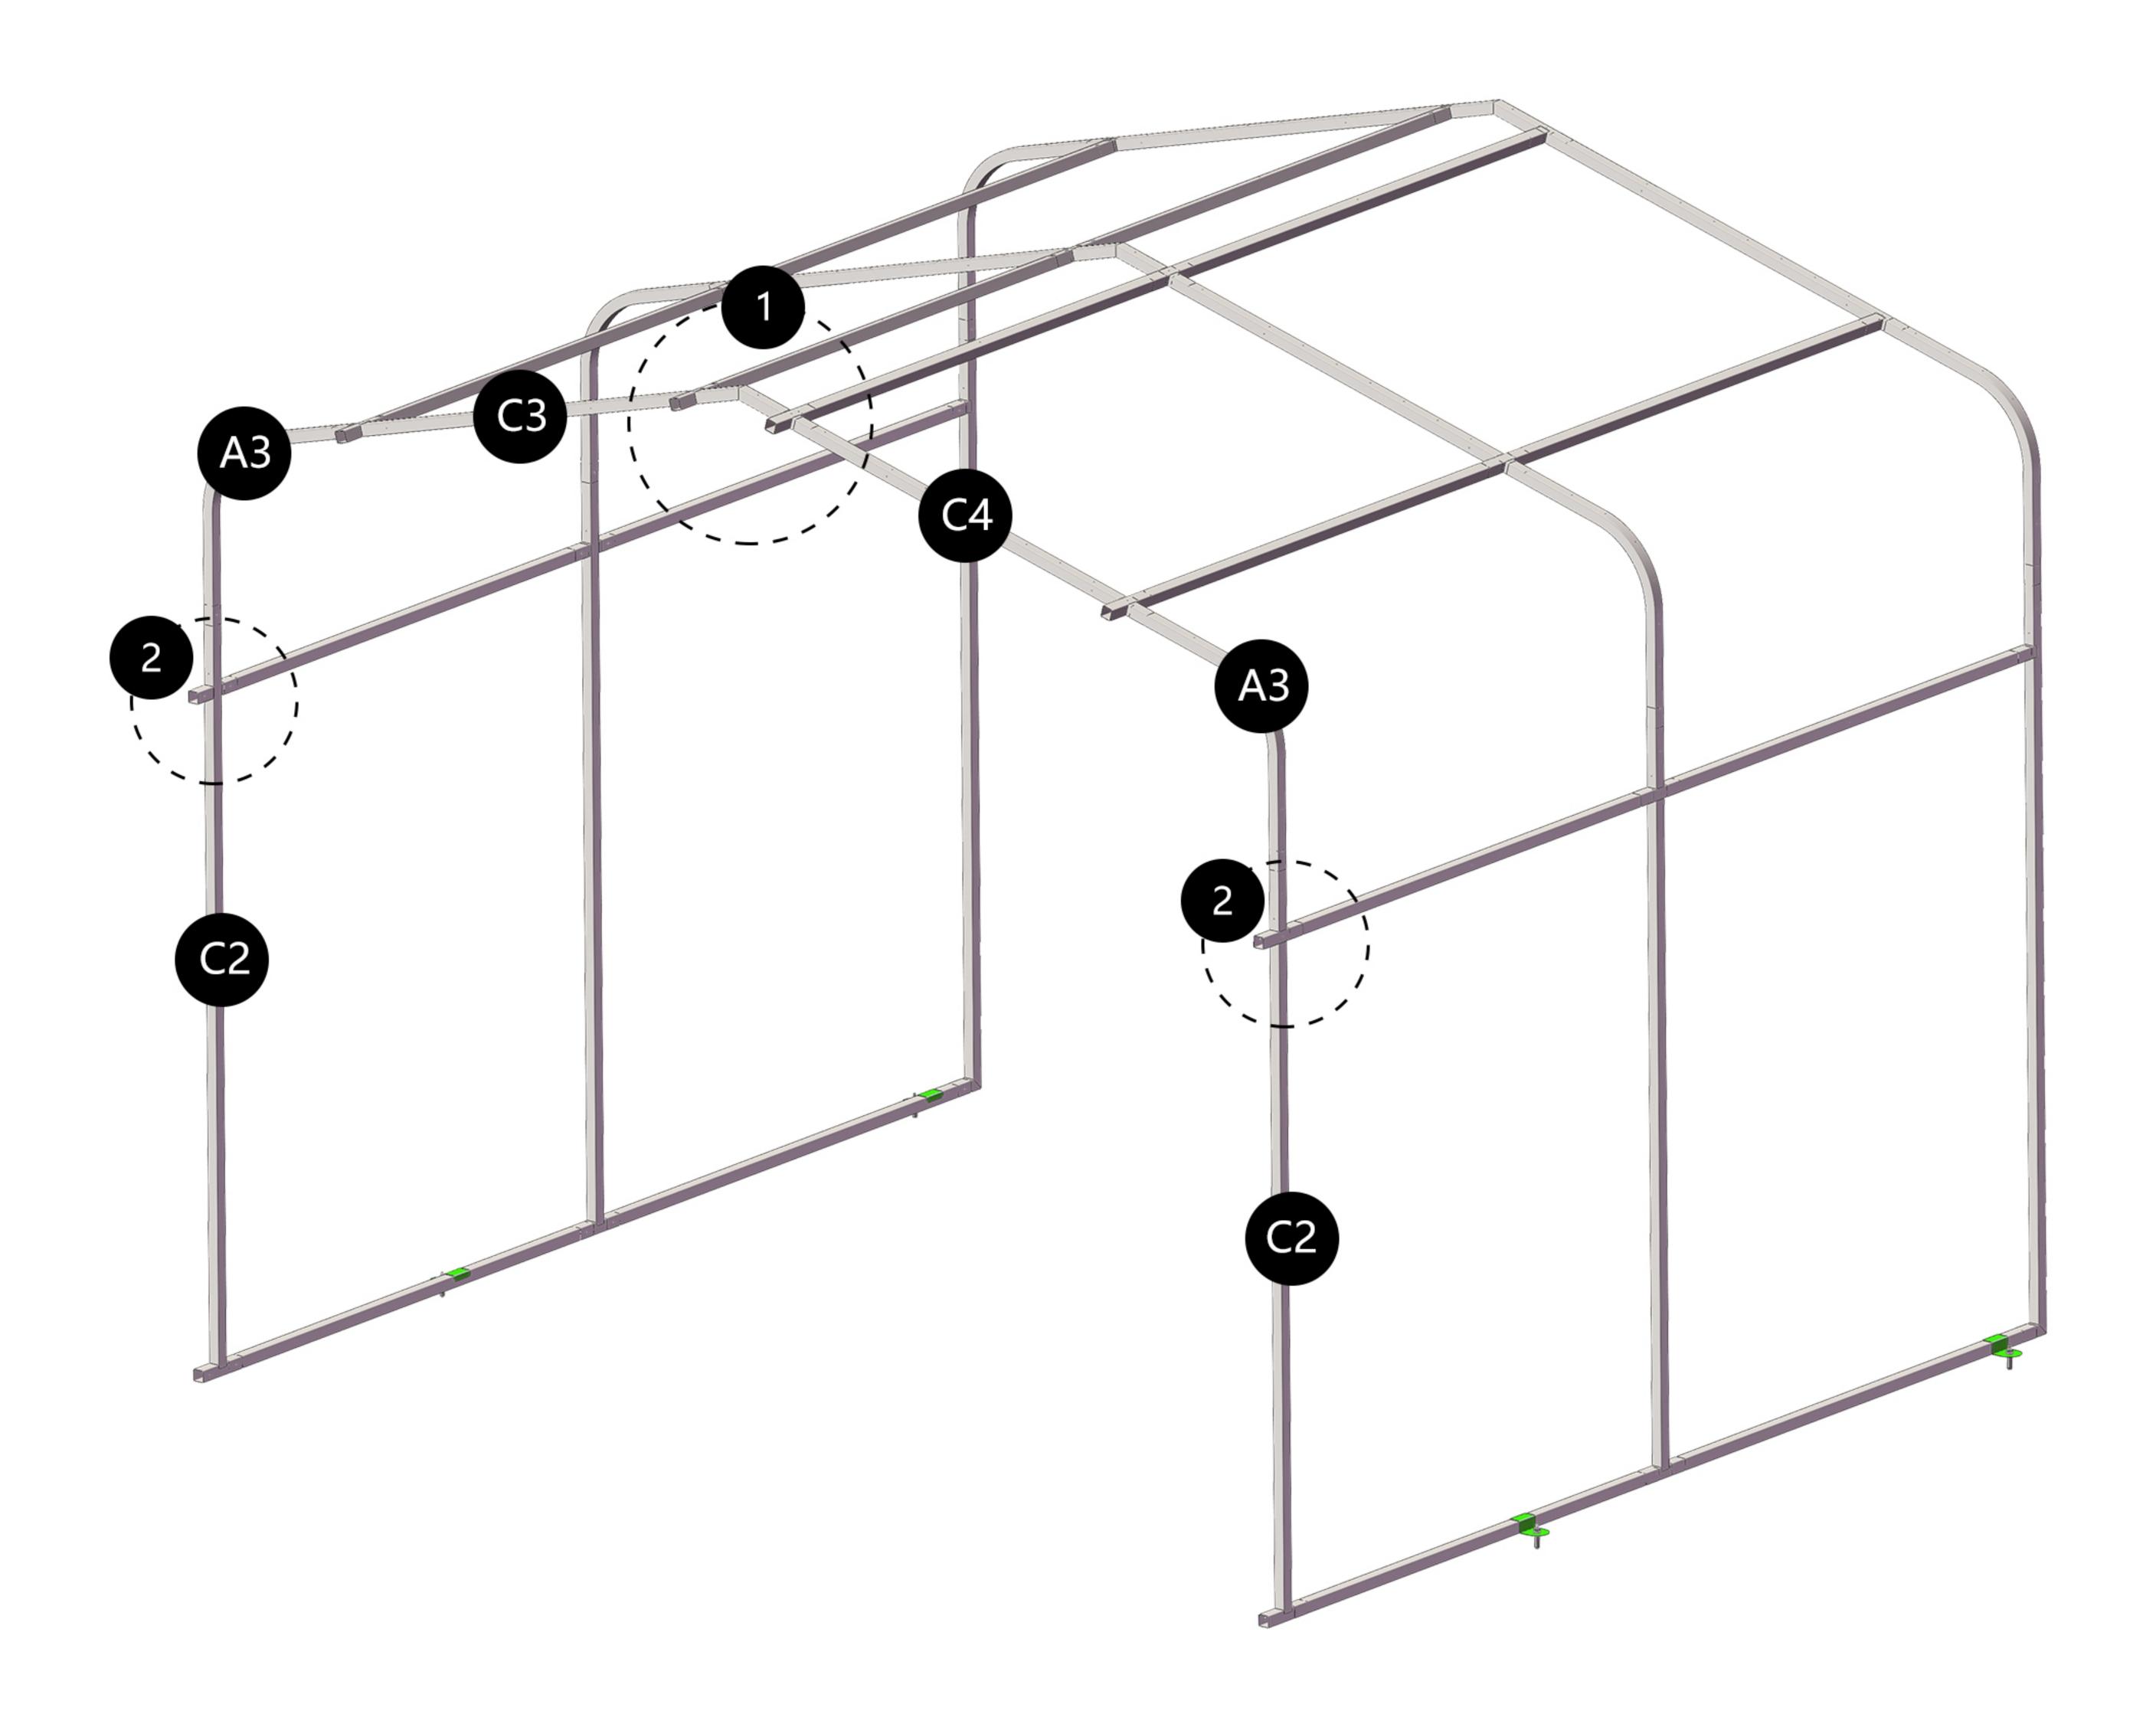



Notice:

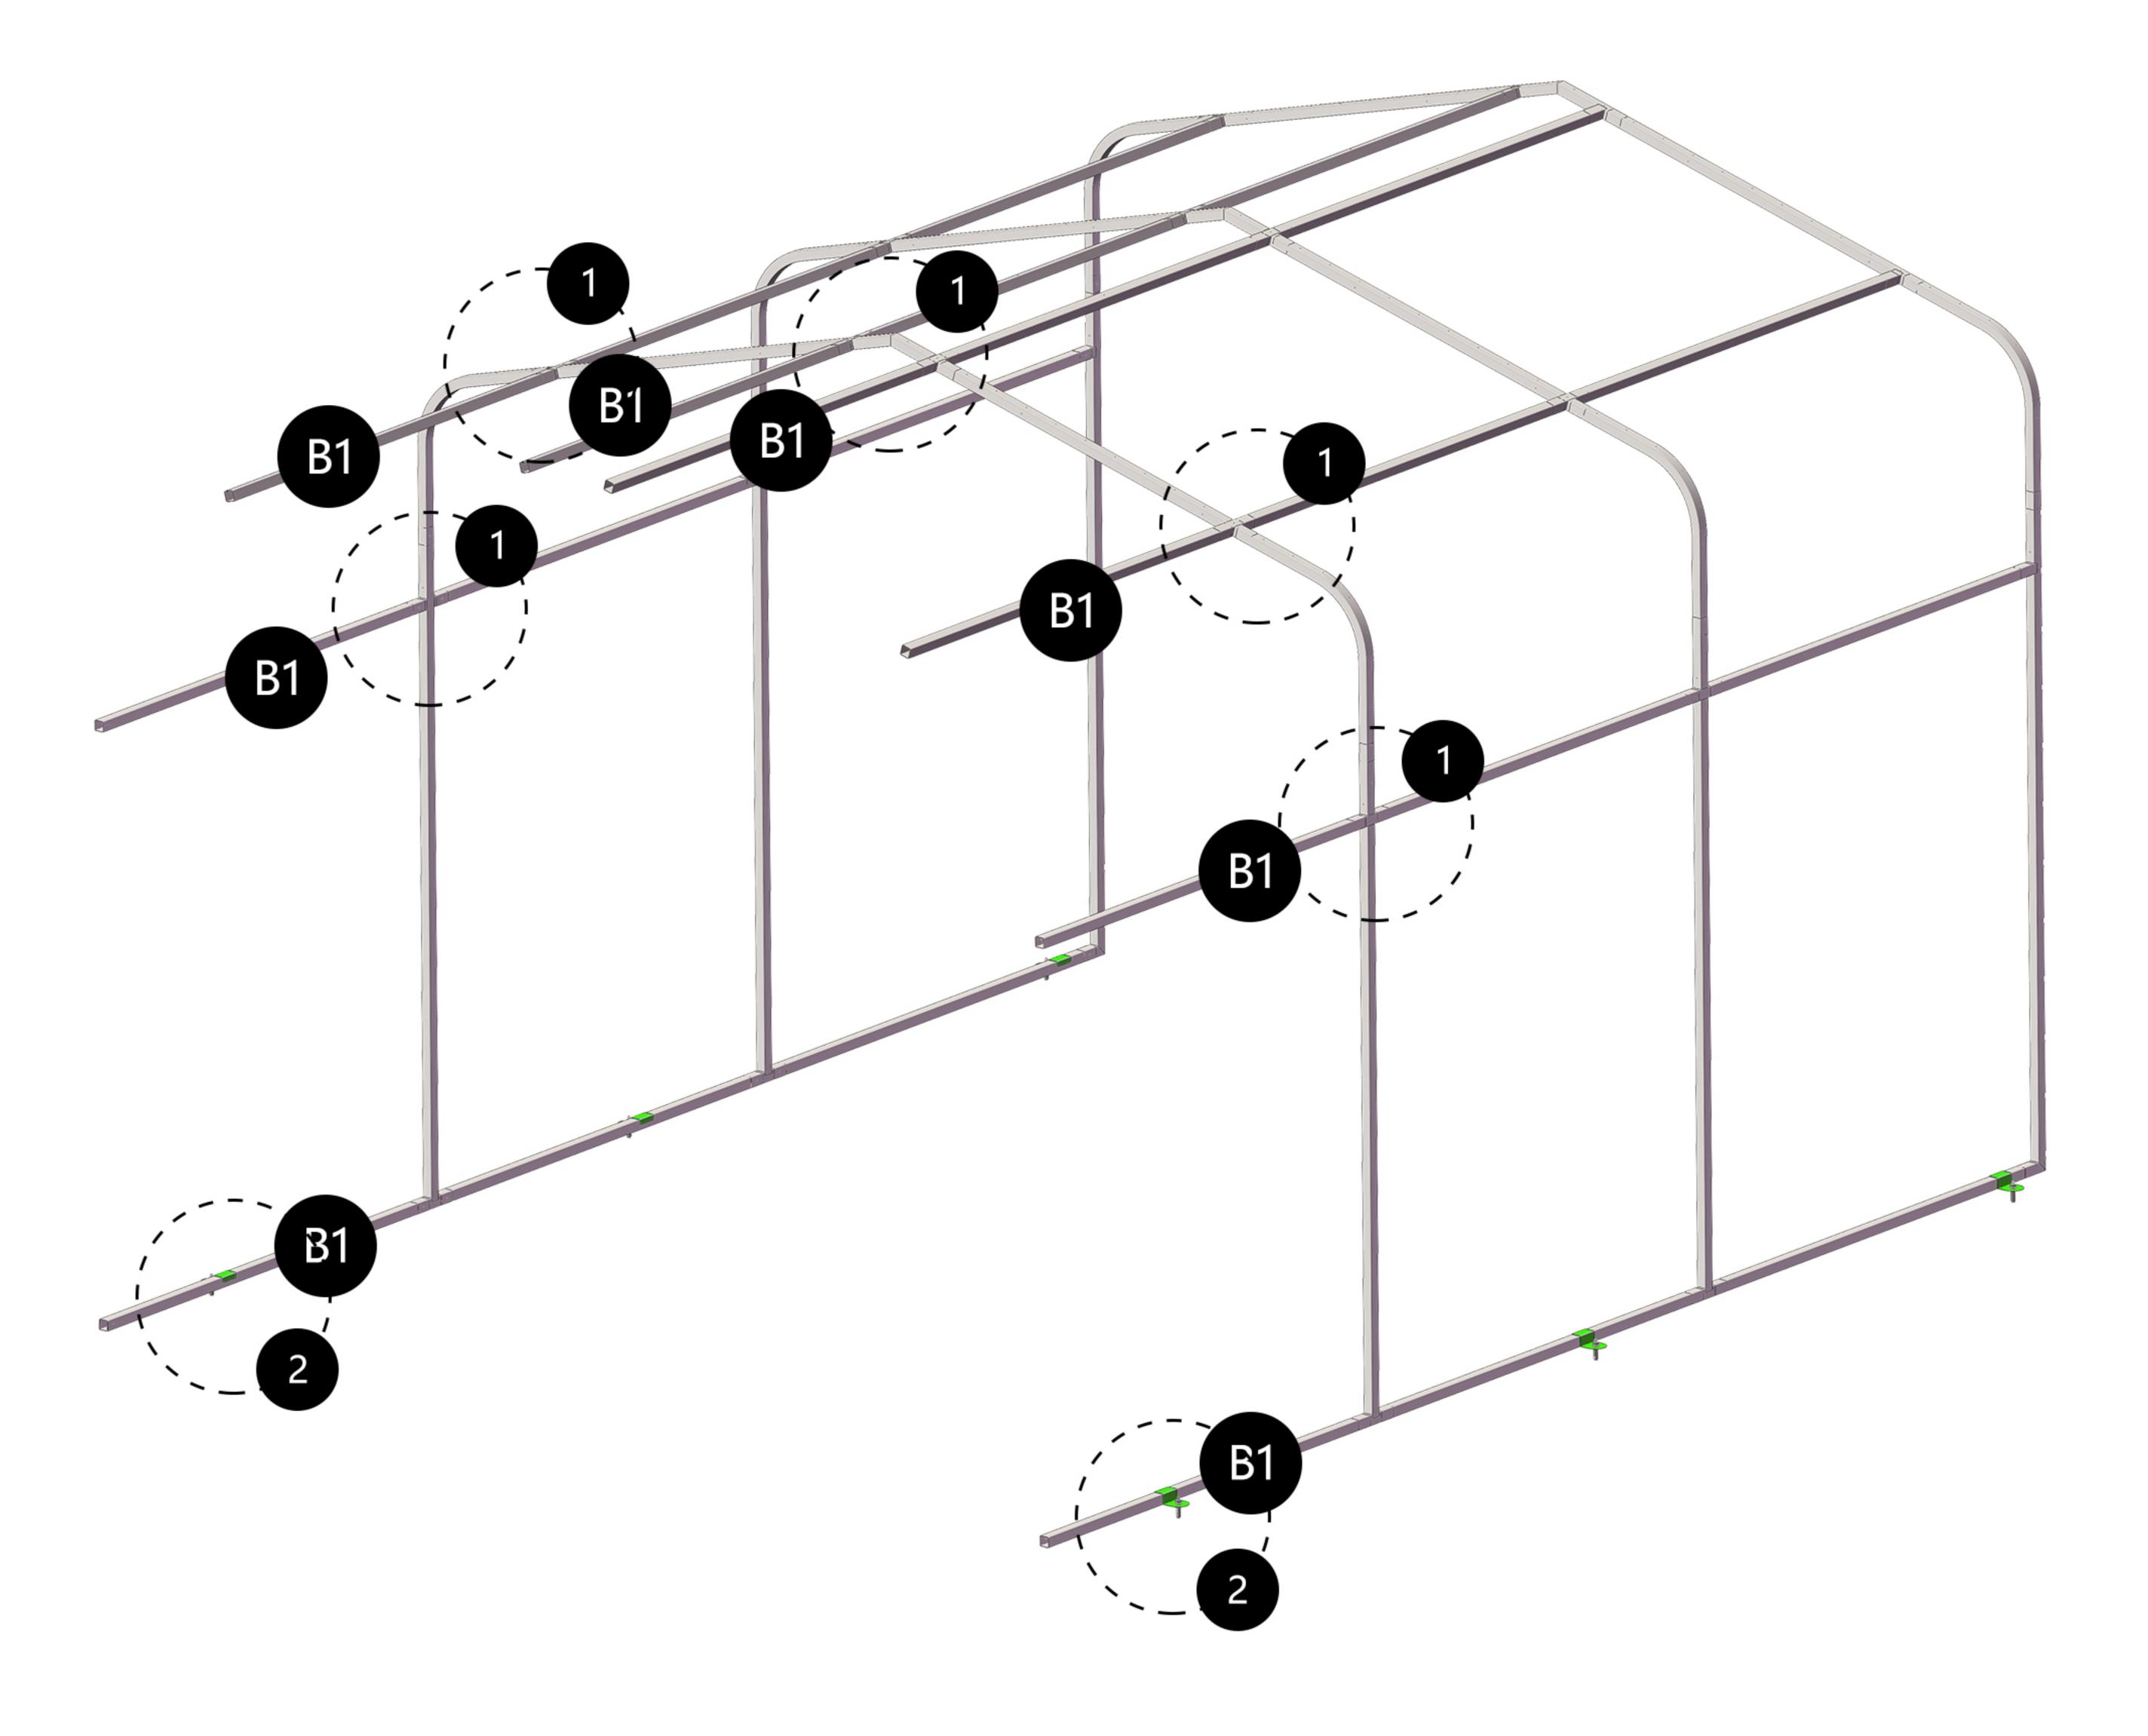


- 1 Description: As shown in the figure, connect the two adjacent parts and fix them with F1.
- 2 Description: Fix W1 to the ground with F6 as shown in the picture.

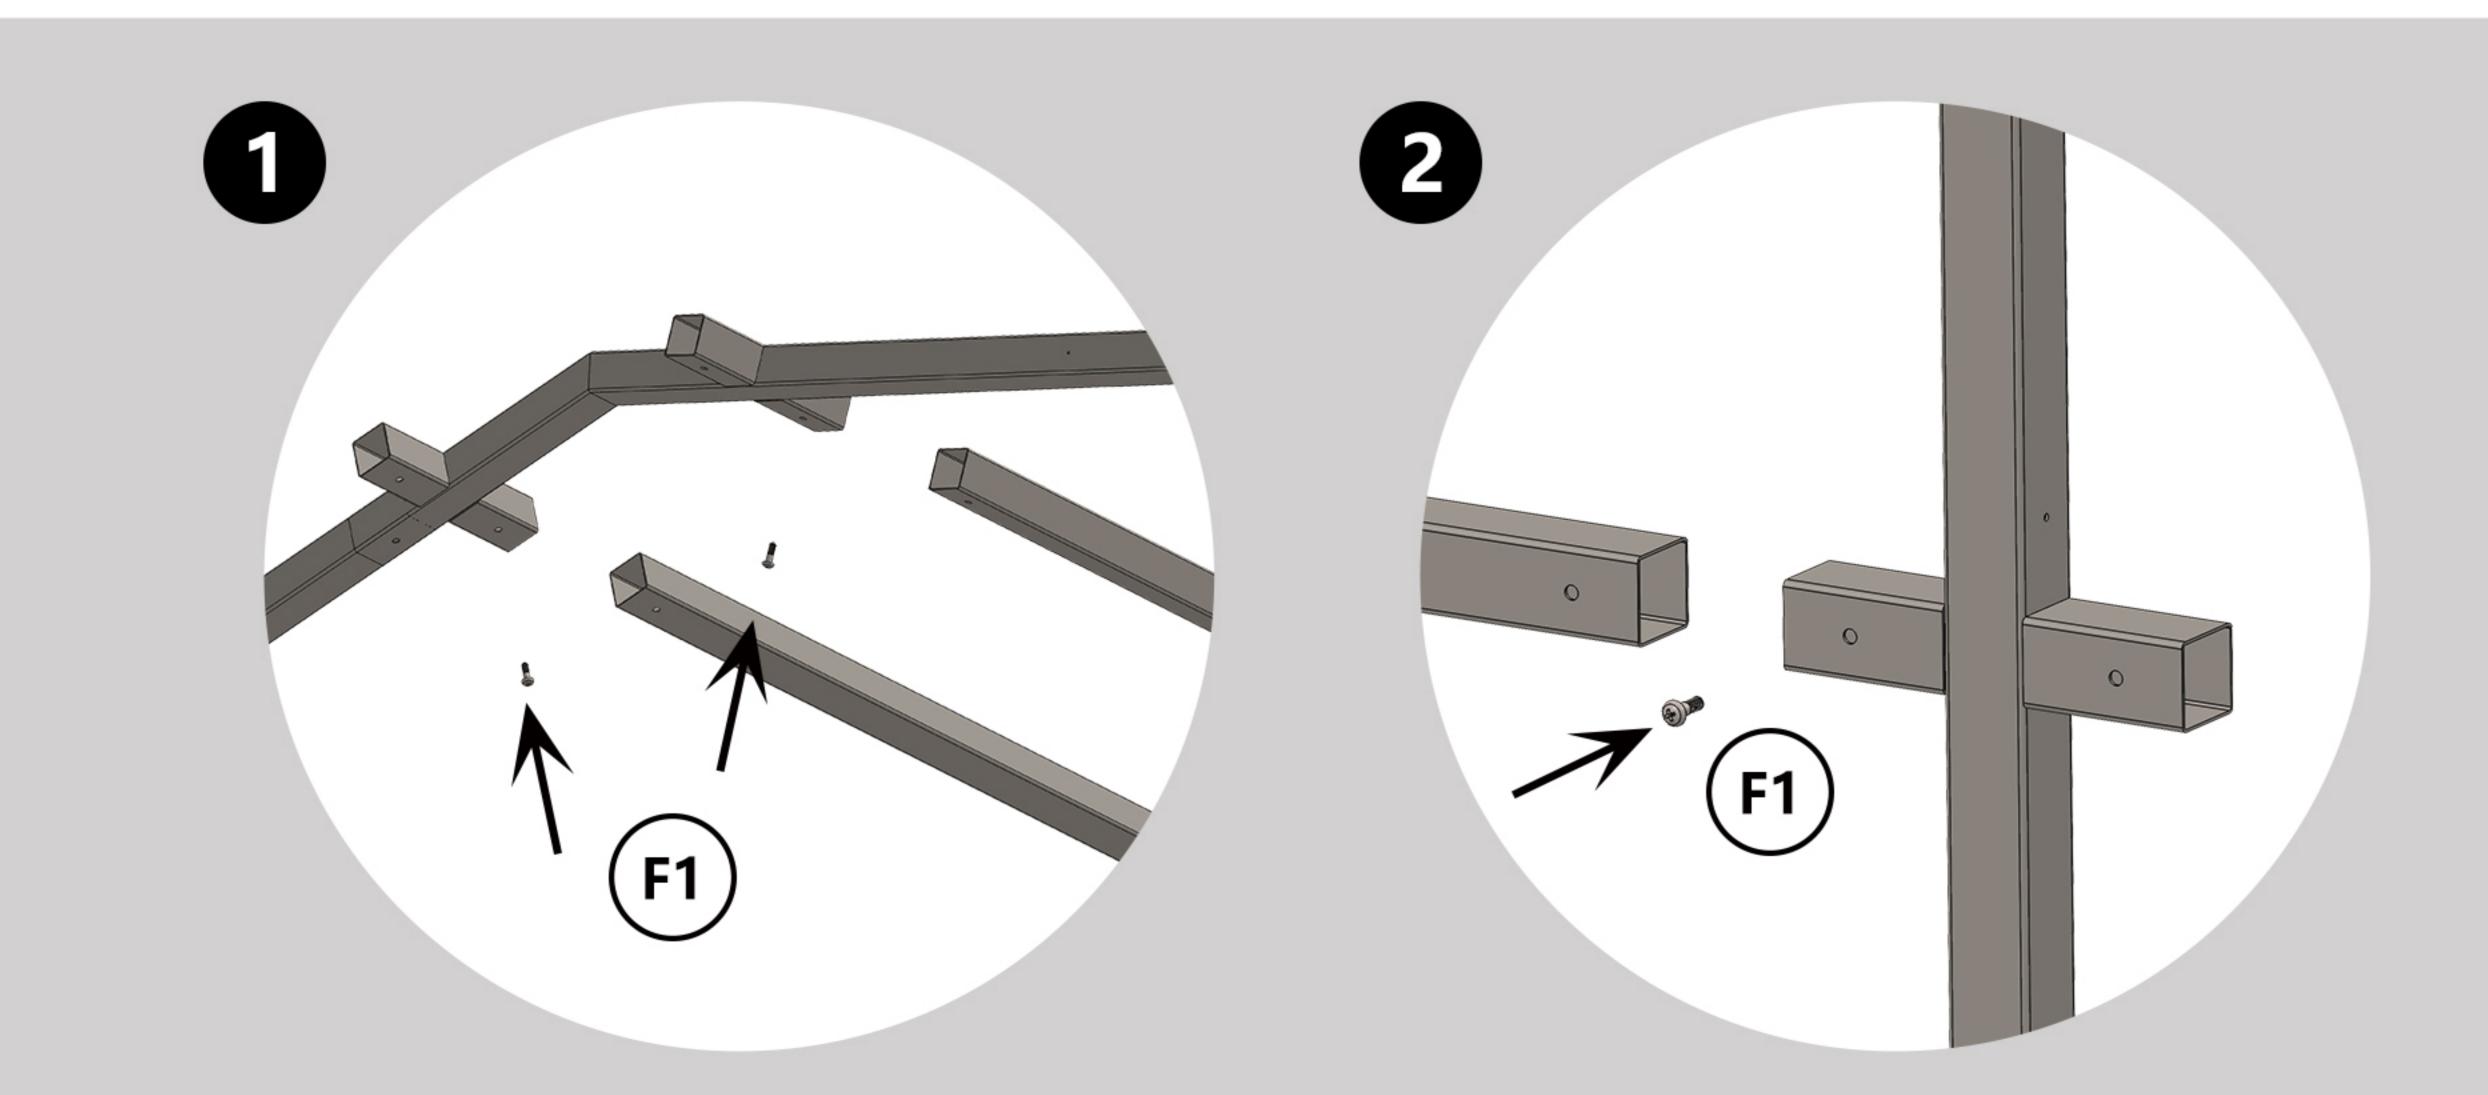

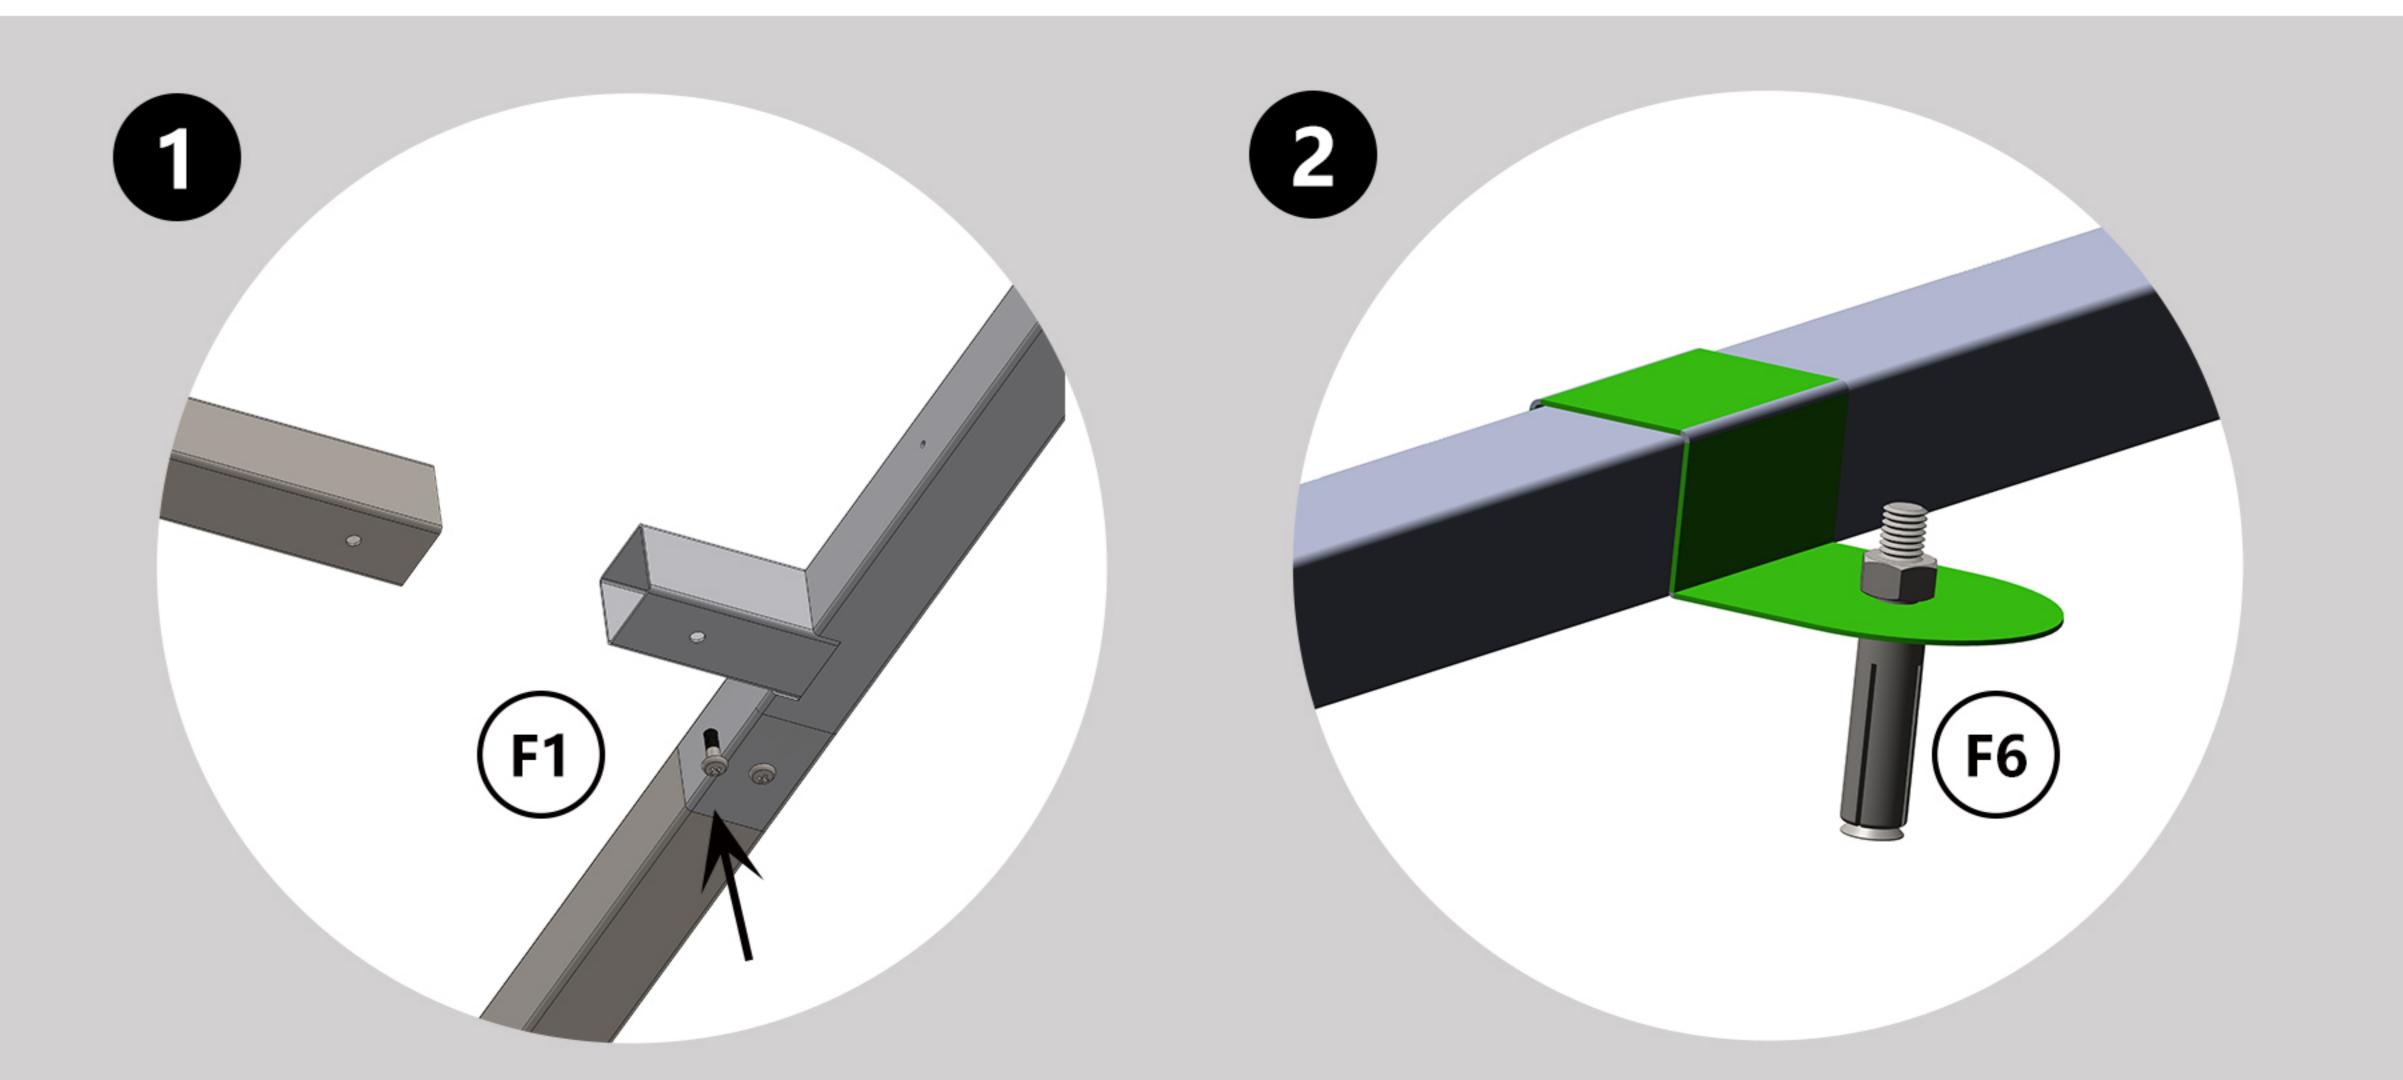


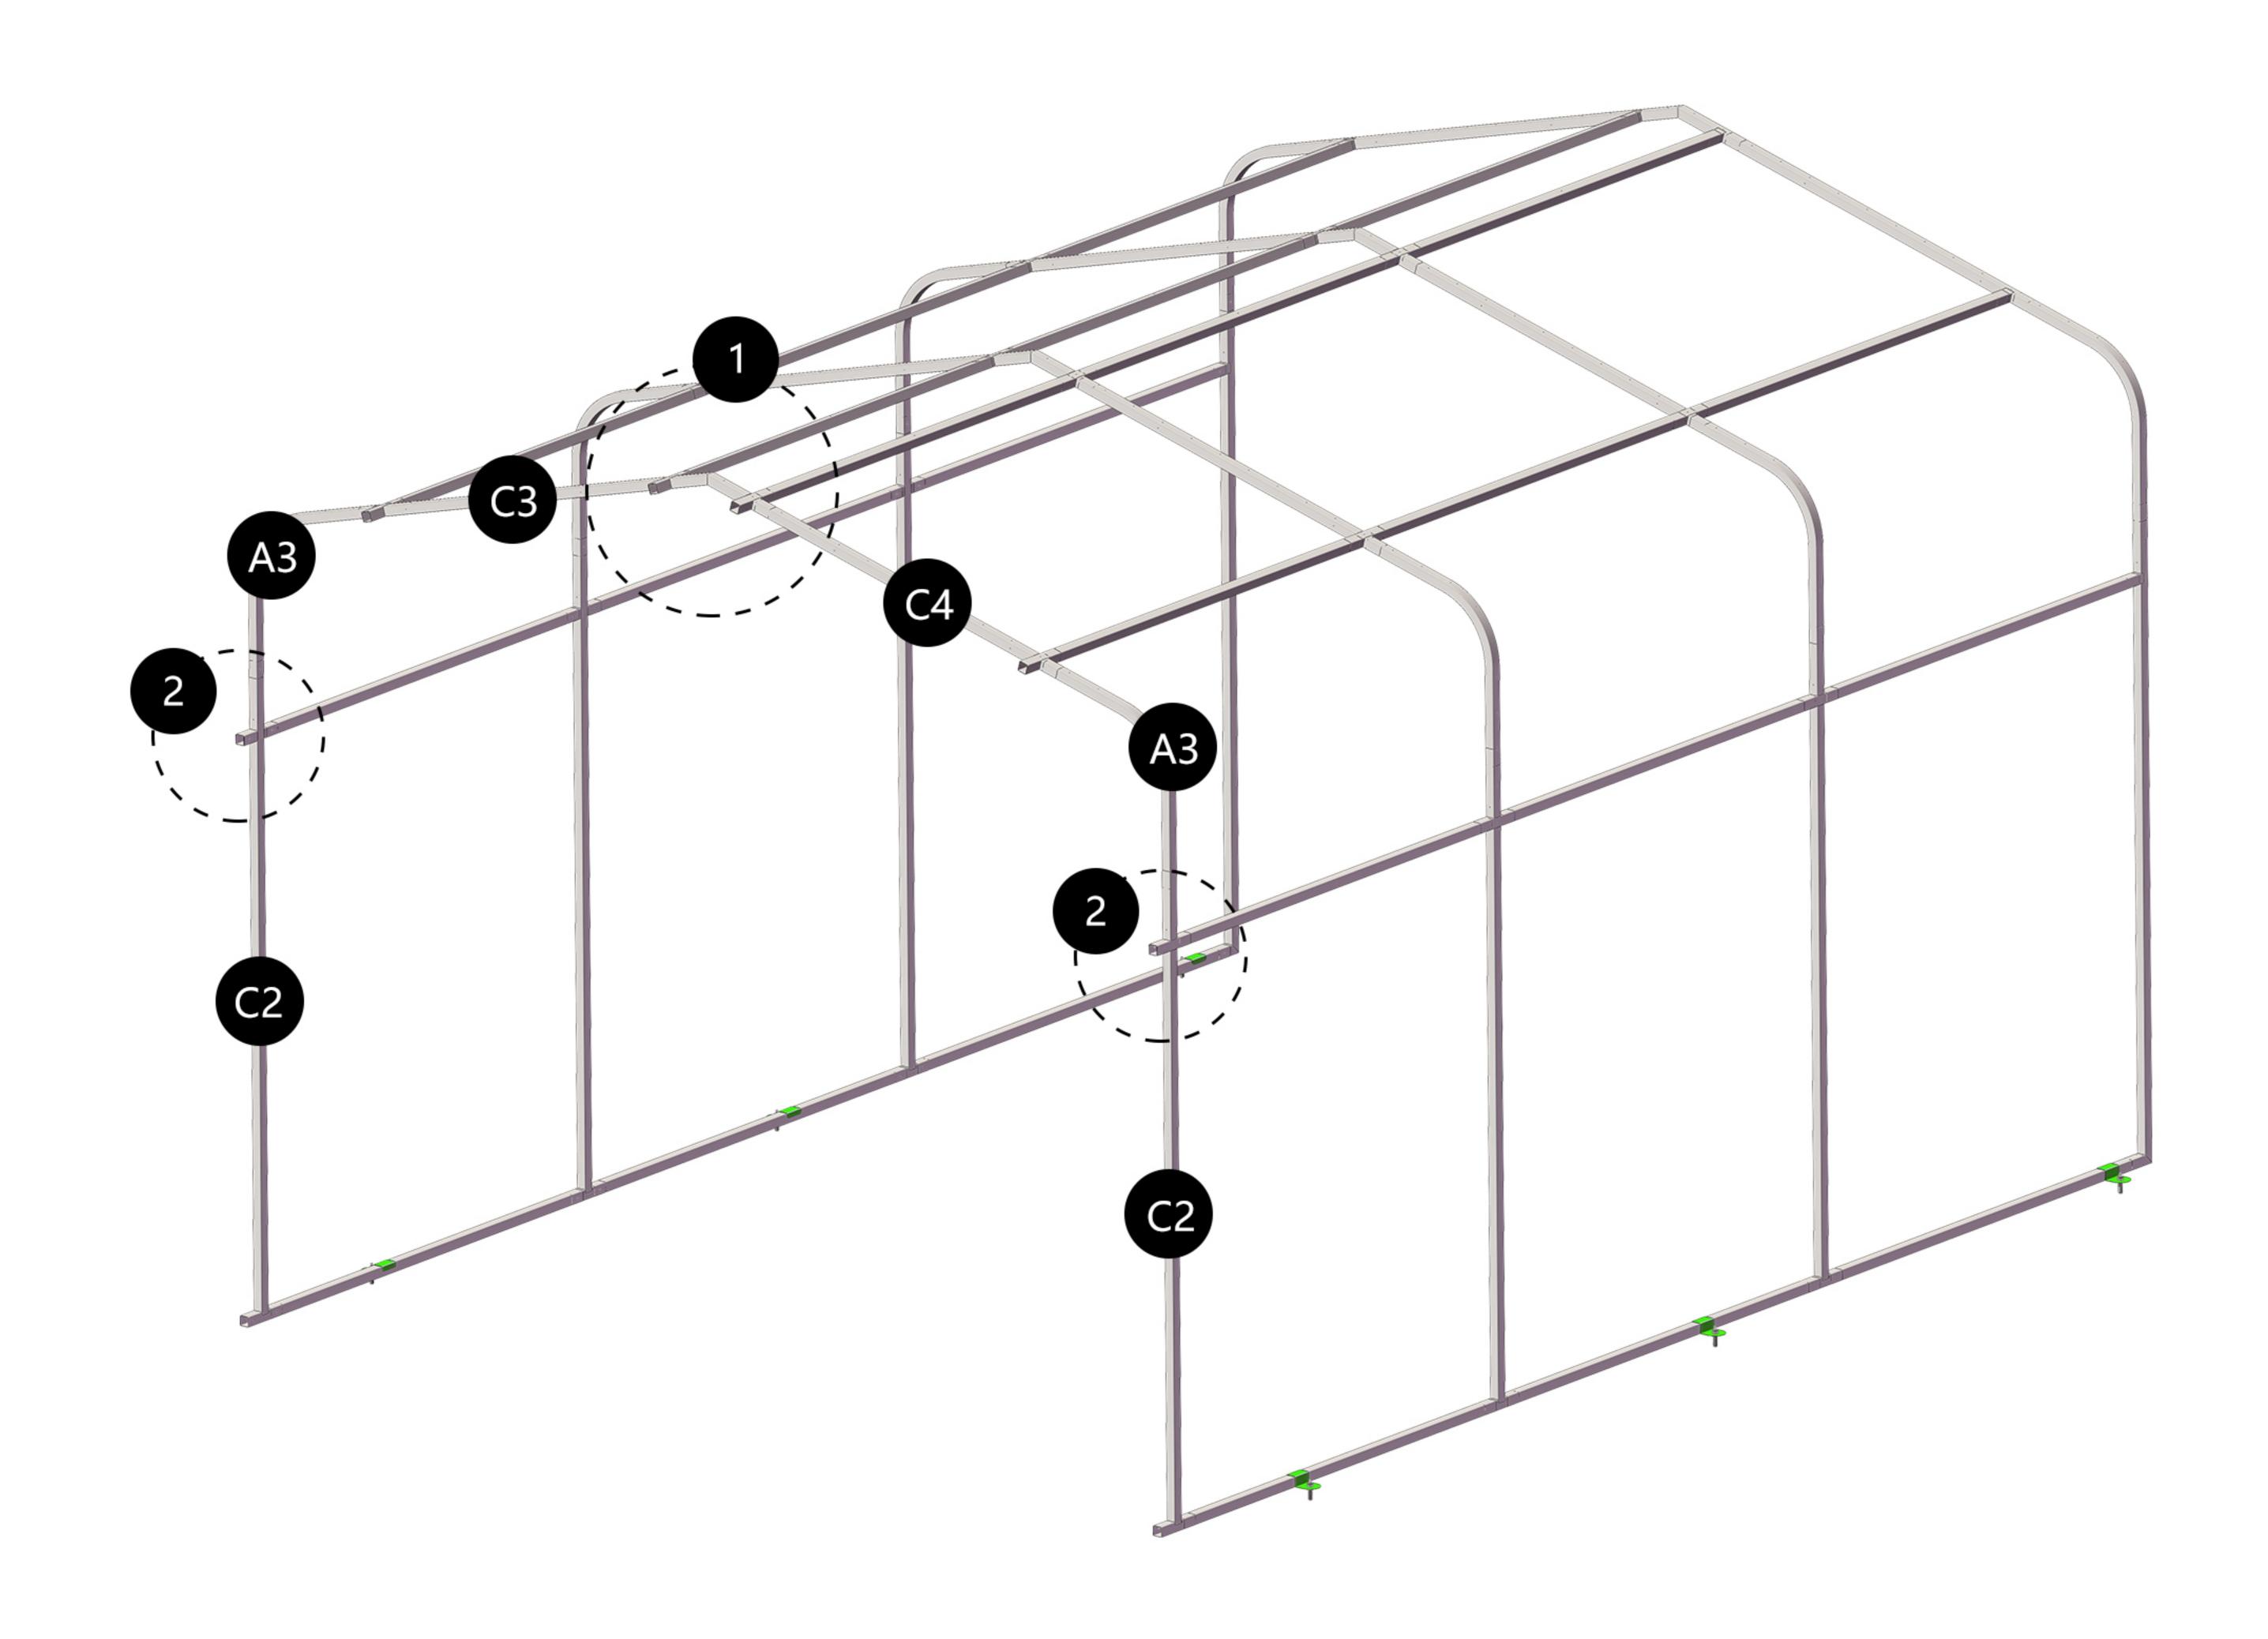



Notice:

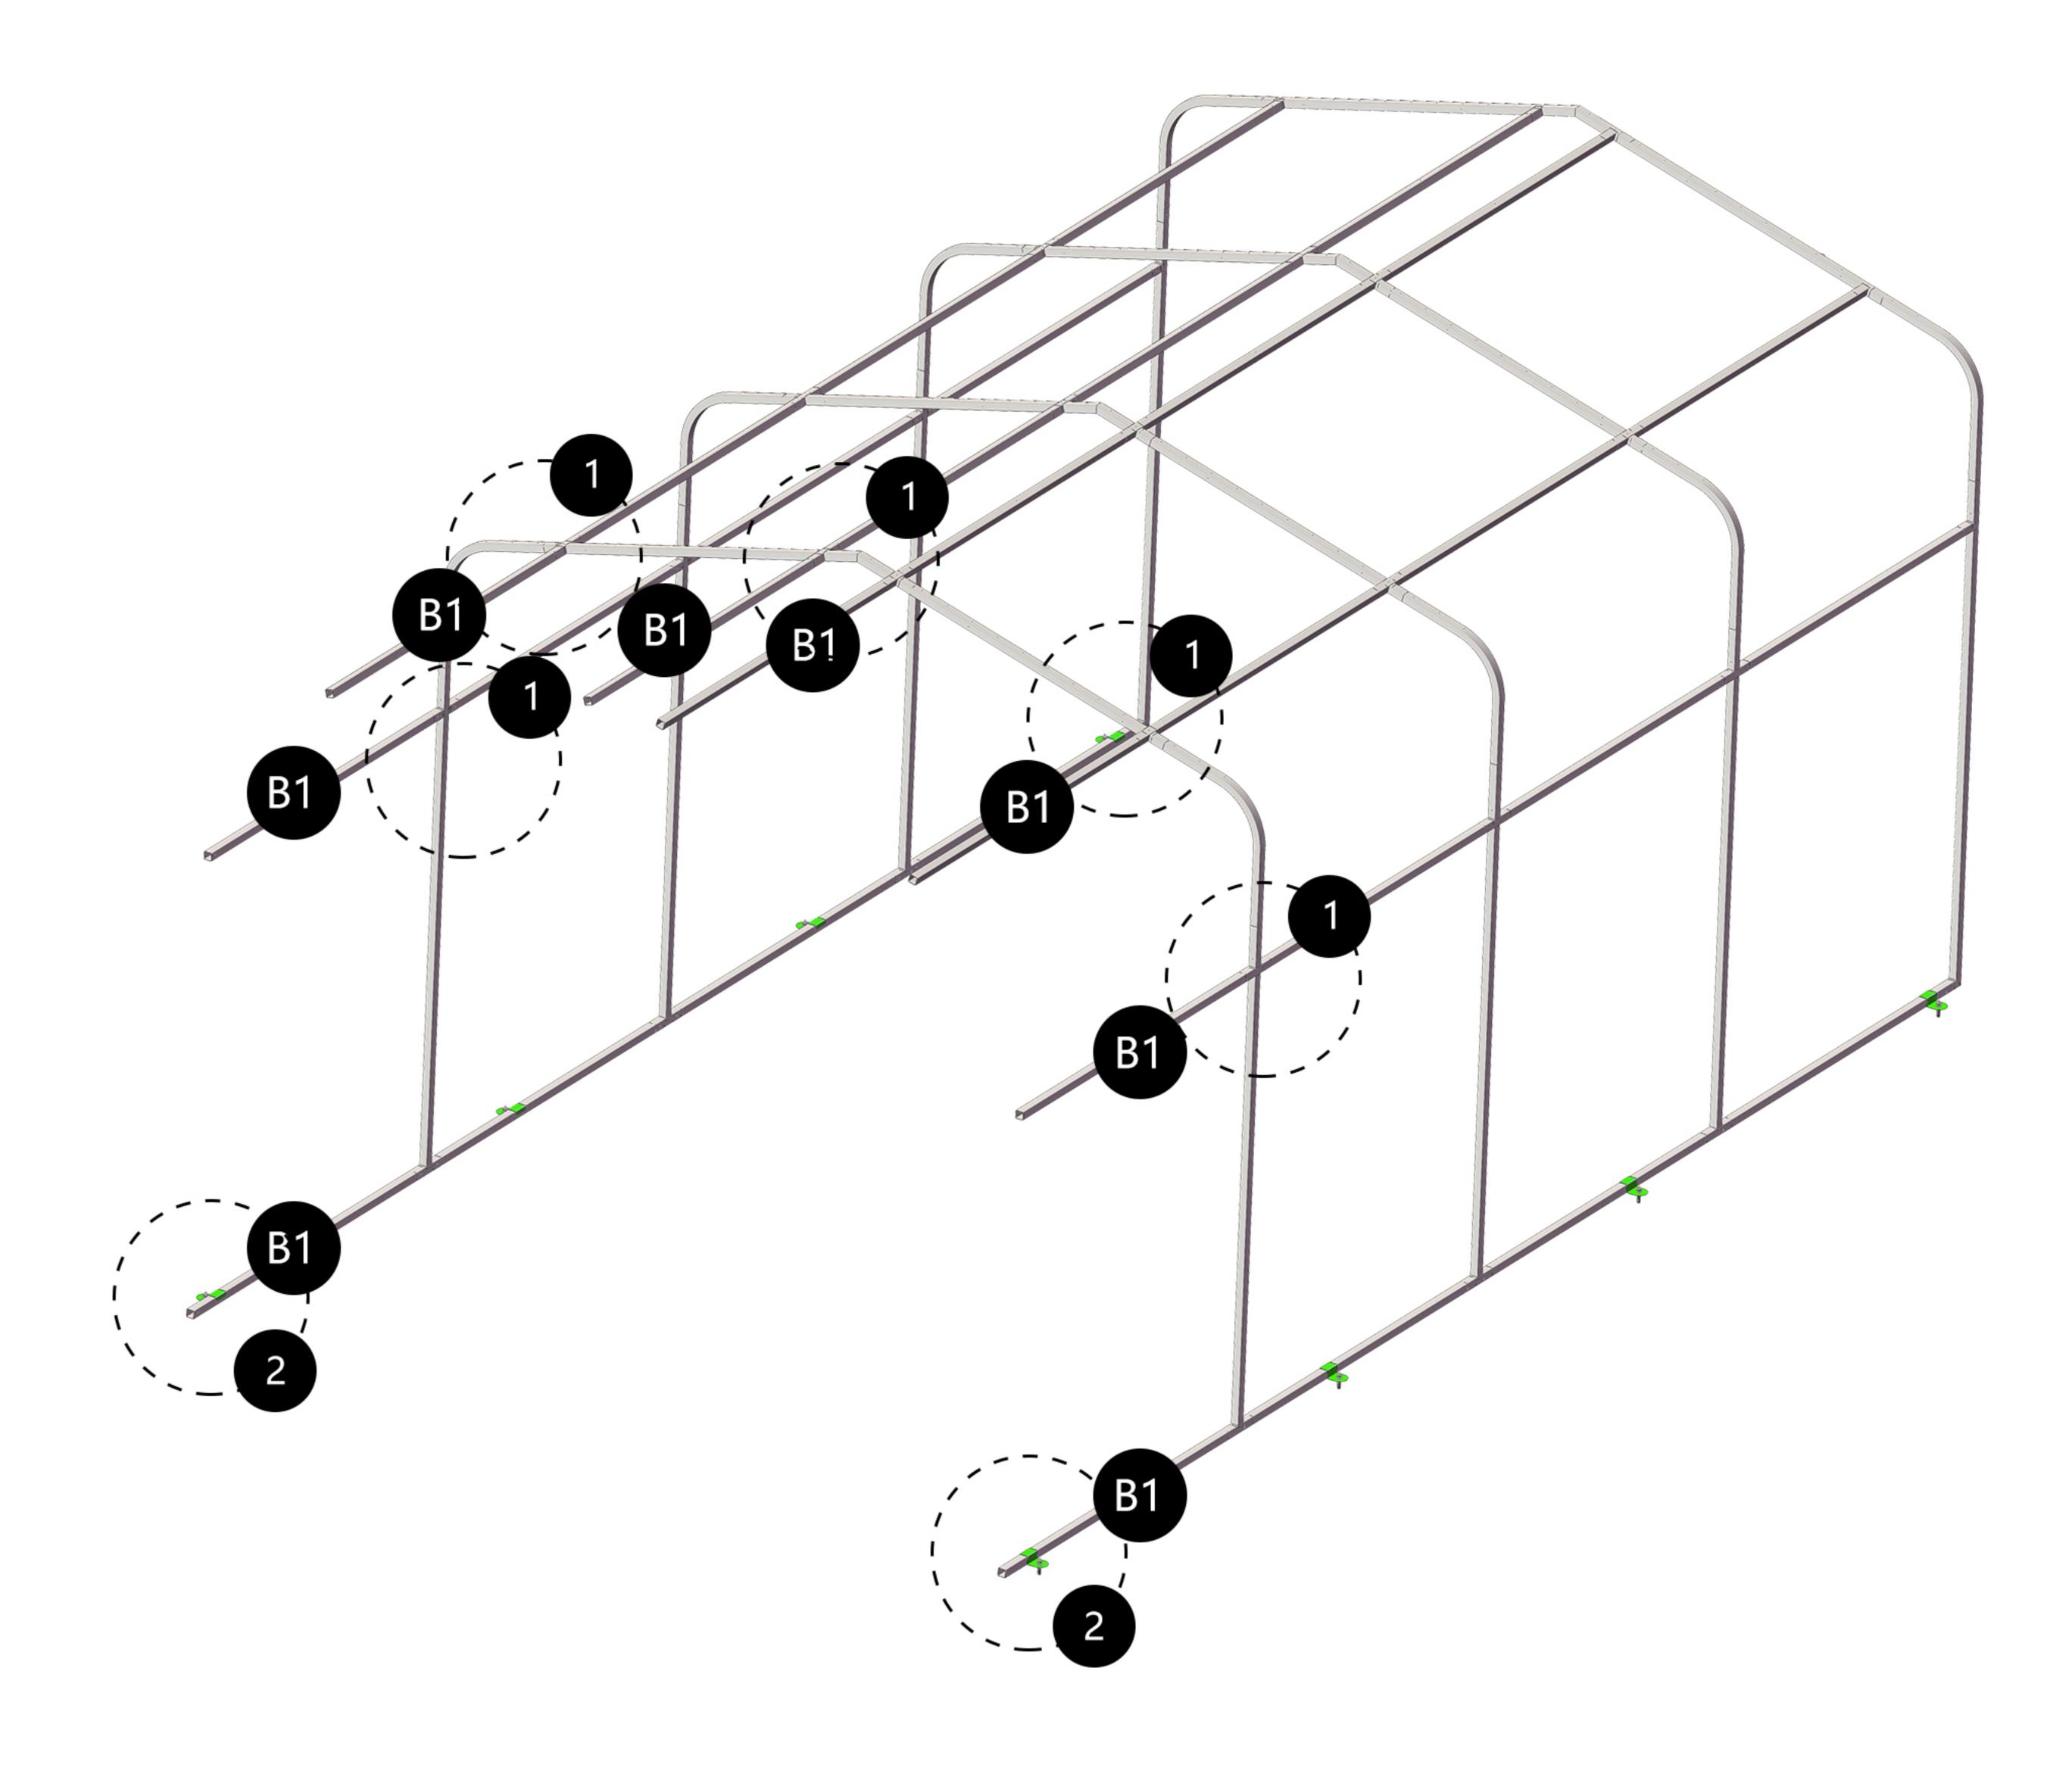


- 1 Description: As shown in the figure, connect the two adjacent parts and fix them with F1.
- 2 Description: Fix W1 to the ground with F6 as shown in the picture.

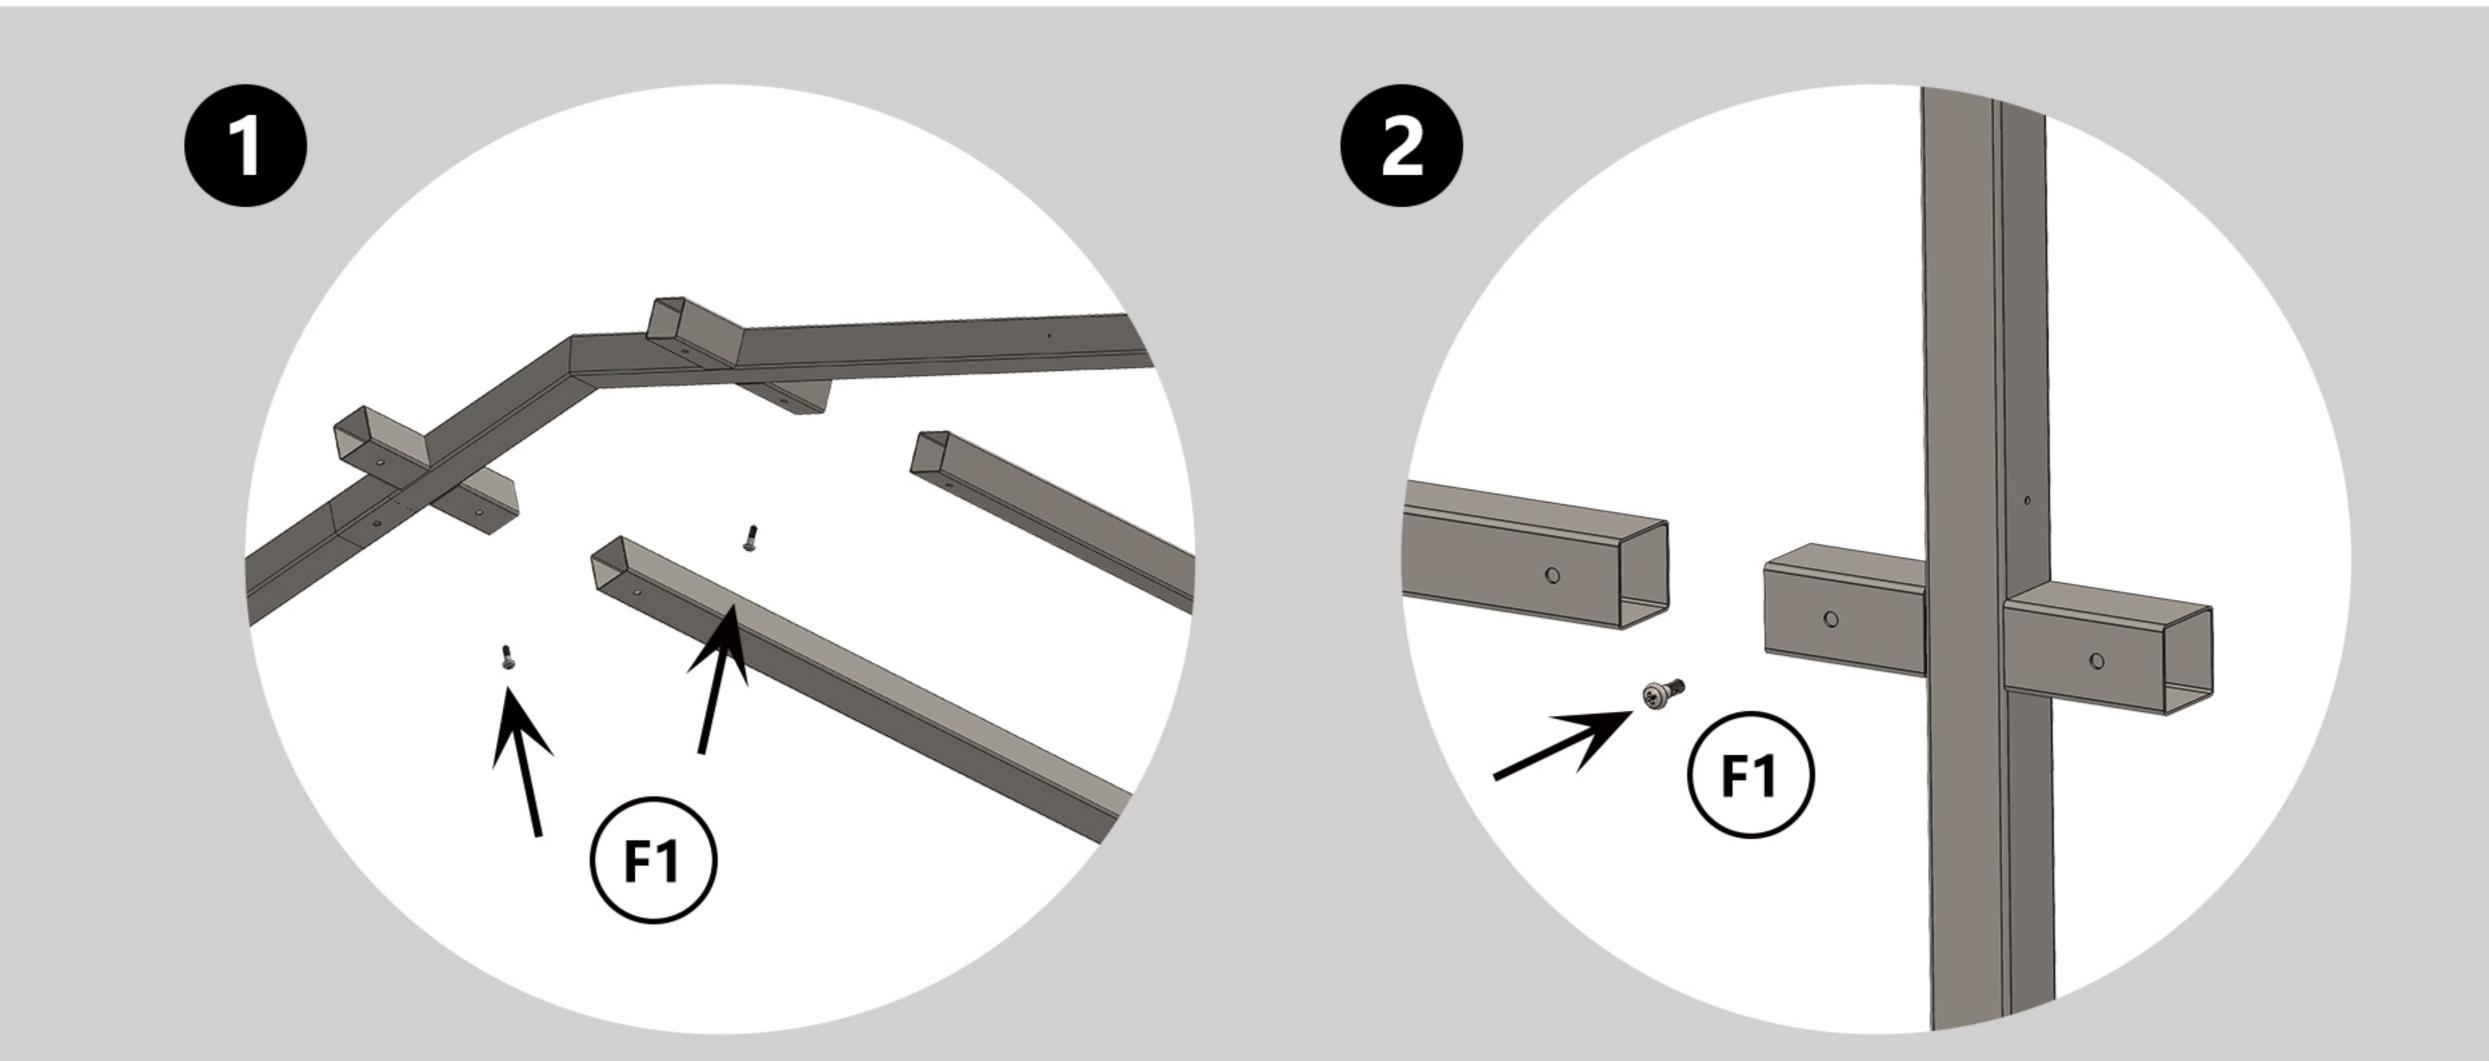

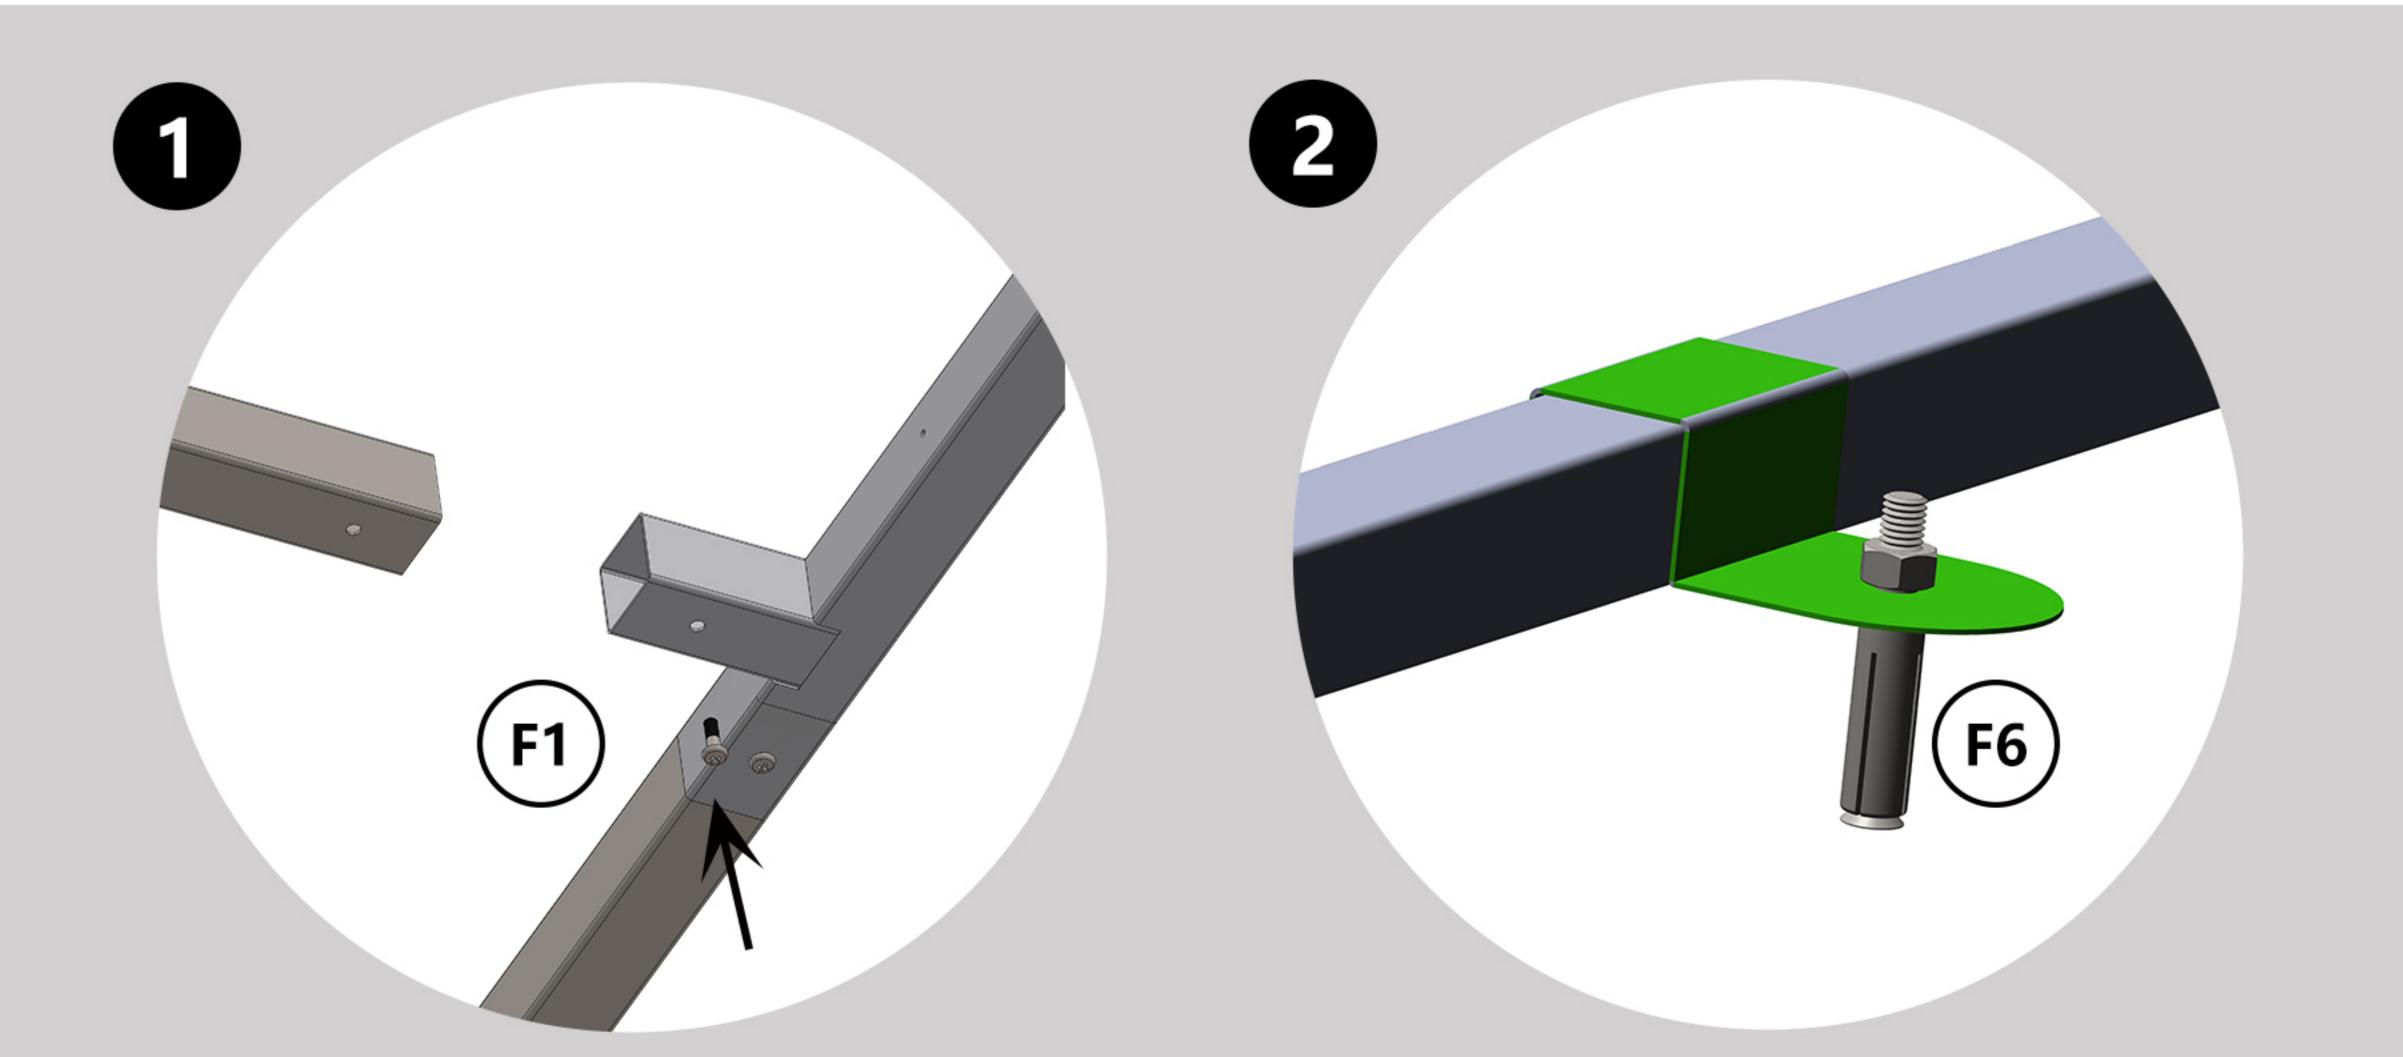

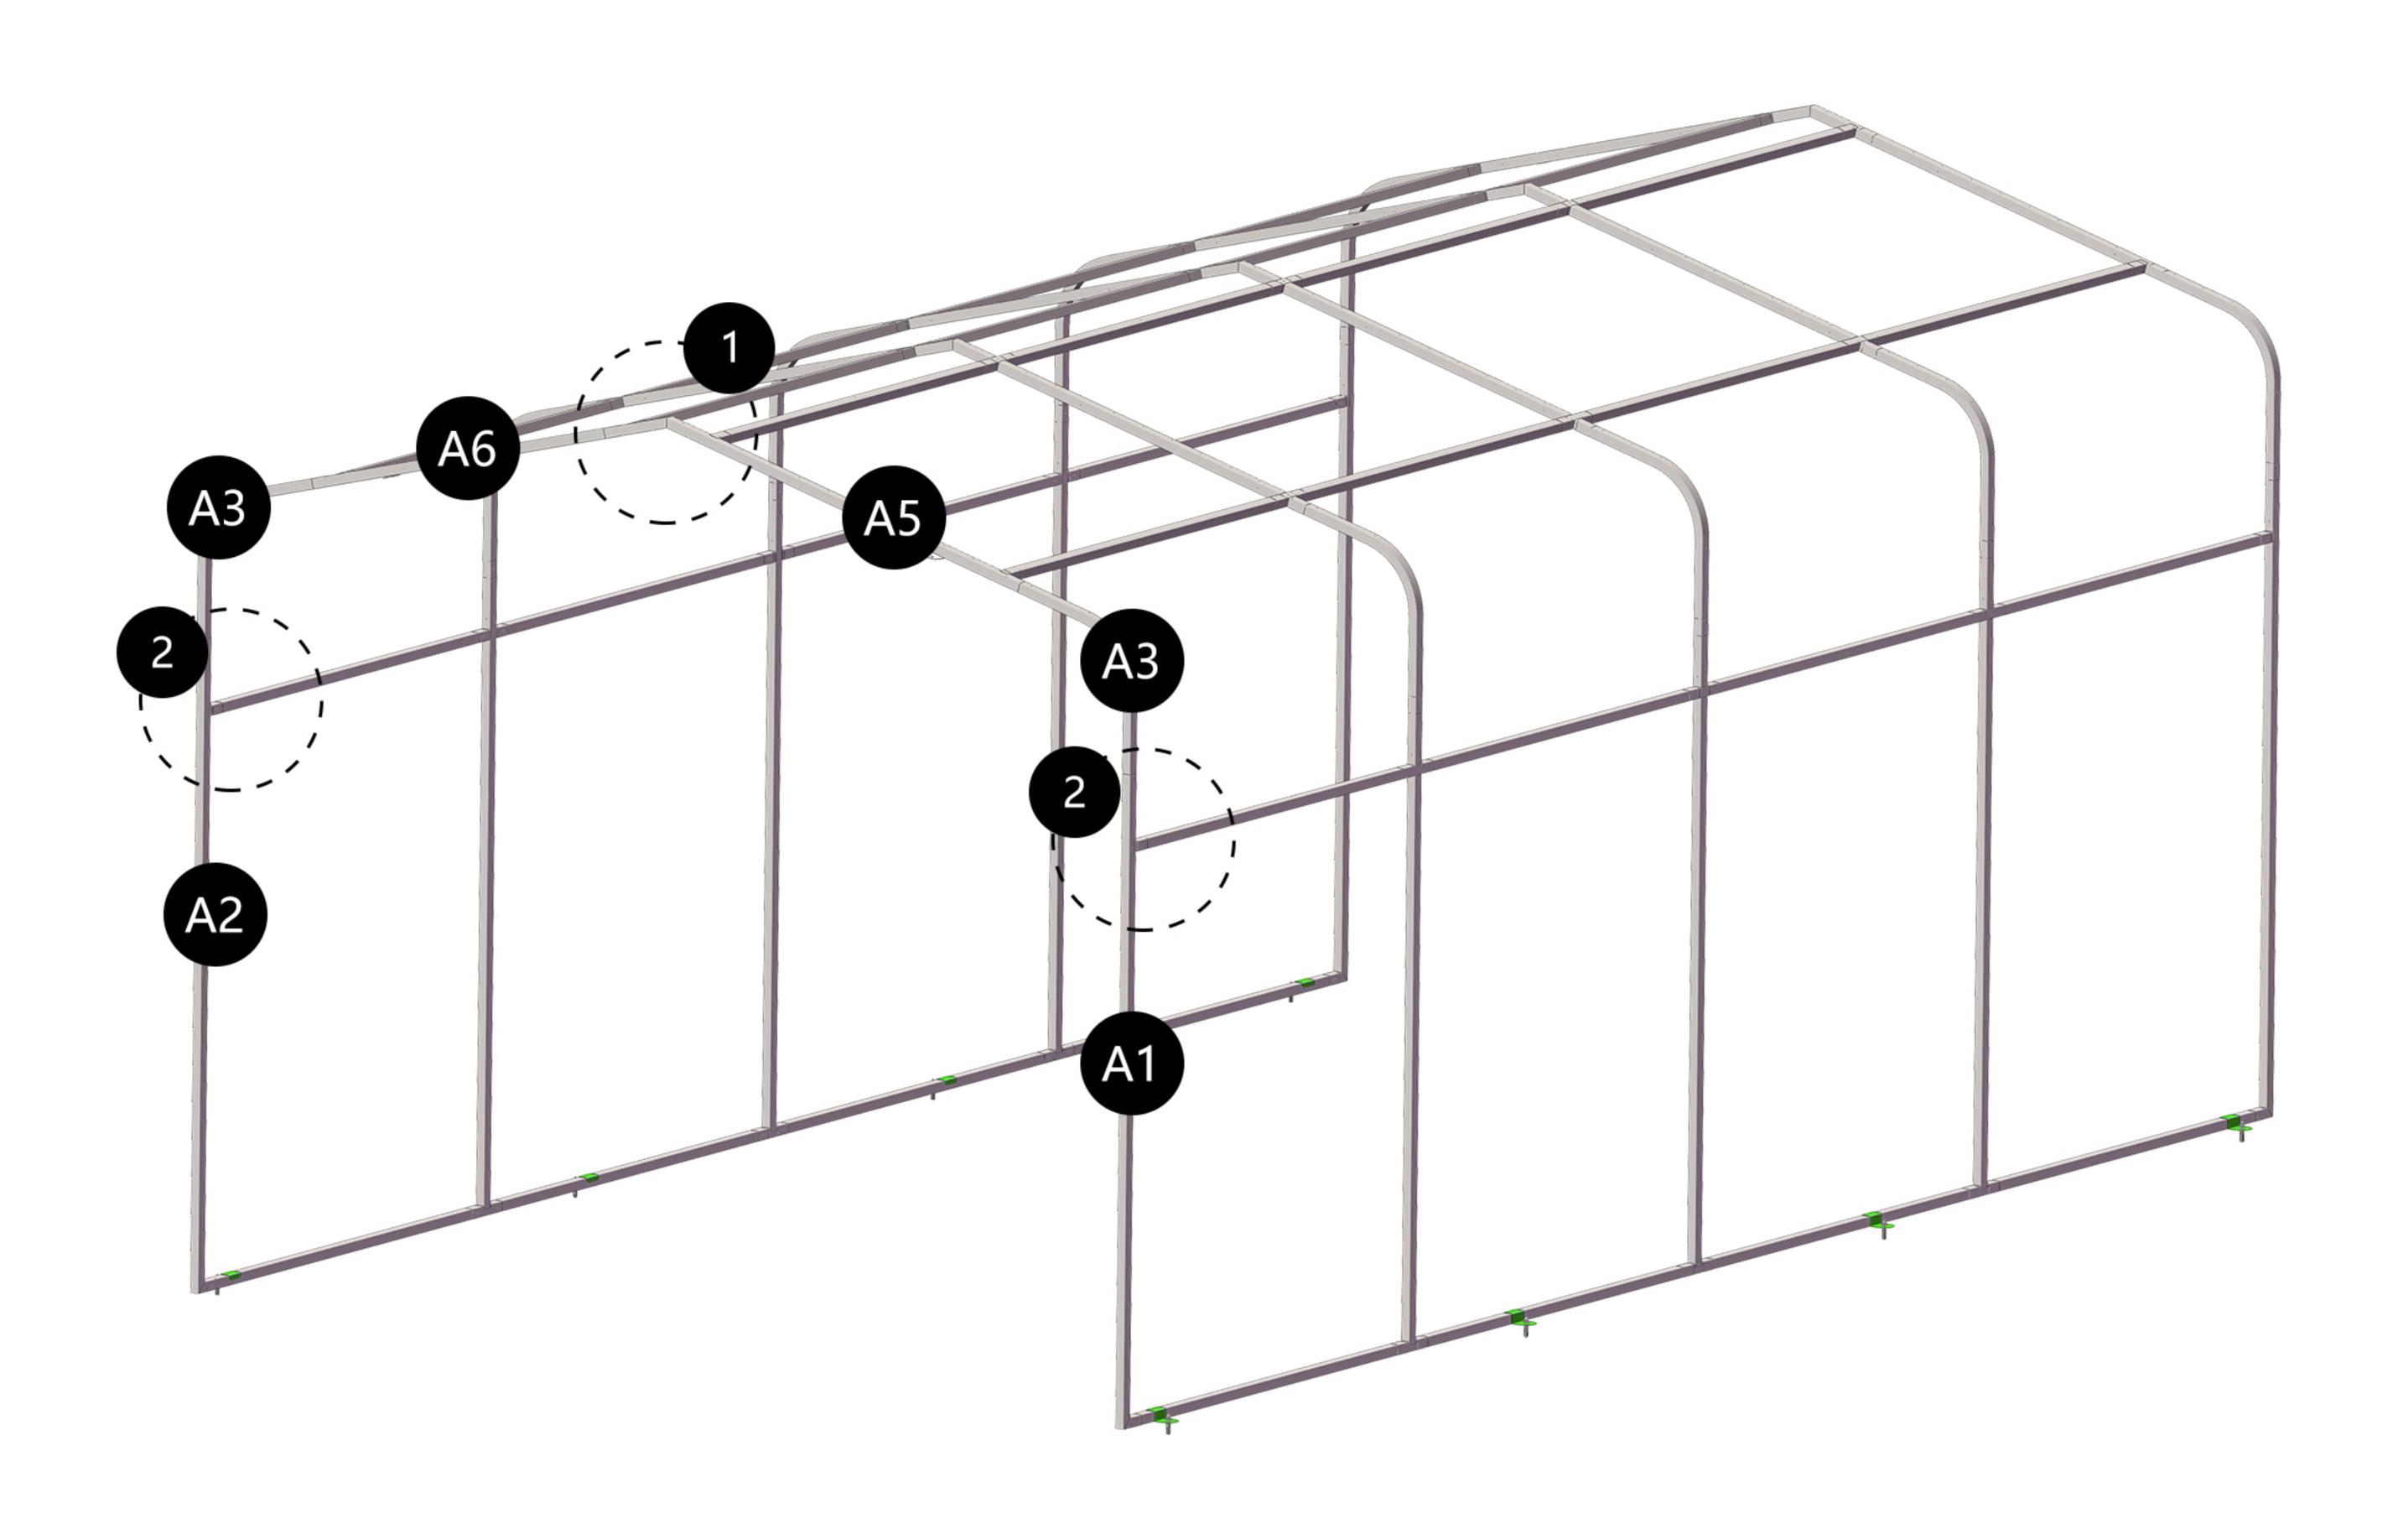


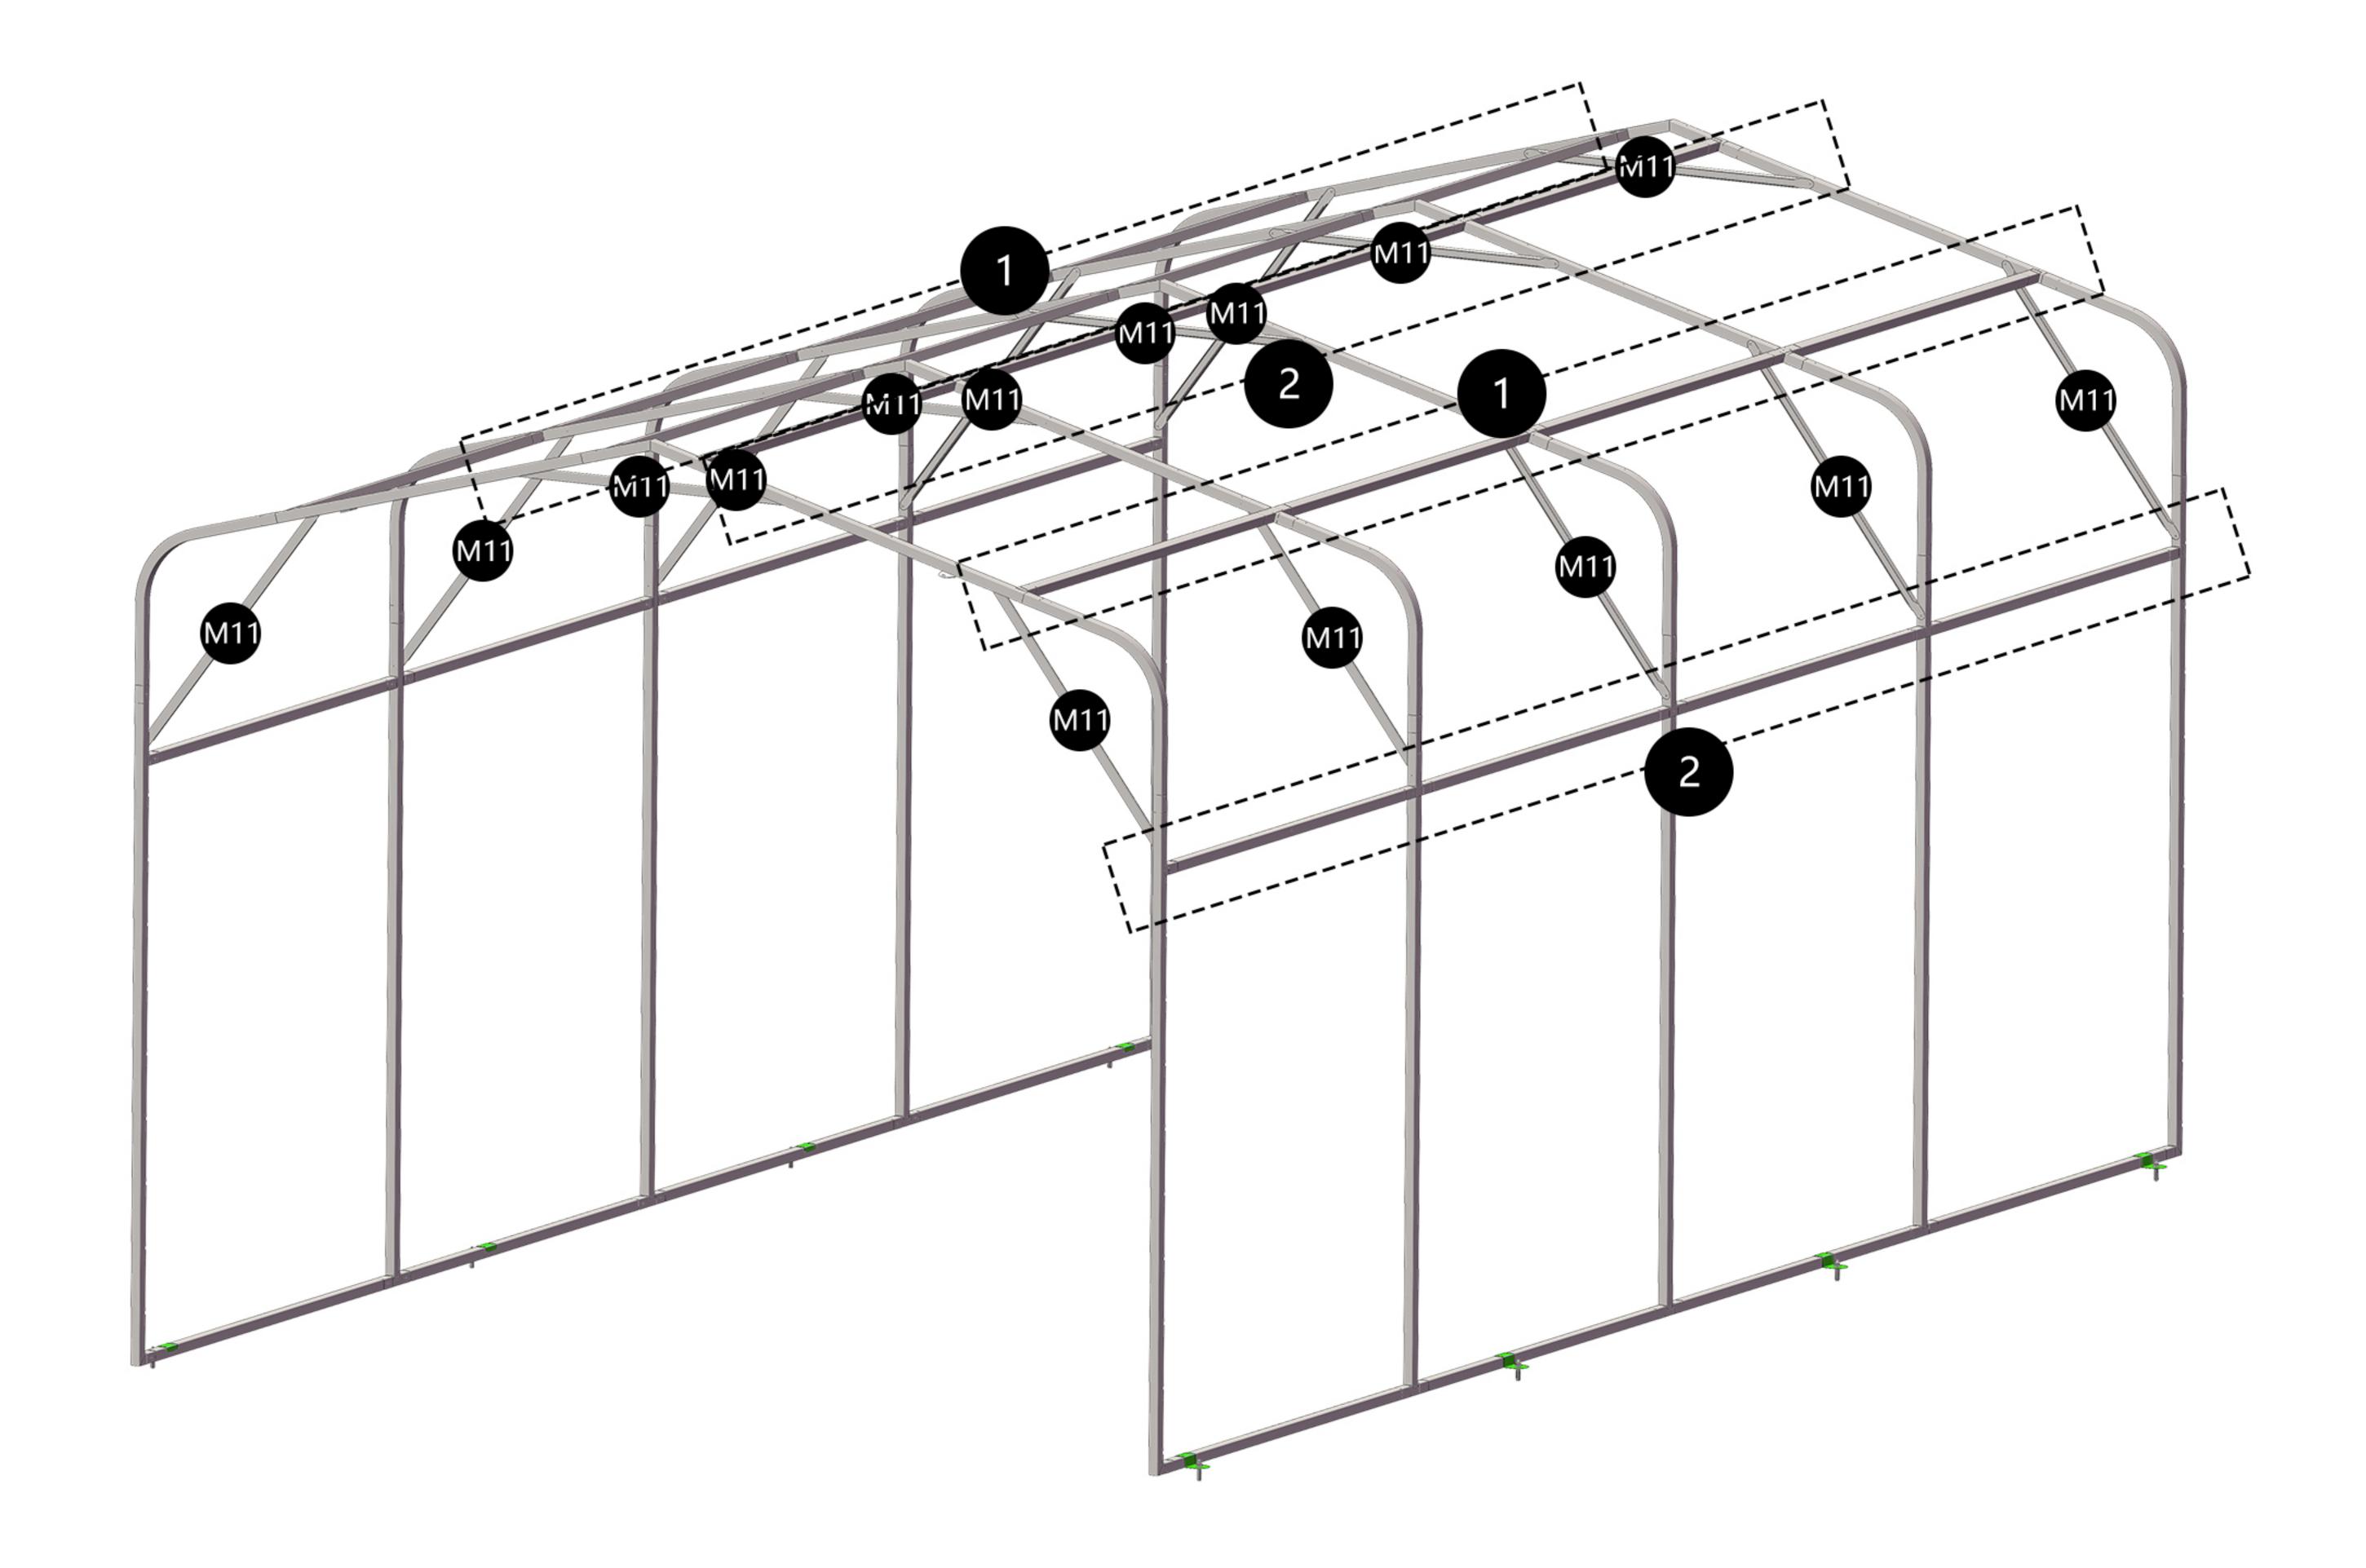


Notice:


Notice:

Fix all M11 ends with F1 in the positions shown in Figures 1 and 2.

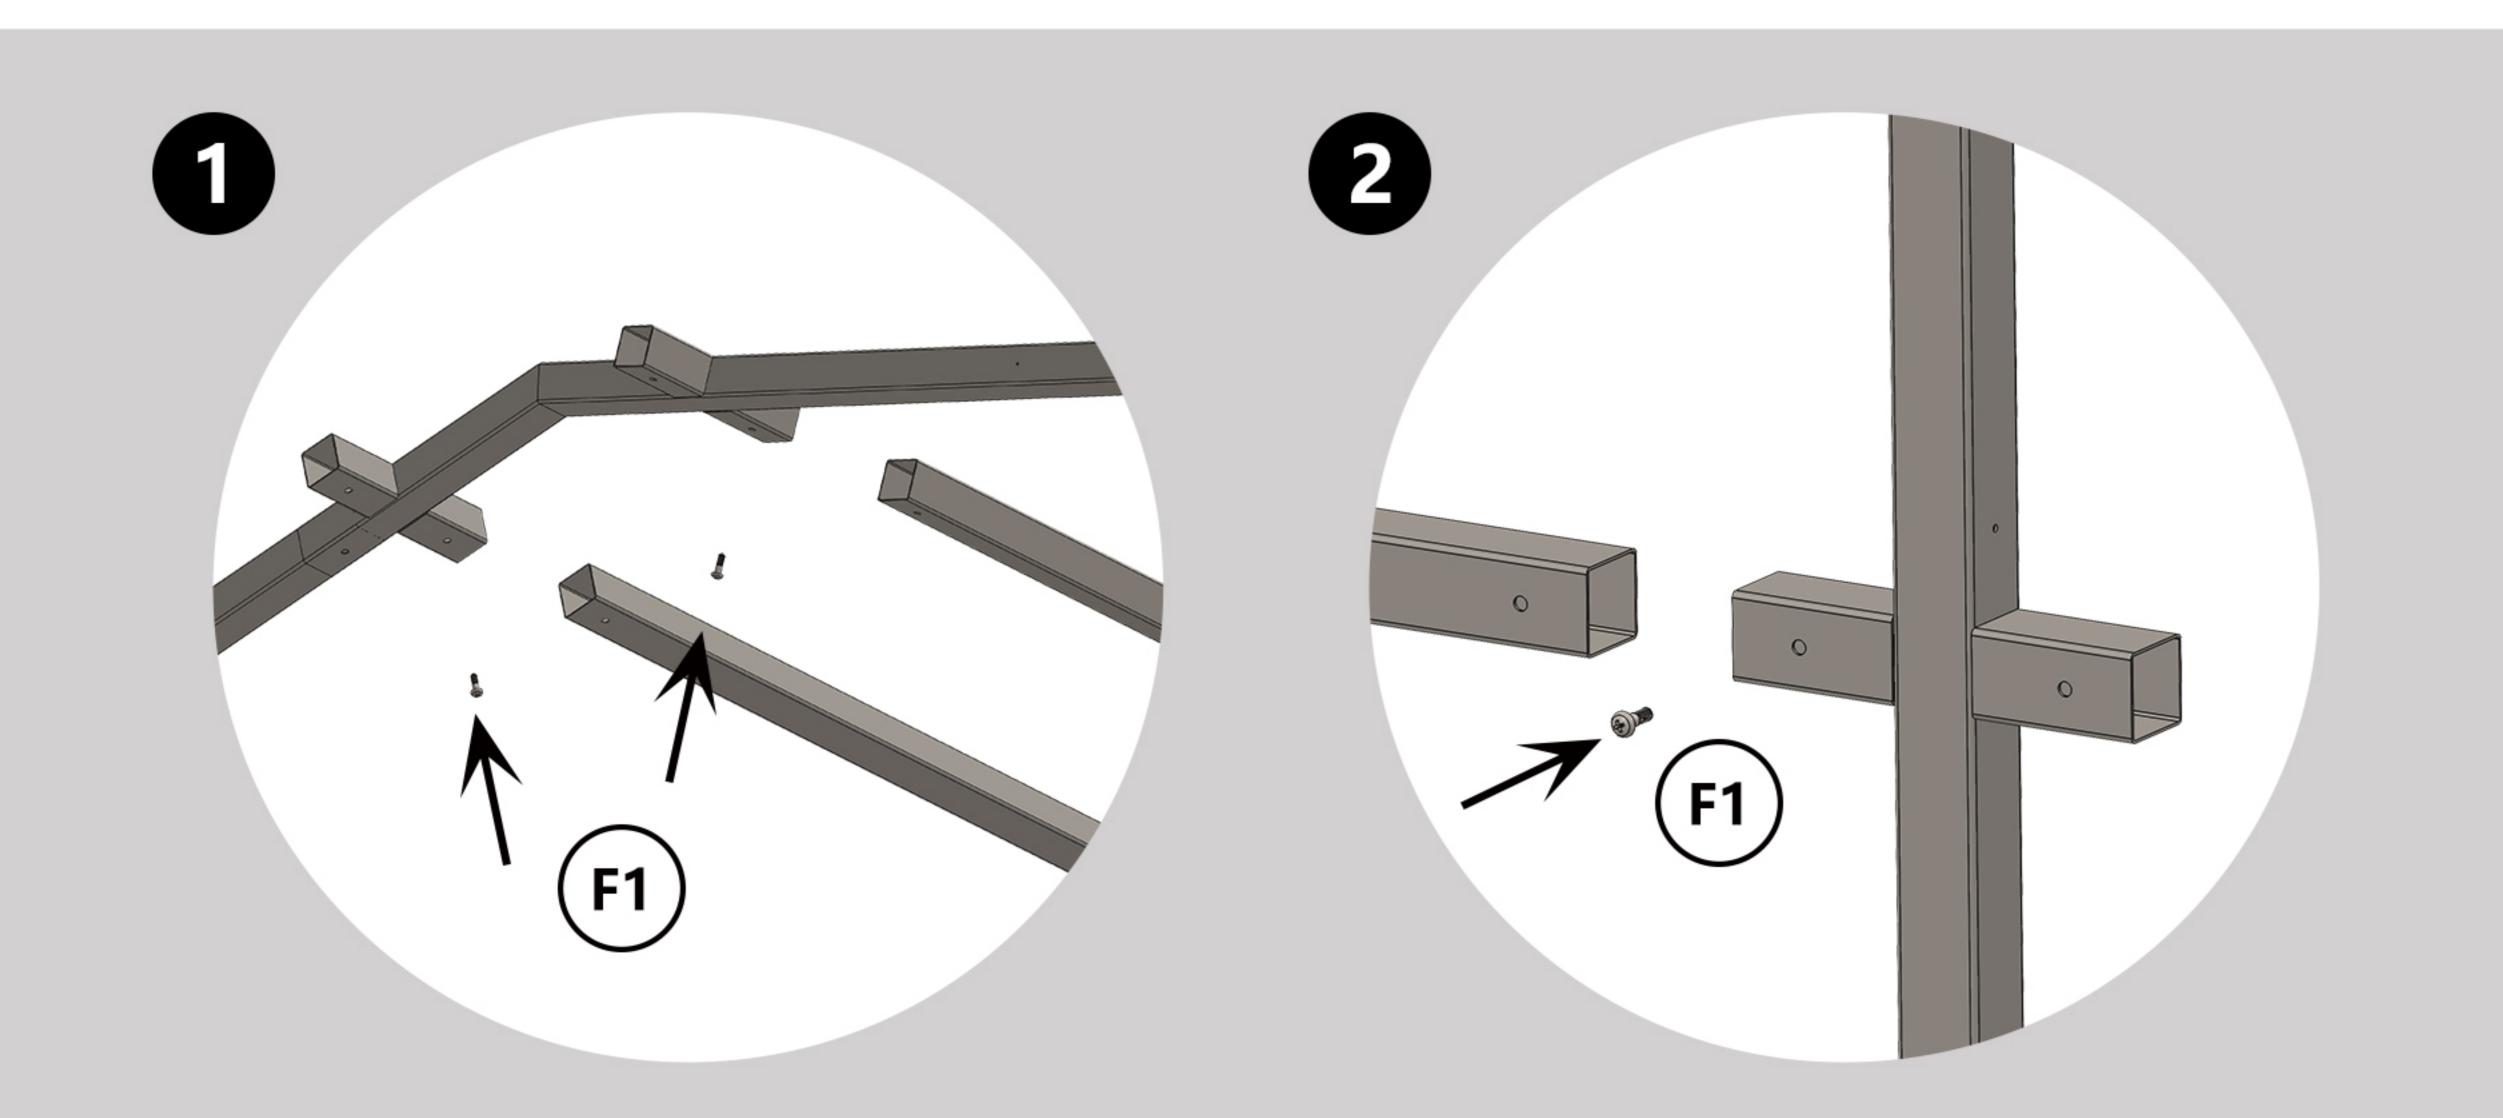

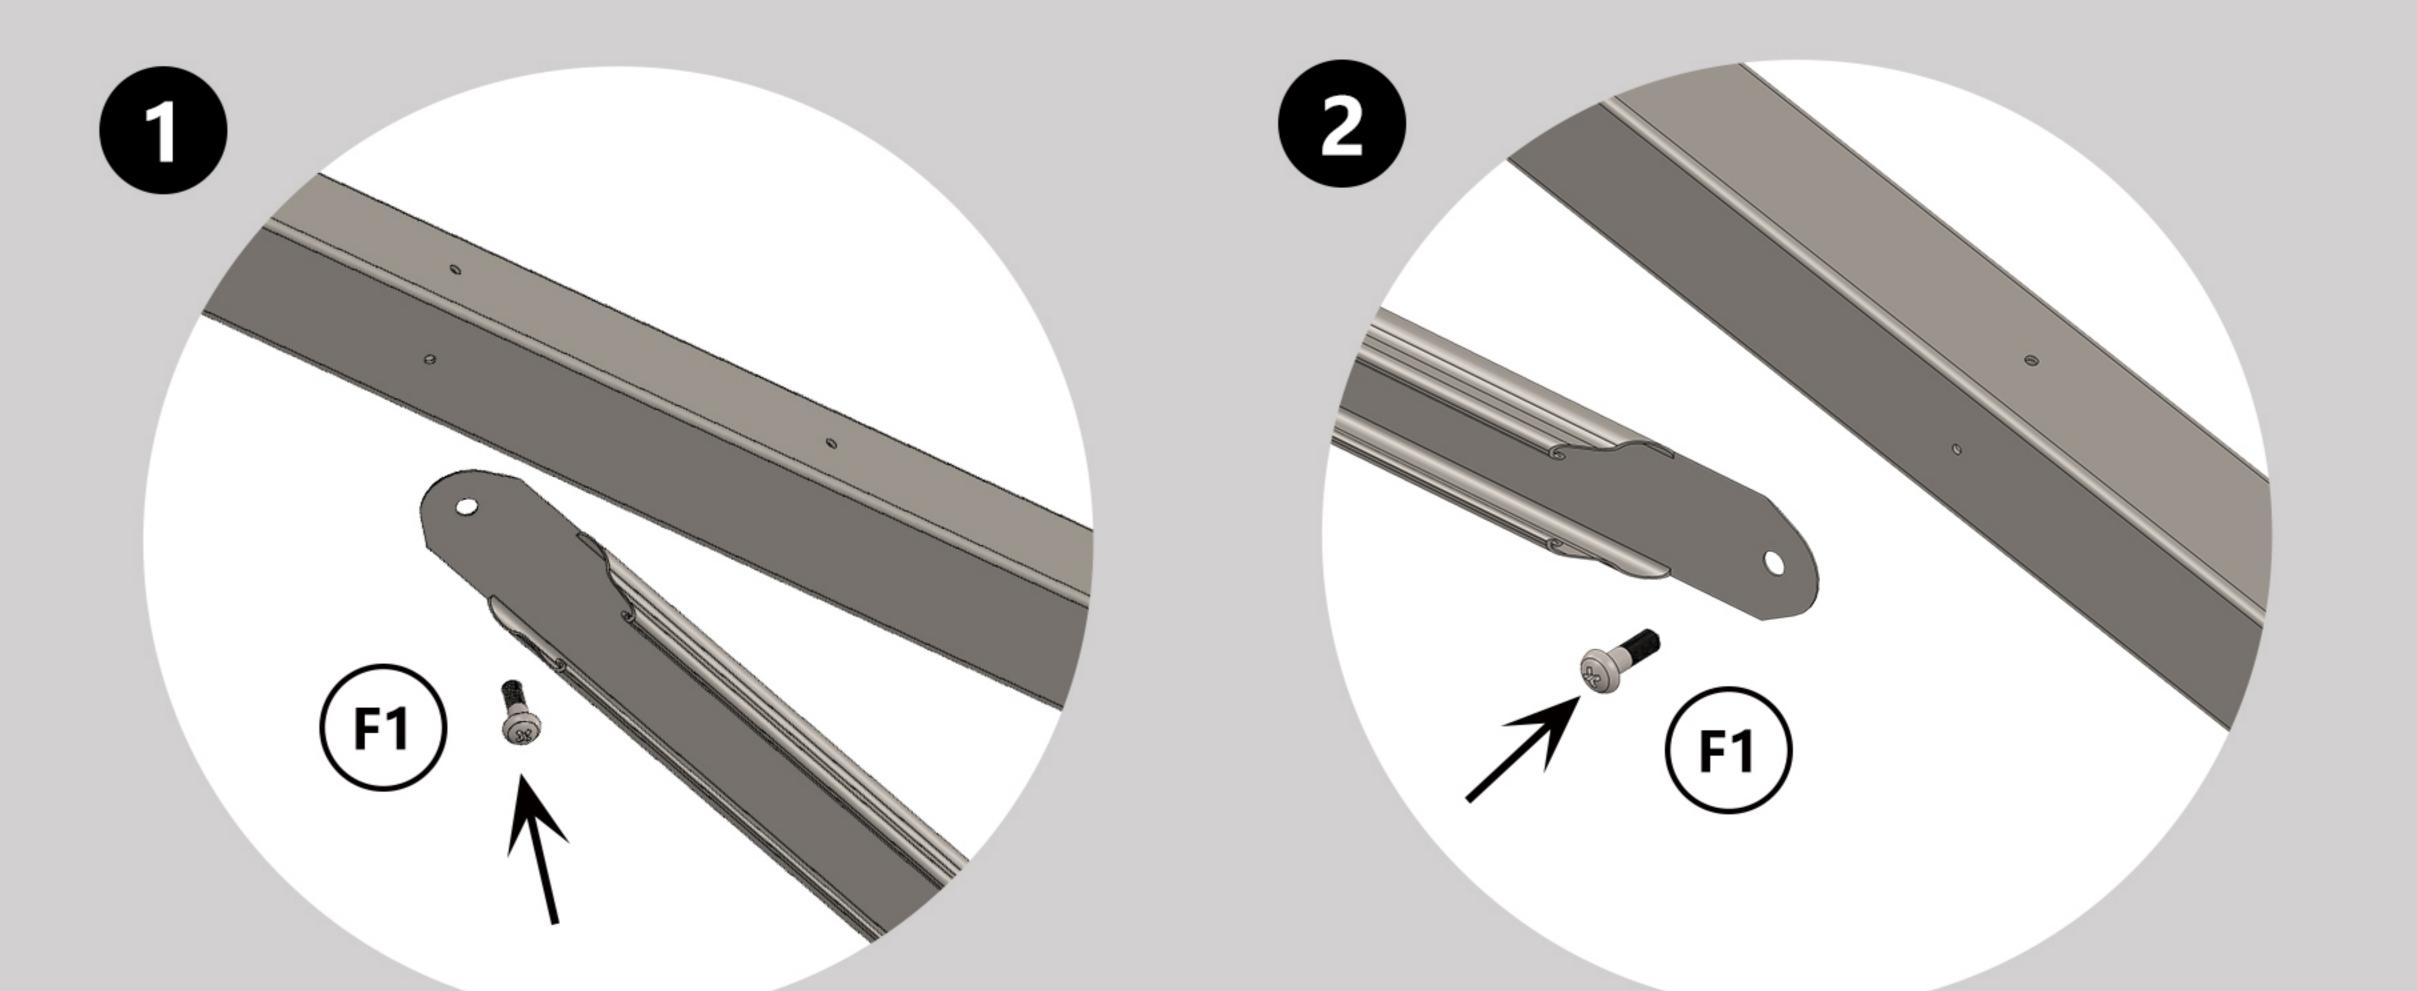

12

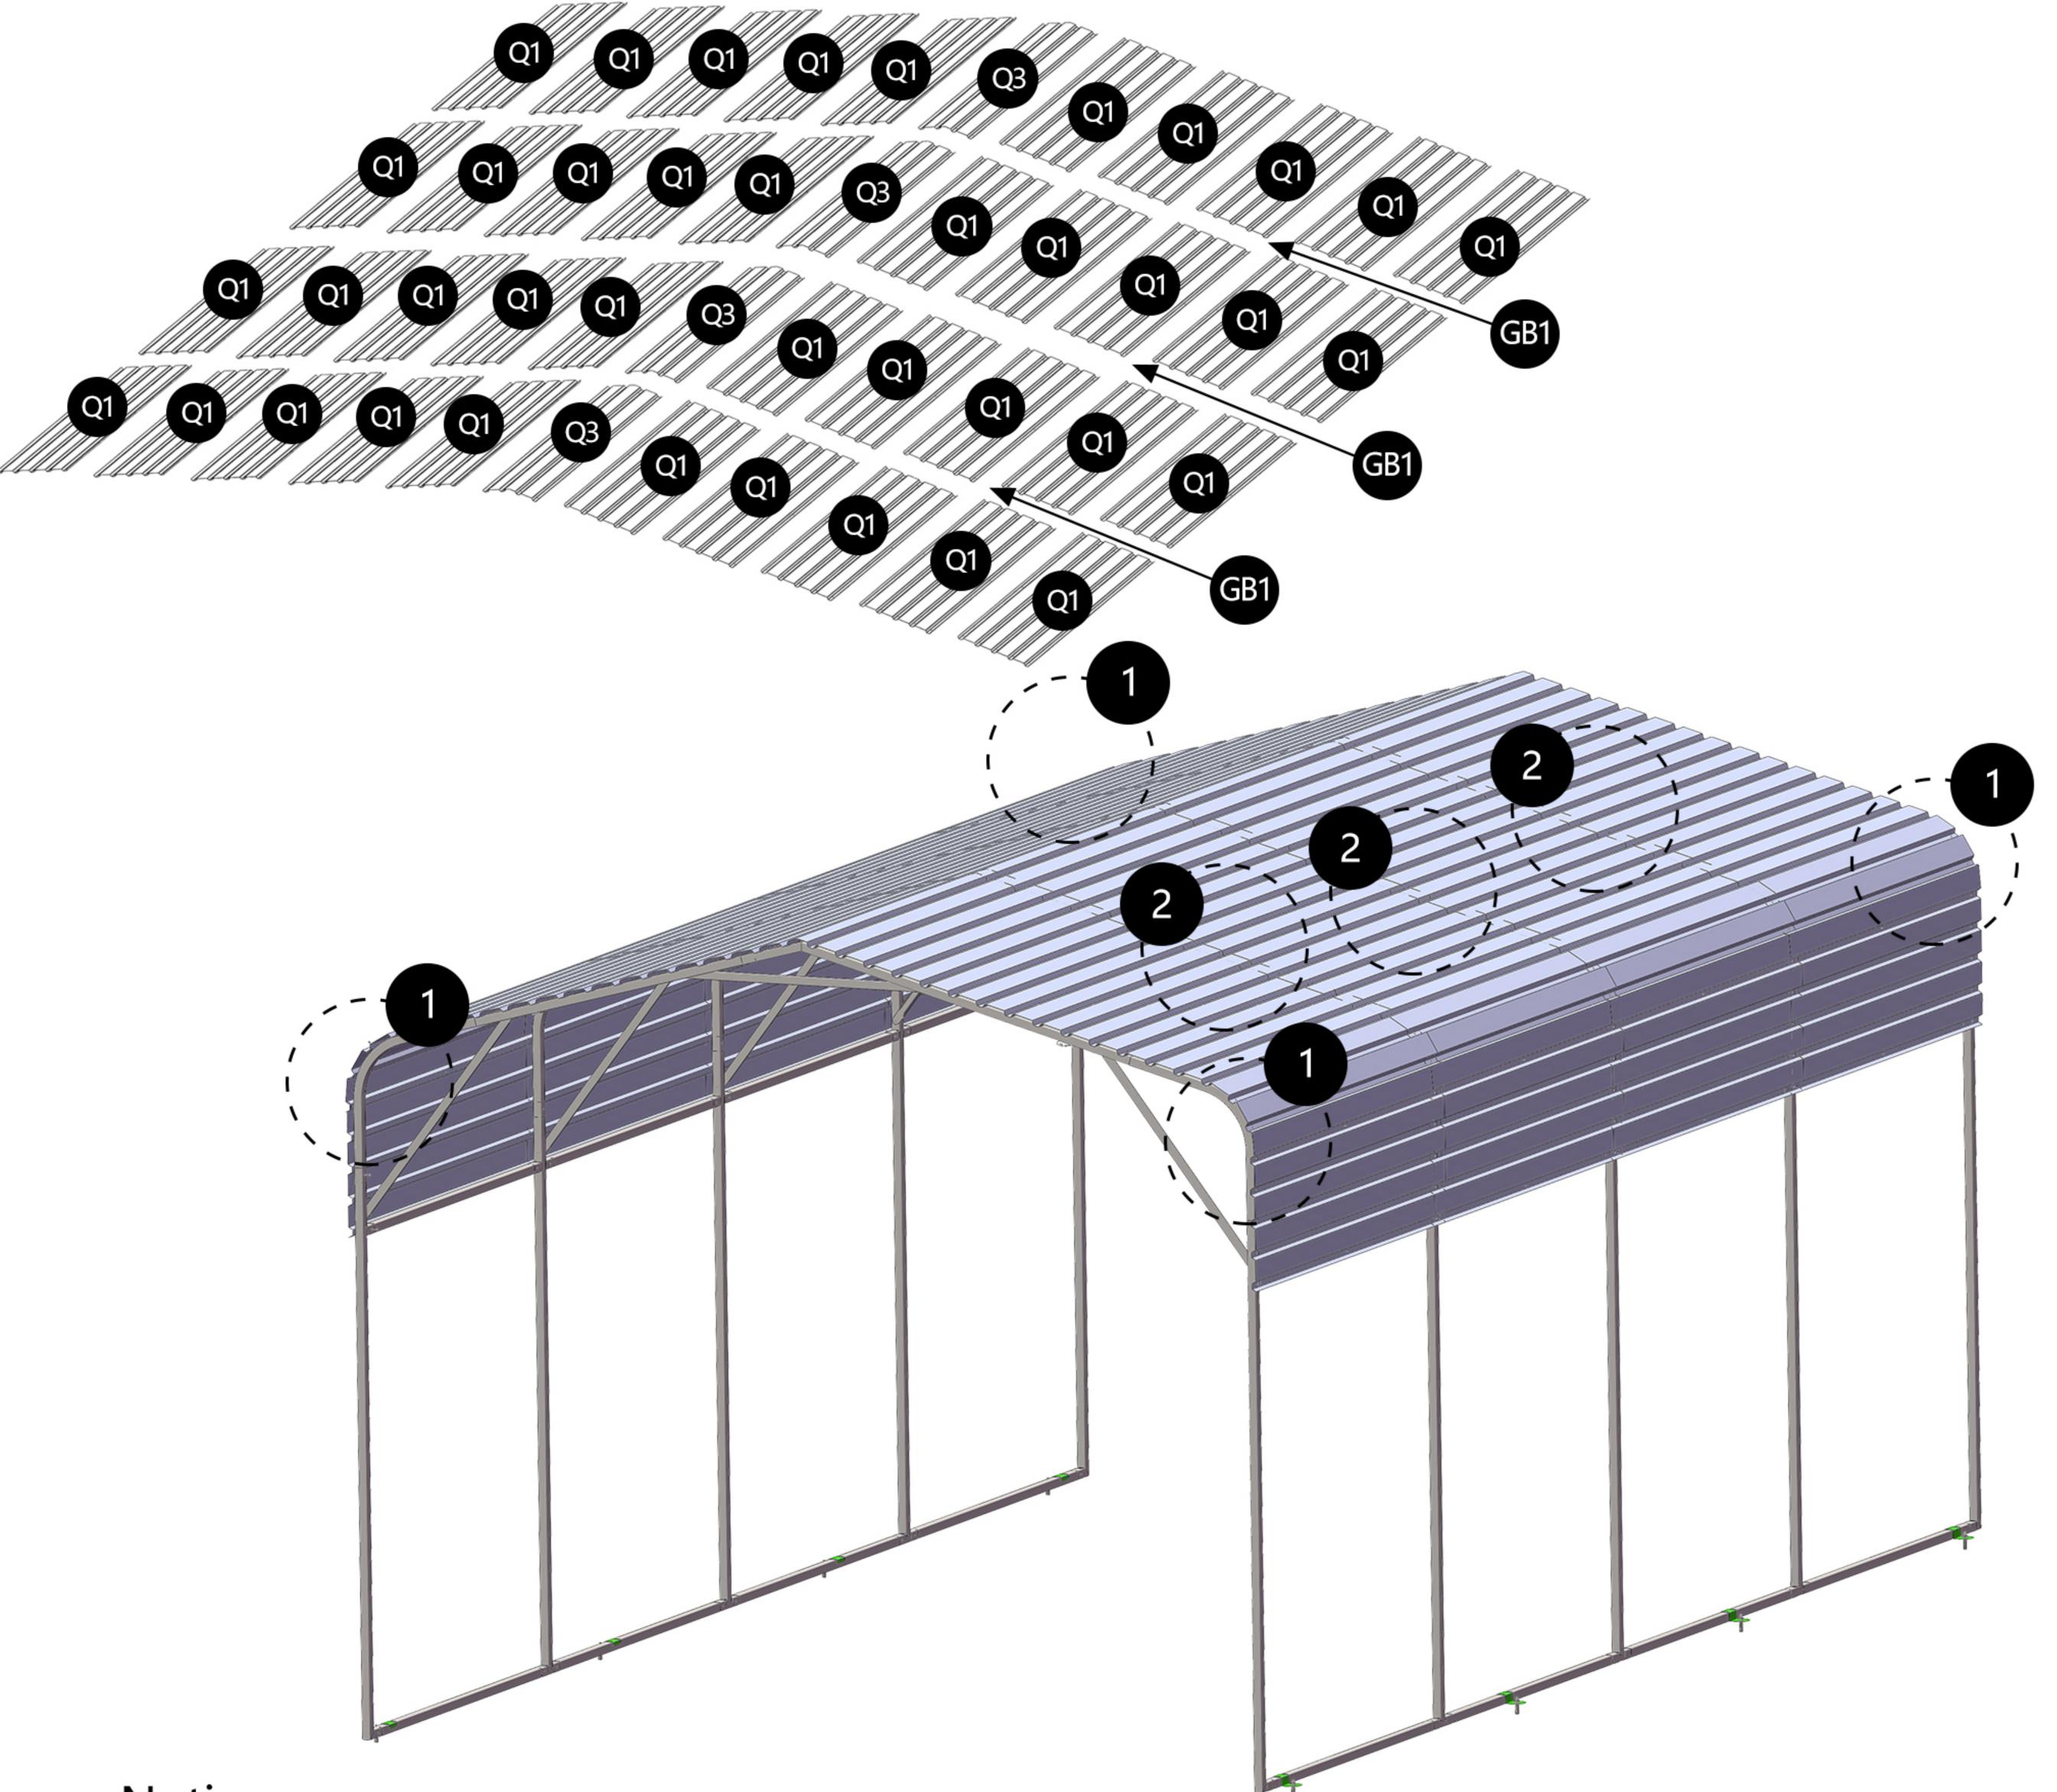

Notice:


As shown in the figure above, Q1 and Q3 are installed on the roof of the shed in turn, and the adjacent two pieces should overlap and be fixed with F1.

After each row is installed, GB1 needs to be affixed between each row of tiles for waterproof.

- 1 Description: The corners are fixed with F5 screws.
- 2 Description: Position 2 and other positions are fixed with F1.

Notice:

- GB1 Description: During the installation of Q1 and Q3, GB1 is required between every 2 rows.
- GB1 is placed at the joint of each 2 tiles and pasted to play a sealing and waterproof role.
- GB2 Description: This is the last installation step,
- GB2 is located on the outermost tile of the entire garage, pasted and used to prevent edge collision.

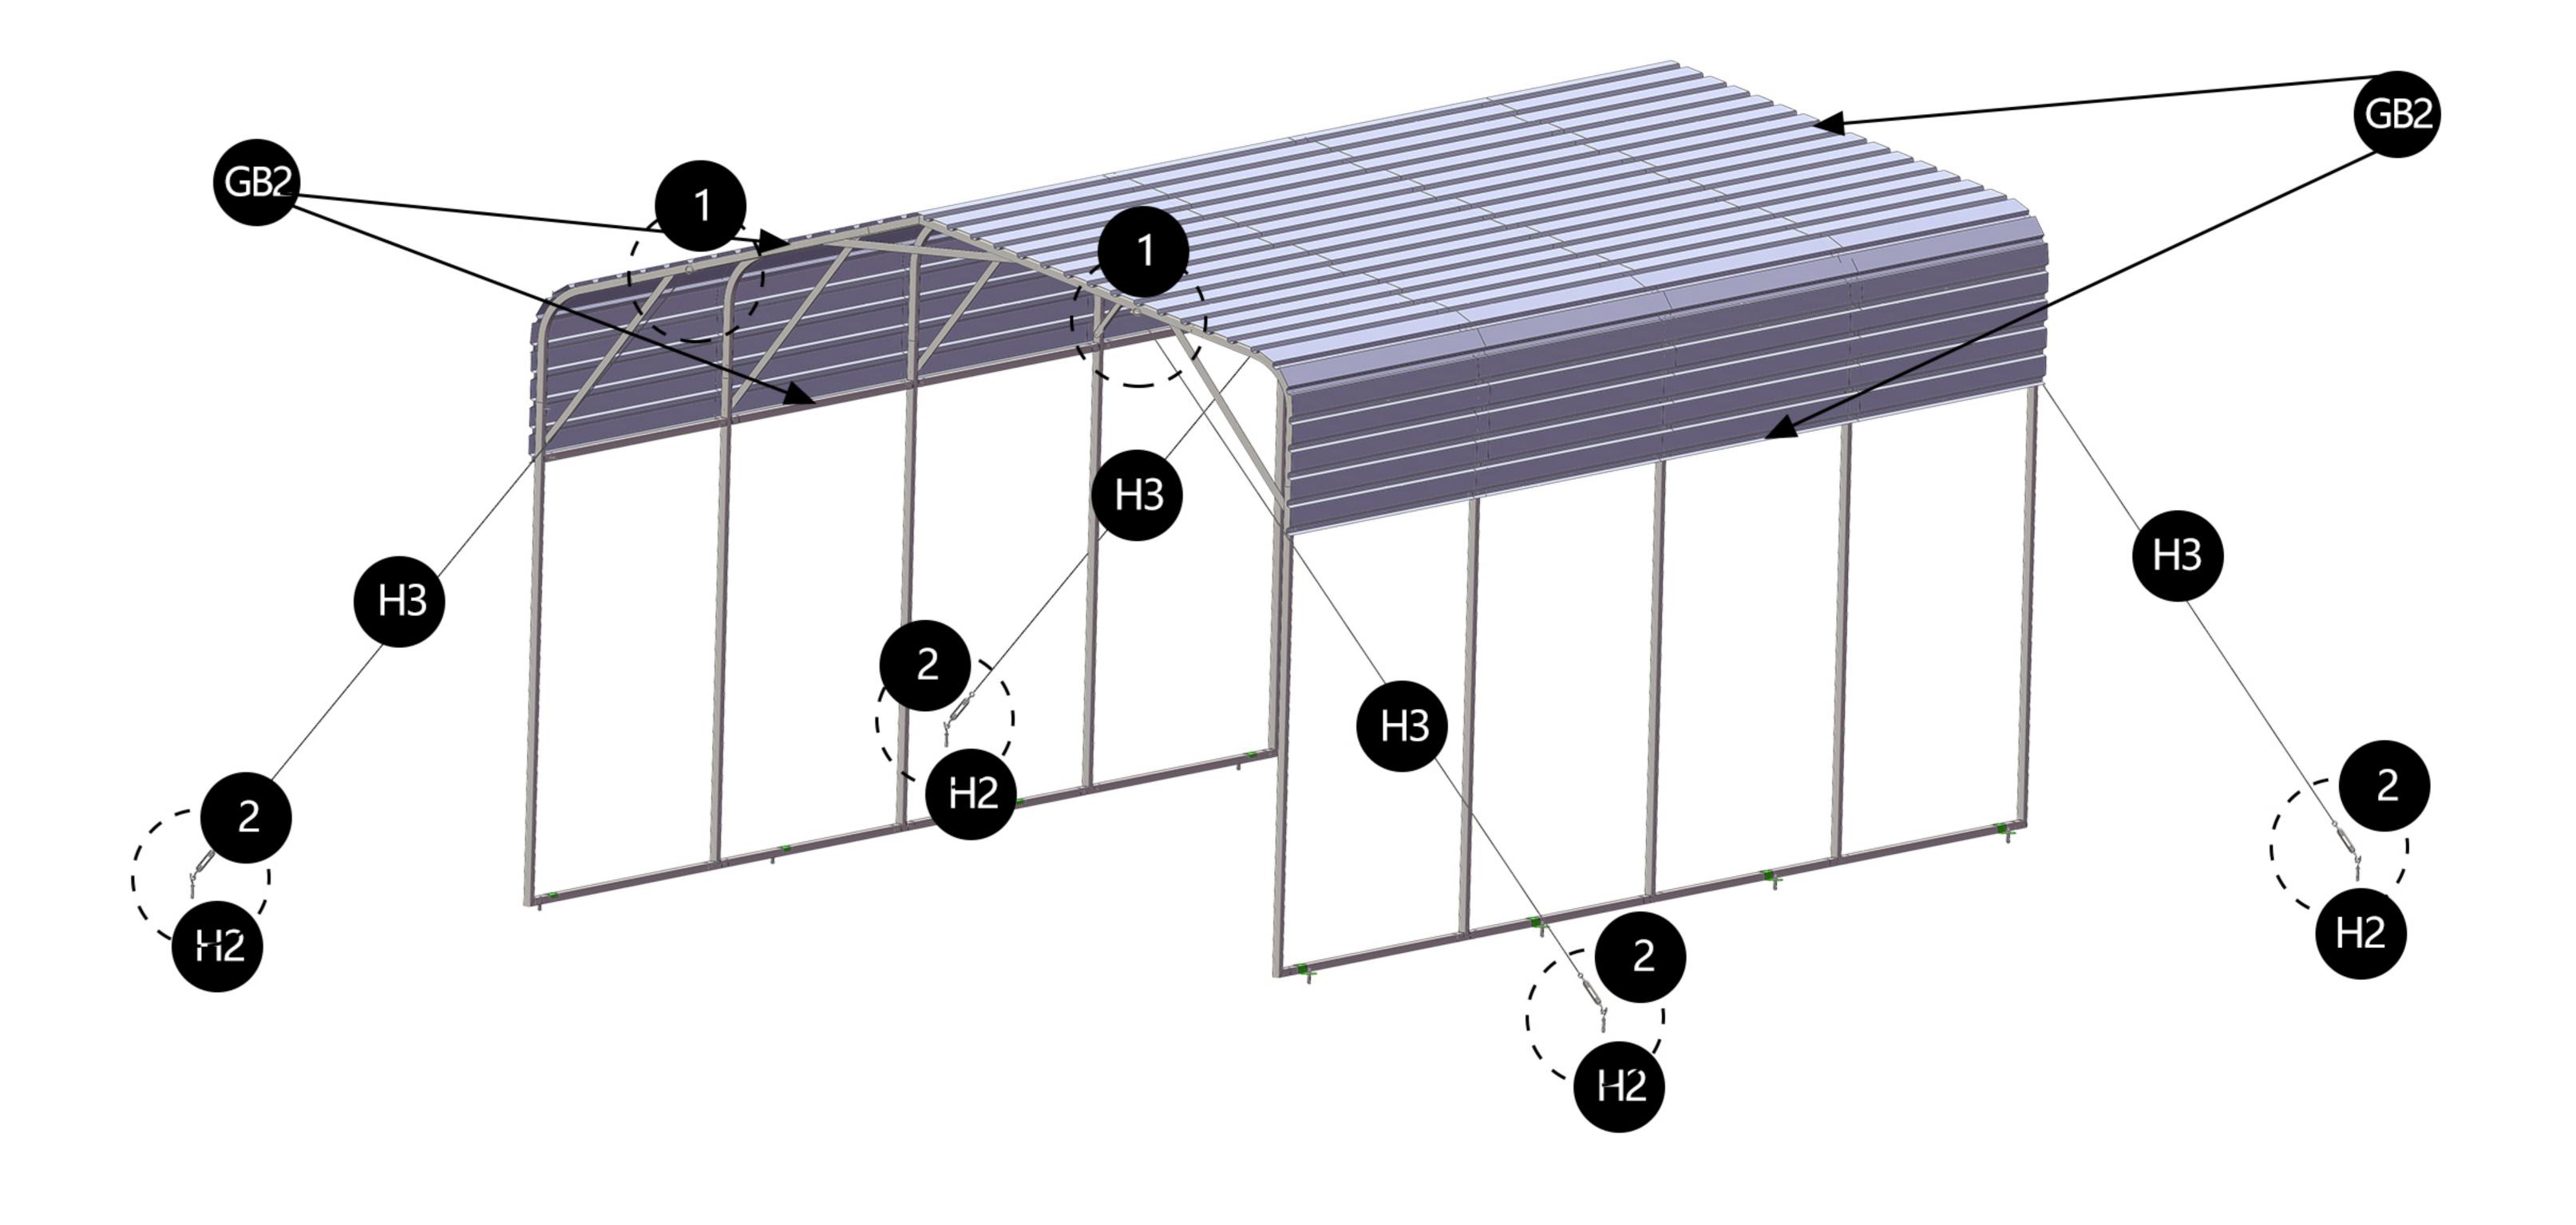

Notice:

As shown in the figure, after fixing H2 to the corresponding position on the ground,

- 1 Description: Fix H3 to the hook of the shed.
- 2 Description: Connect the other end of H3 and H2, pull and fix.

