

# Metal Garden Shed OWNER'S MANUAL

Size 5 Ft X 3 Ft



Tall walk in Shed

Quick & Easy Assembly

Ridge Reinforced walls


Wide Double Doors

Available in Various Sizes

Take care of sharp edges;

Please wear gloves;

It will take 2 people 2 - 3 hours to install.

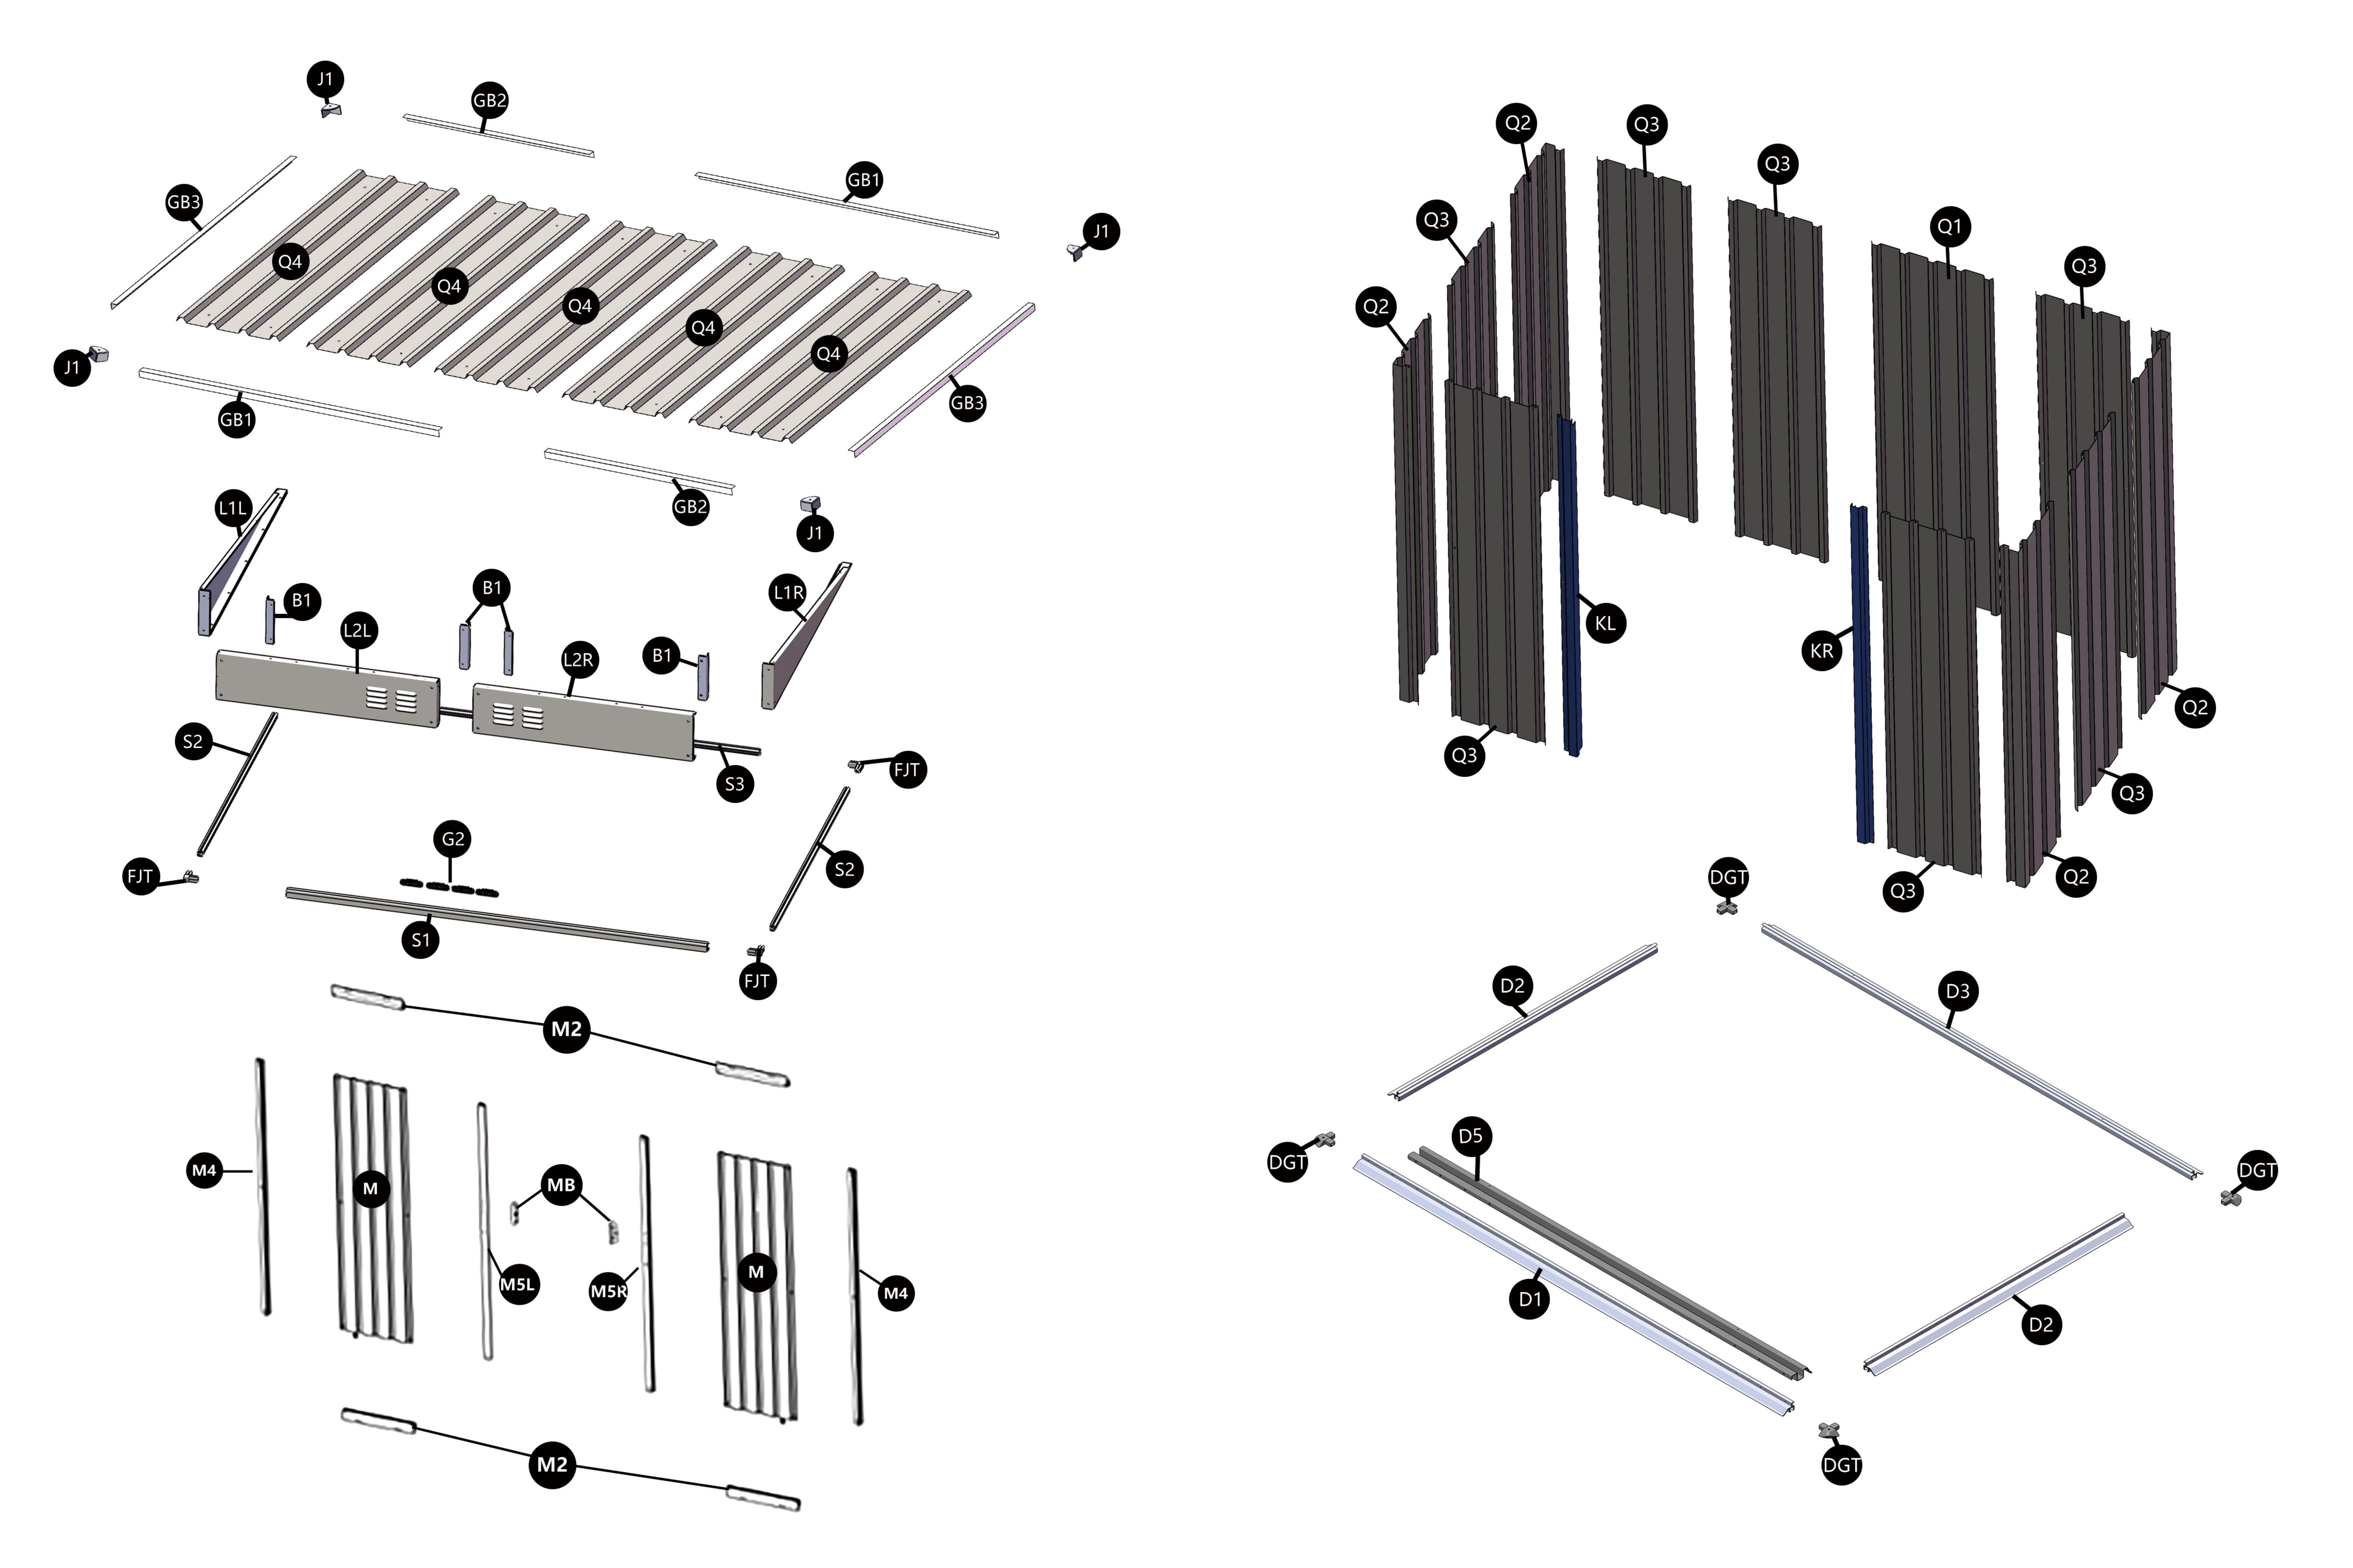

NO1 PAR  D1	T QTY
D2	1
D3	
D5 \$\frac{5}{5}\$	2
S1 5	1
	1
	1
	2
	1
KL /	1
KR	1
L1L	3
L1R	1
L2L	1
L2R	7 1
B1	4
GB1 \istail	
GB2	, 2

PAF	RTSL	IST
N01	PART	QTY
GB3		2
M2		4
M3		4
M4		2
M5L		1
M5R		1
Q1		1
Q2		4
Q3		7
Q4		5
Μ		2
J1		4
MB		2
FJT		4
DGT		4
G2	• • • •	4

104	<b>DAD</b>	
NO1	PART	QTY
LSM		
GD		4
F1		
F3		
F4		

Install LSM at screw exposure, Prevent collisions.

## Warning & Attention:

- -Take care of sharp edges; Please wear gloves;
- -You are advised to read the whole procedure before installing it;
- -Try to assemble this product on the flat ground, otherwise it is difficult tocarry out;
- -It would be much easier to assemble the product with three or morepeople;
- -All panels are clearly marked and care should be taken to use the bcorrect one. It is important that these instructions are followed step by step;

Each screw has a surplus quantity, which can be used in reserve

-After assembly, please check whether all screws are tightened, to preventparts from falling apart.


## Tools:



Gloves



Ladder

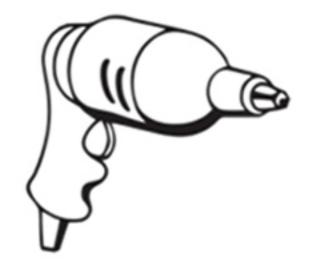


Electric drill




Phillips screwdriver



Safety Helmet Hat

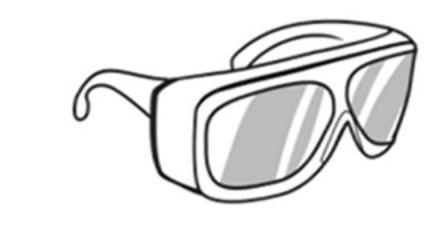

goggles

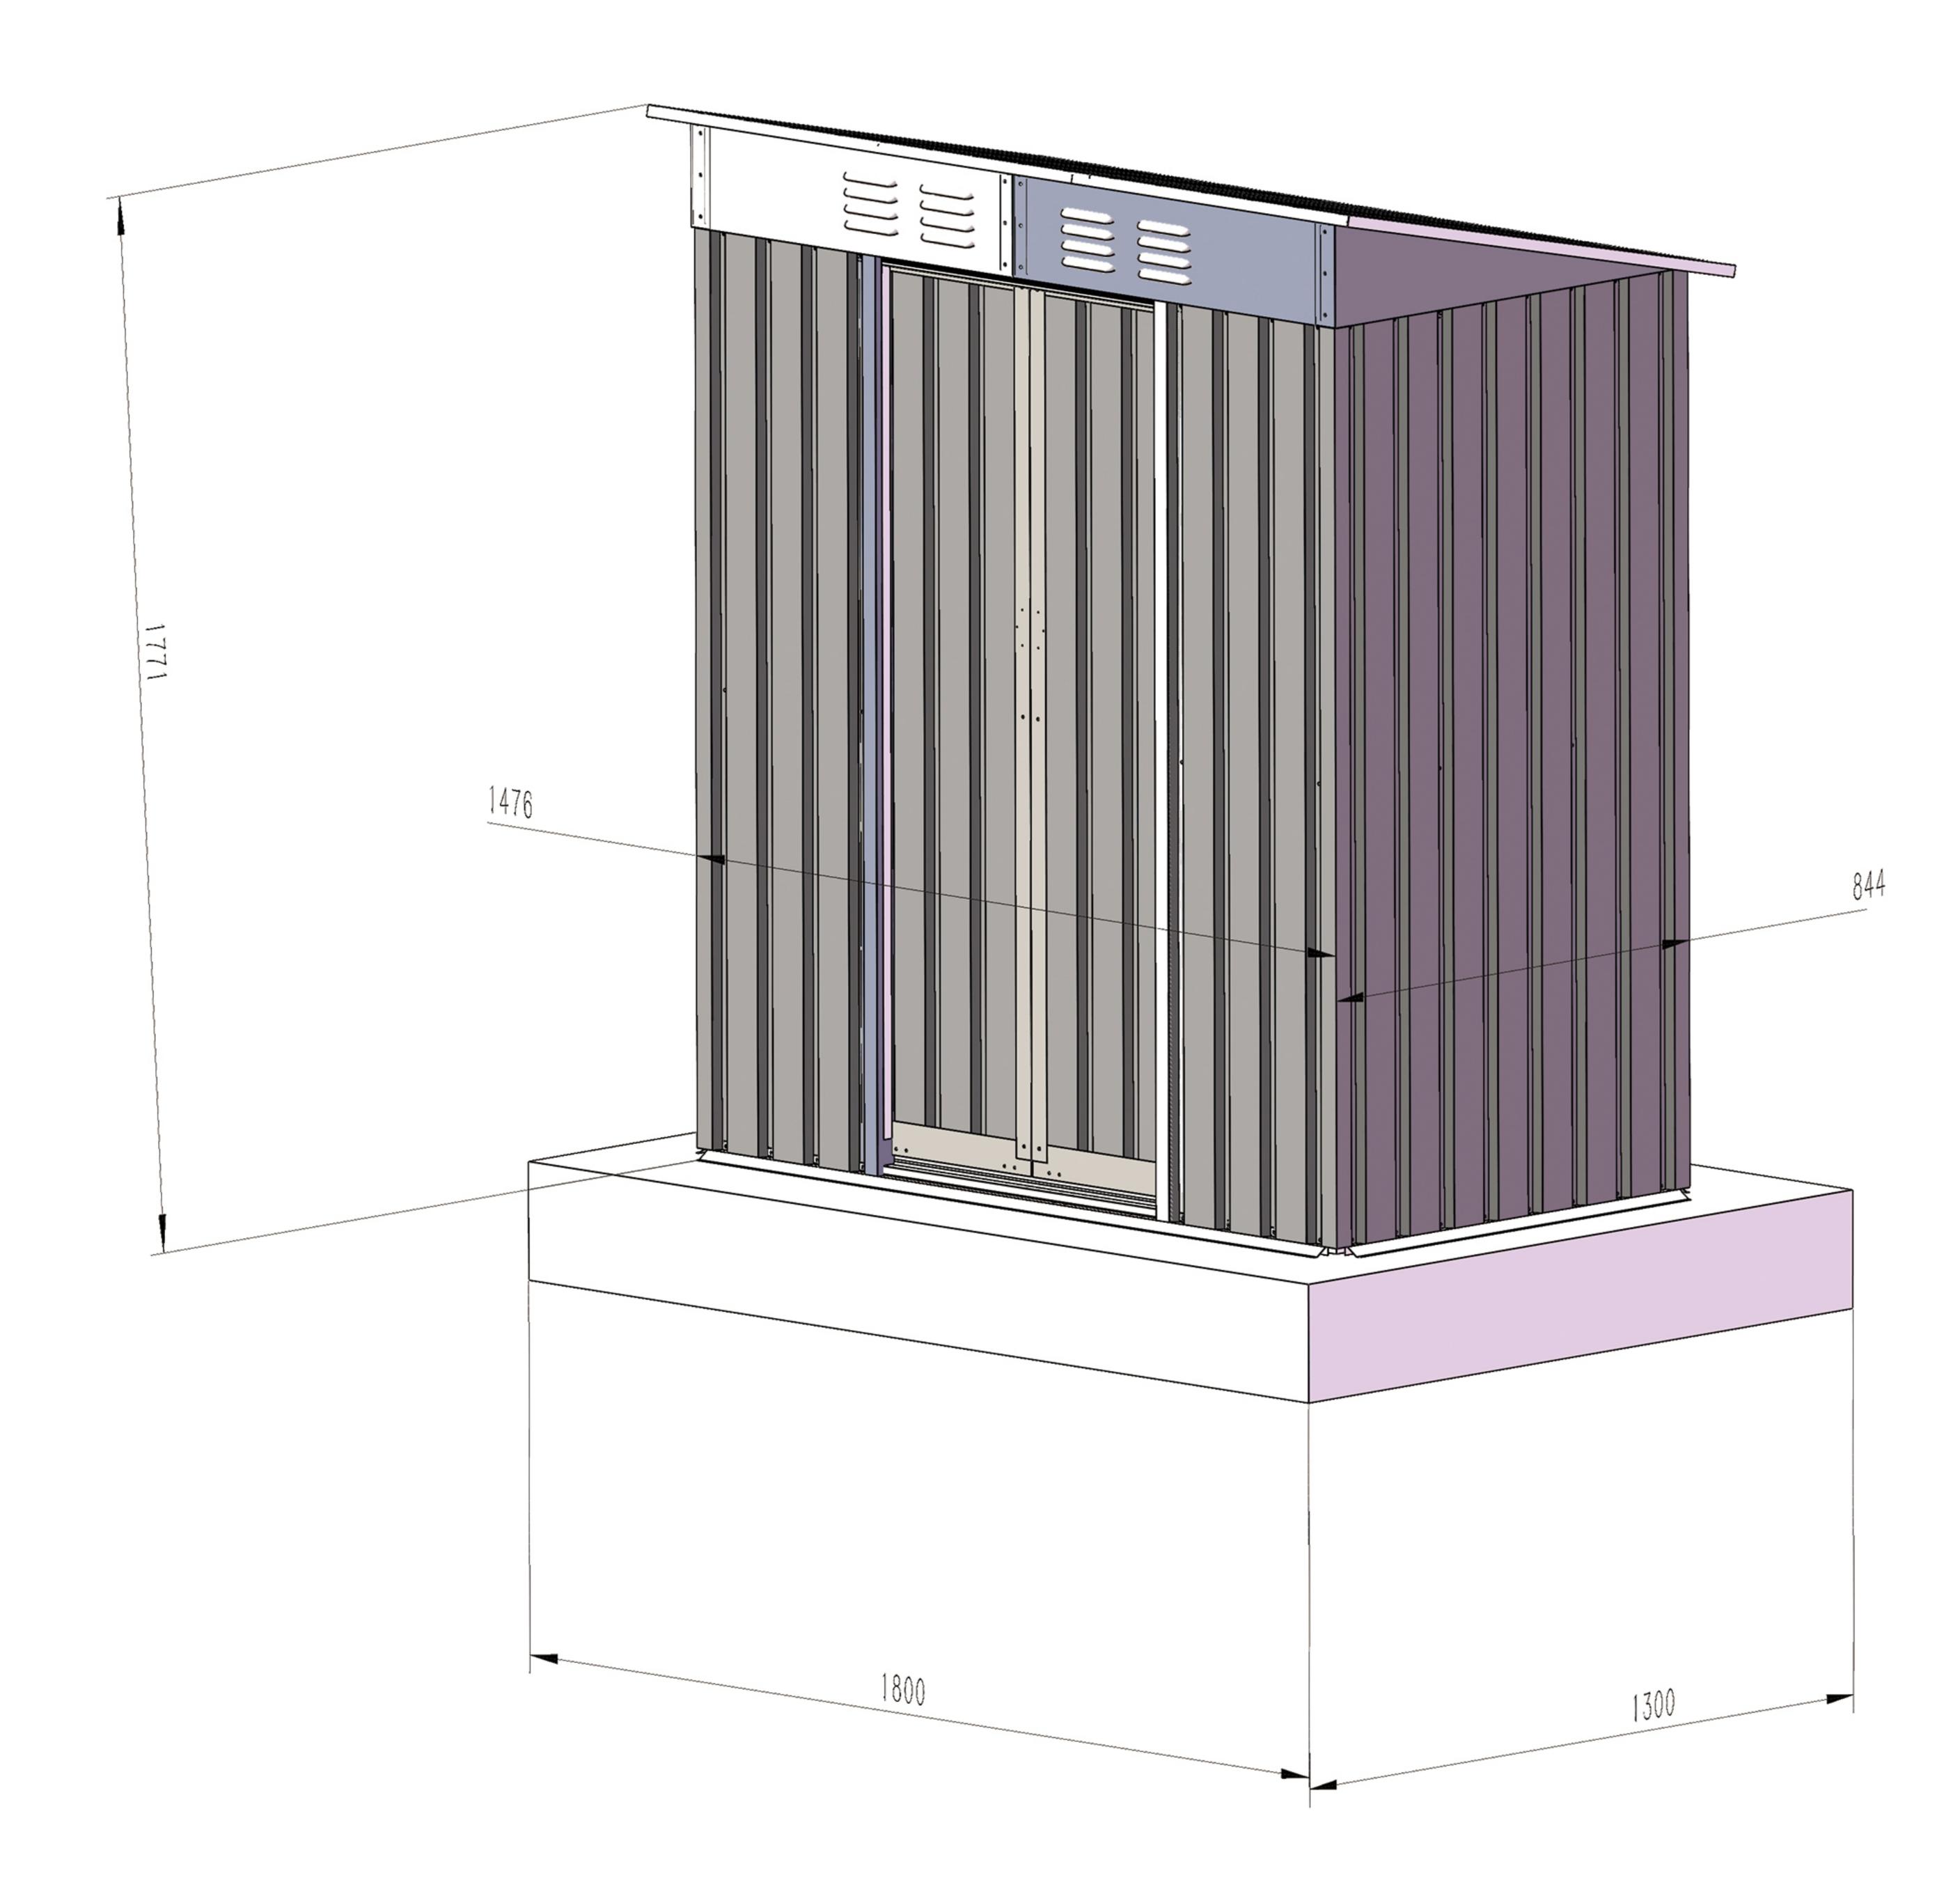




Note: Take care of sharp edges.

All panels are clearly marked and care should be taken to use the bcorrect one. It is important that these instructions are followed step by step.

NO.	PART	Qty.	NO.	PART	Qty.
D1	7	1	D3	7	1
D2	7	2	DGT		4

NO.	PART	Qty.
F1		

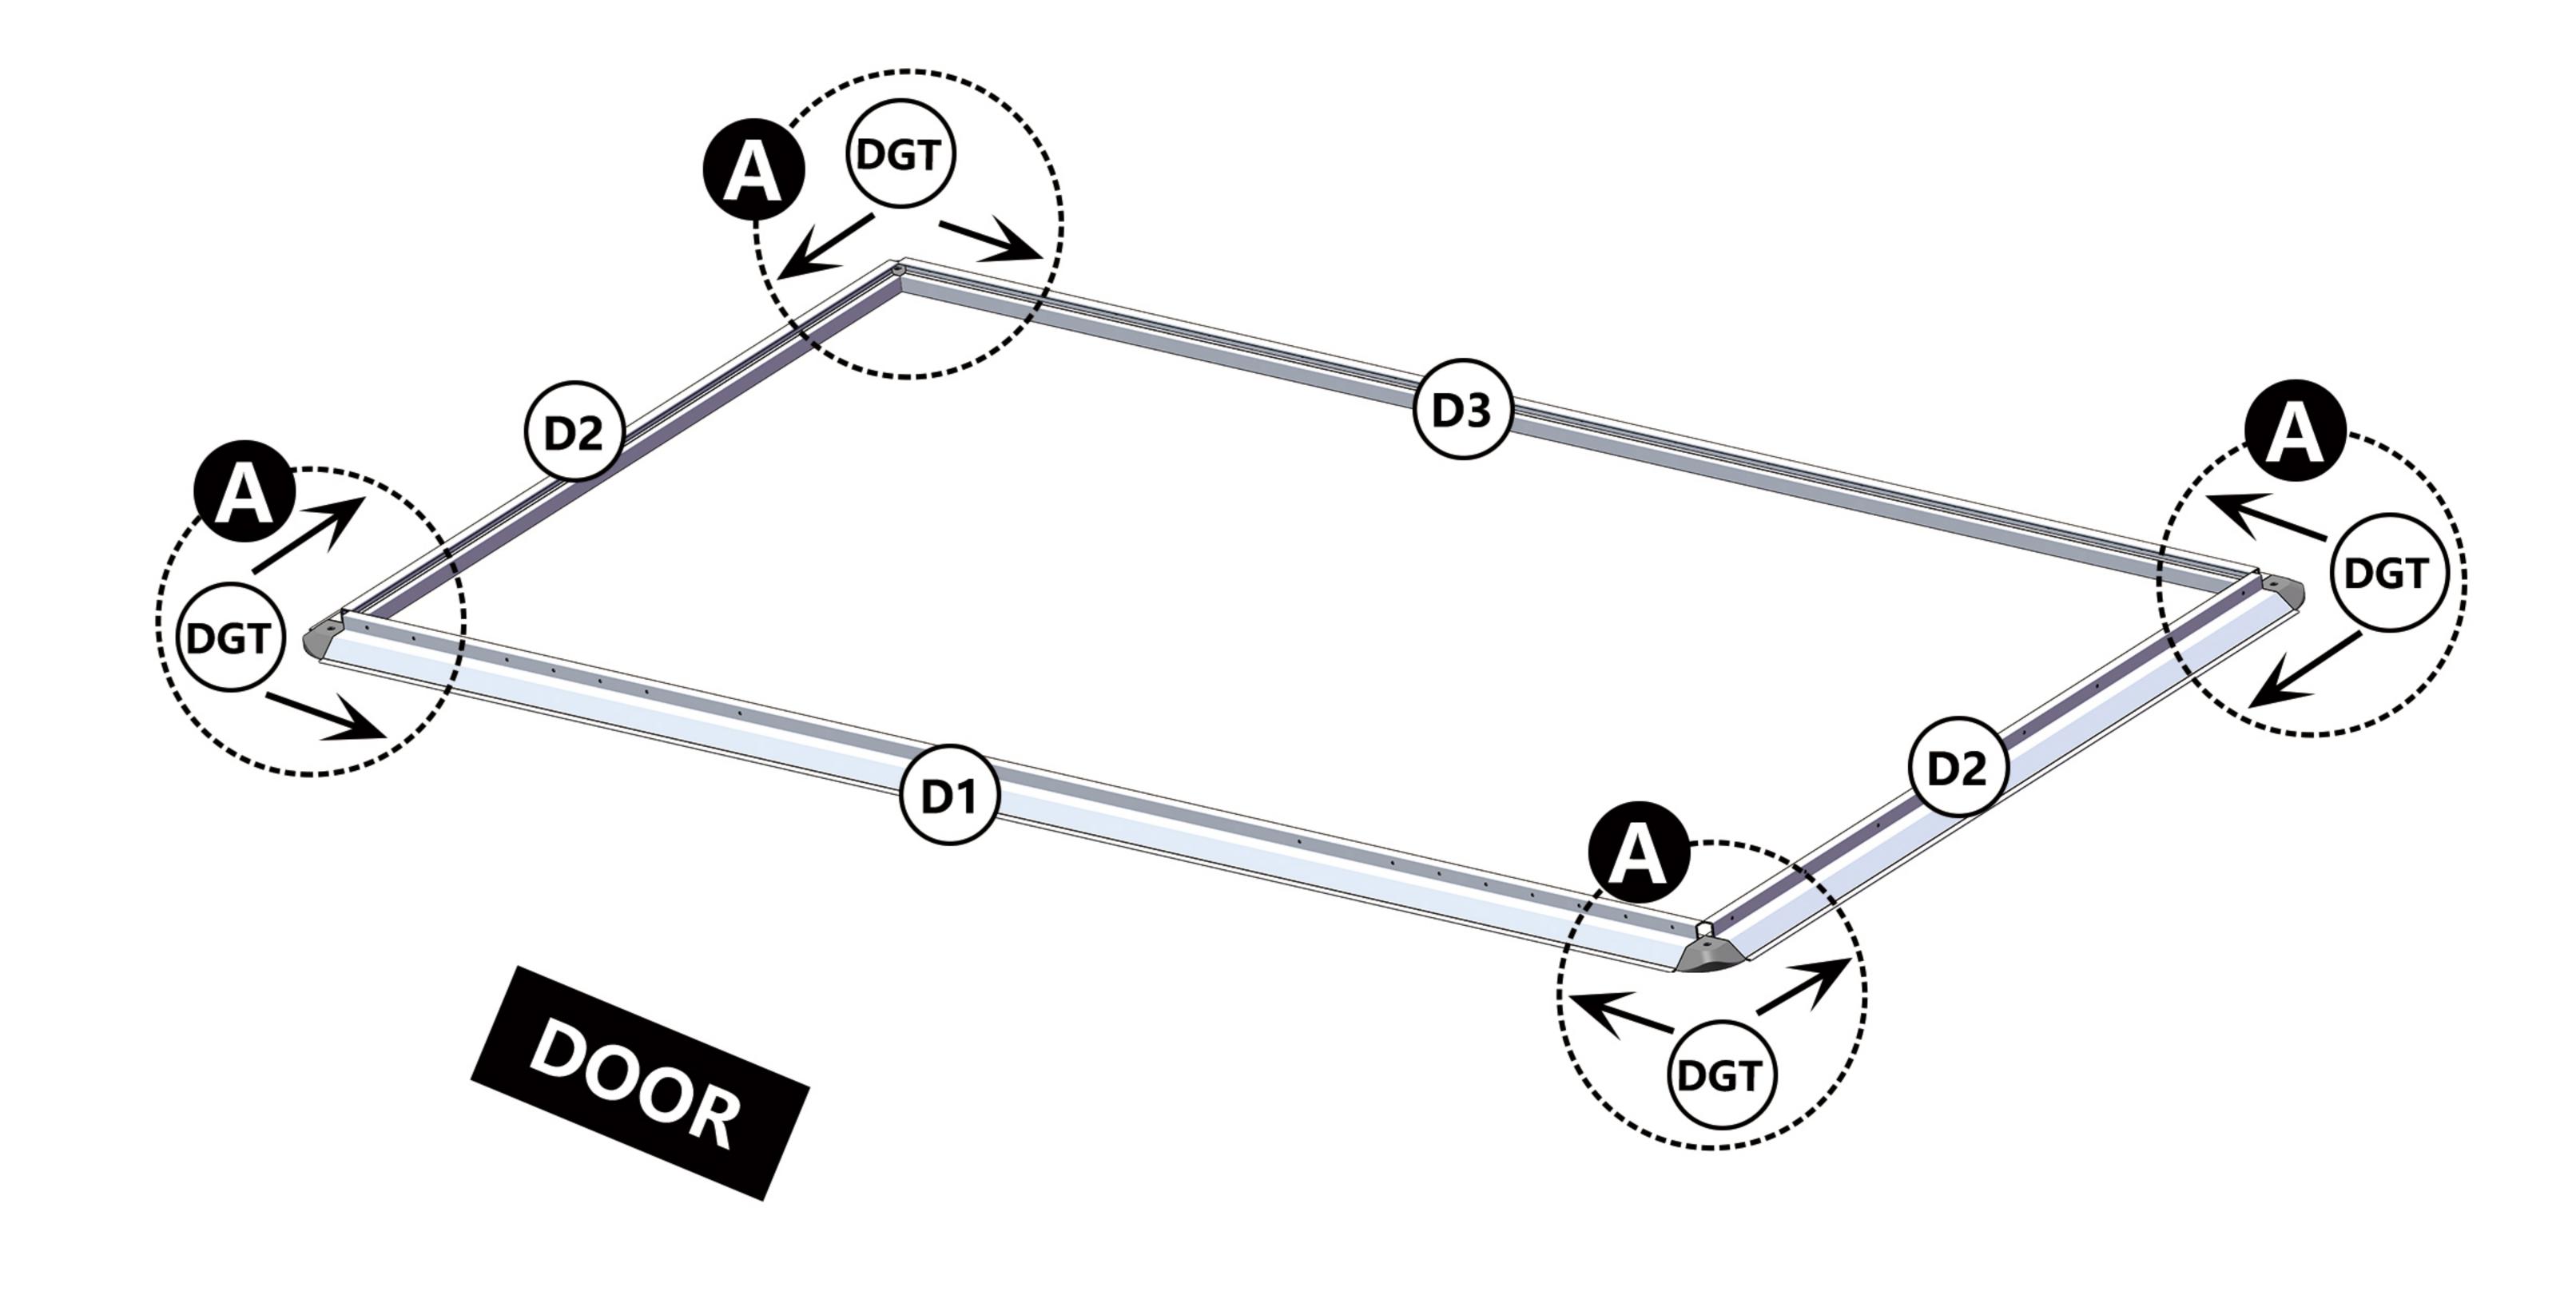


Notice:

DGT installation: Two ground pallets are connected to the DGT as shown in the figure. Each DGT needs to be fixed with two F1s.




The installation space should be flat, and at least 1800x1300mm. The foundation is fixed on the ground in this space.

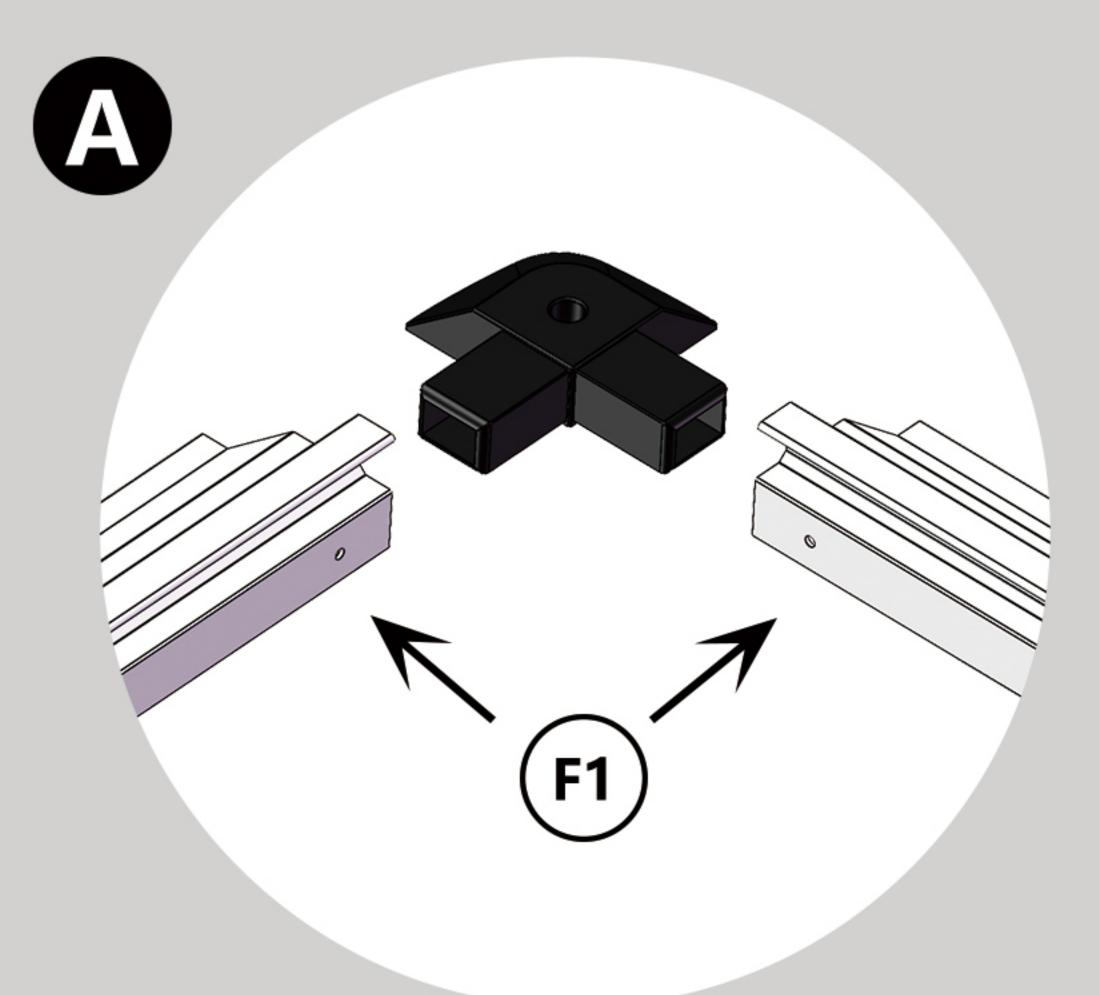




### Note: Please wear gloves

NO.	PART	Qty.
D5		1

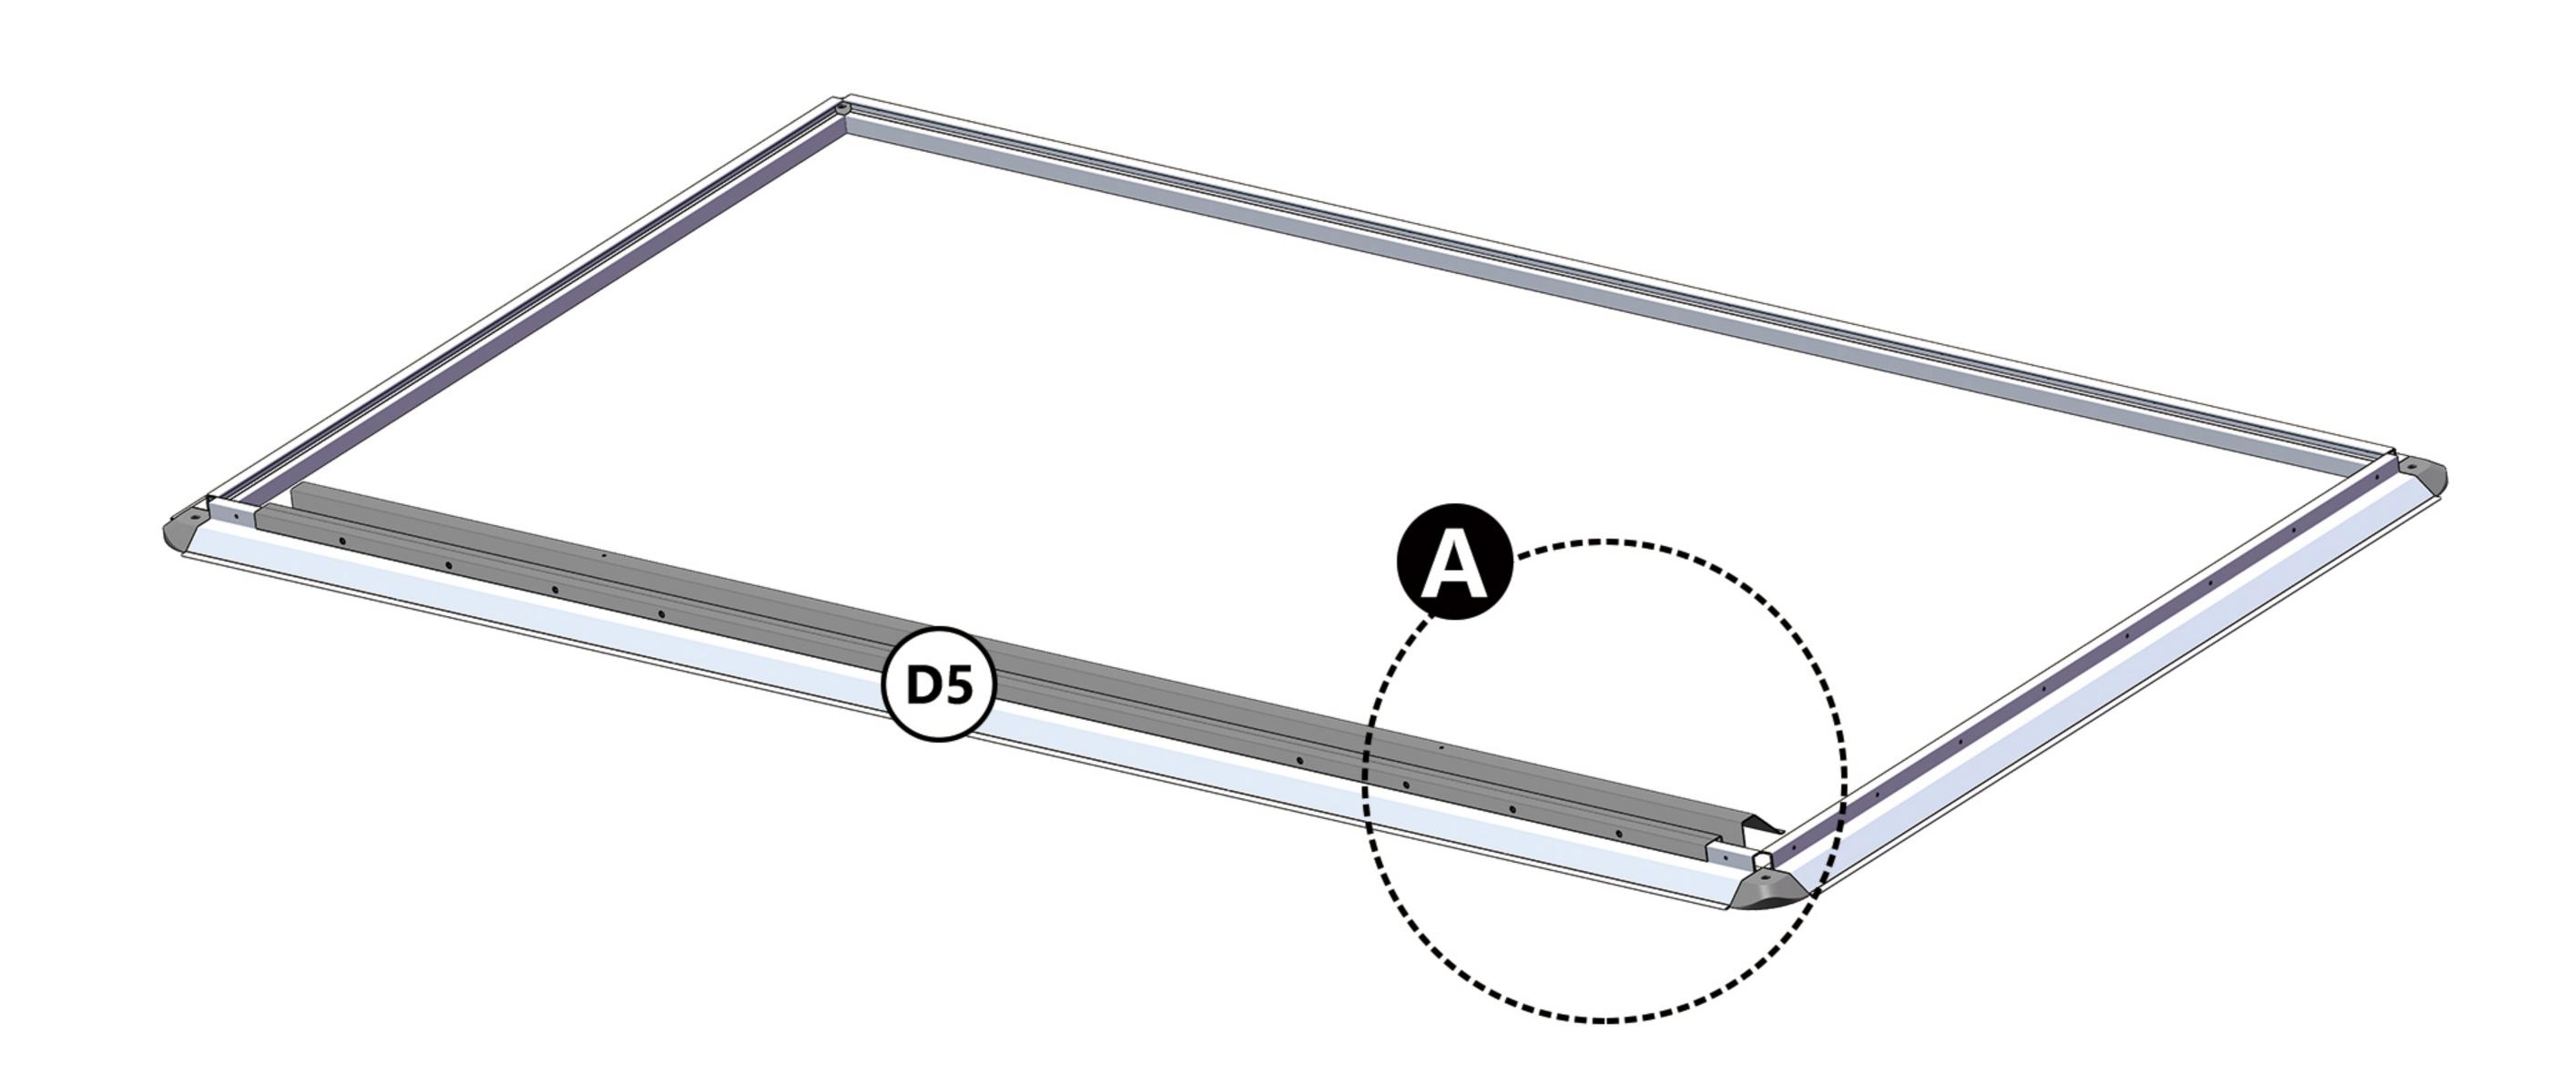


#### Notice:


You do not need to install screws in this step. Align the holes, which are the same as in the previous step.

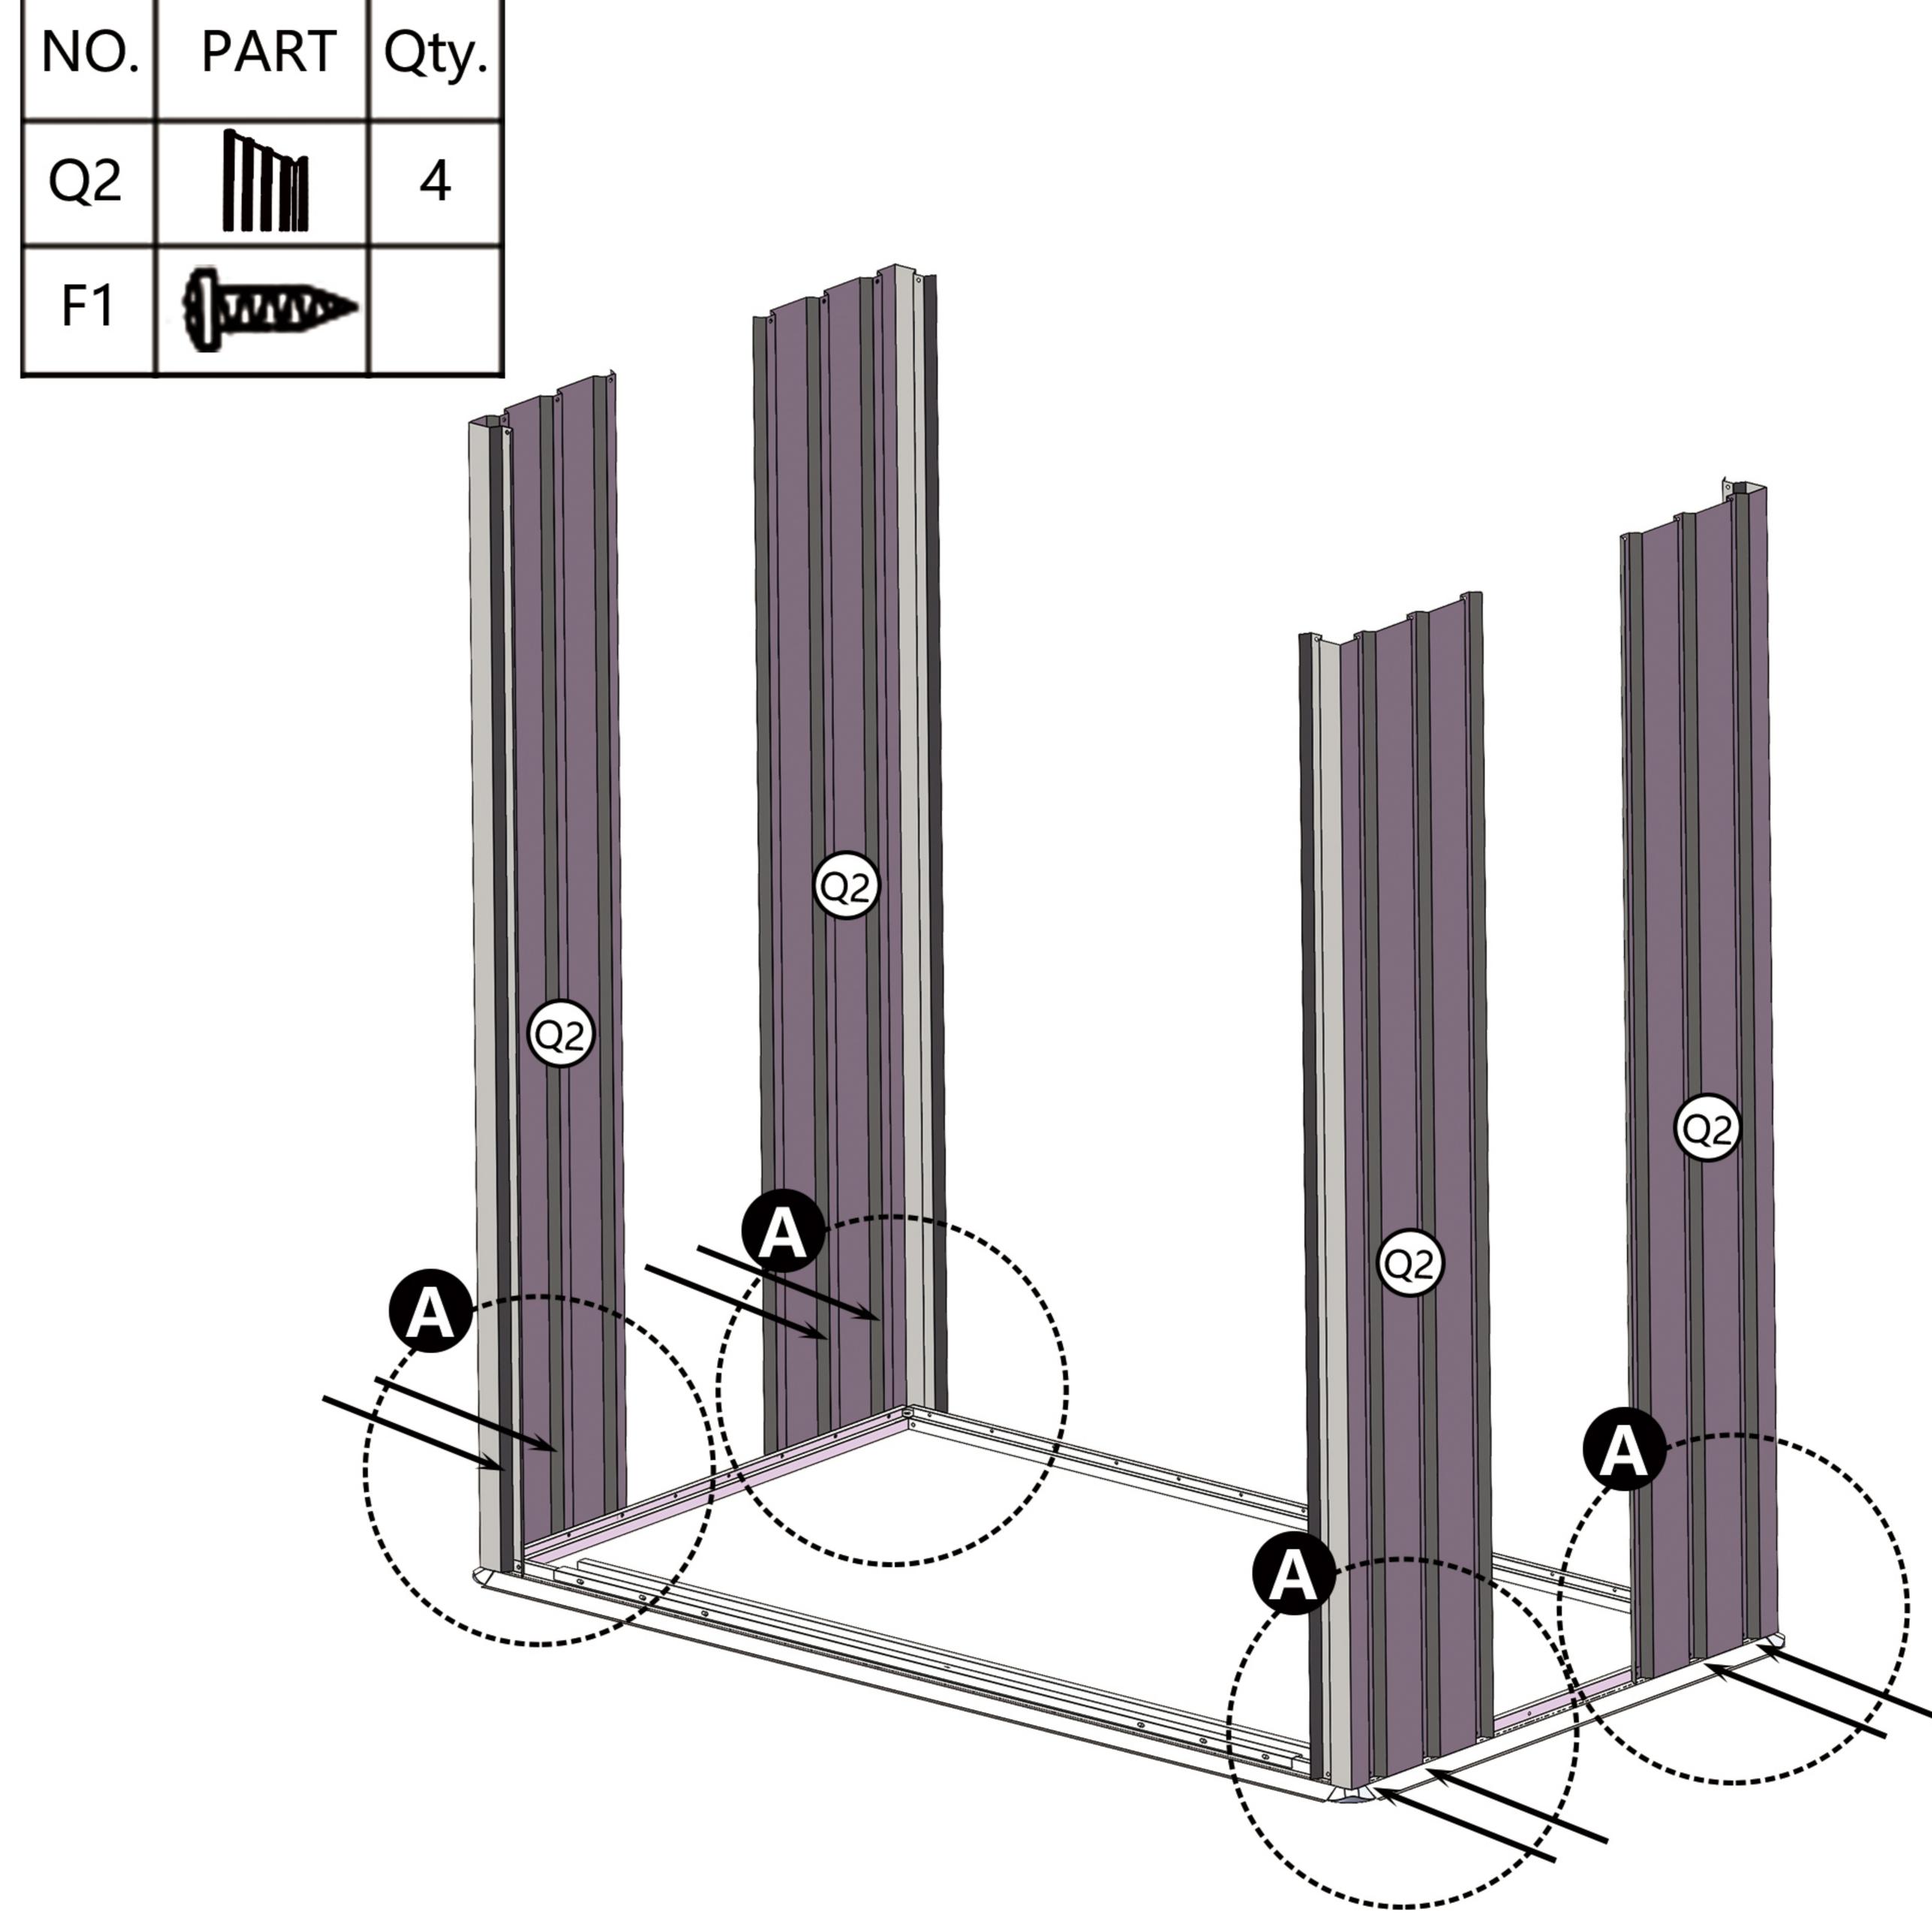


#### Notice:

In this step, only the two holes in the middle of Q2 need to be installed and reserved on both sides. The reserved holes are shared with the following steps.

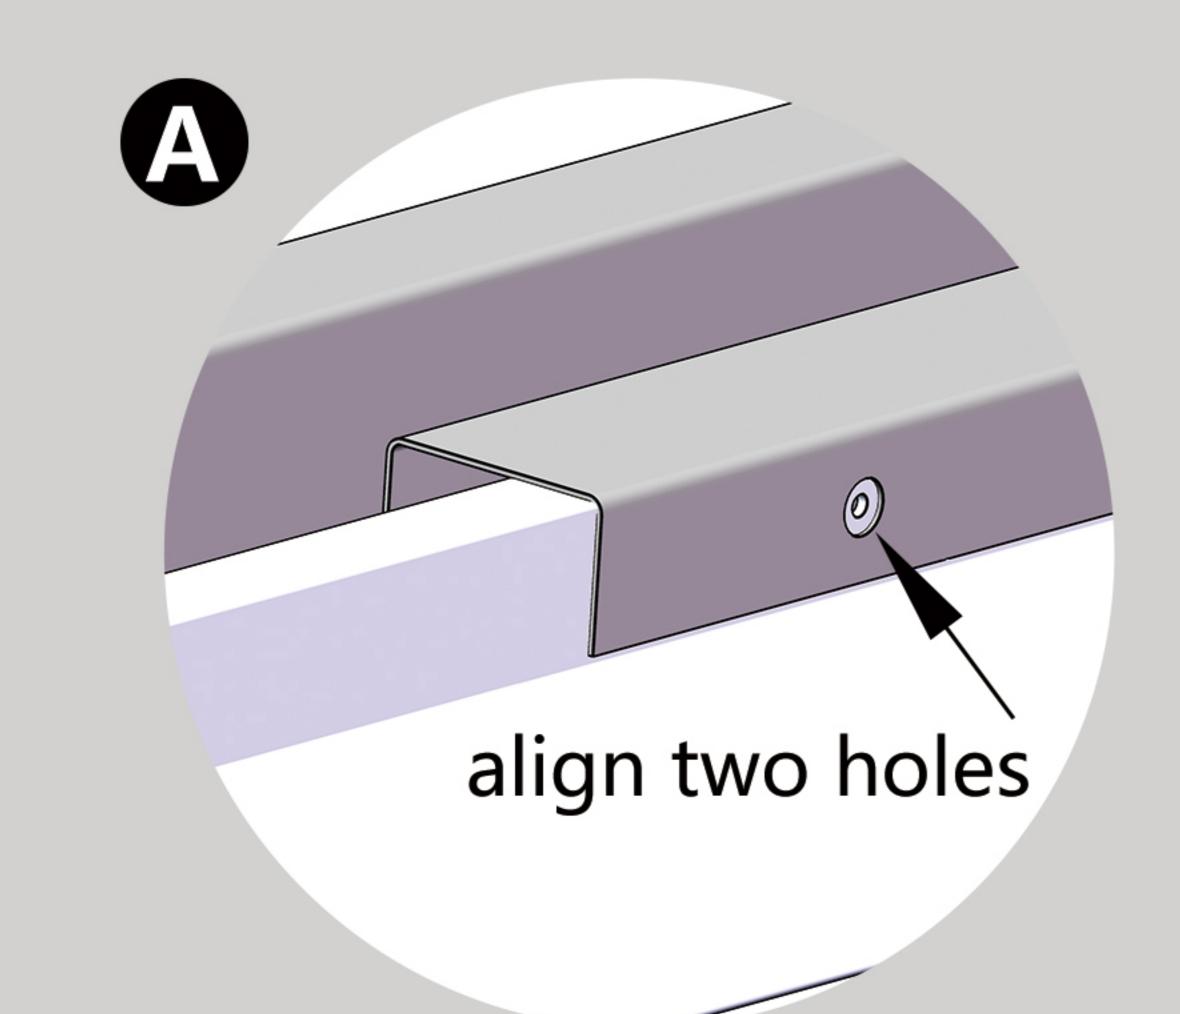


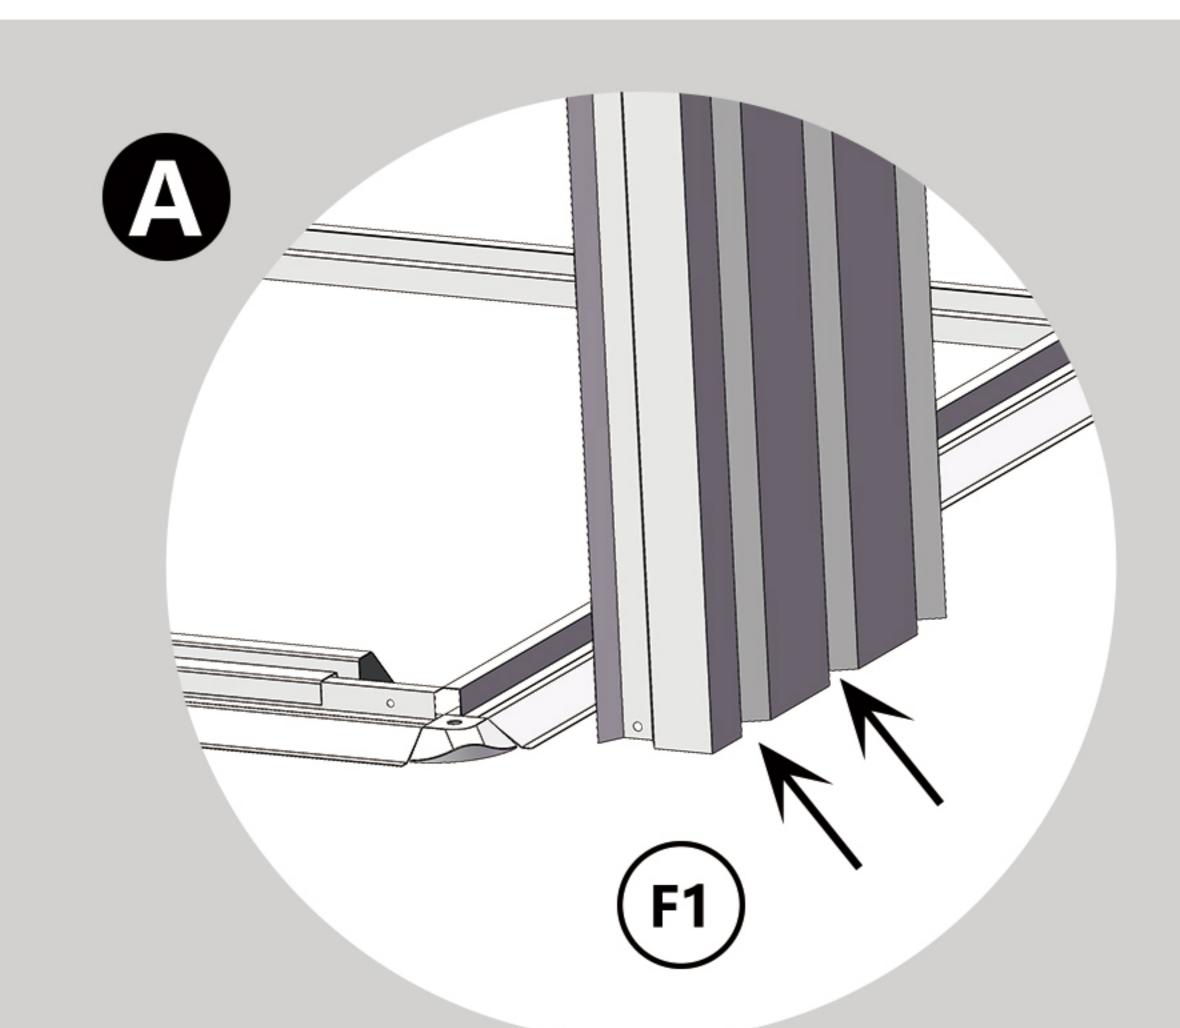

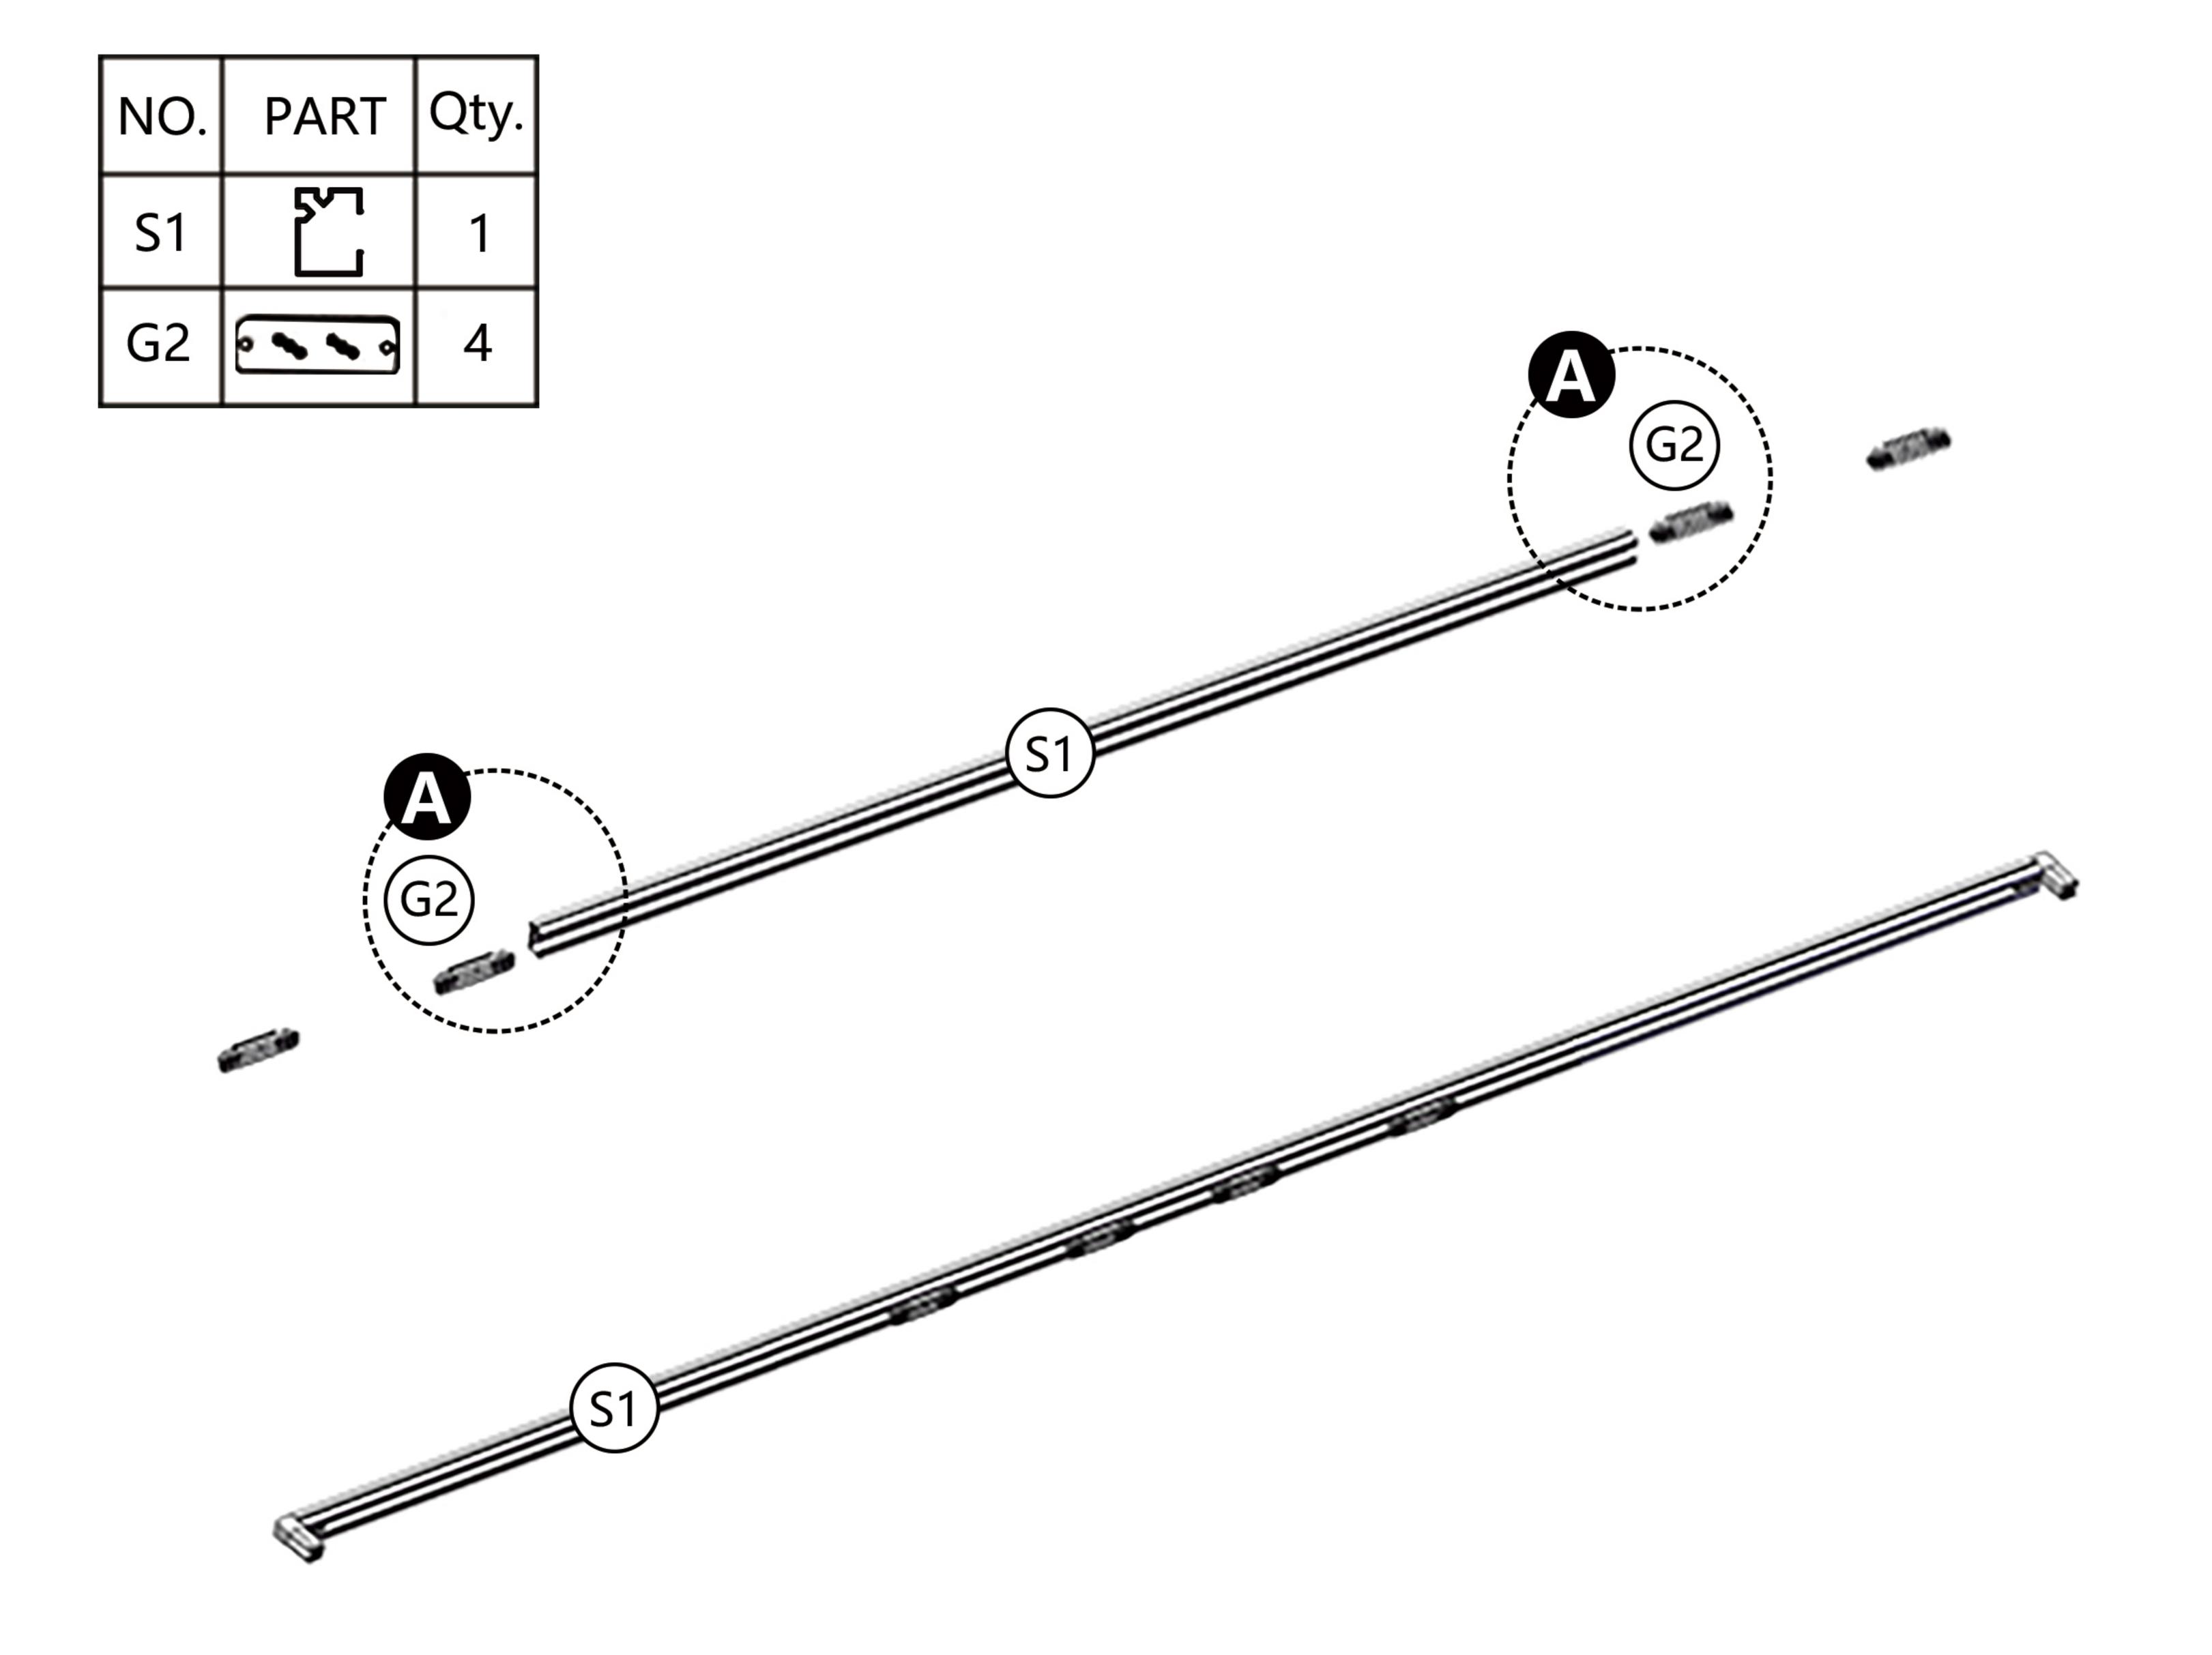


Notice:

The G2 was placed on the S1,before shipping. If it slides out, follow step A to insert it.

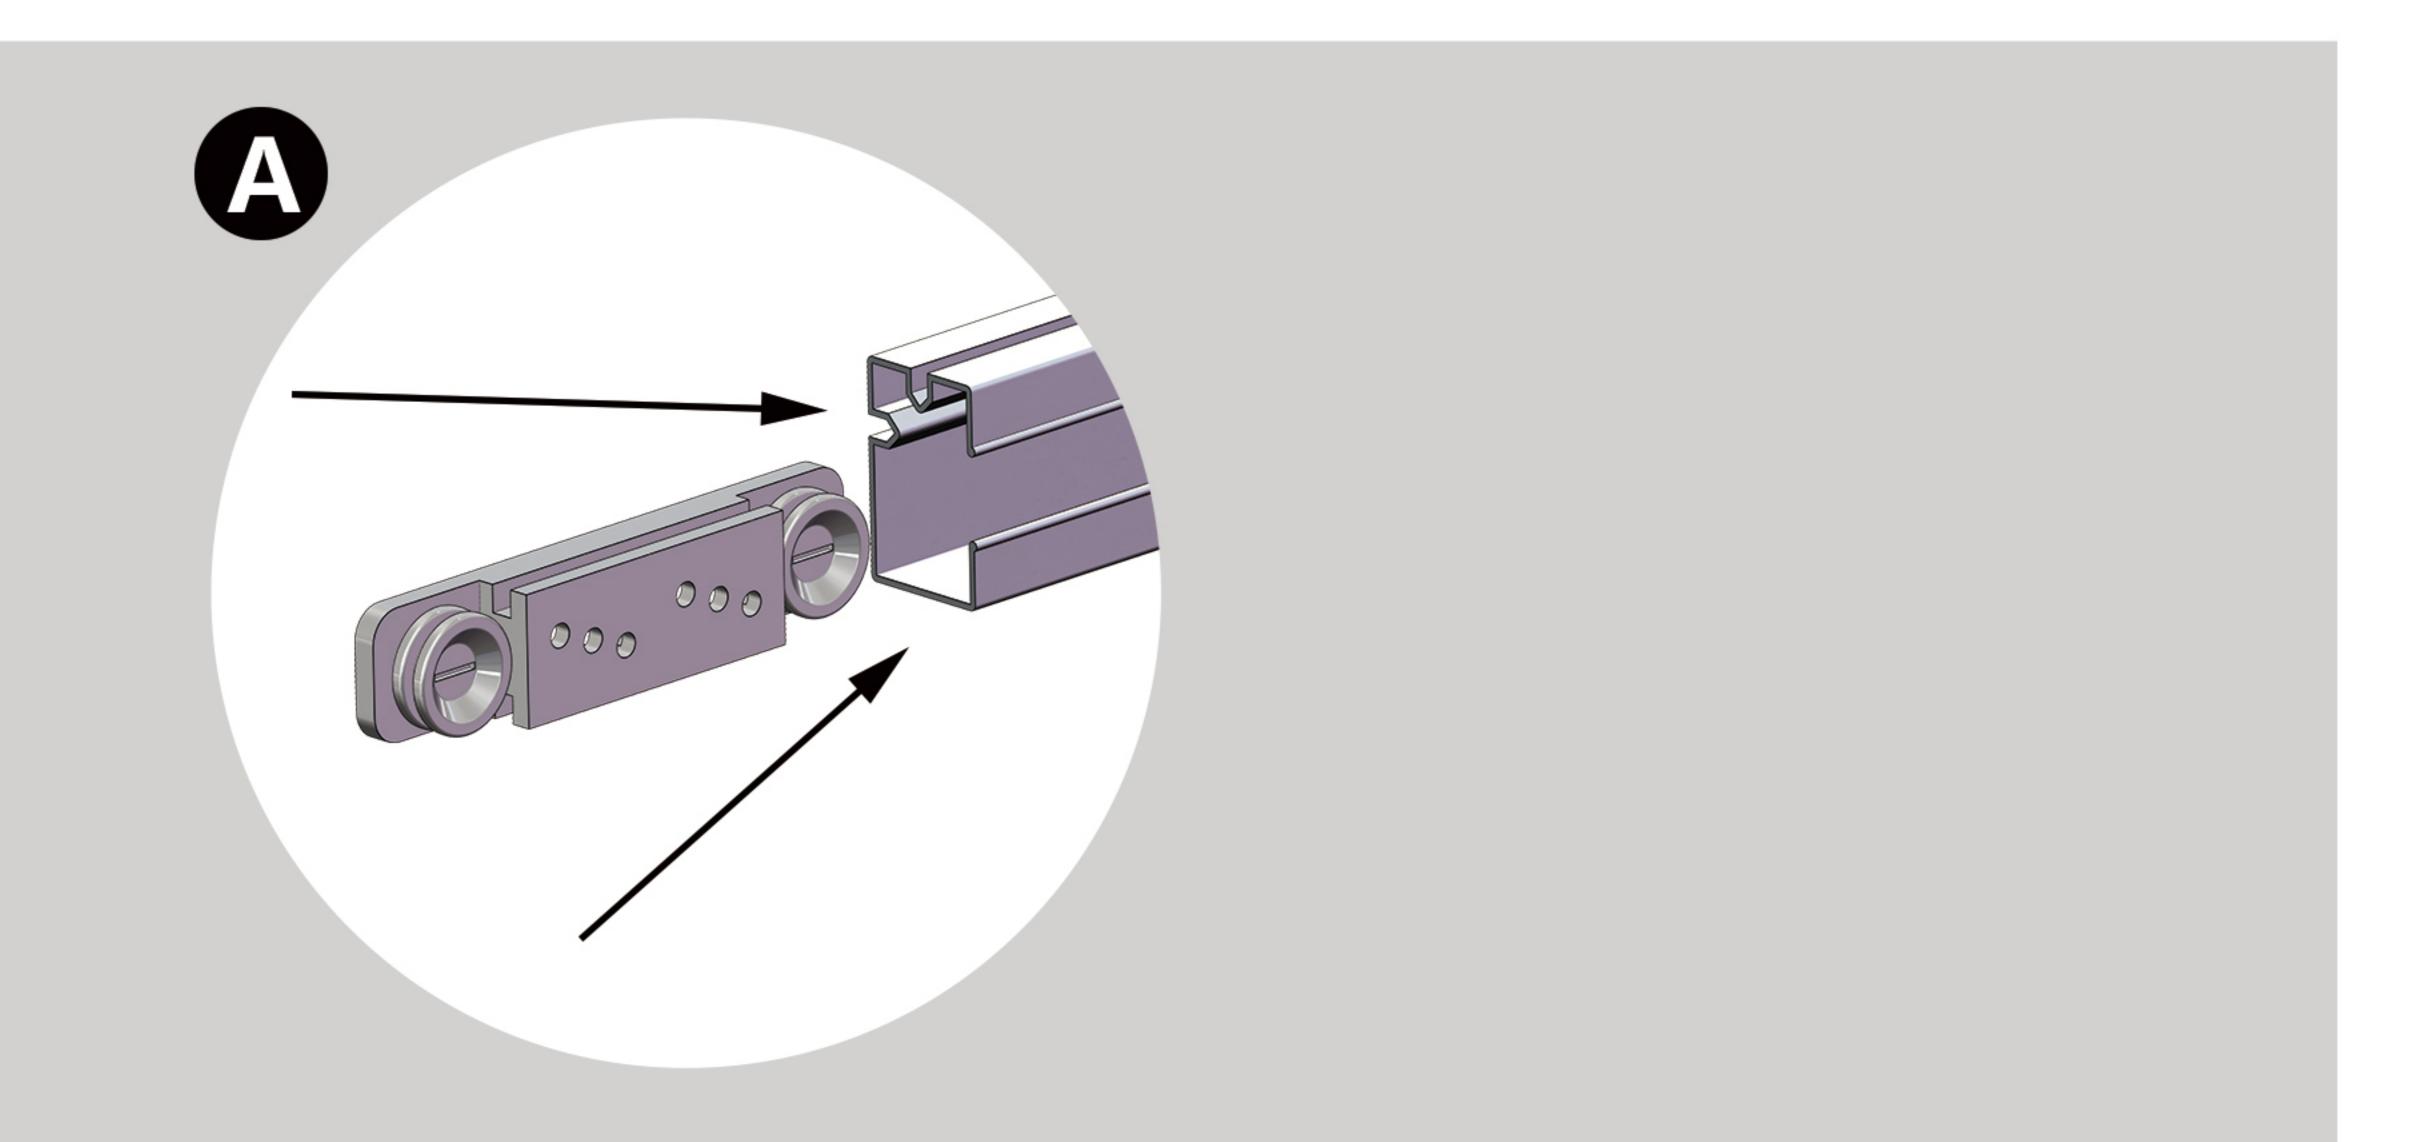


NO.	PART	Qty.
S2	2	2
S3	3	1


NO.	PART	Qty.
FJT		4
F1		

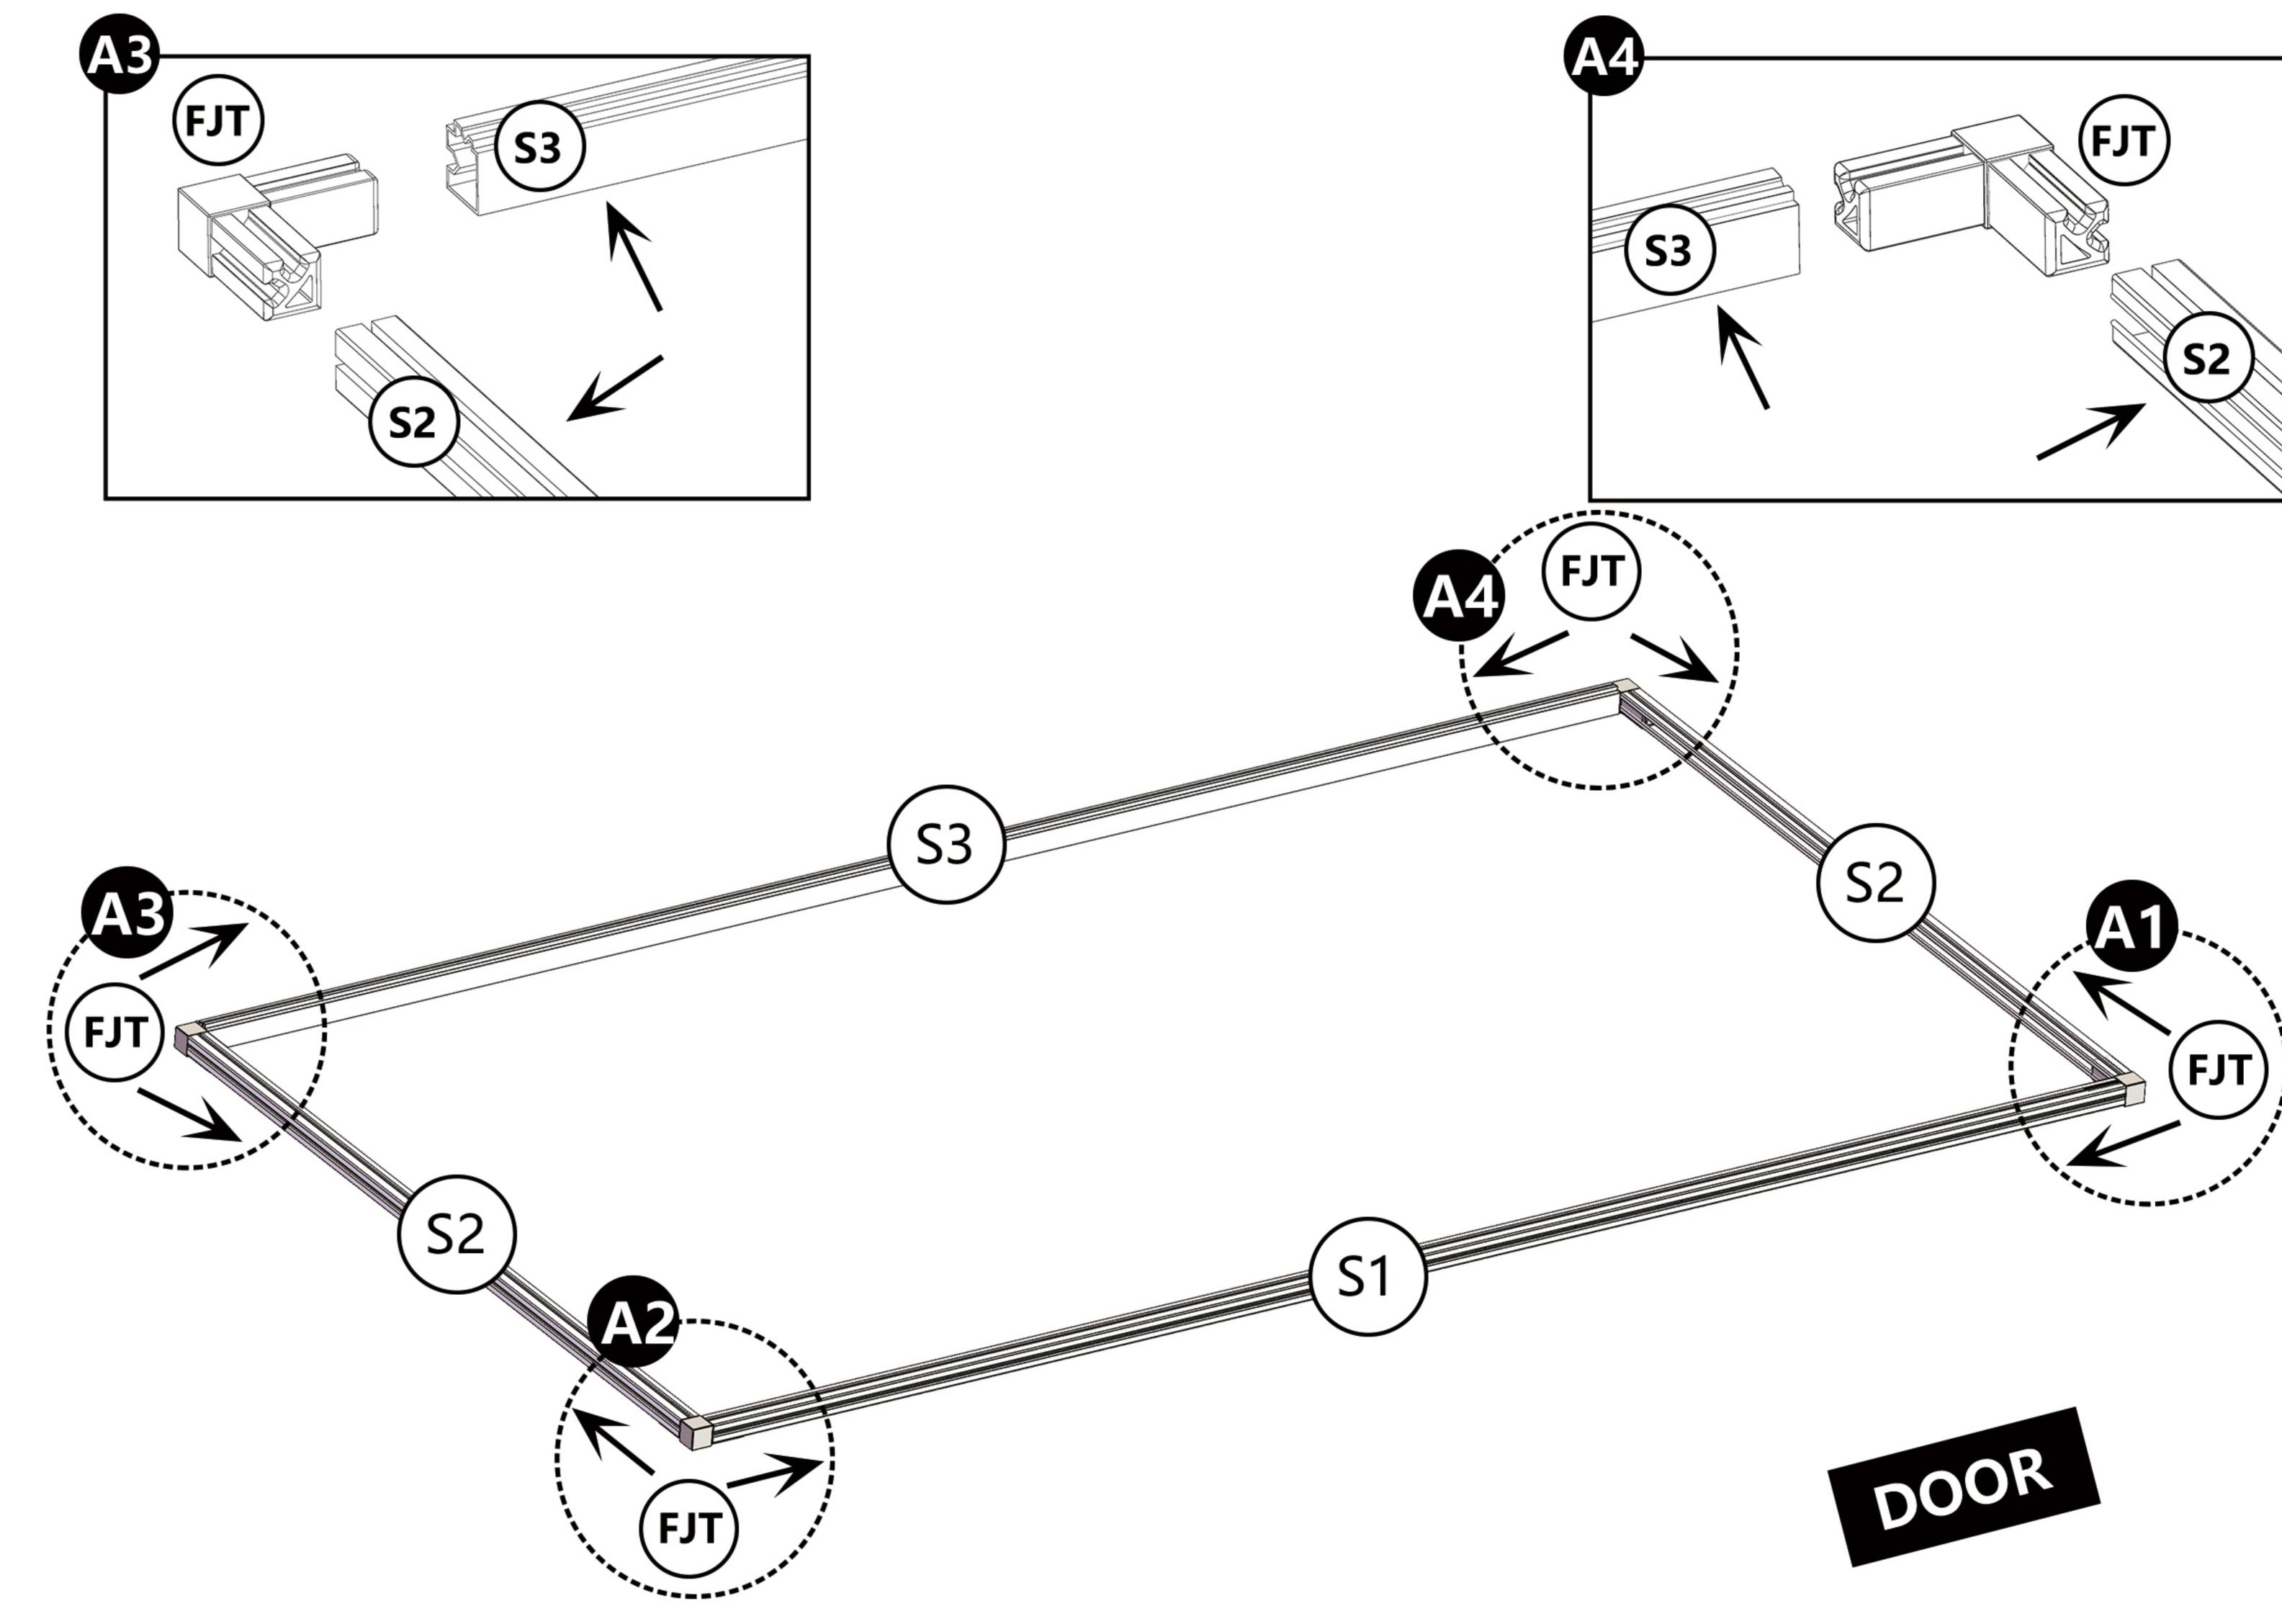


#### Notice:

FJT installation: Connect the two frames to the FJT as shown. Each FJT needs to be fixed with two F1s. S1 has no fixed hole position.

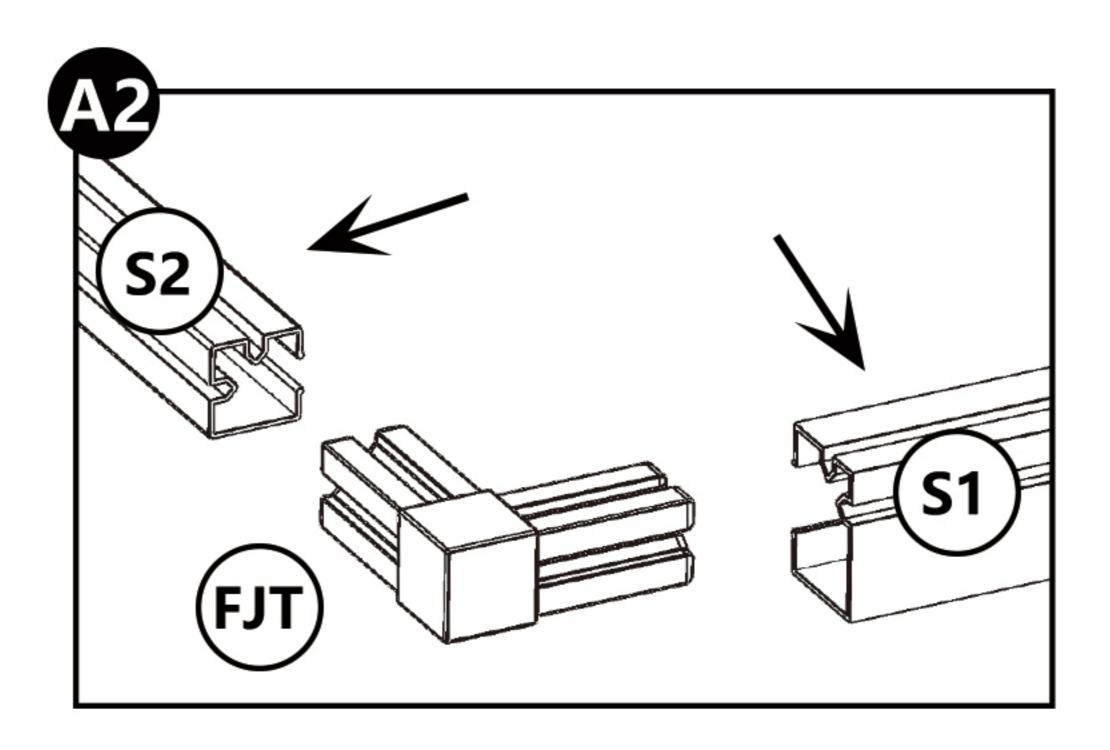

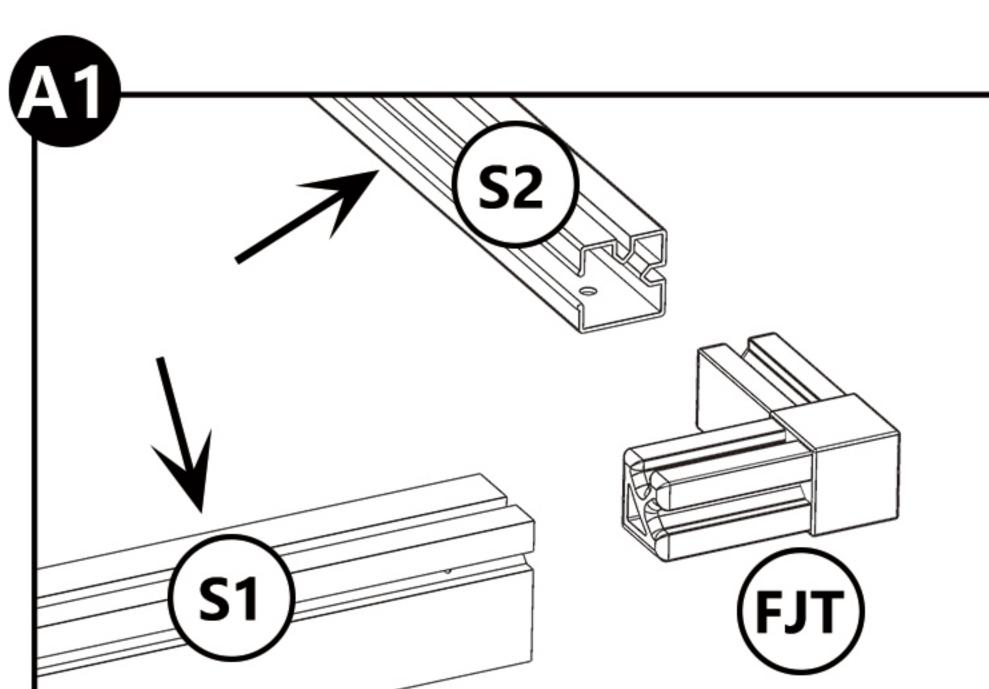


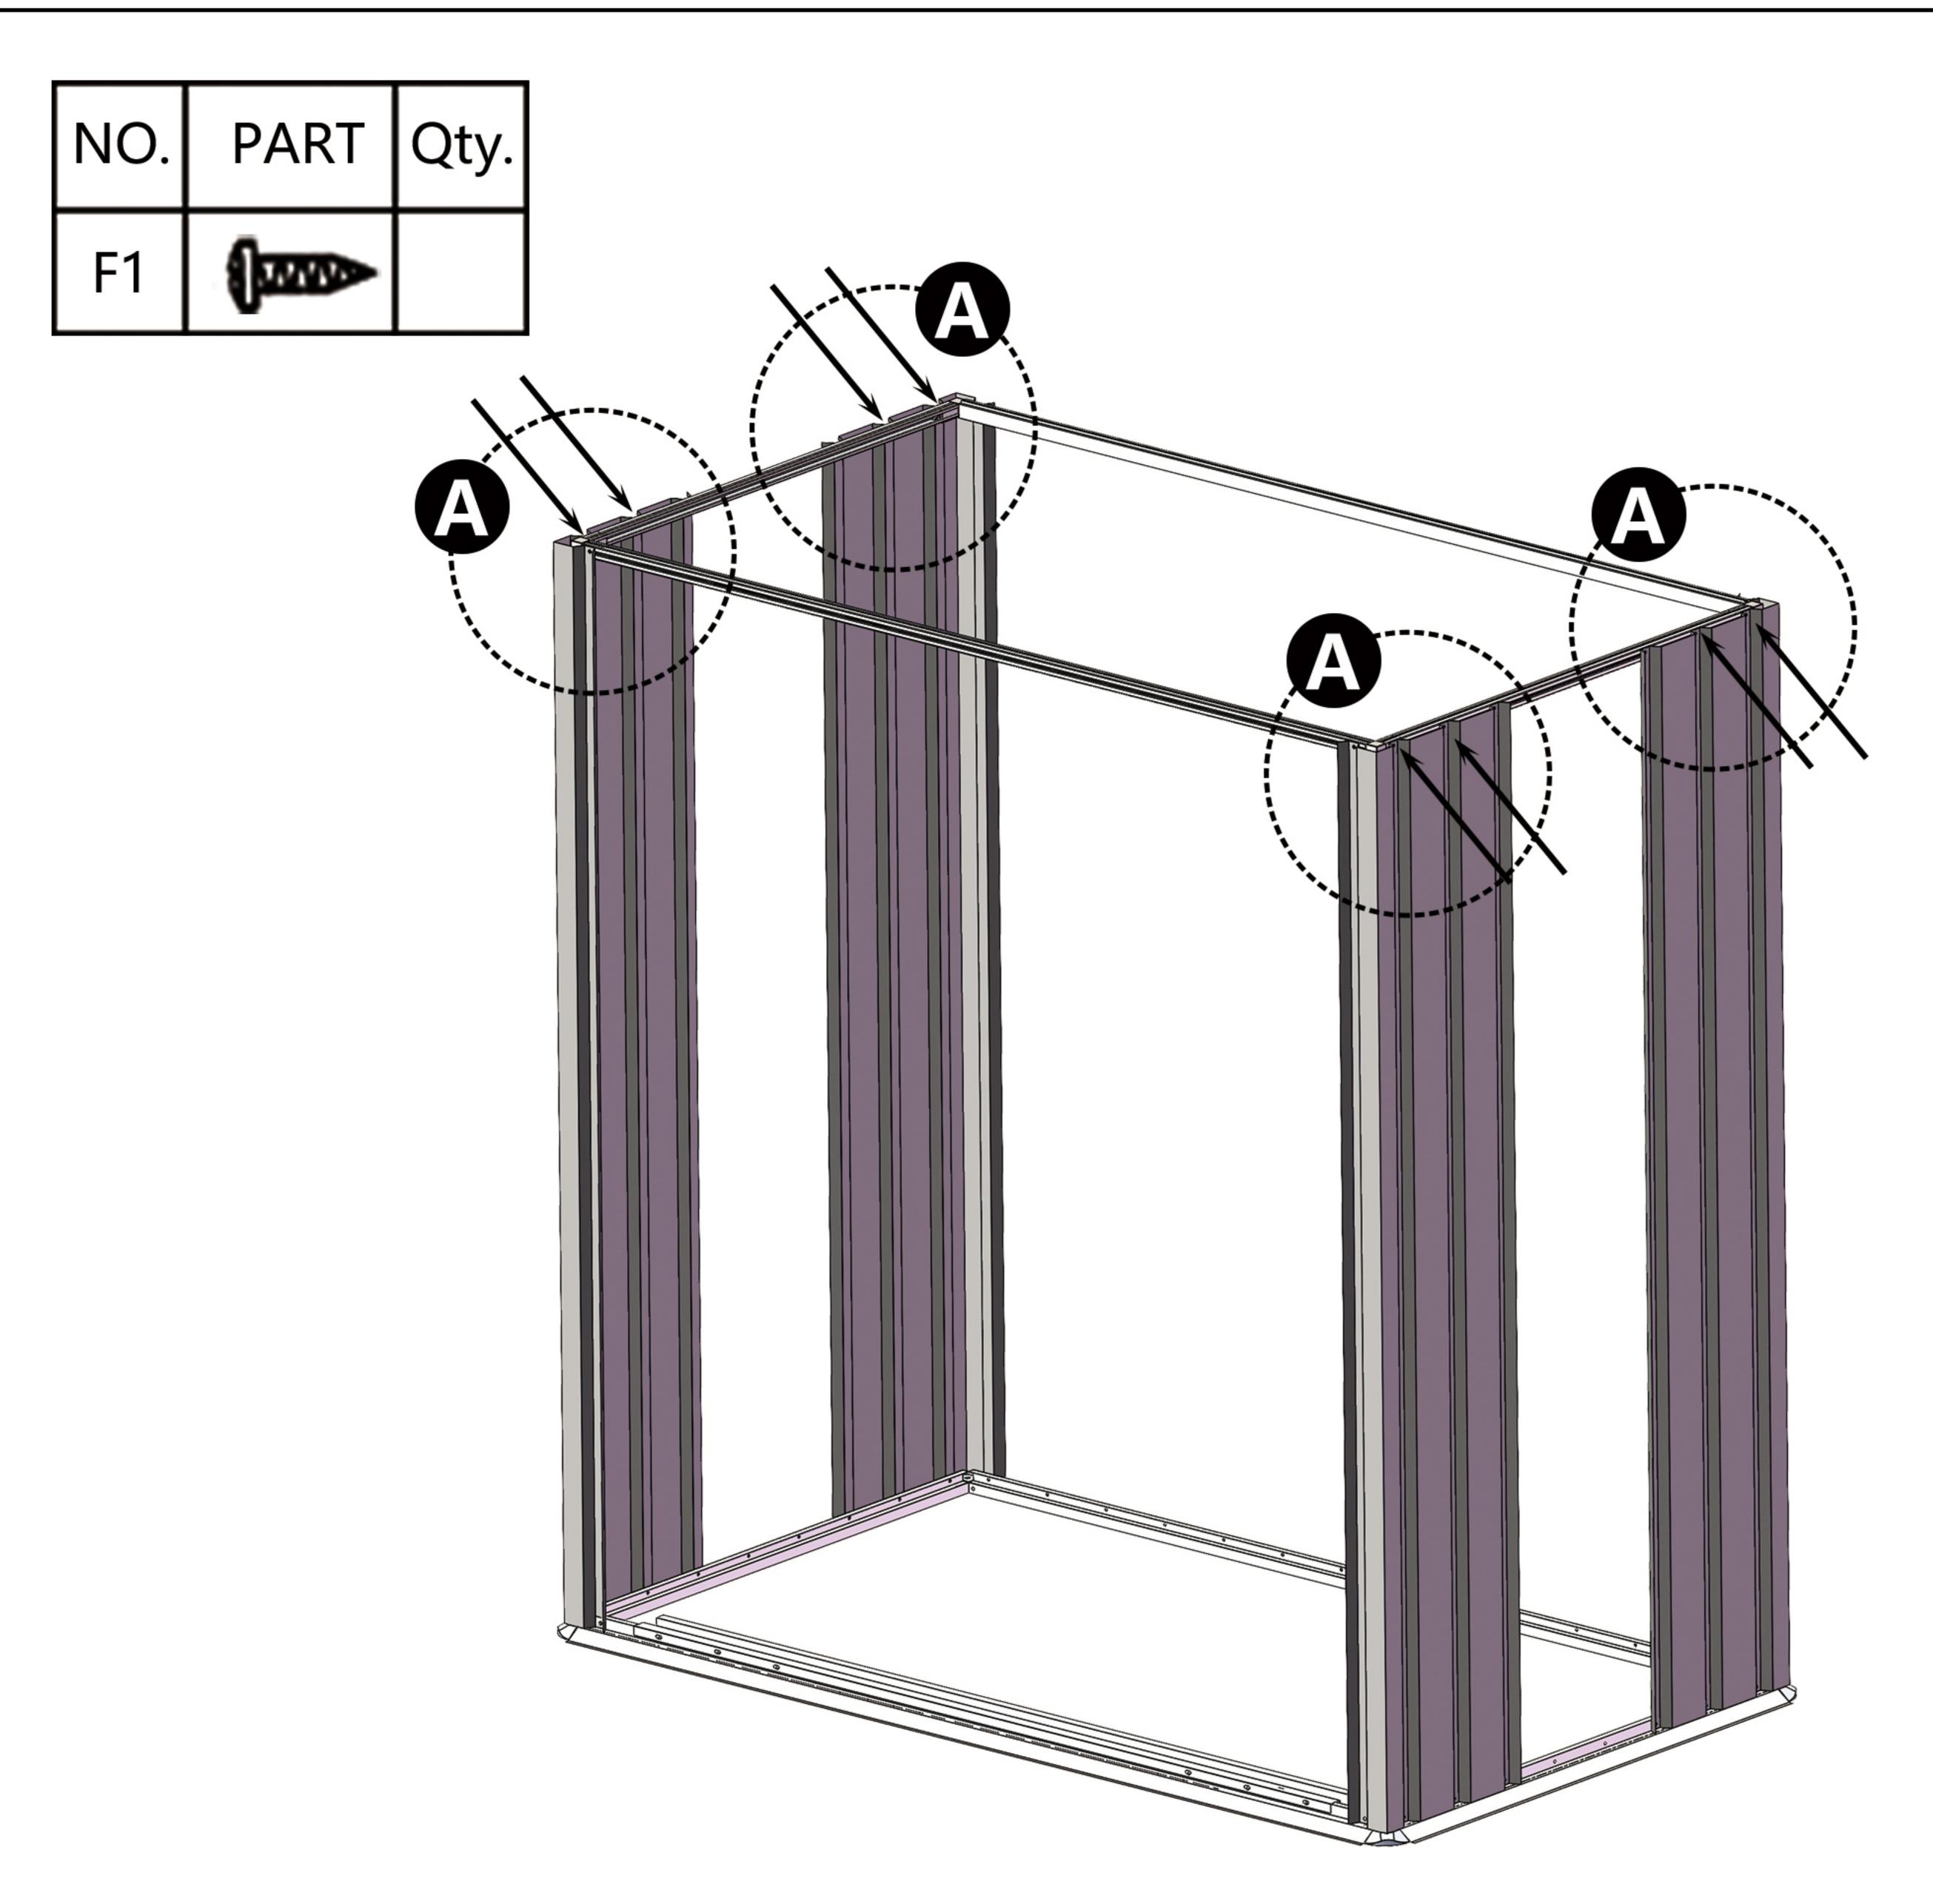


In this step, only the middle two holes need to be installed, and both sides need to be reserved.

The reserved hole is shared with other steps.

The walls are tiled on the outside and framed on the inside

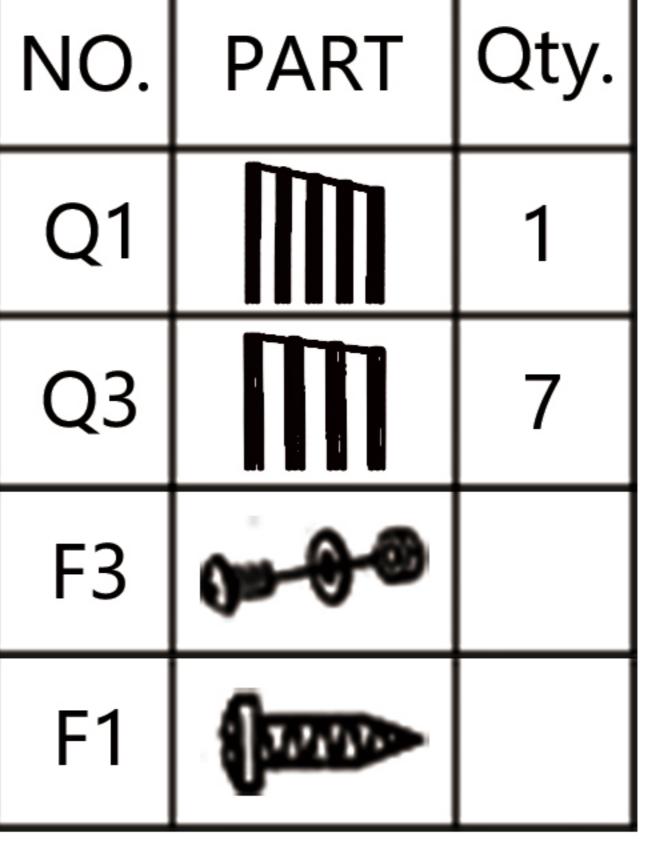


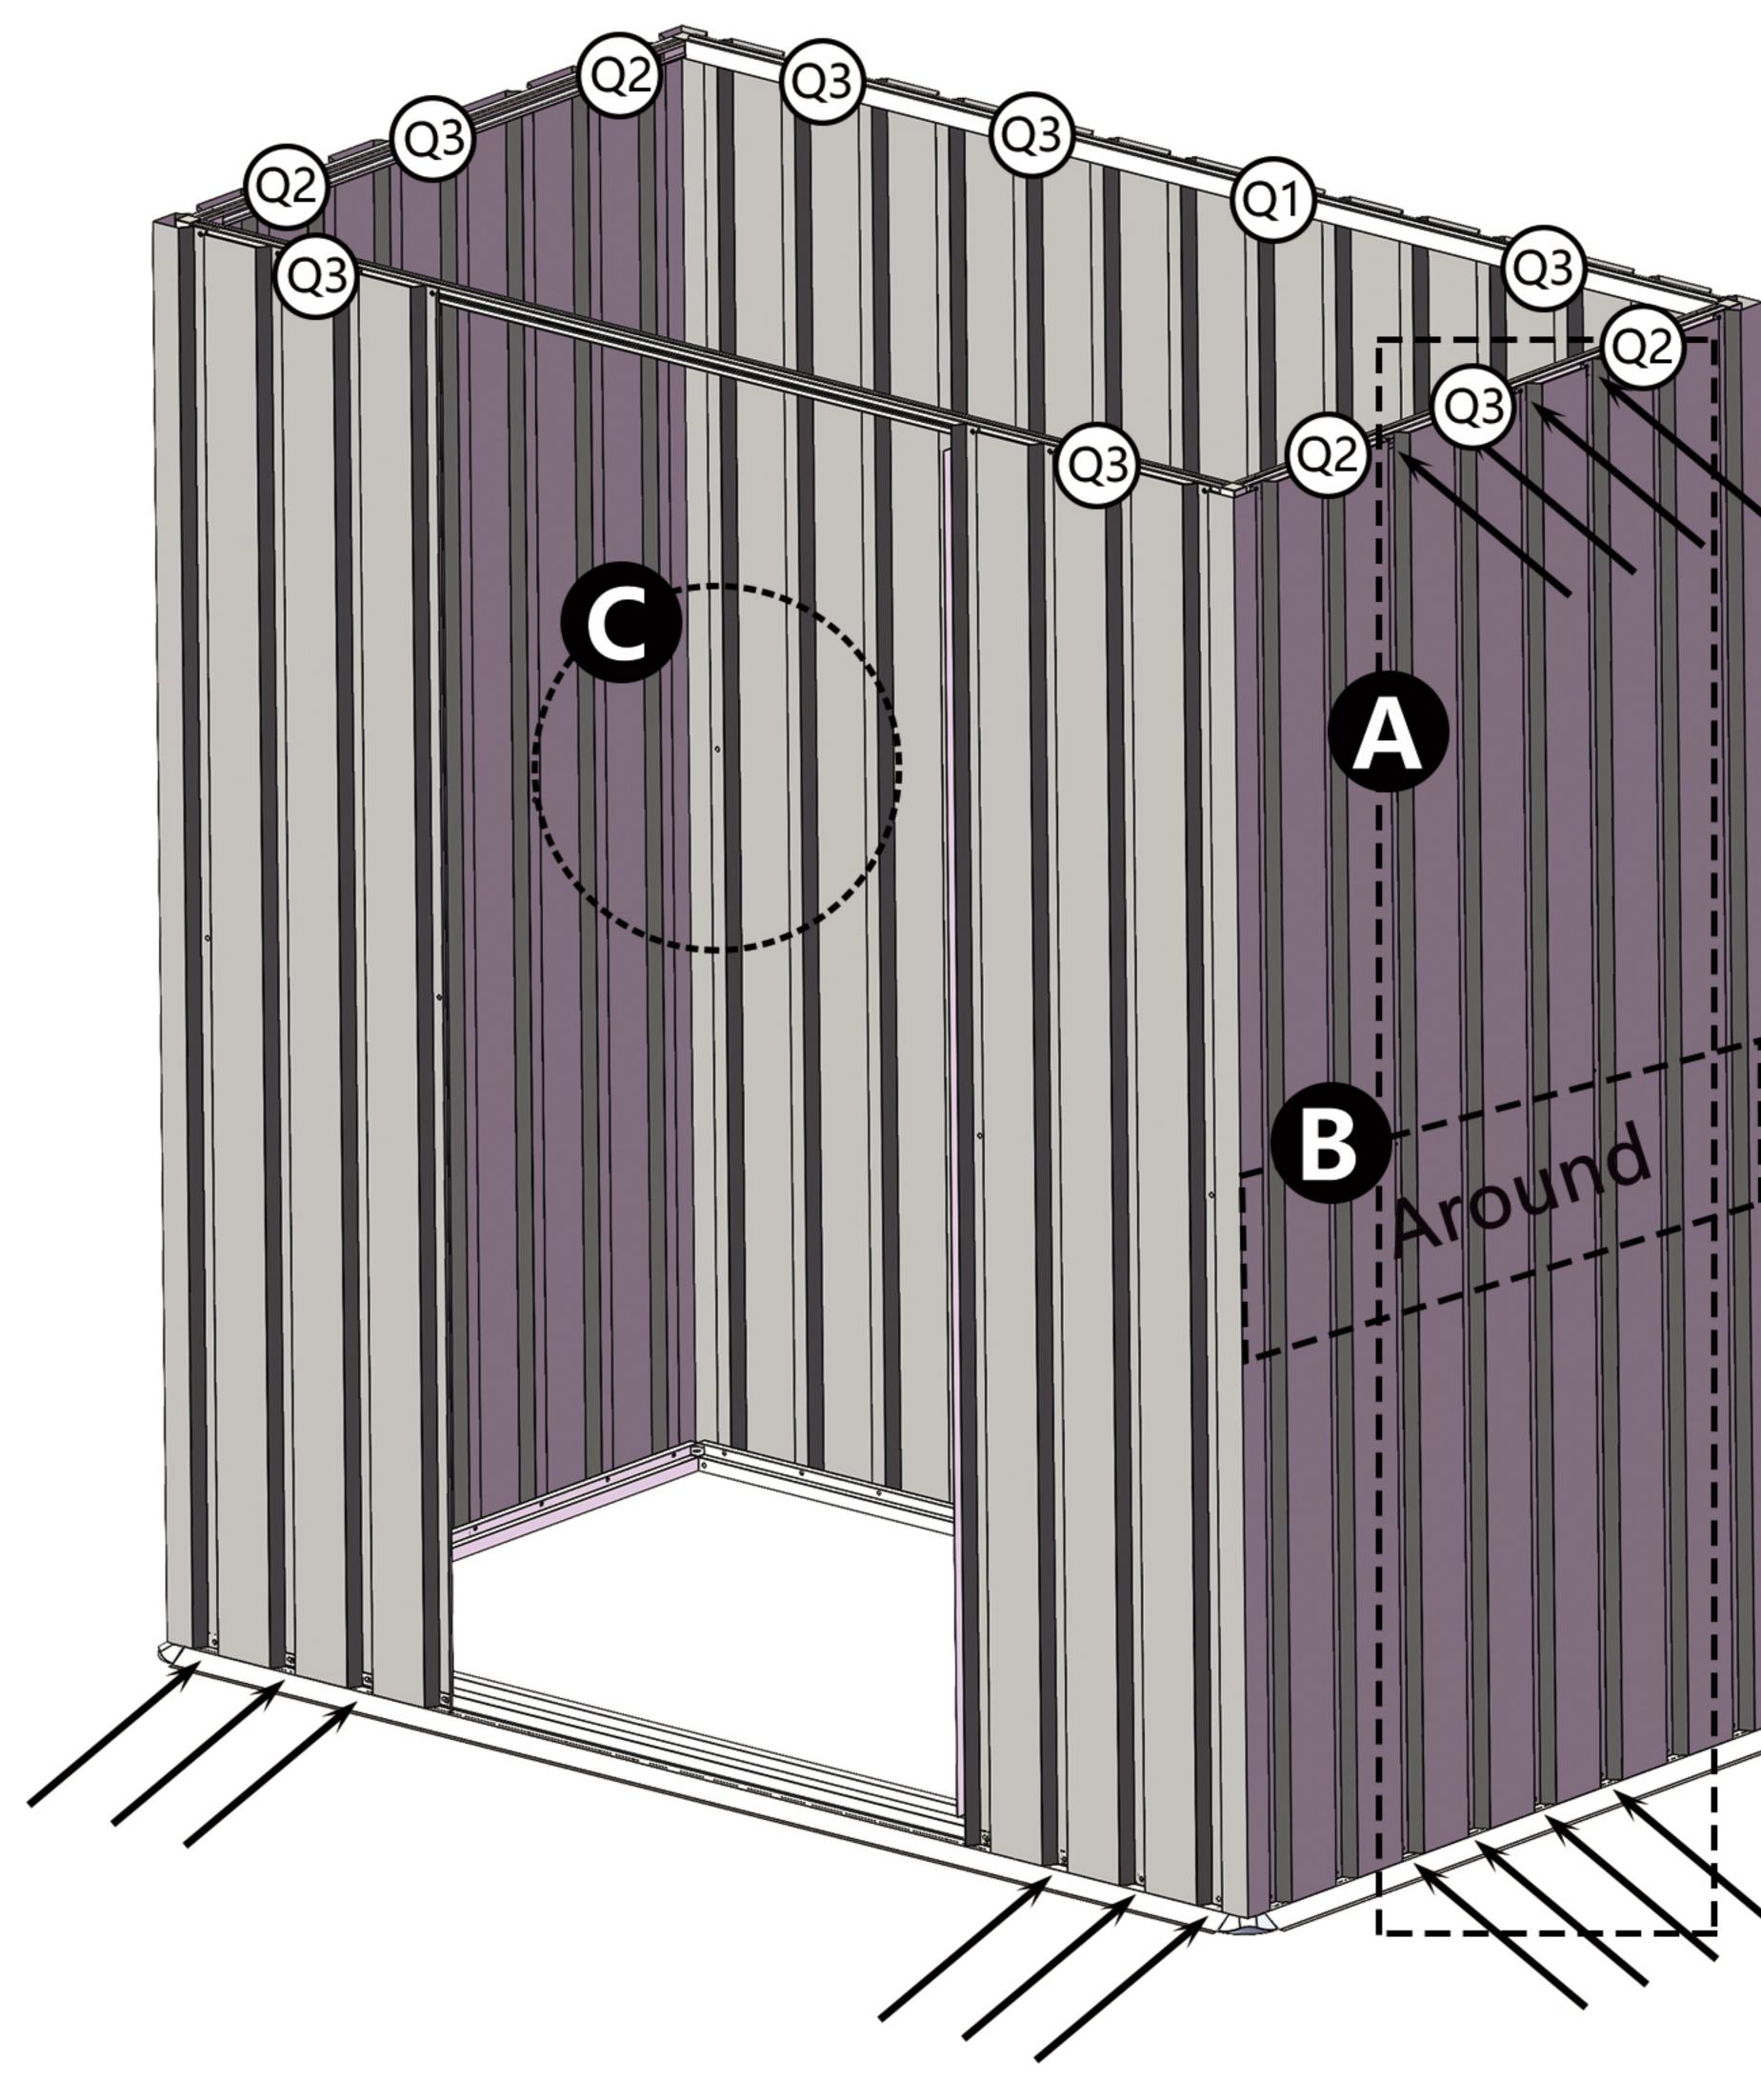


#### Notice:


As shown in the picture, assemble the wall tiles in turn, Q1\Q3,The top, middle and bottom of the wall tiles need to be screwed,

The upper and lower ends are fixed with F1, and the middle is fixed with F3.

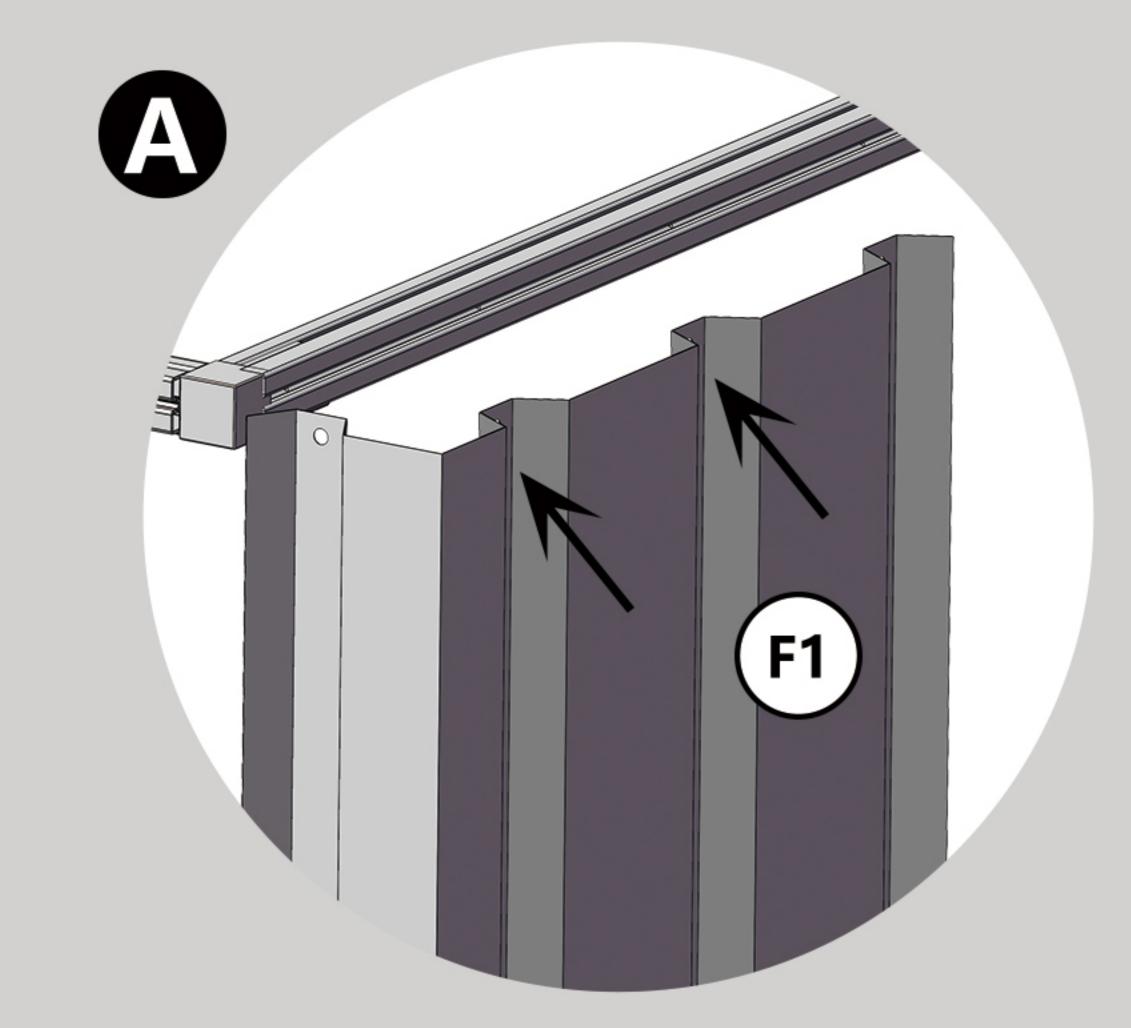

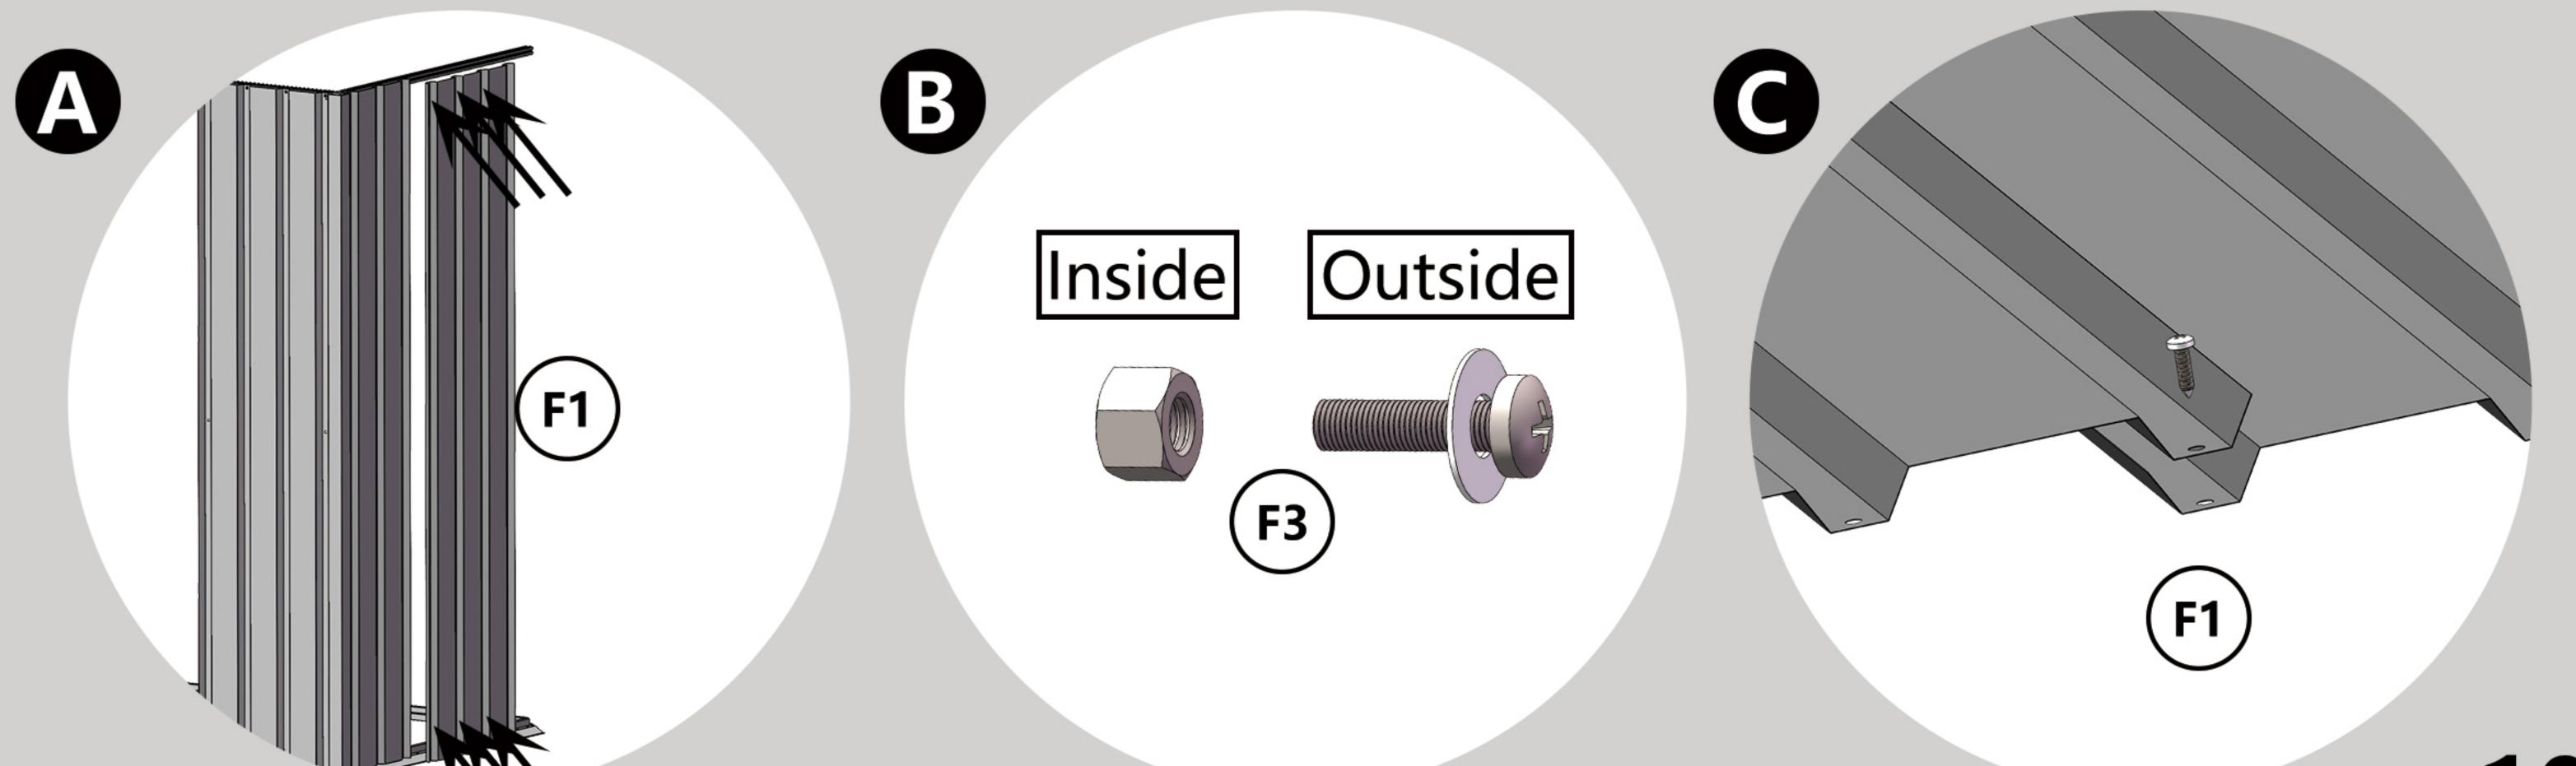


NO.	PART	Qty.
KL		1
KR	4	1
F1		
F3		

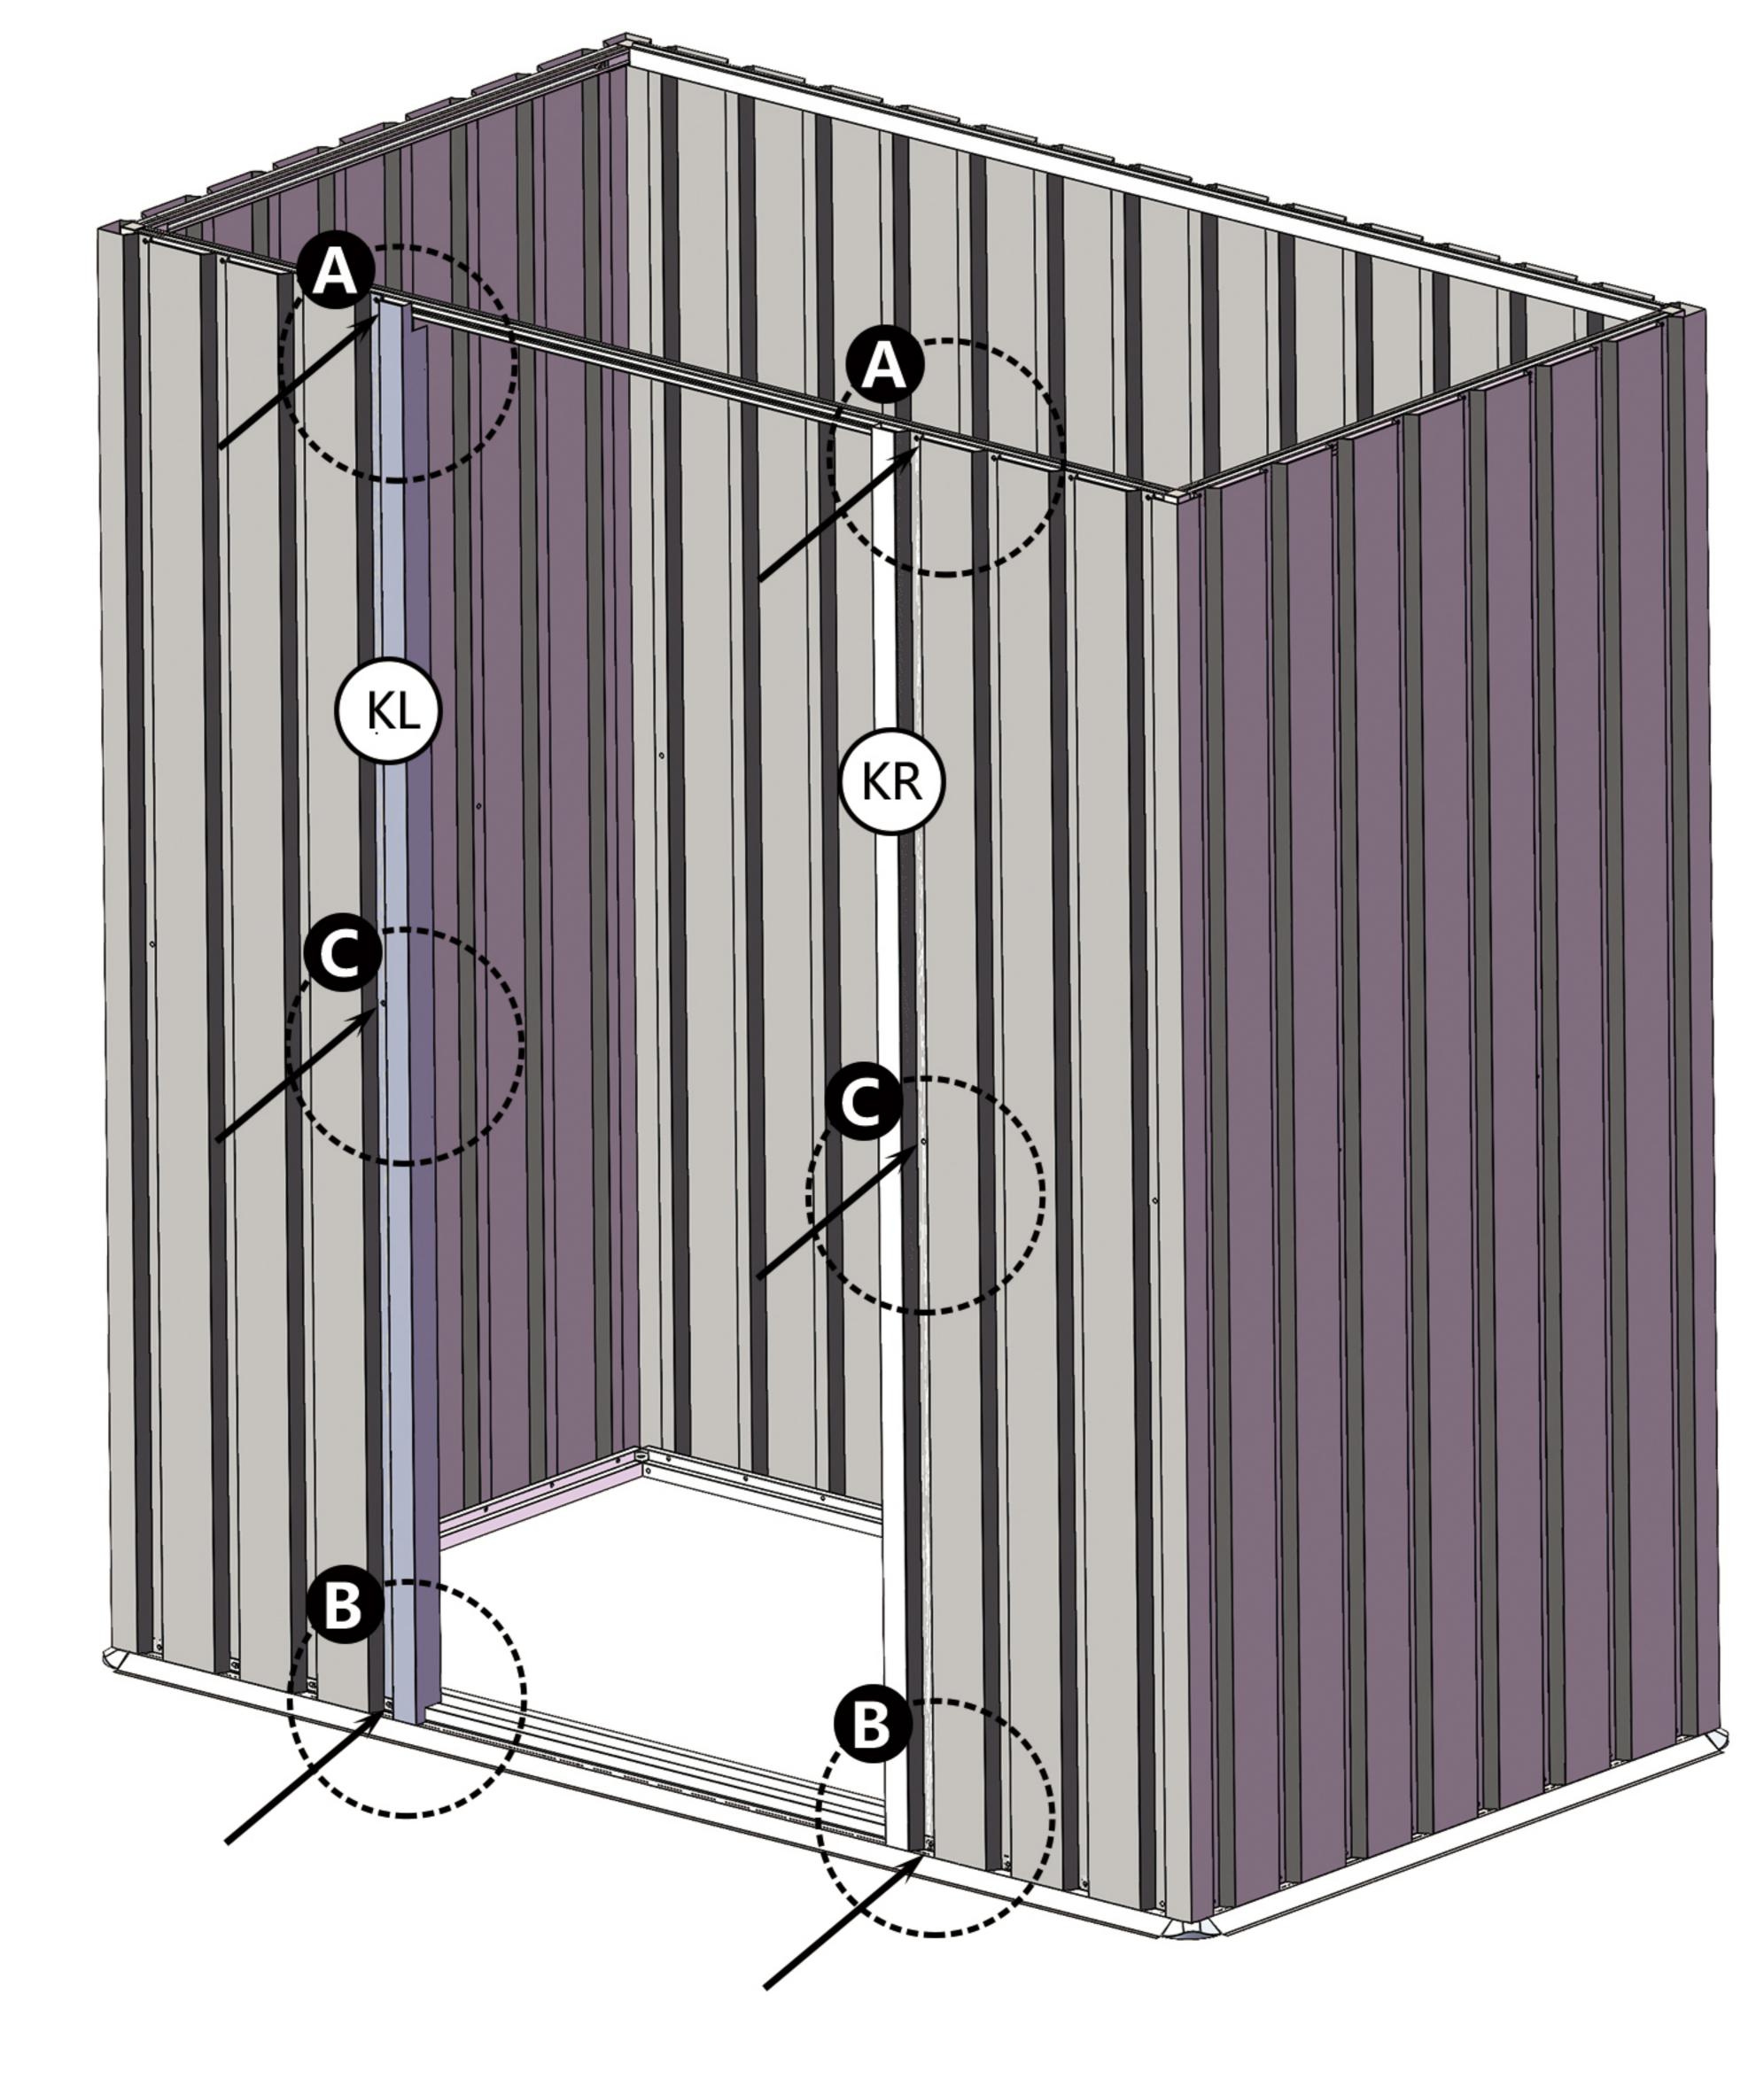

As shown in the picture, the steps of door frame and wall tile installation are the same.

The upper, middle and lower parts of KR and KL need screws.

The upper and lower ends are fixed with F1, and the middle is fixed with F3.

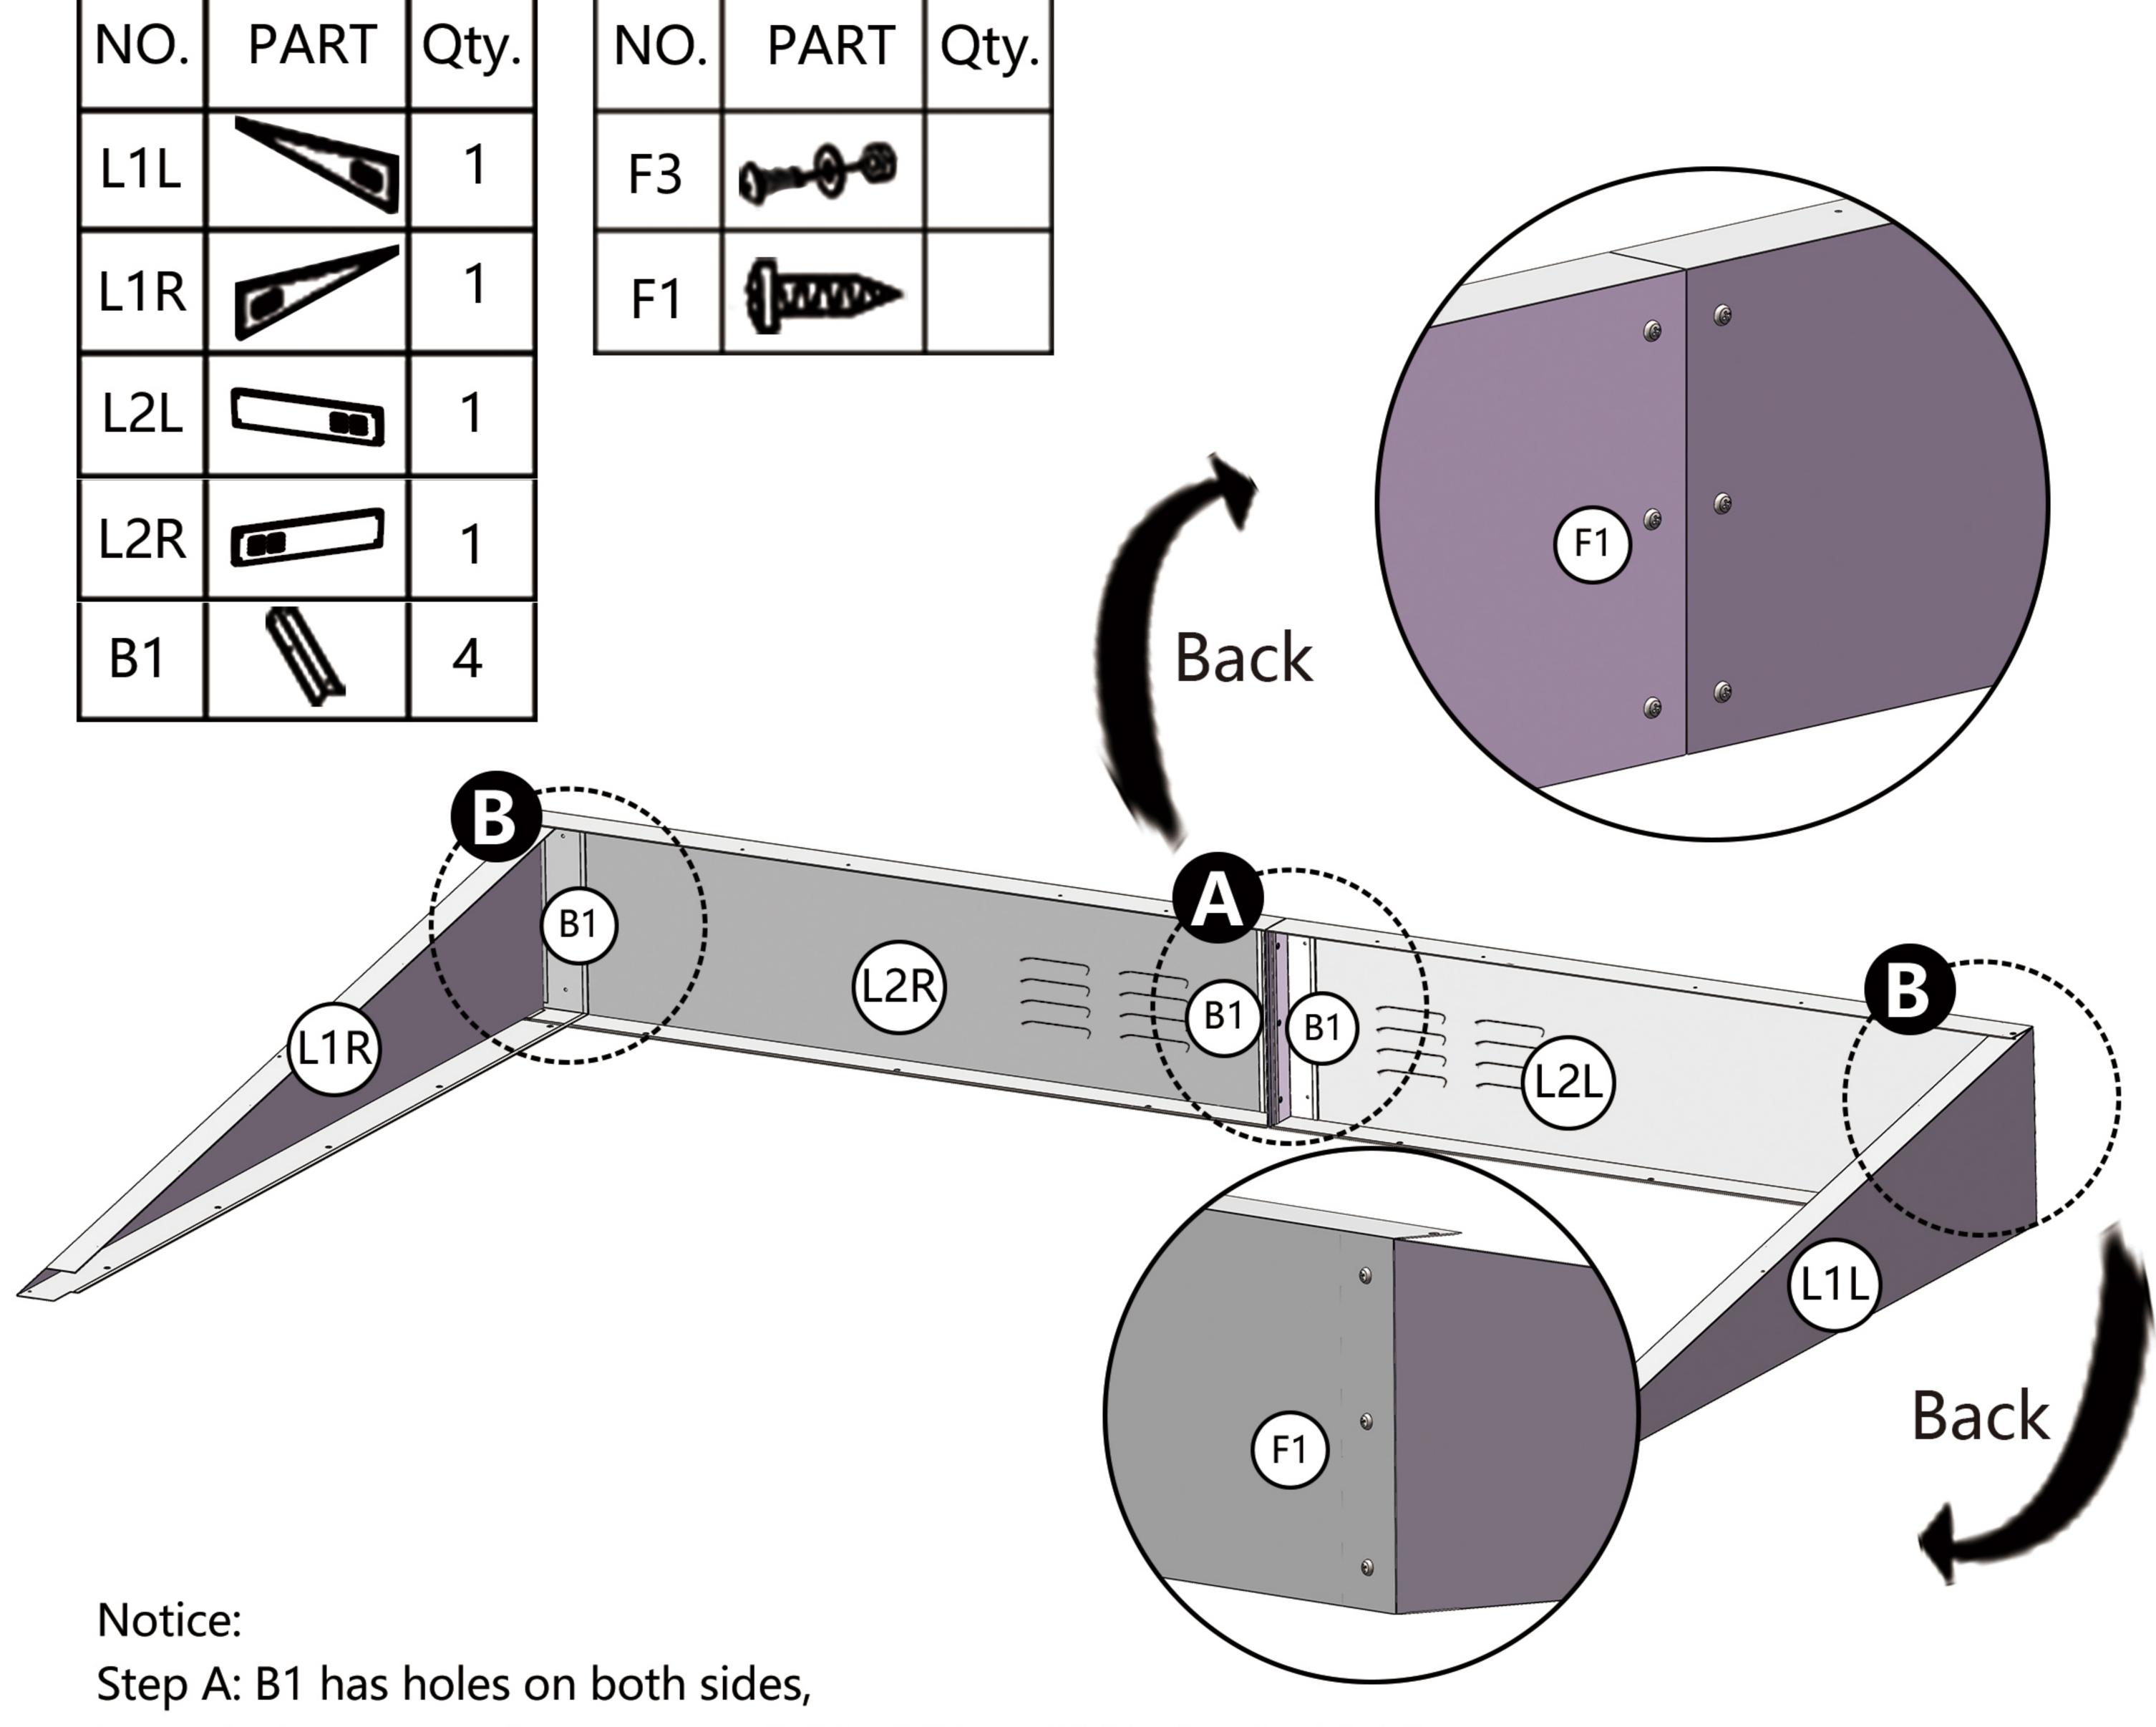


Large holes are used to connect 2 B1s, L2R and L2L, fixed with F3.


Hole 2 B1s, connecting L2R and L2L, fixed with F1.


Install B3L and B3R to the bottom and secure with F3.

Step B: There are holes on both sides of B1. Large holes do not need to be connected.


The holes are connected to L1R and L2R, L1L and L2L respectively, and are fixed with F1.

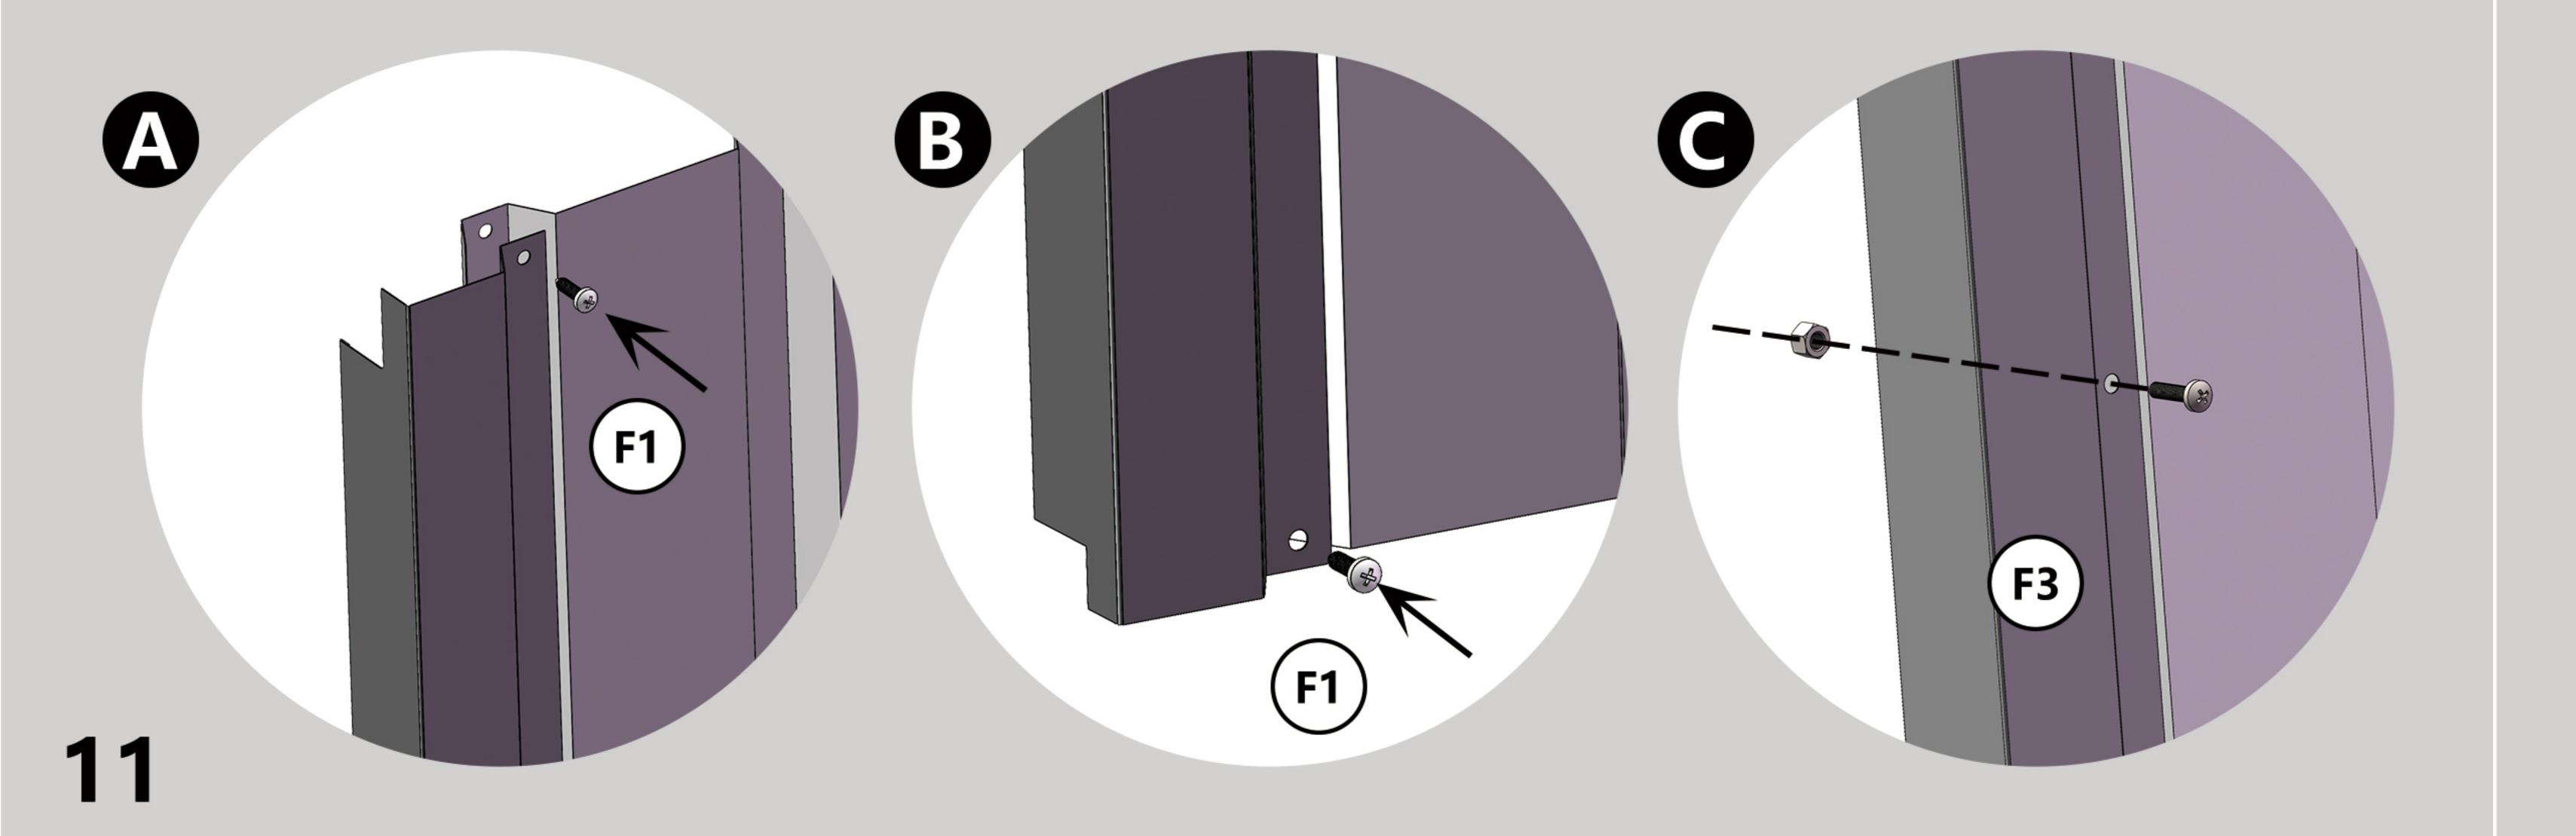


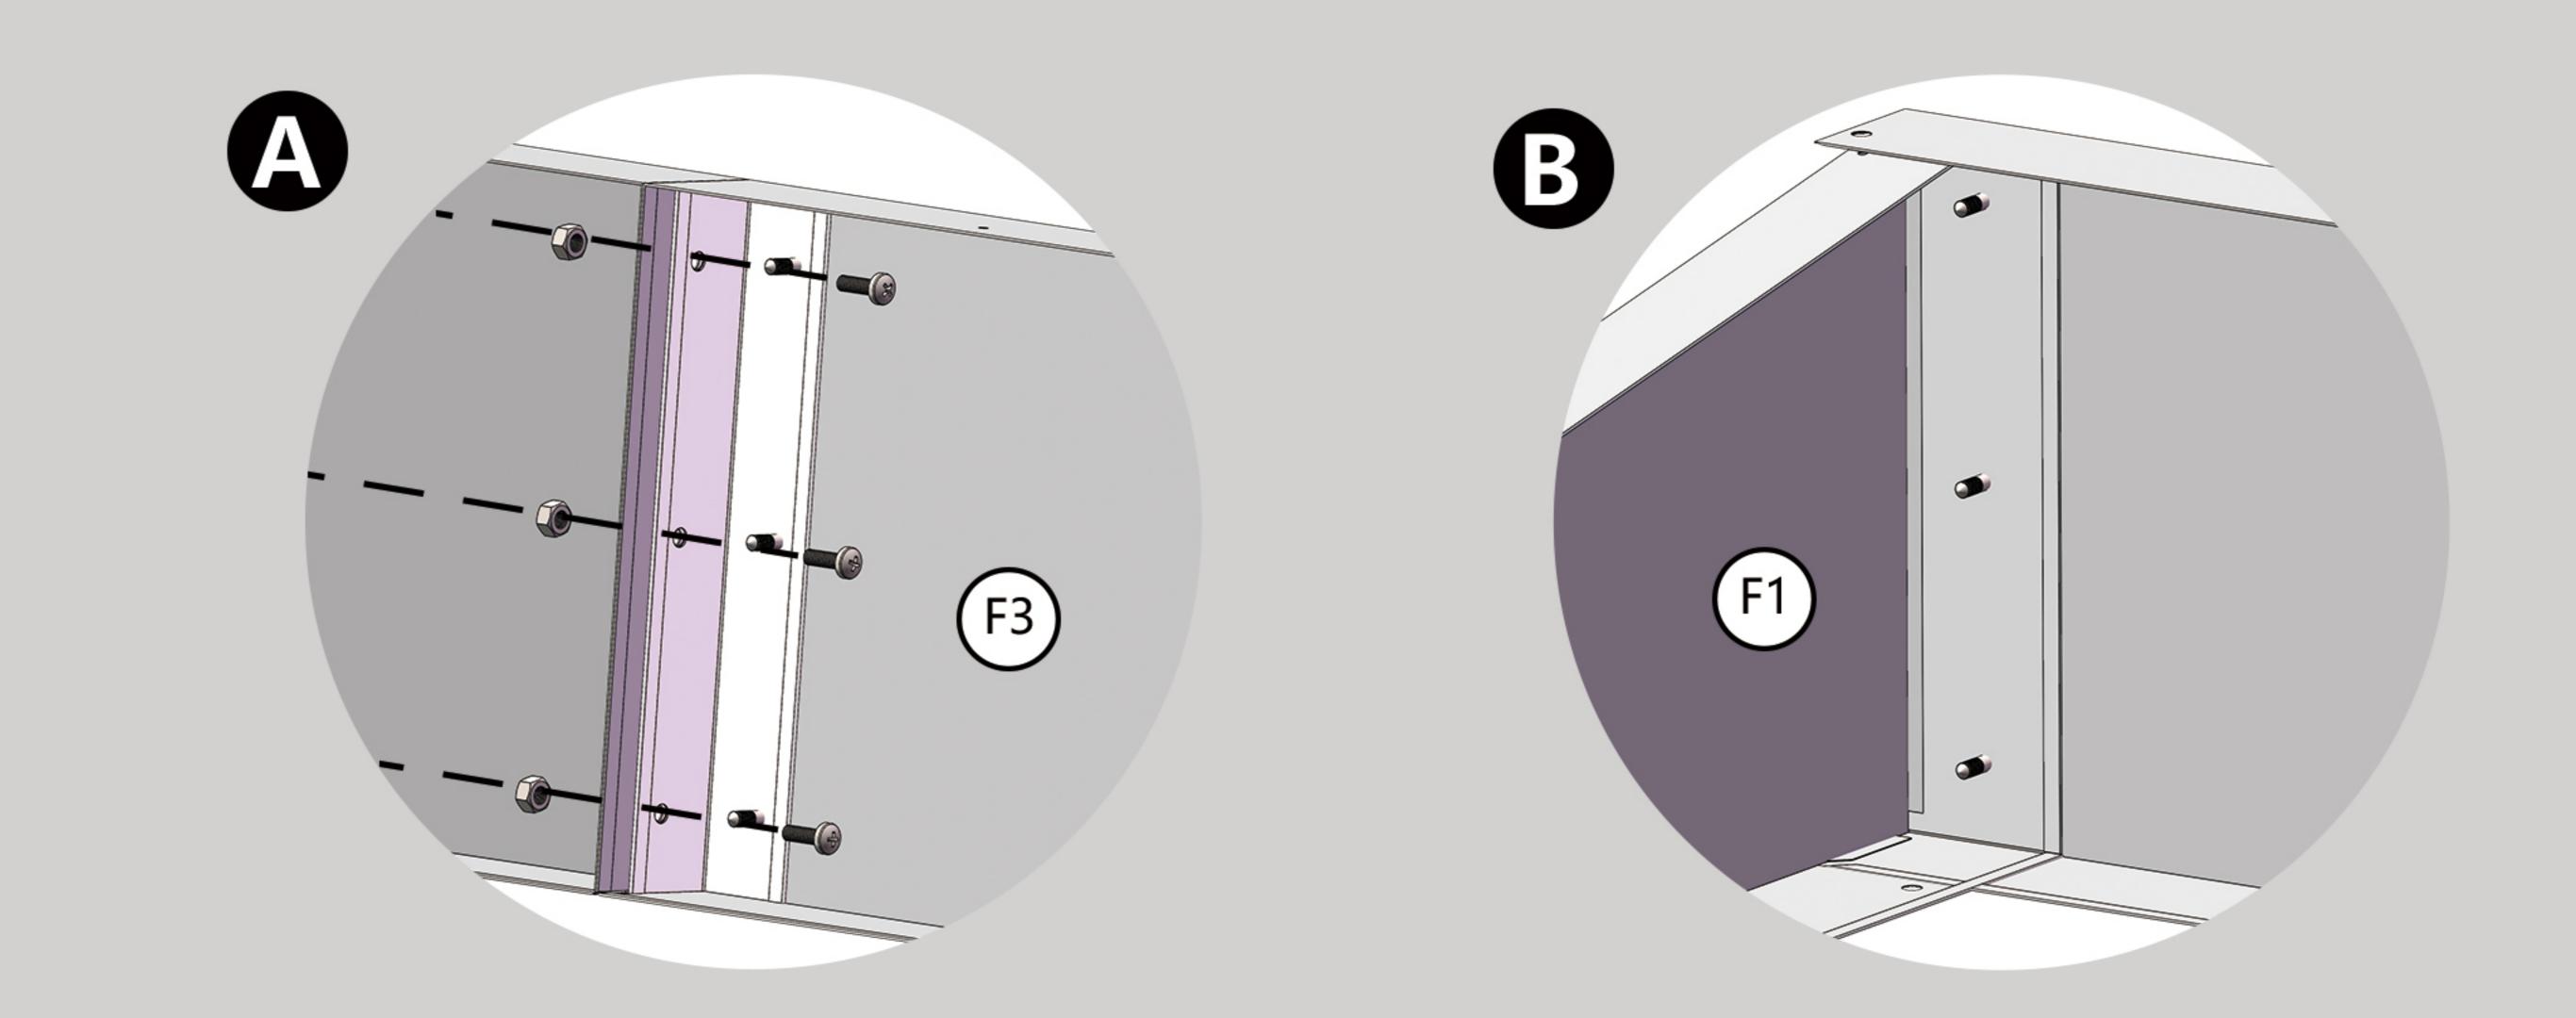

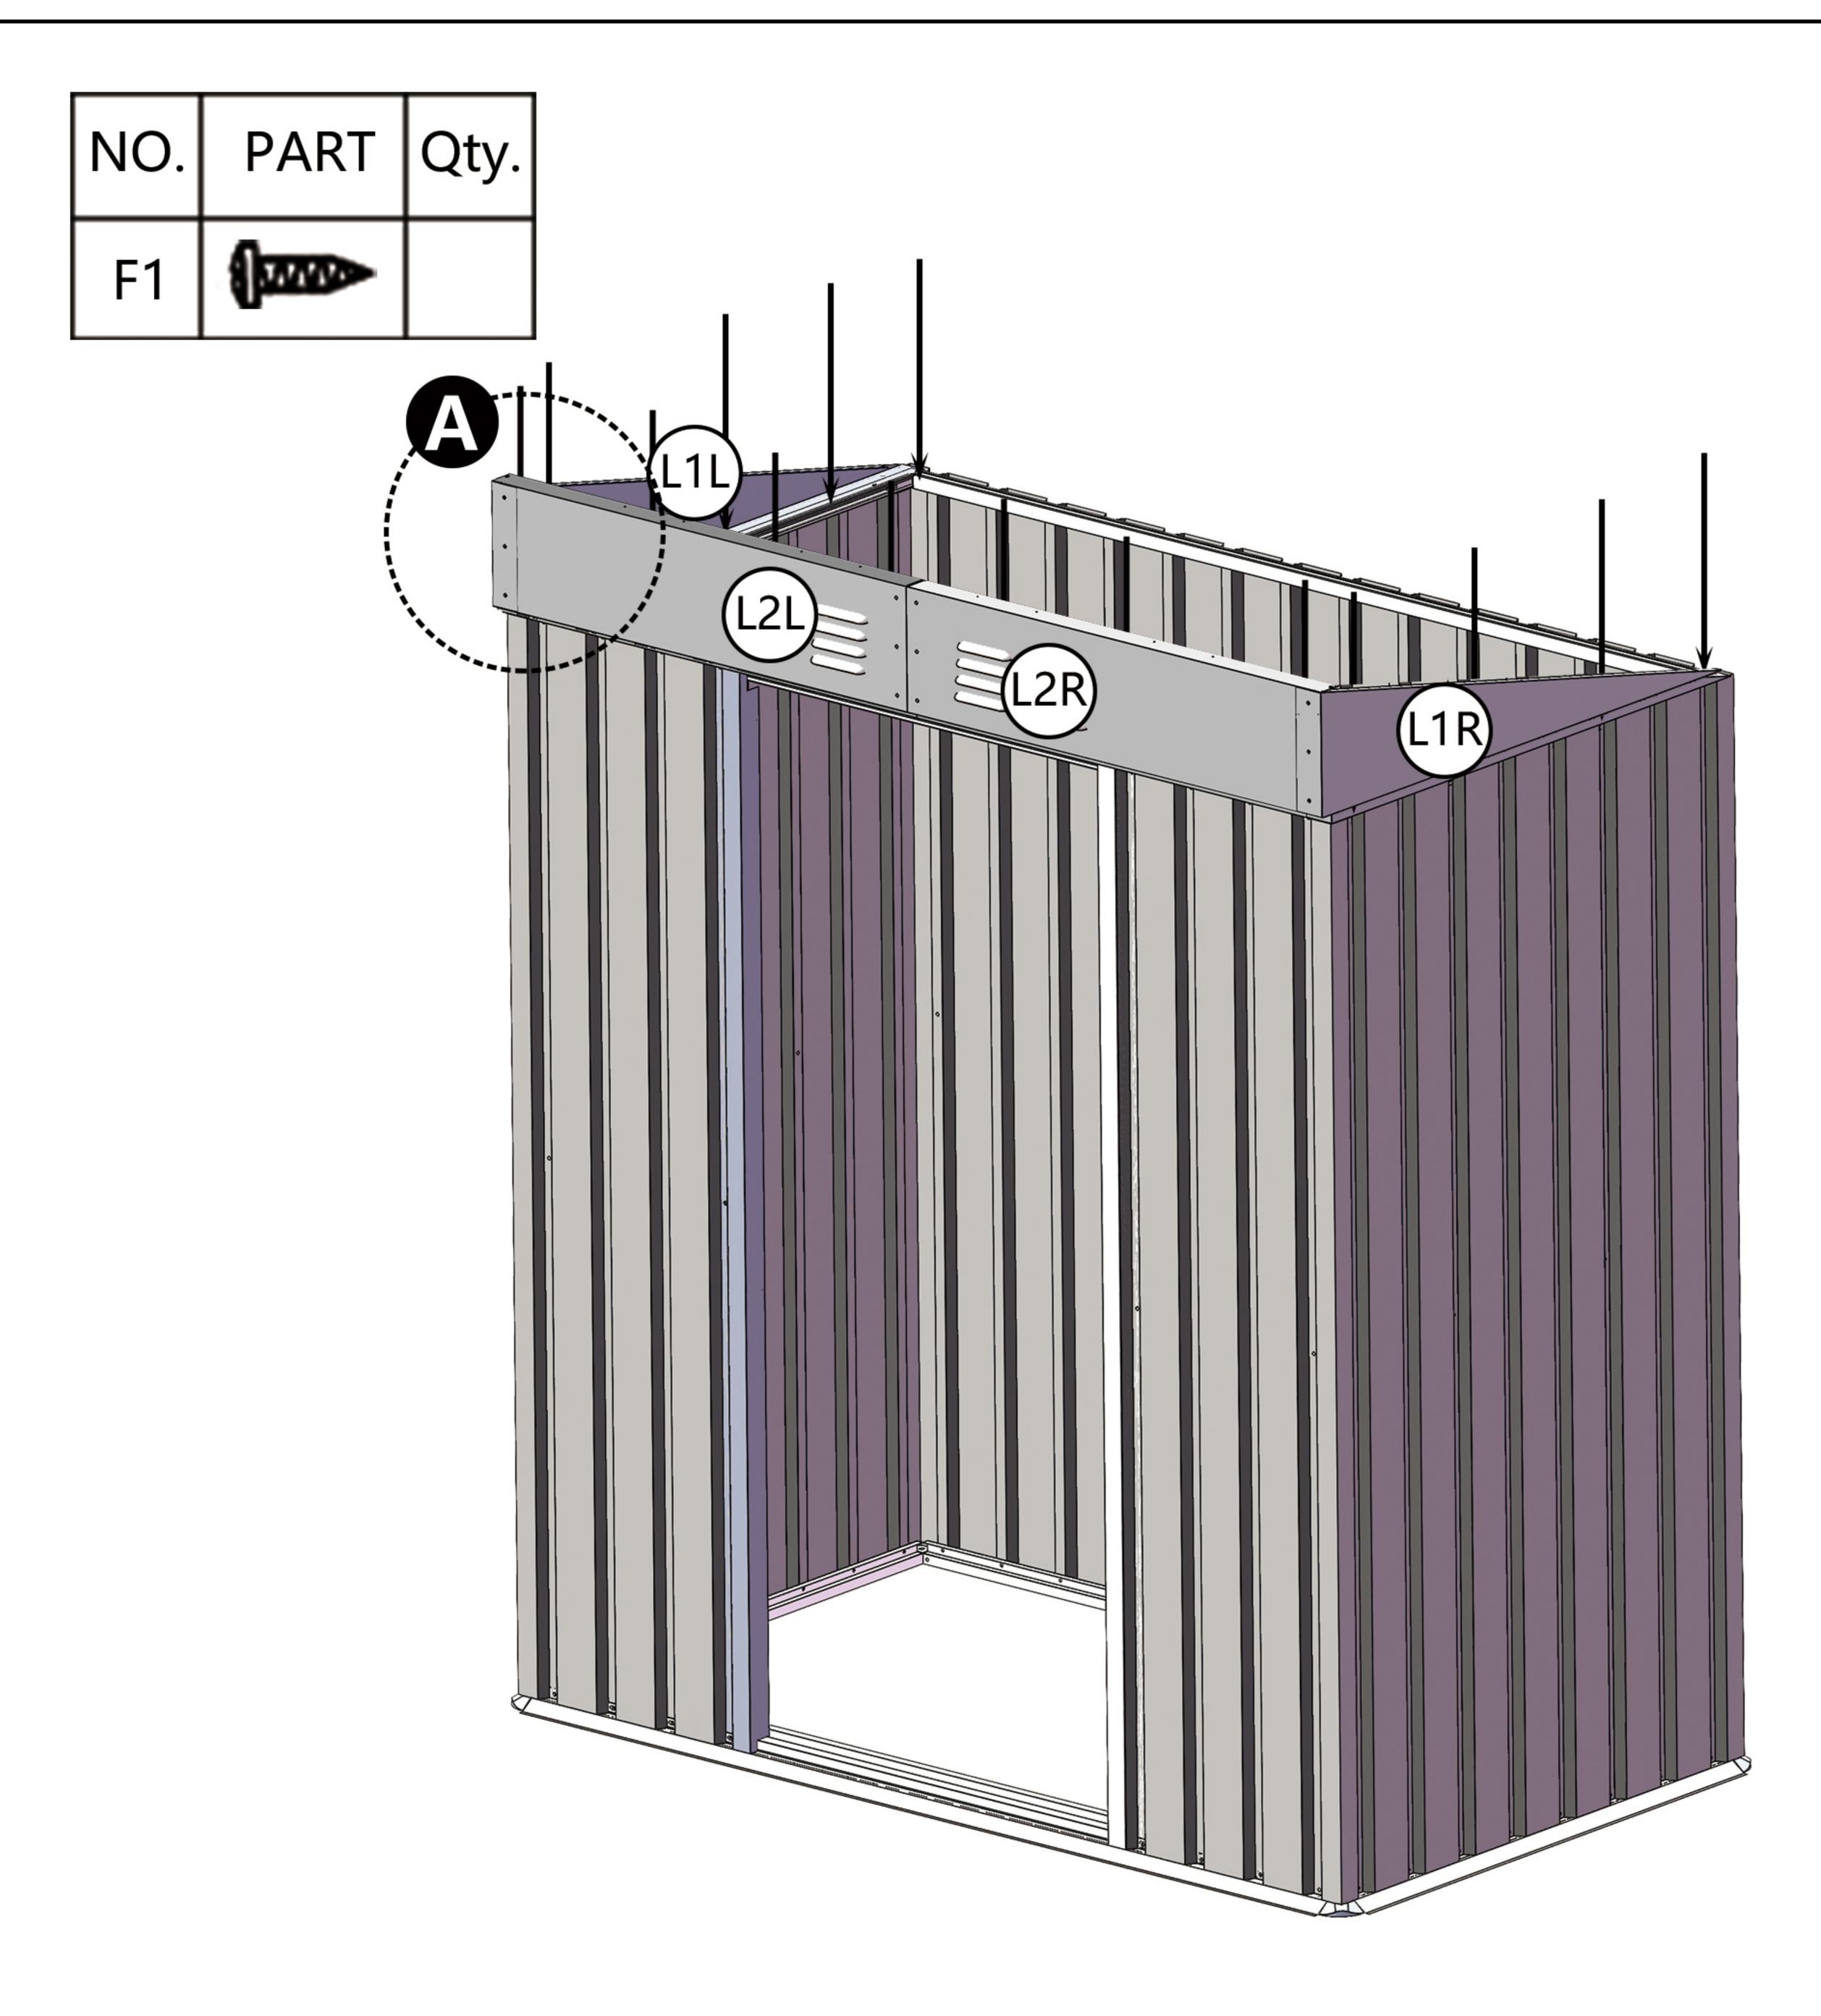



The assembled roof support parts are successively installed on the wall tiles with F1

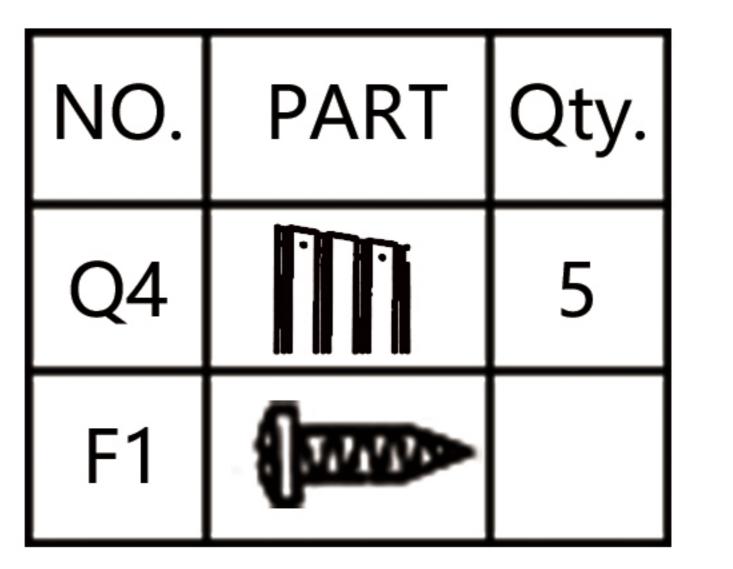

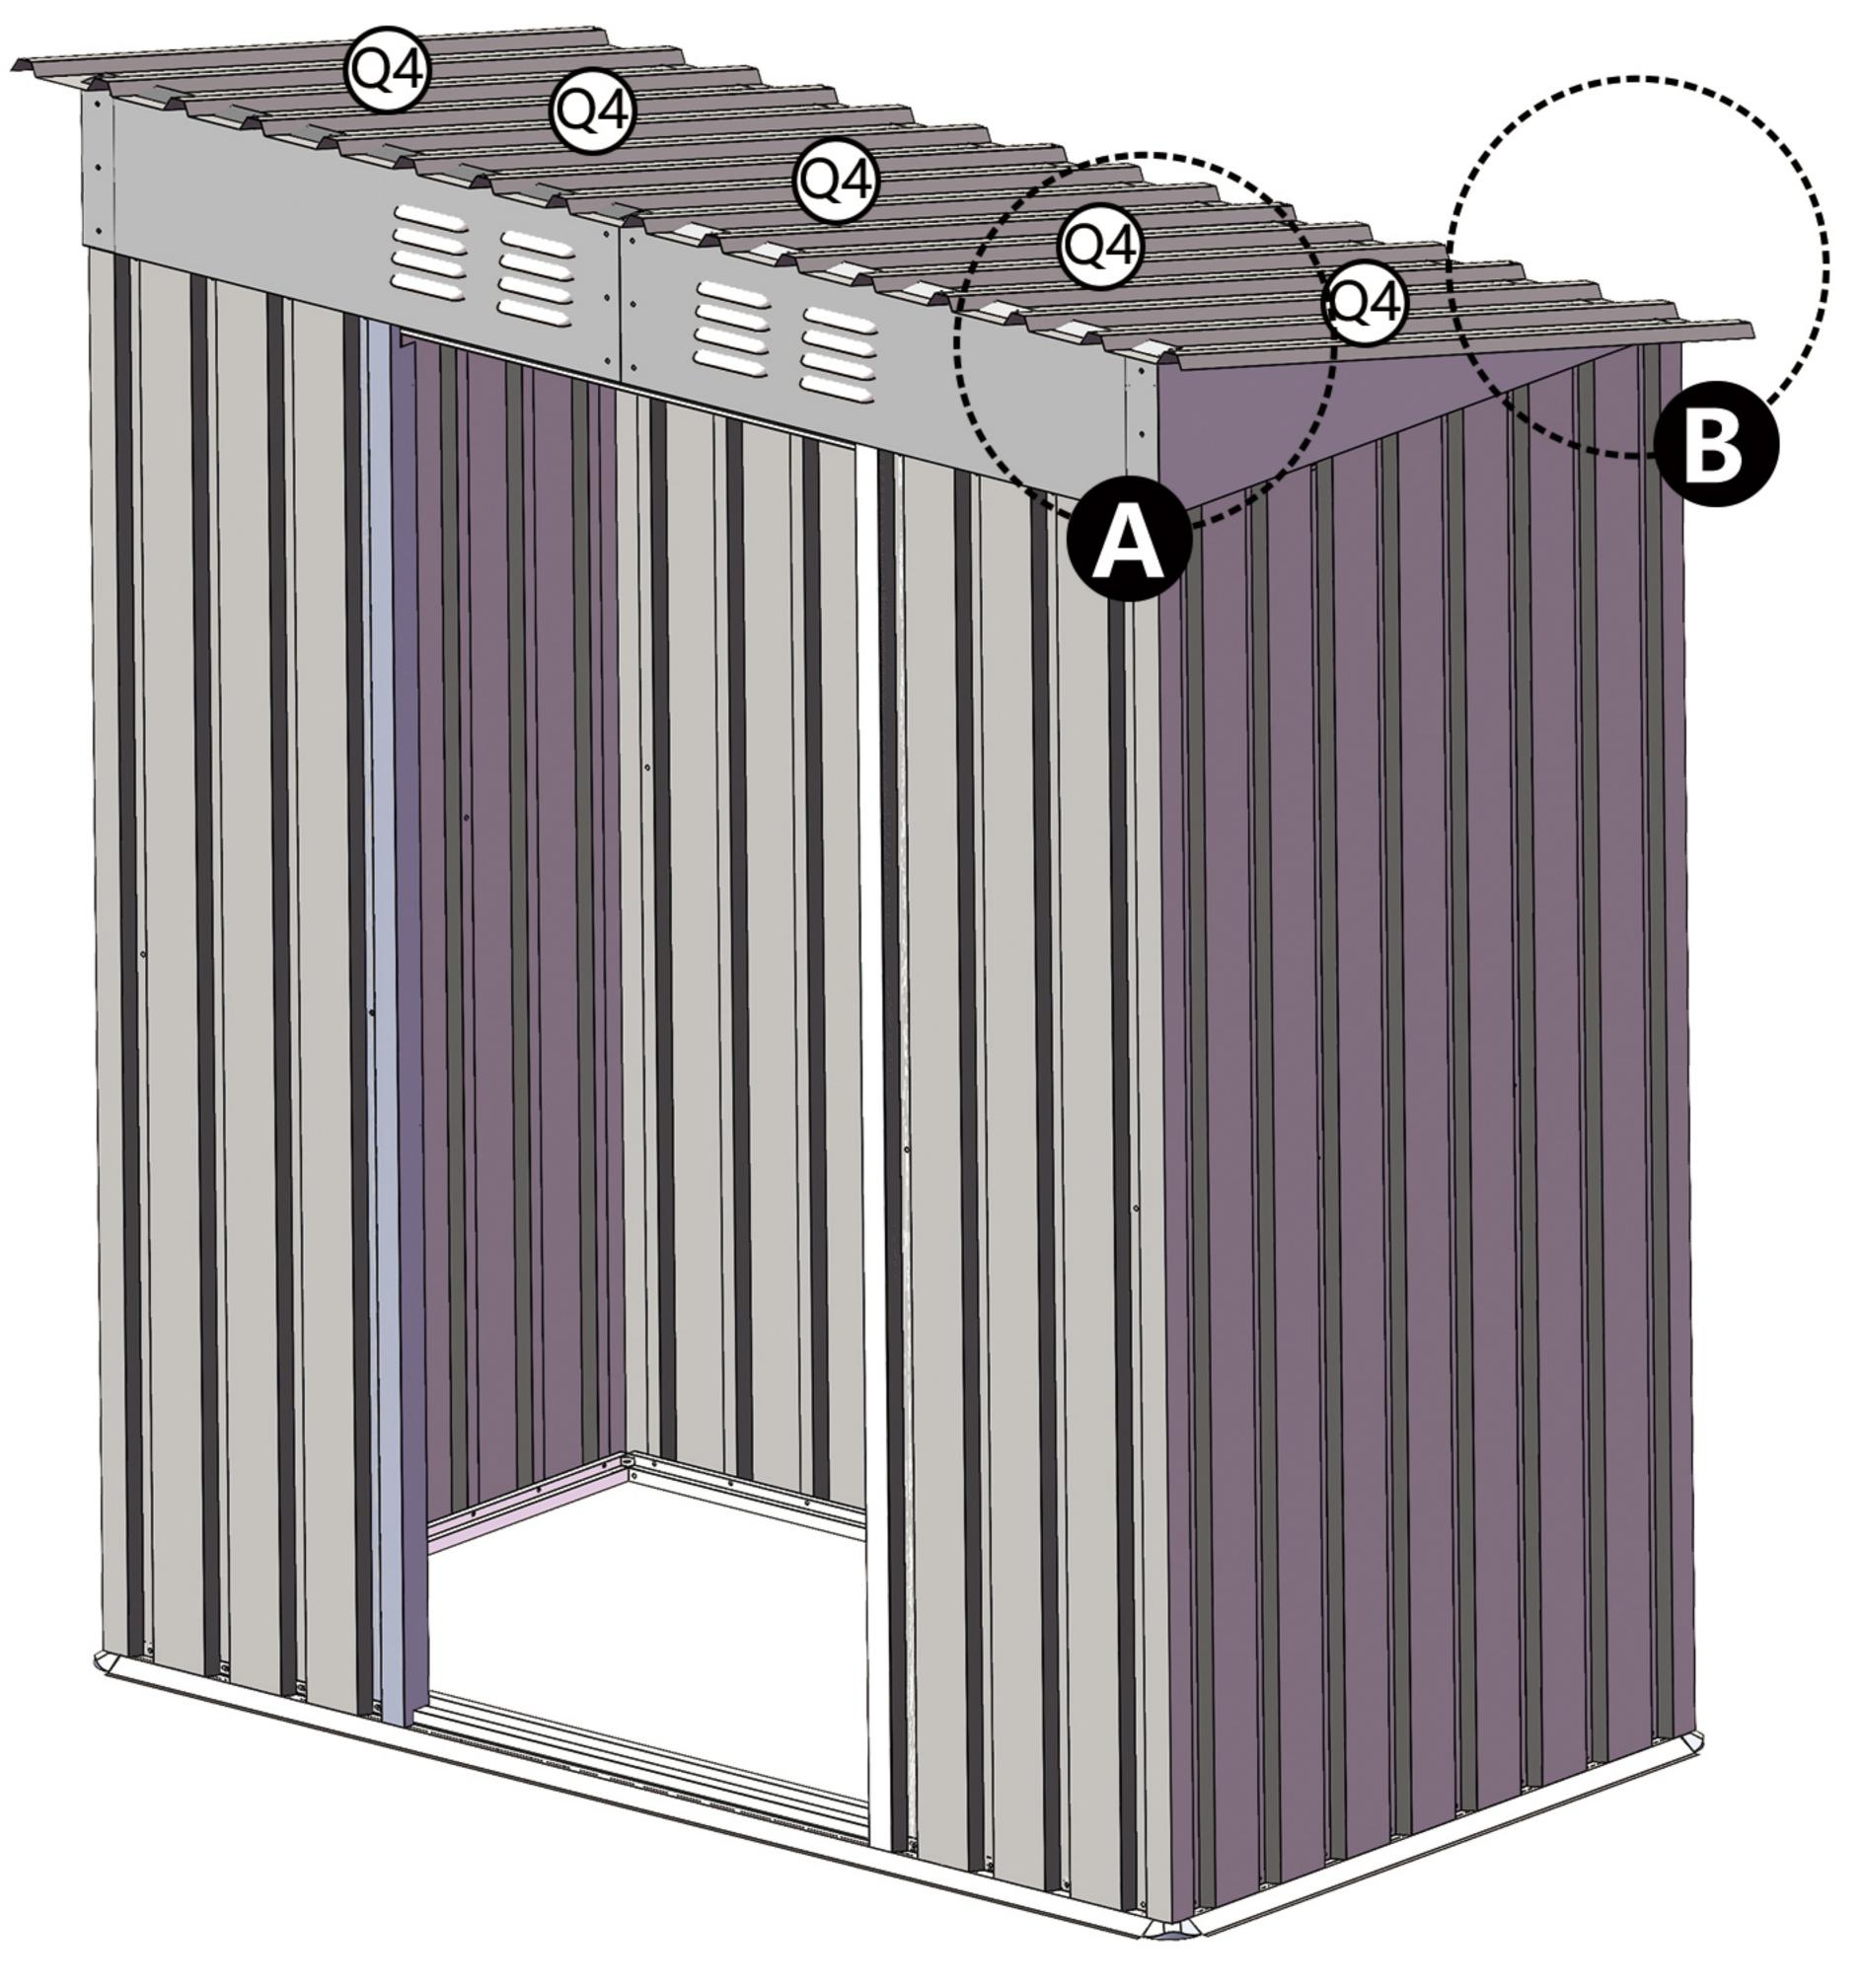


Notice: Install Q4 in sequence, overlap between every 2 pieces, and each Q4 needs 2 rows of F1 fixed.

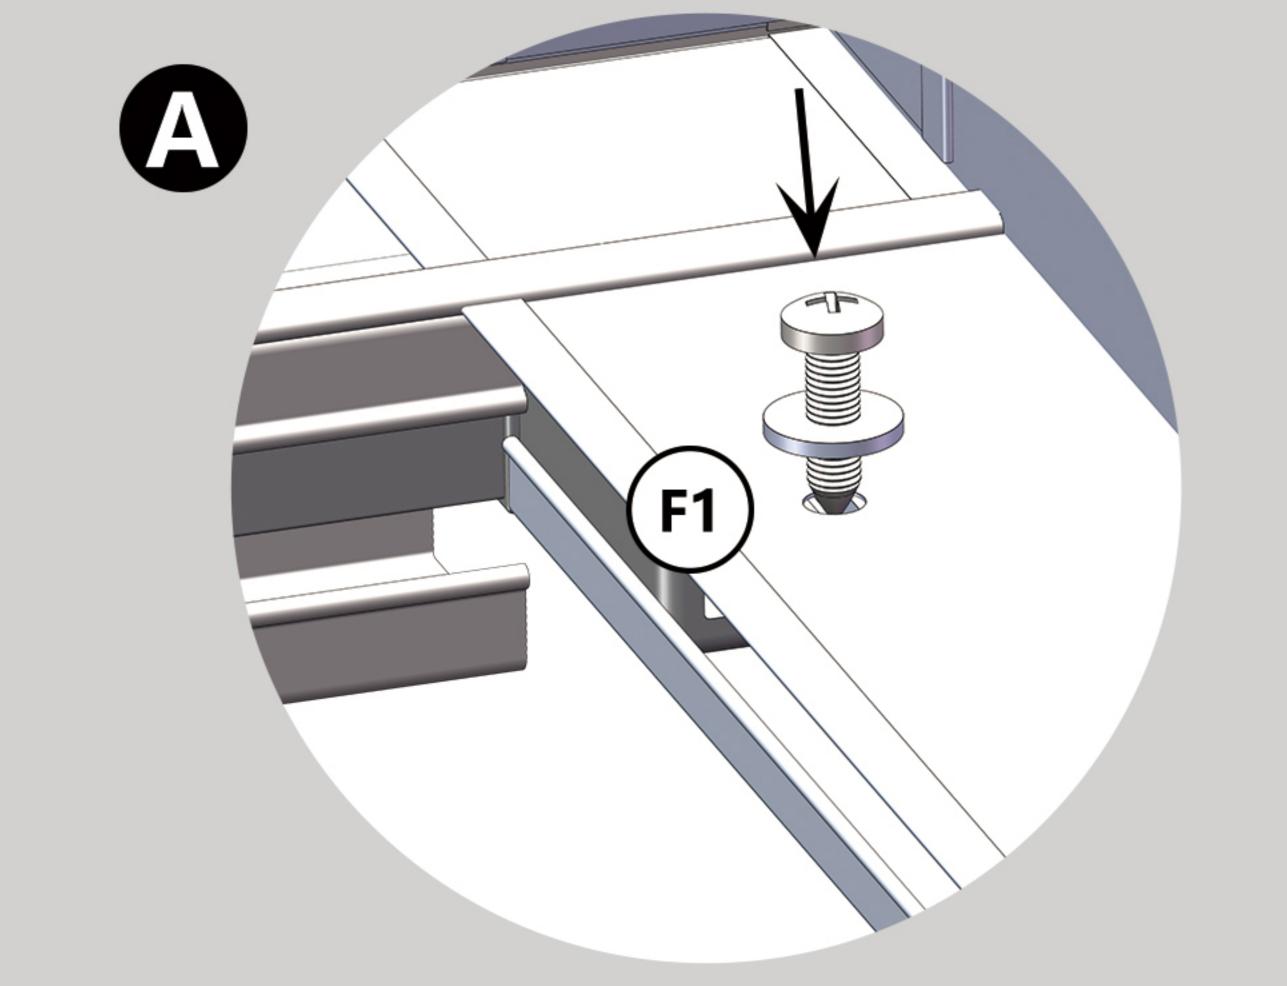


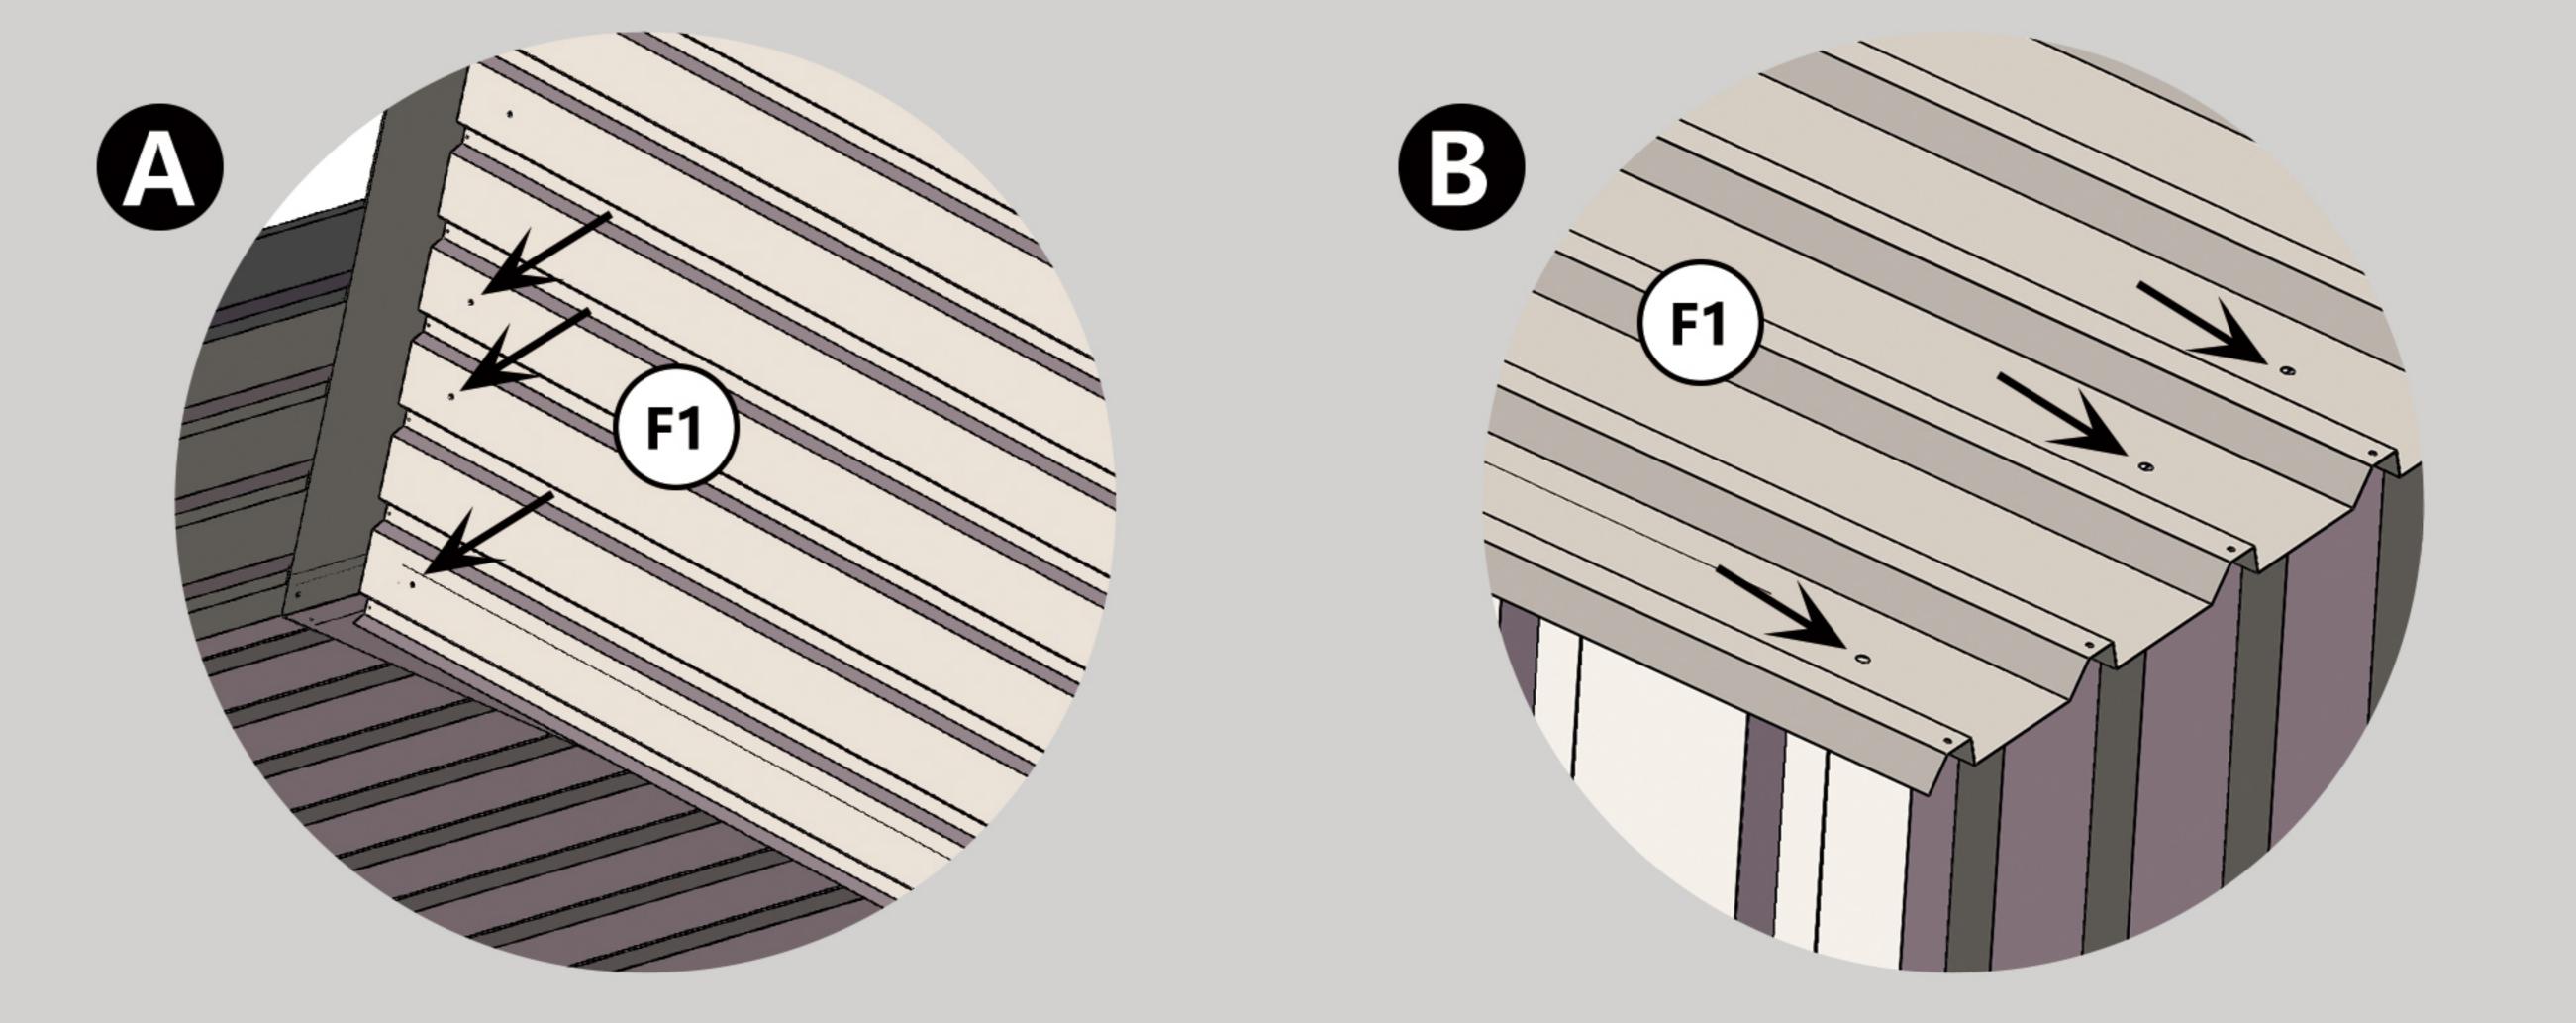


NO.	PART	Qty.	NO.	PART	Qty.
GB1	//	2	F1		
GB2	/3	2	J1		4
CD2	_				

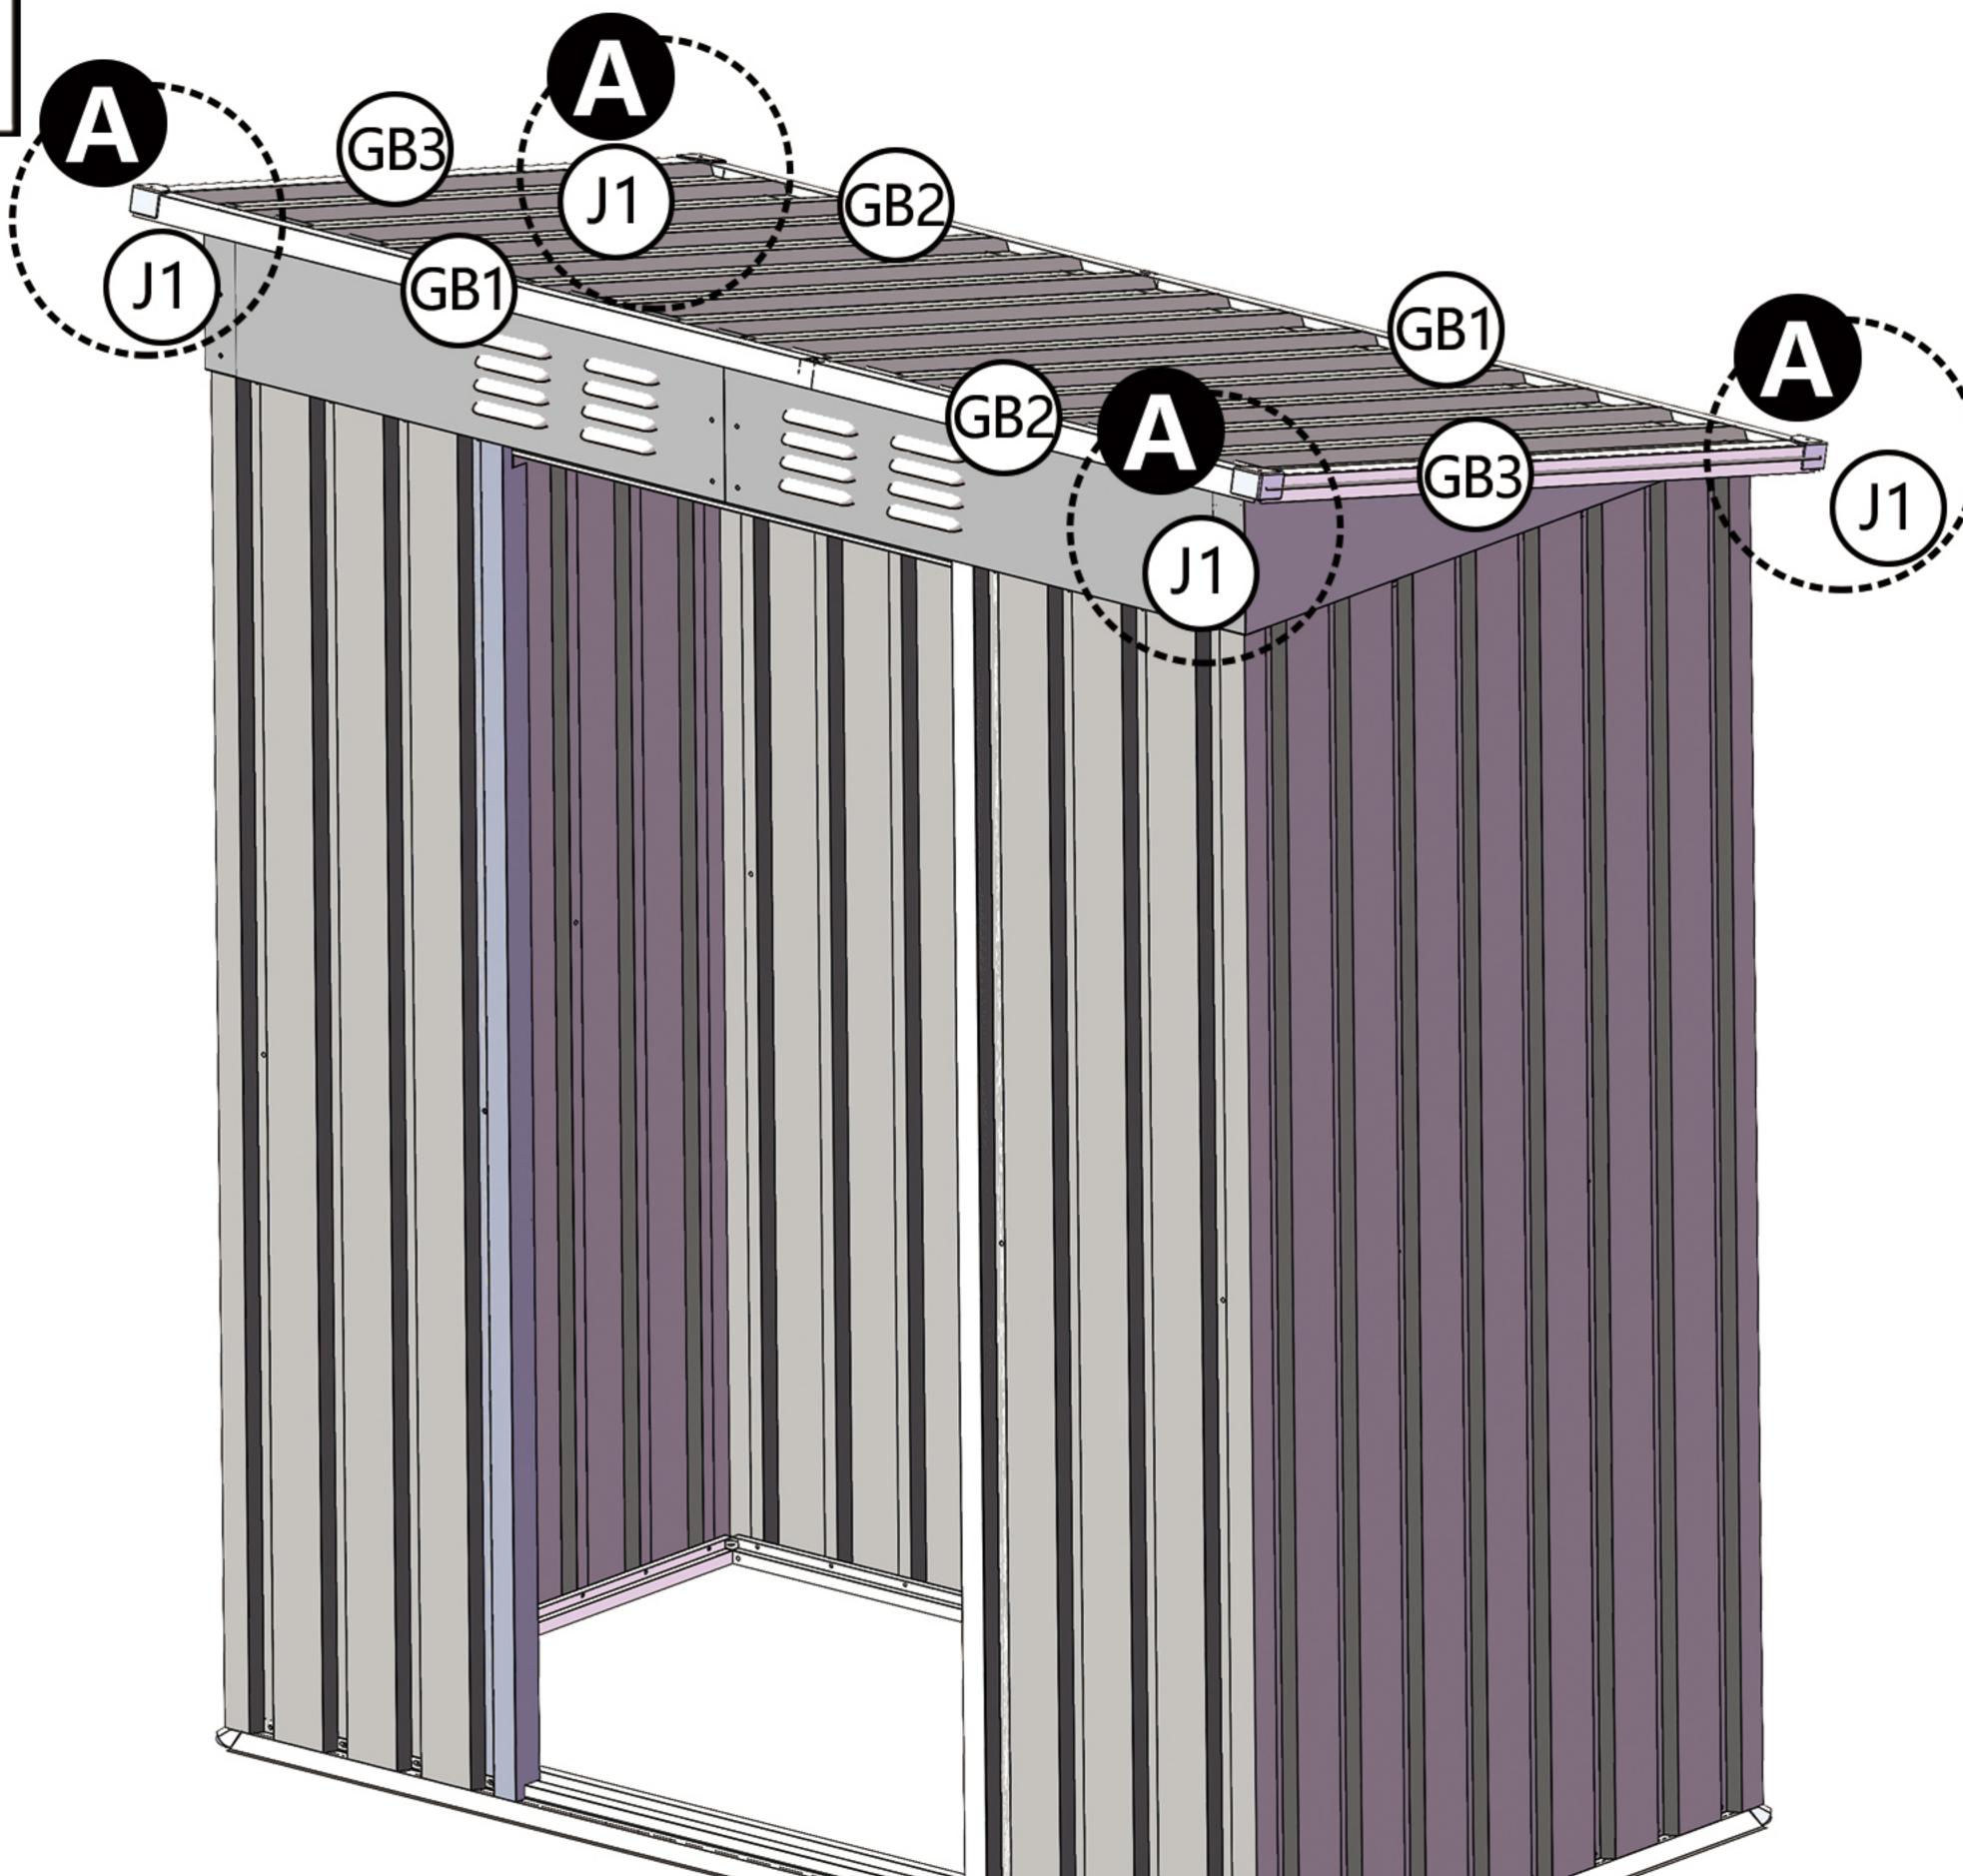



As shown in the picture, fix GB1 and GB2 and GB3 at the edge of F1, The four corners GB1, GB2, GB3 and J1 share the hole position.

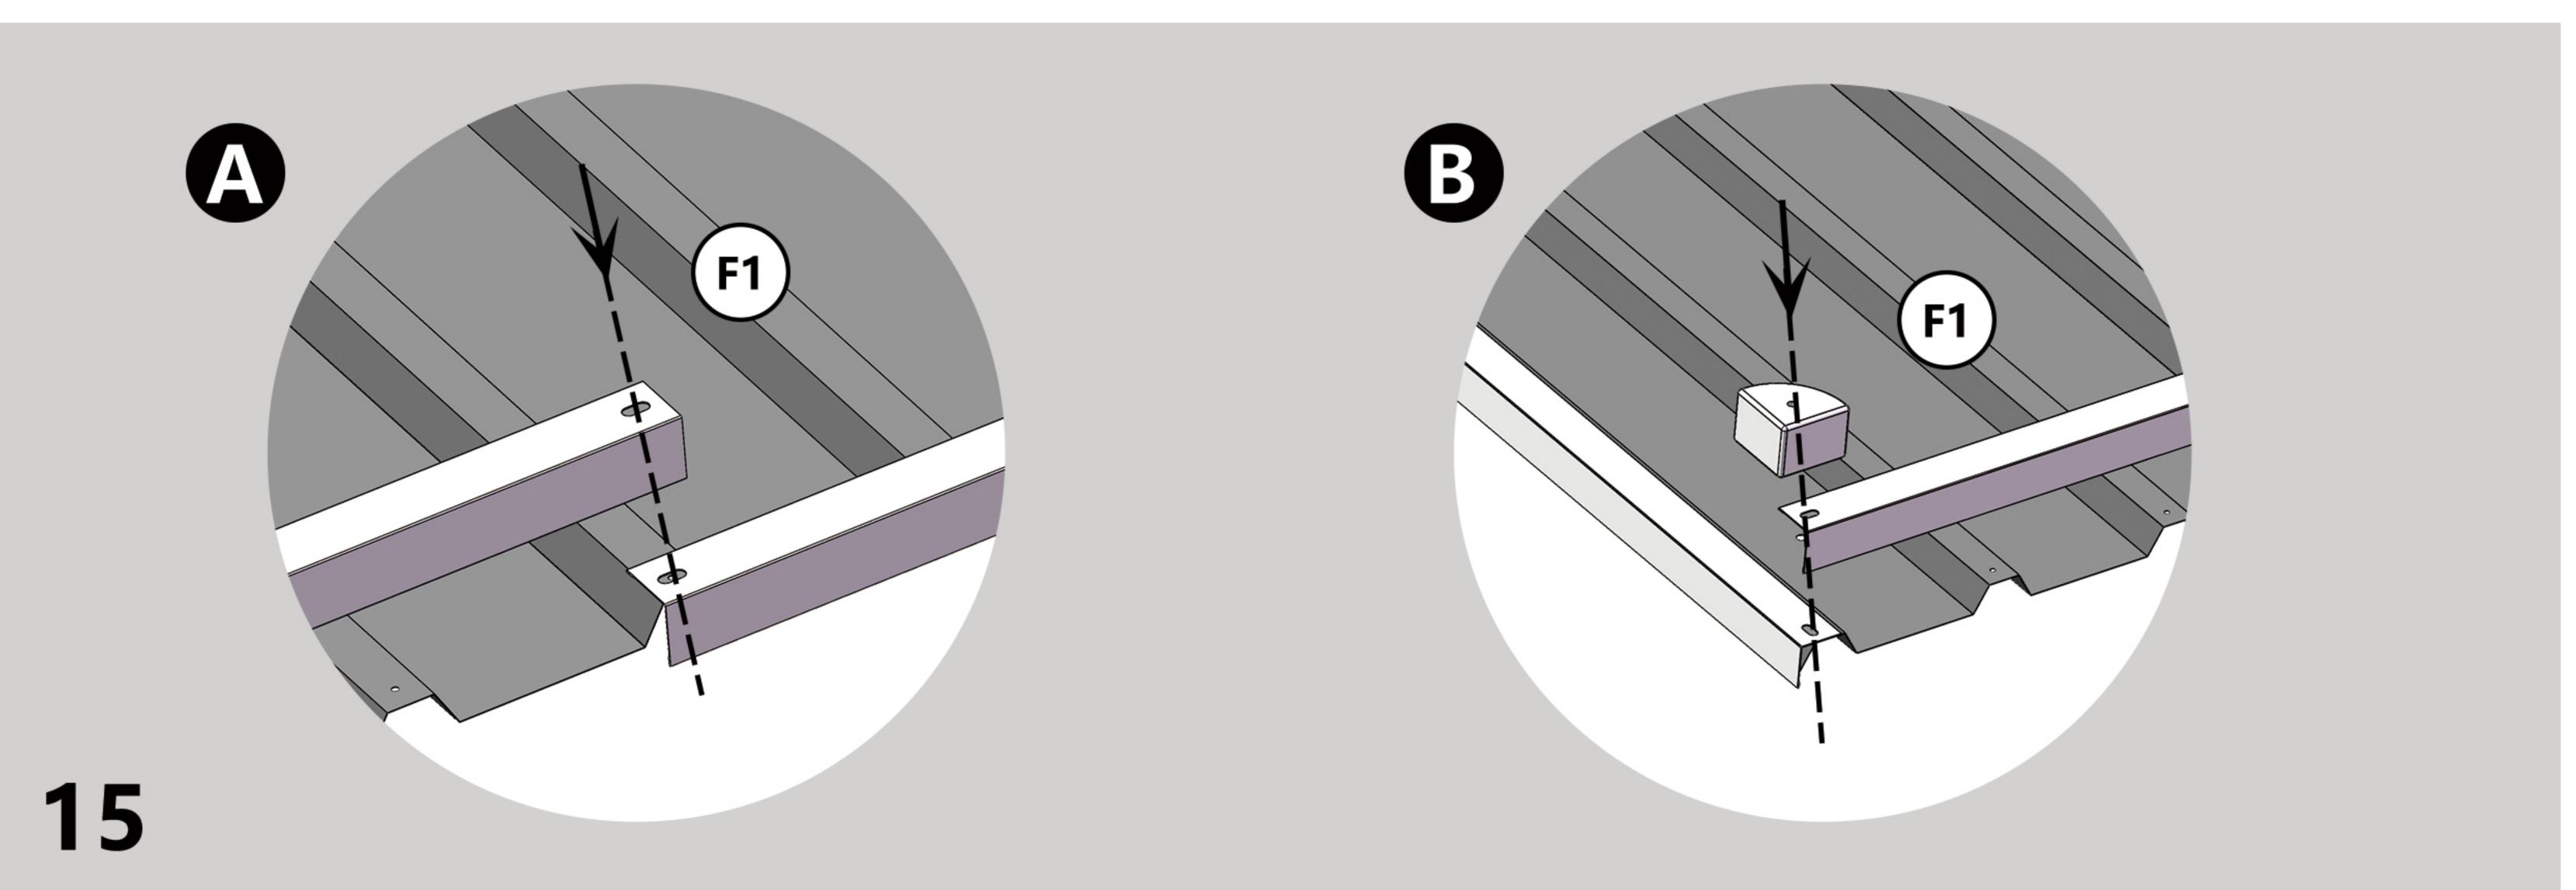



NO.	PART	Qty.									
M2		4	M5L		1	М		2	F3	0	
M3		4	M5R		1	GD	ŝ	4	F4	0	
M4		2	MB		2	F1					

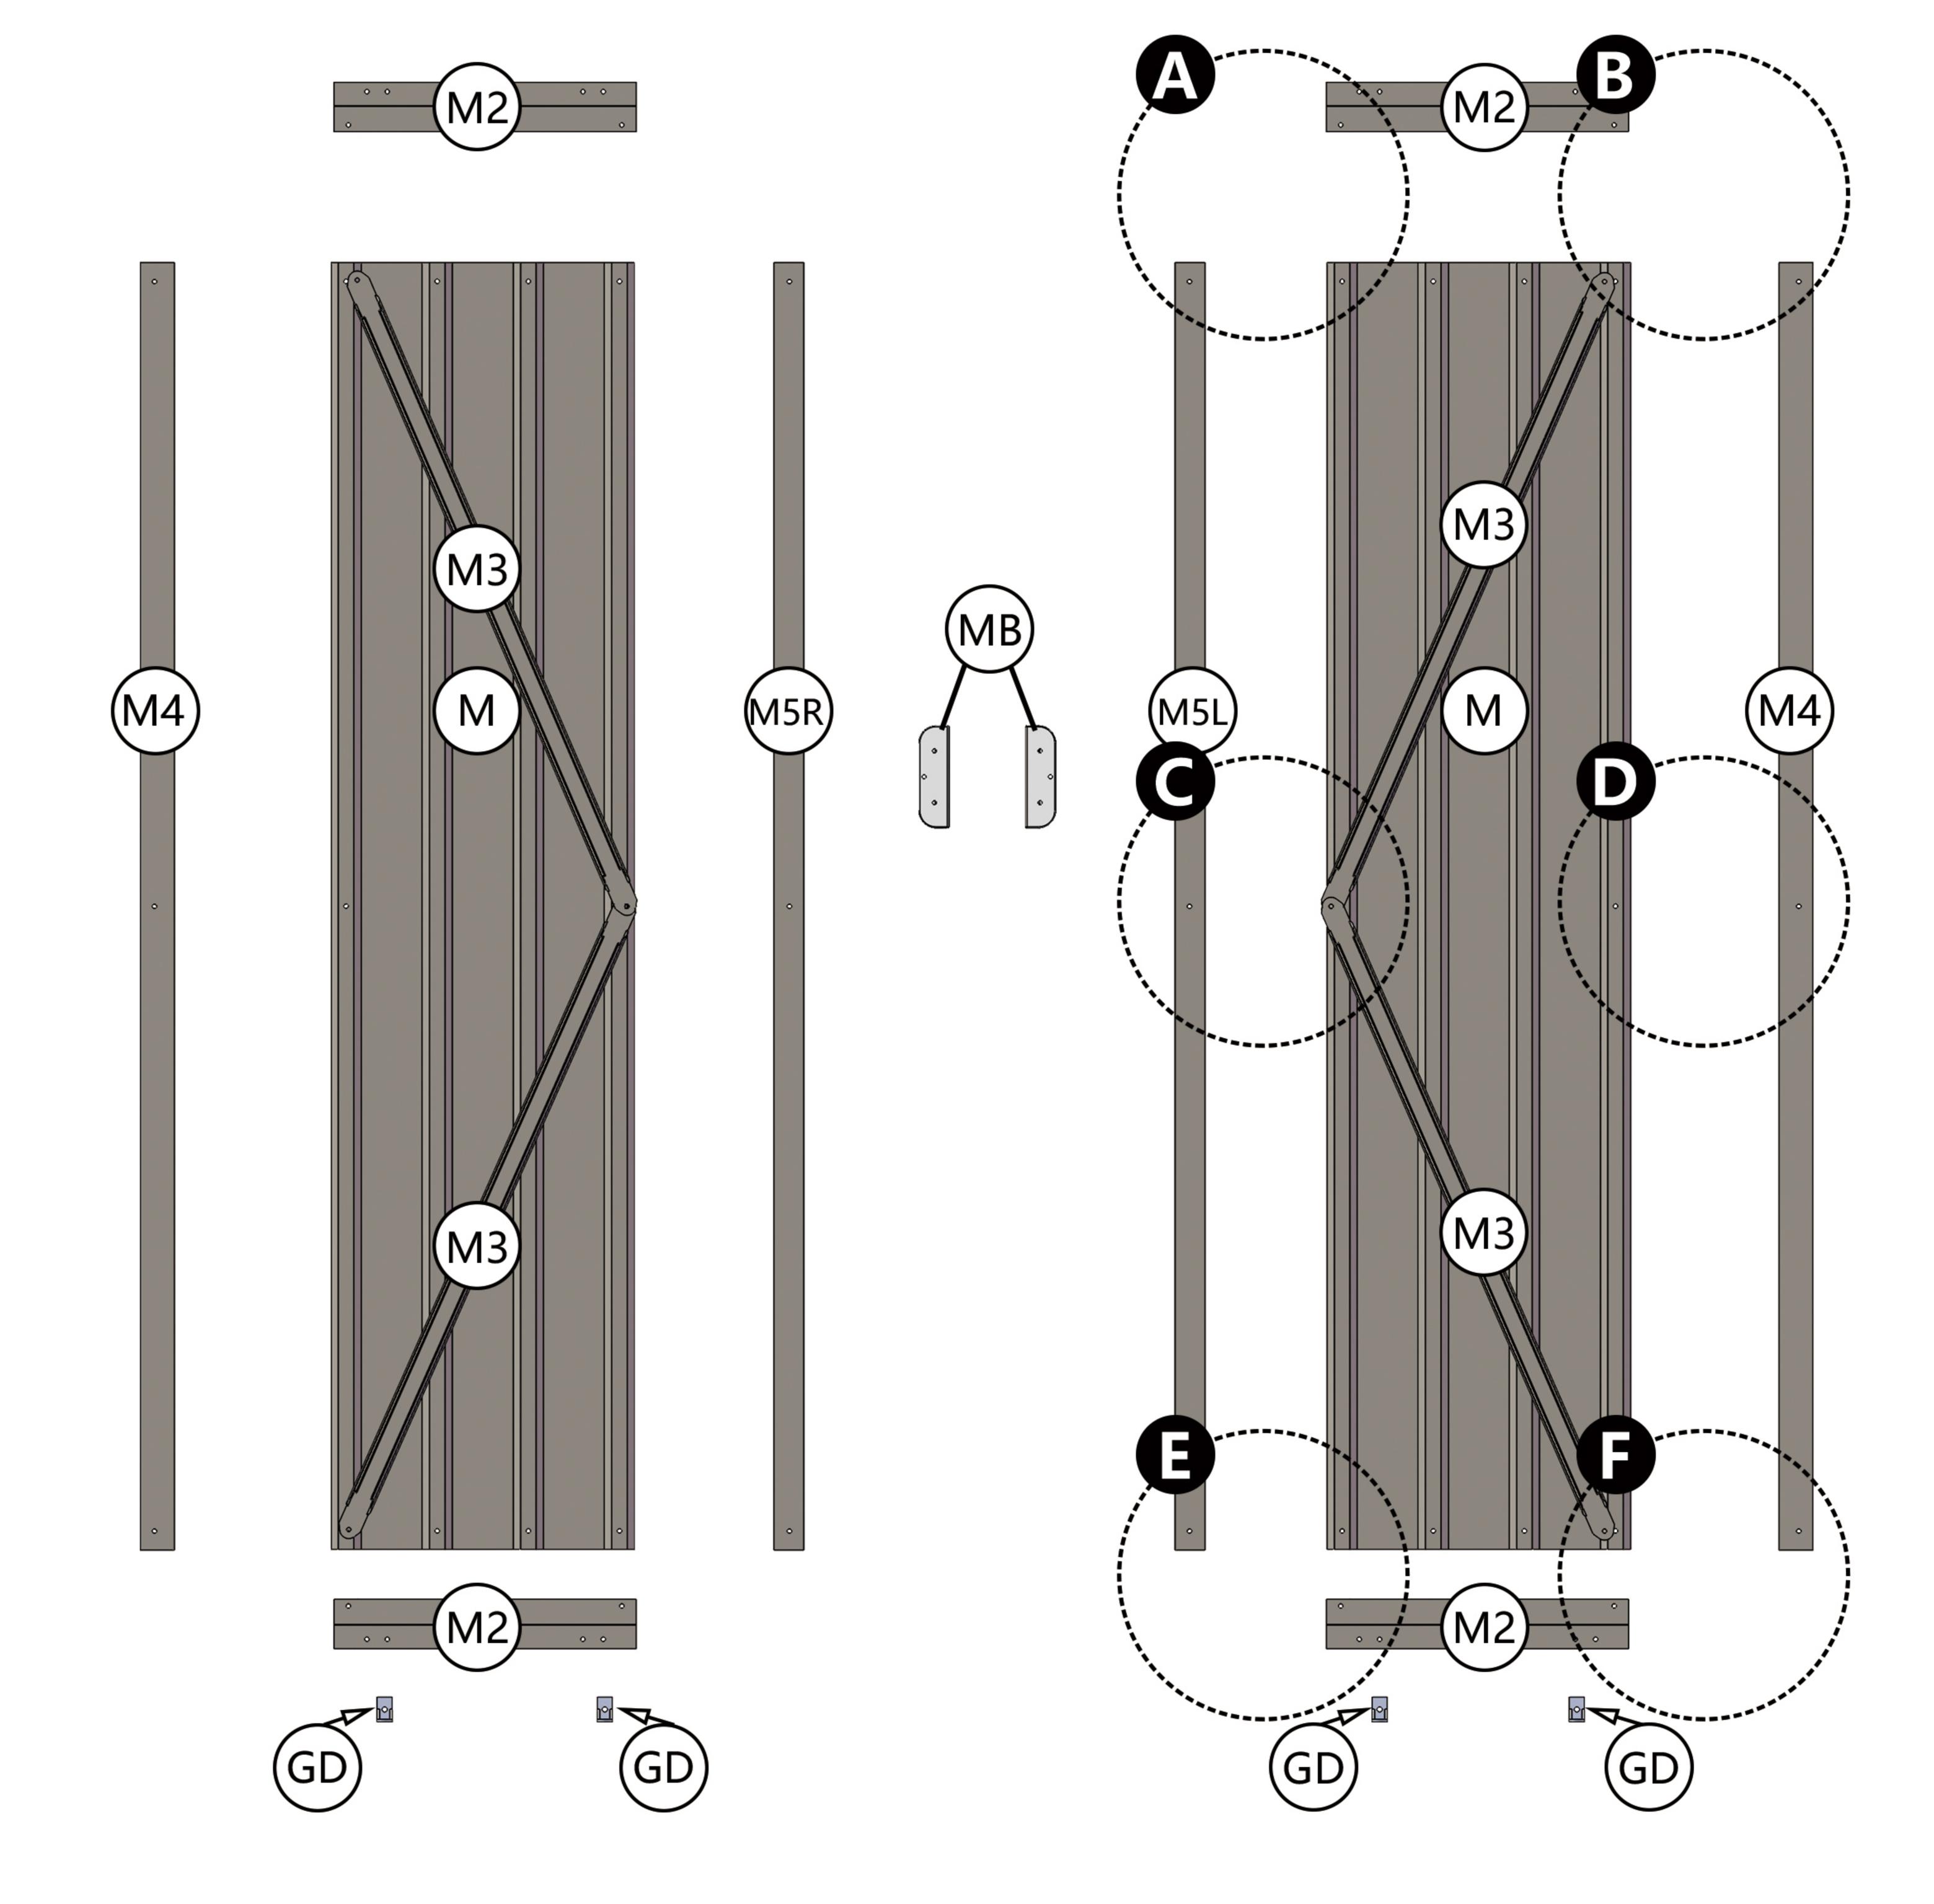

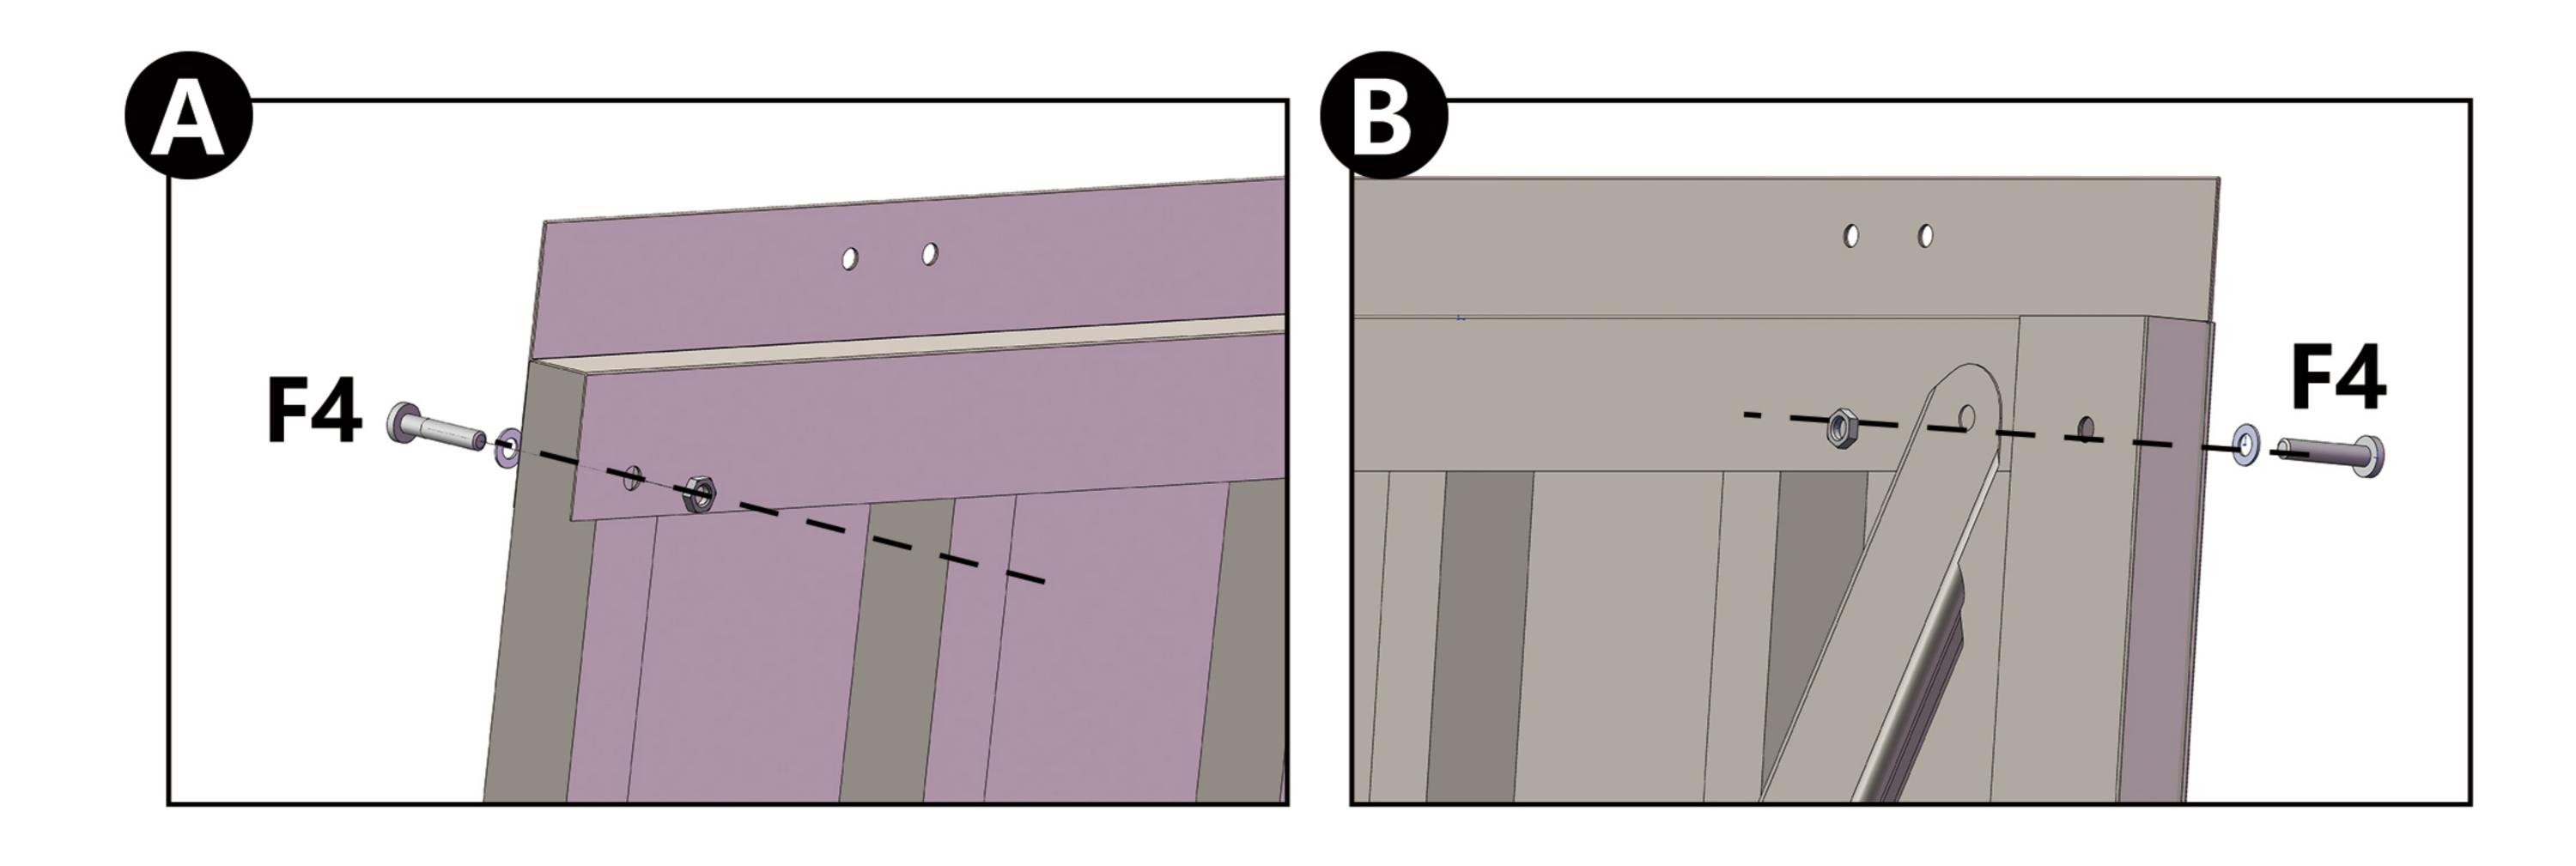


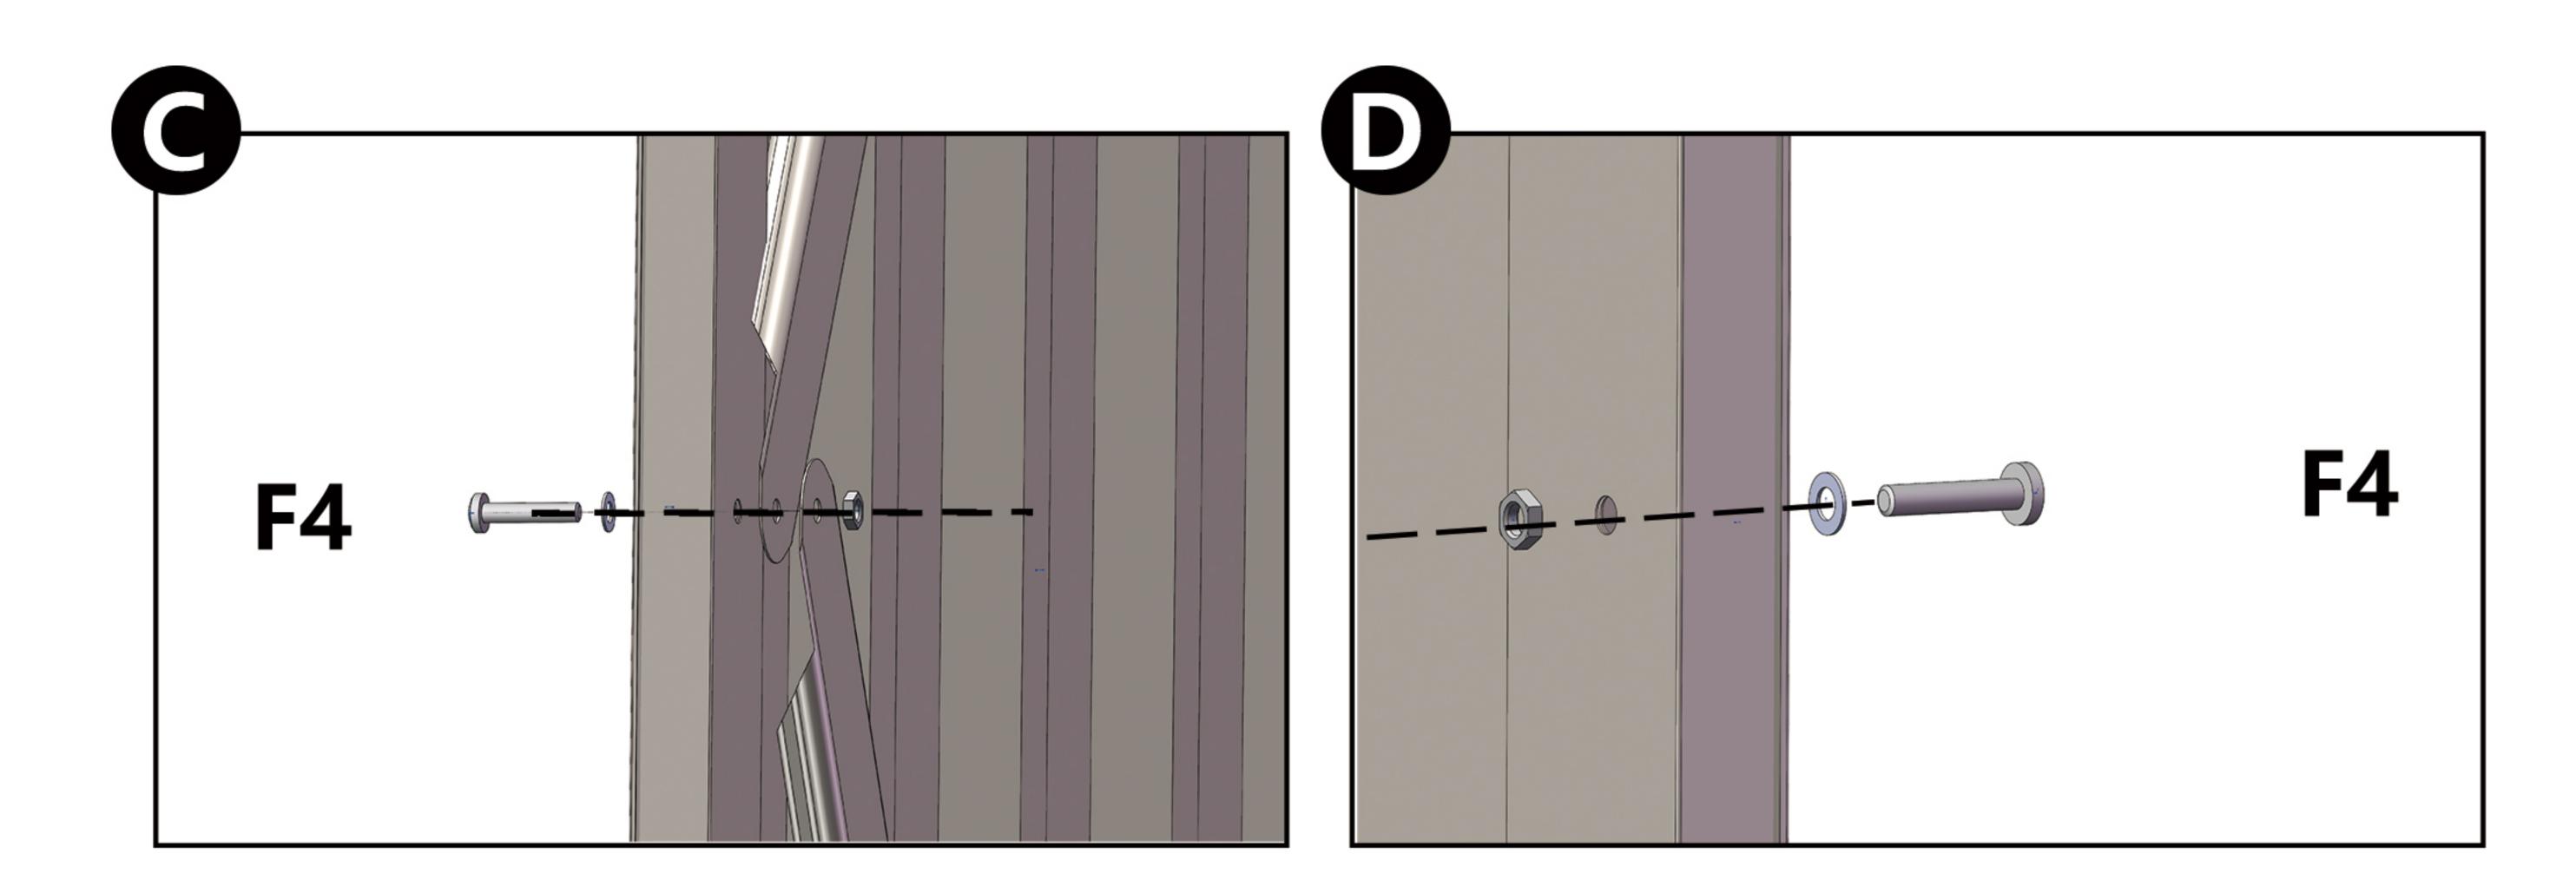

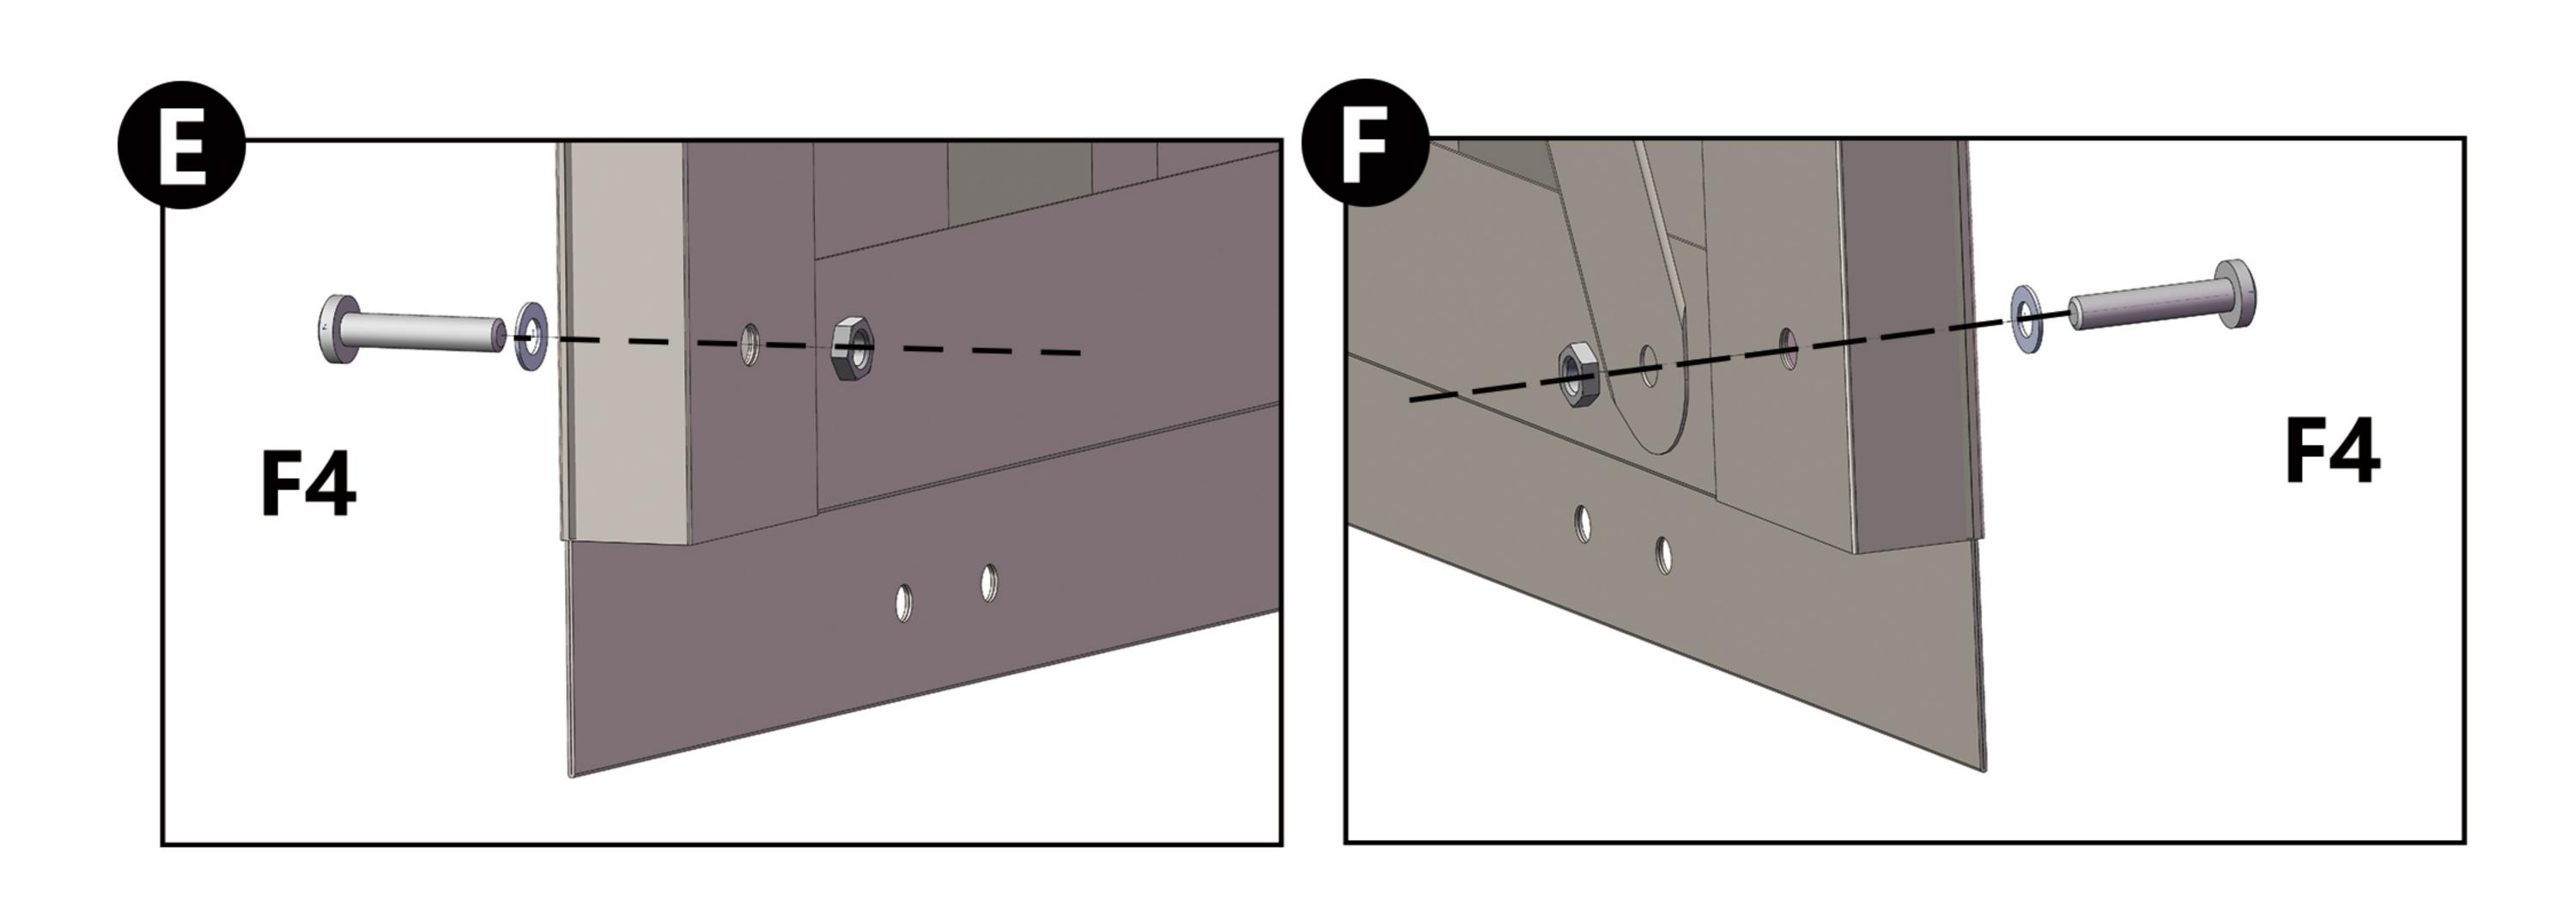

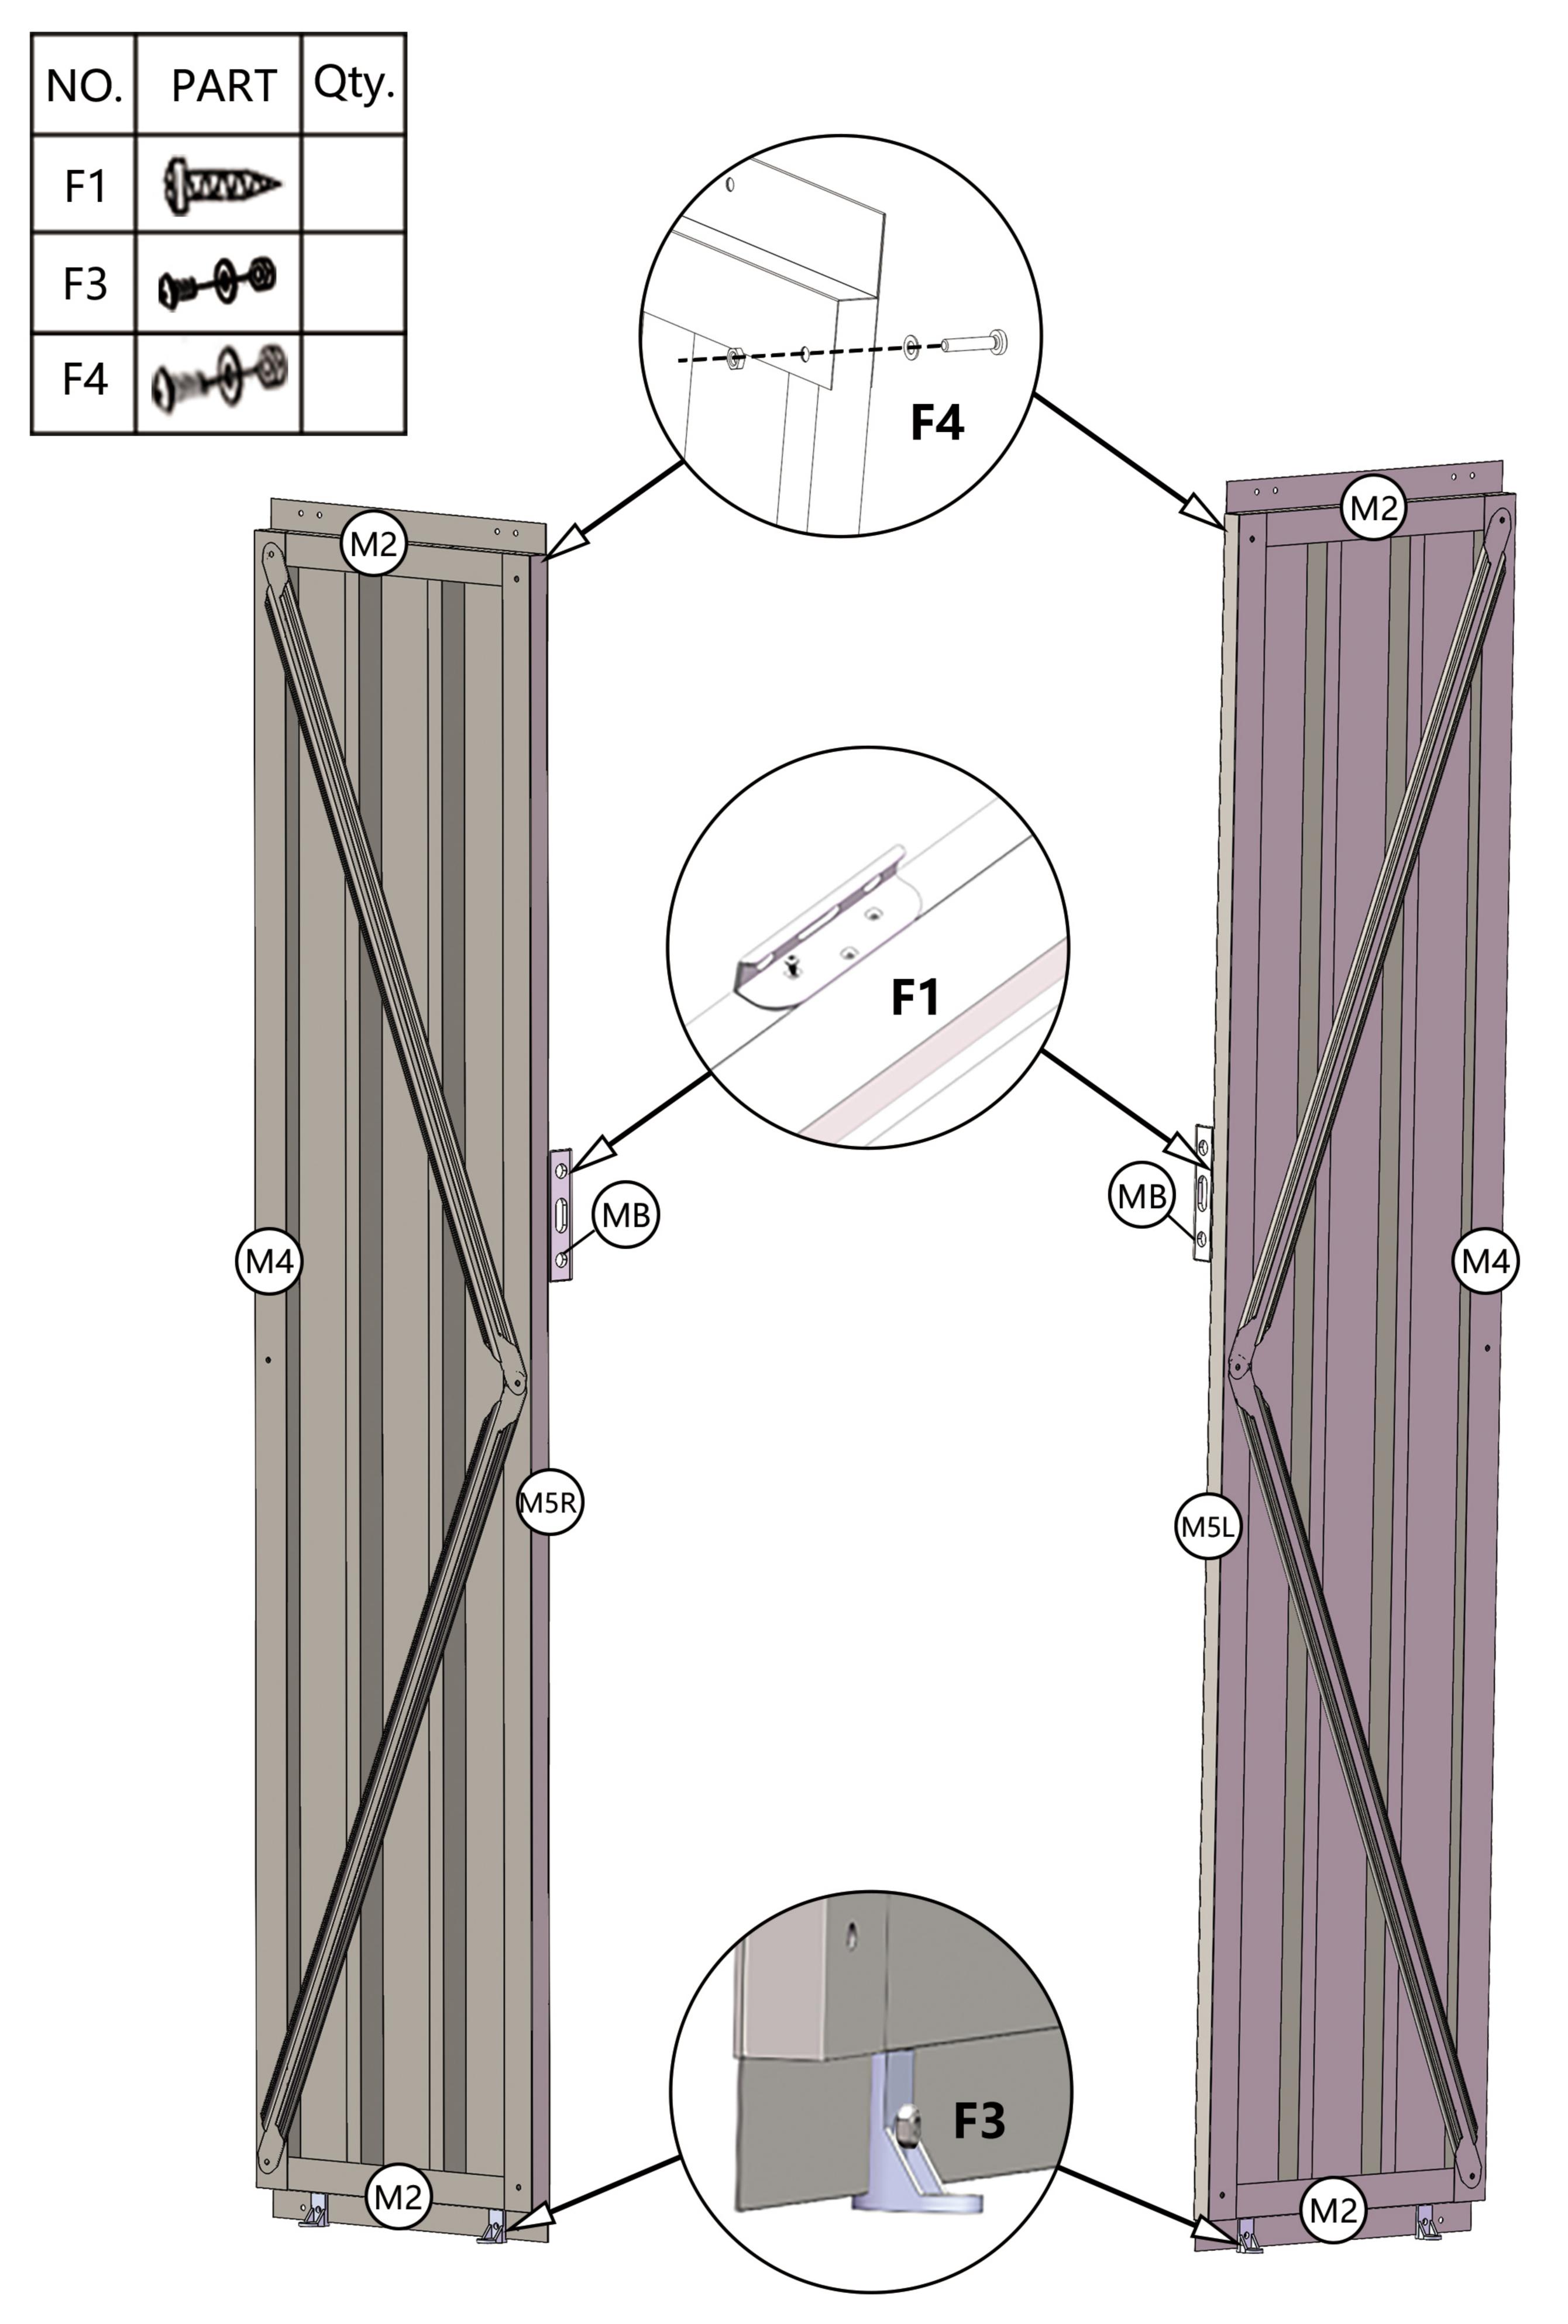


N	0.	PART	Qty.
F	1		

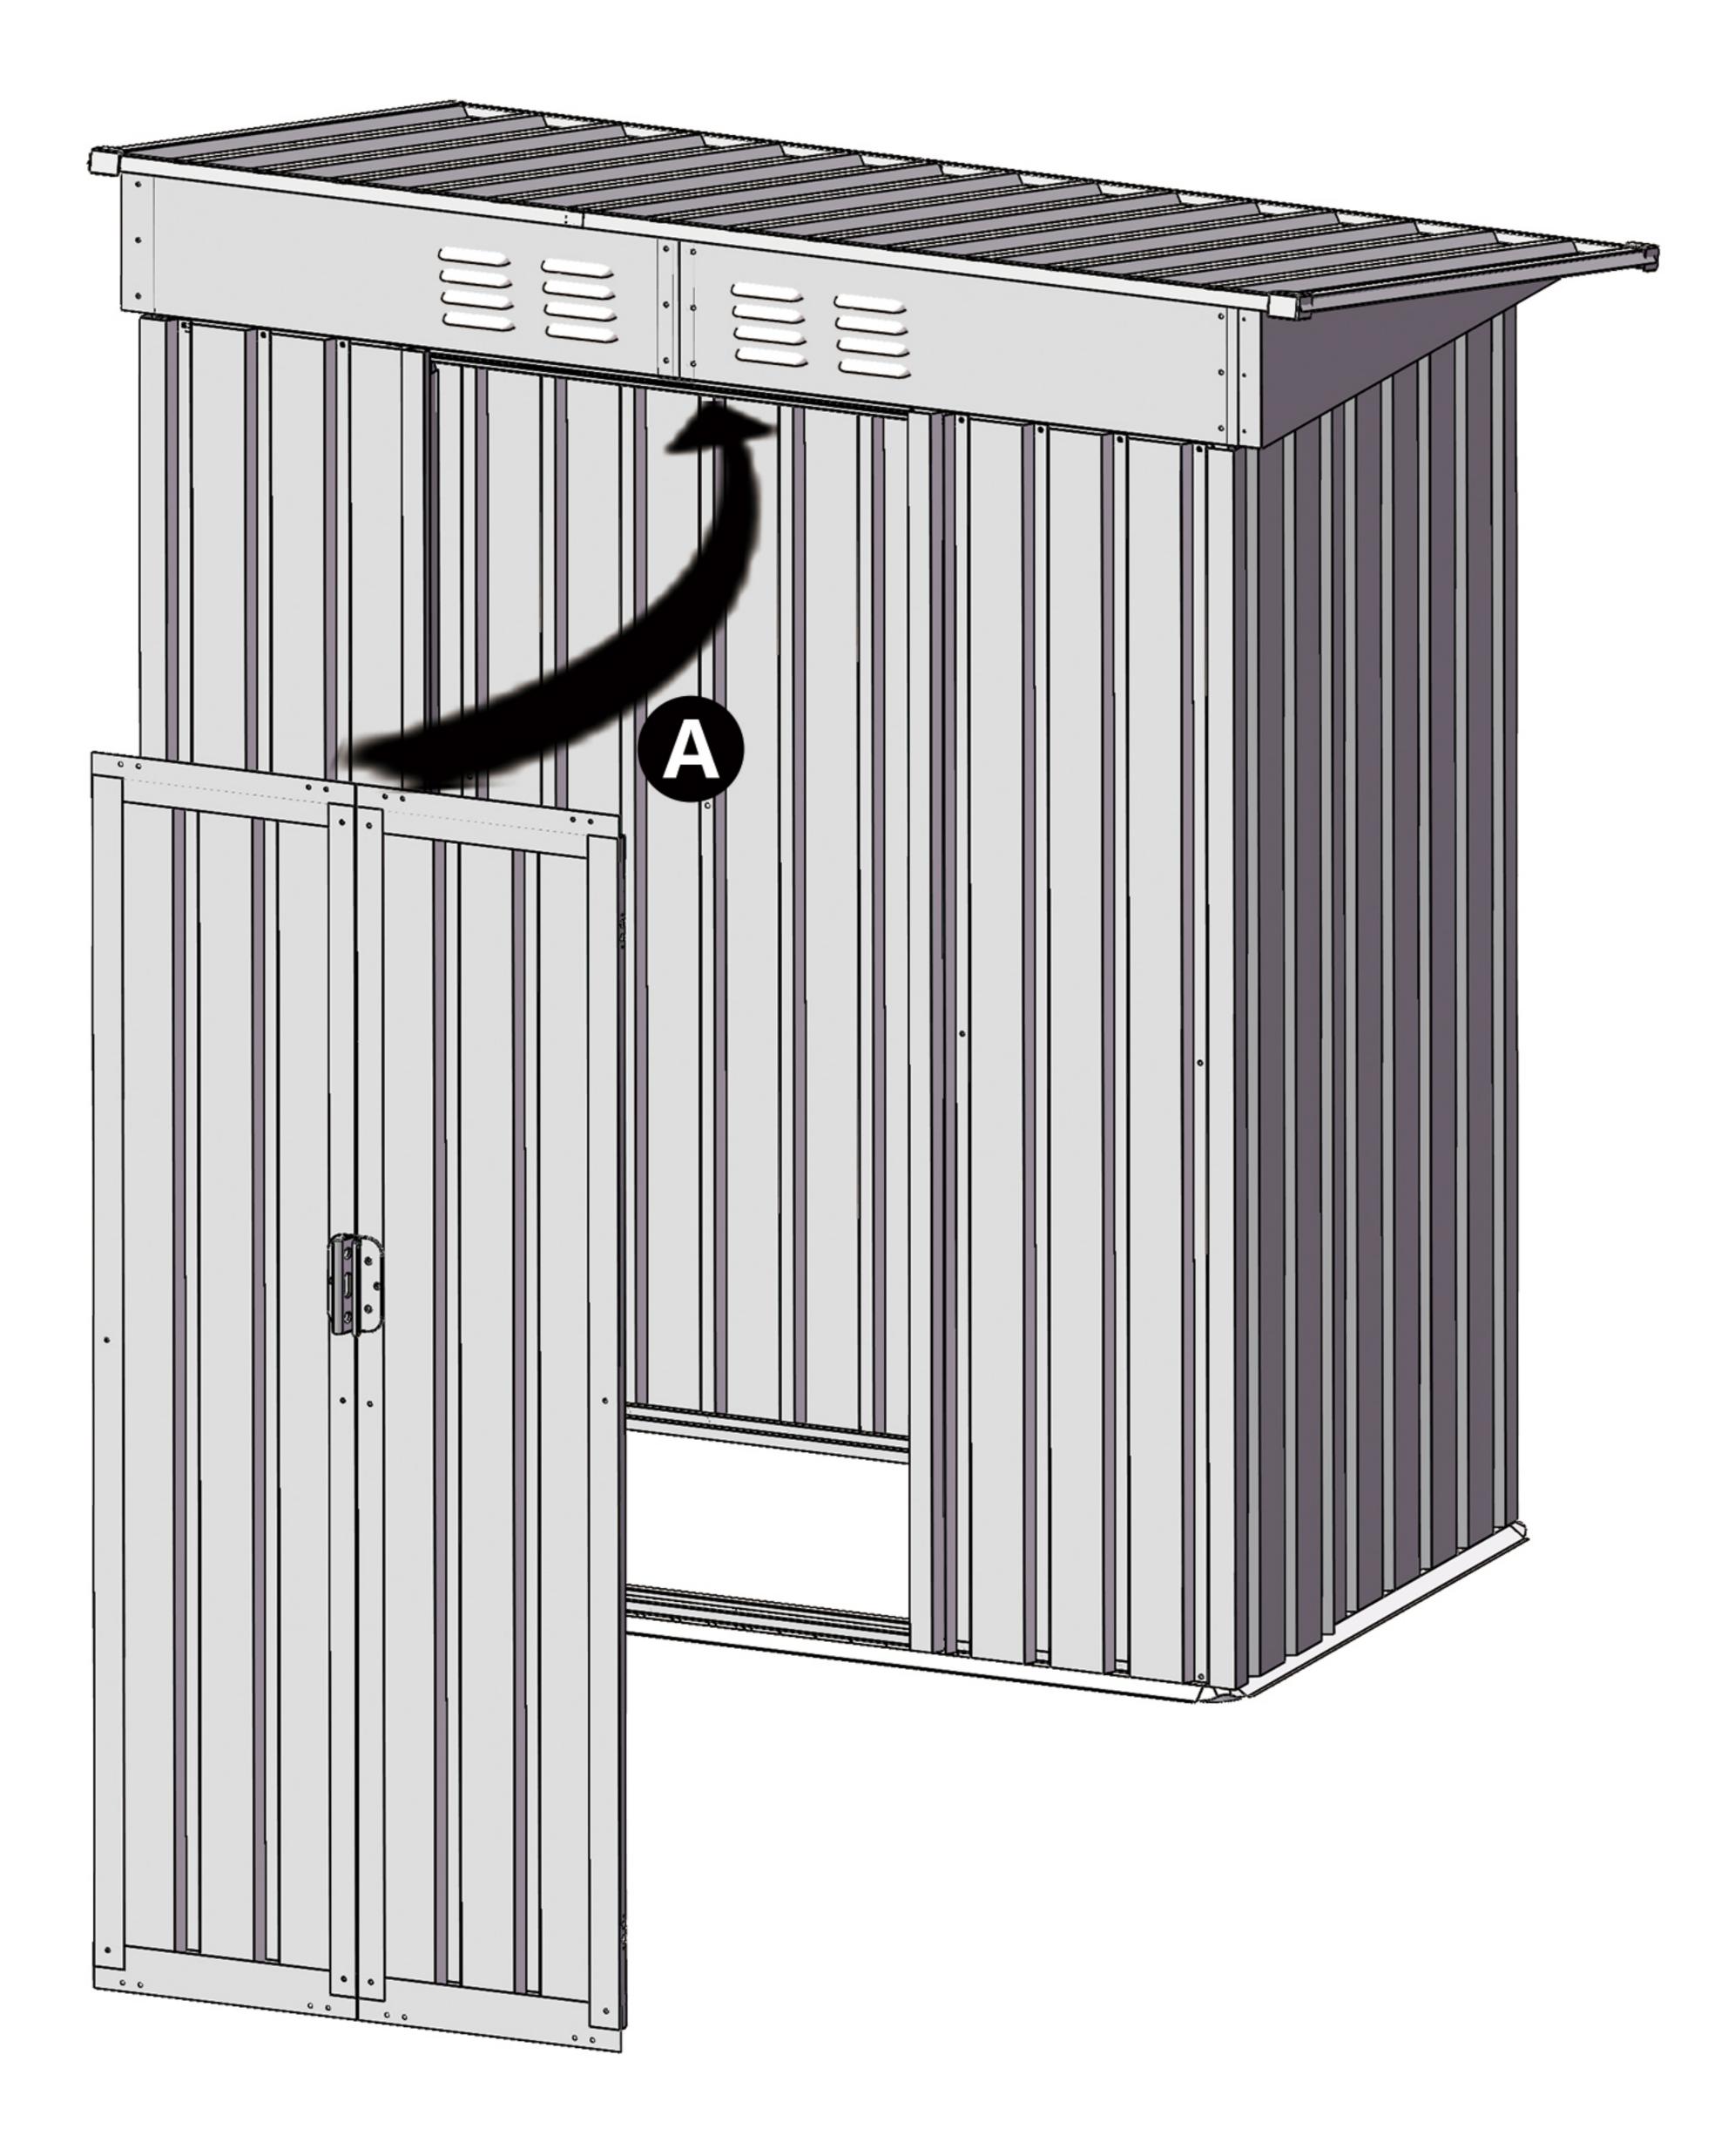

Use F1 to secure the installed door to the pulley

The adjustment of the door can be achieved by the three holes of the pulley being at different heights

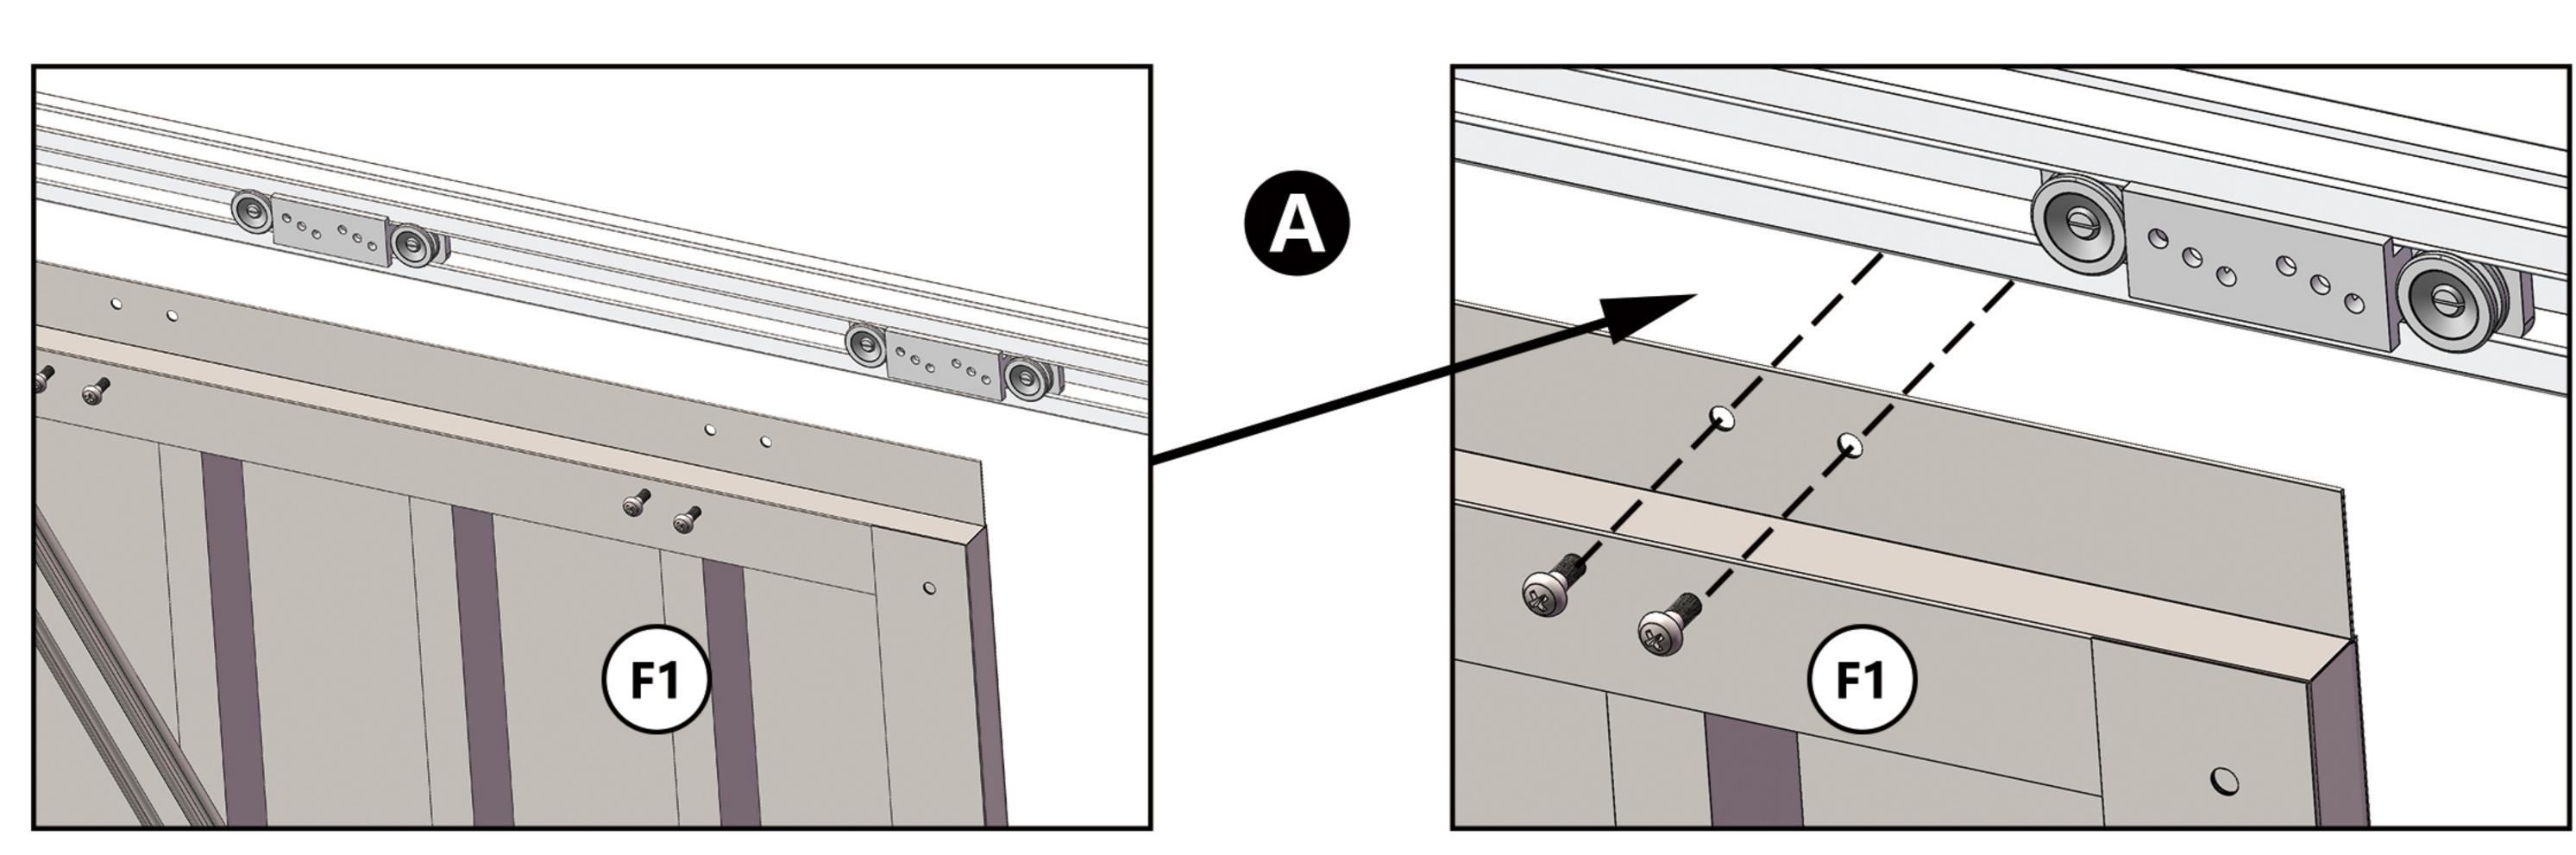



19