

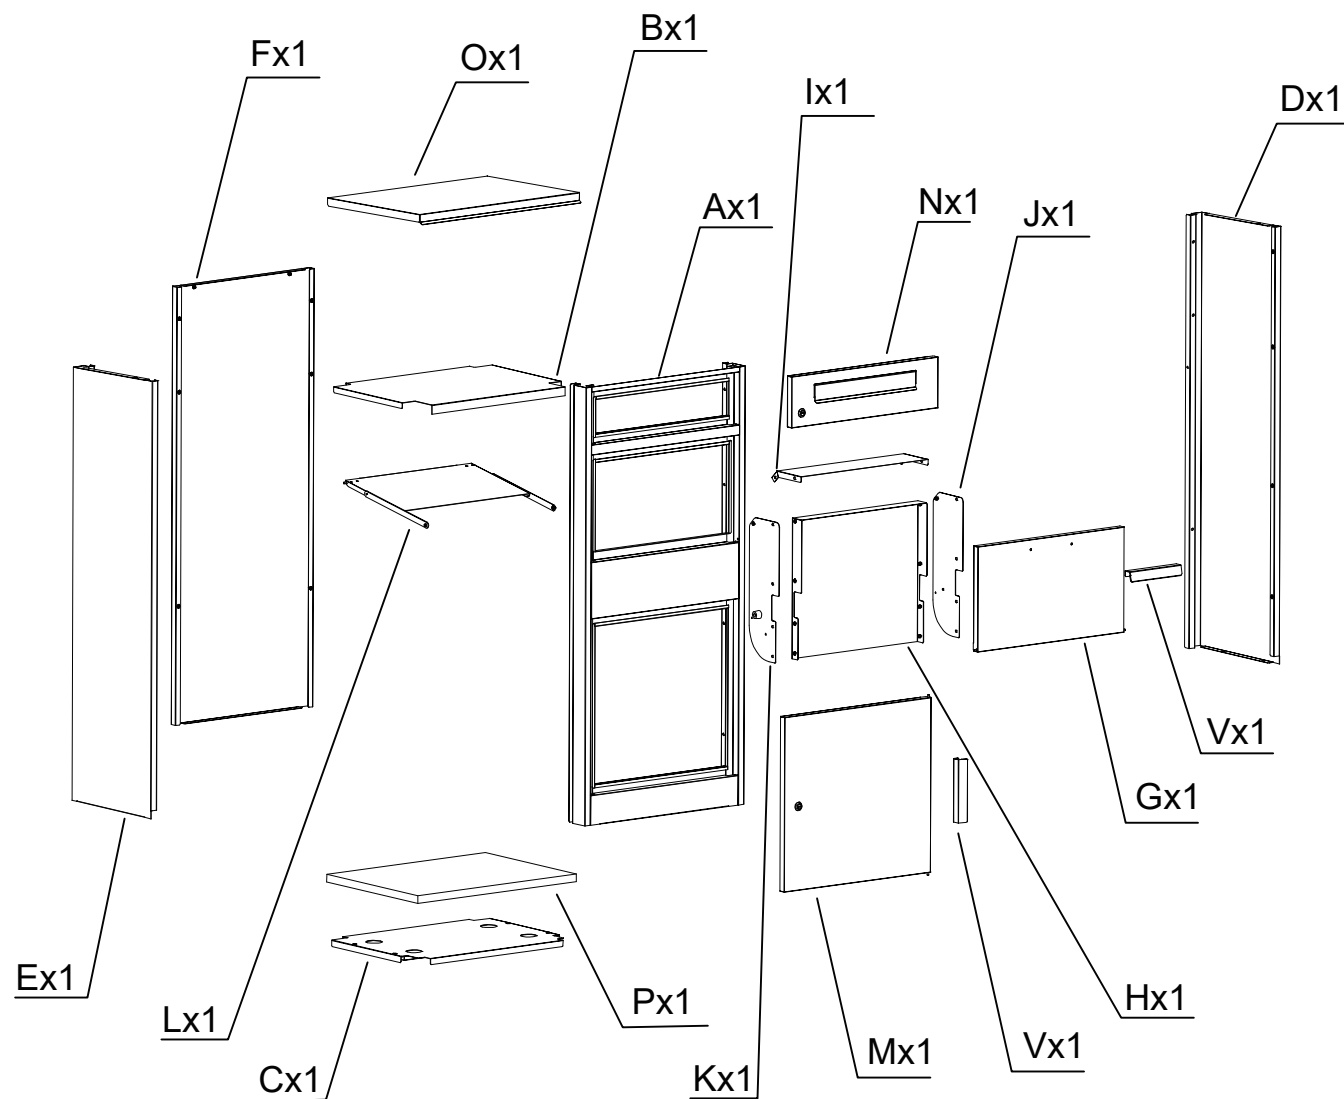
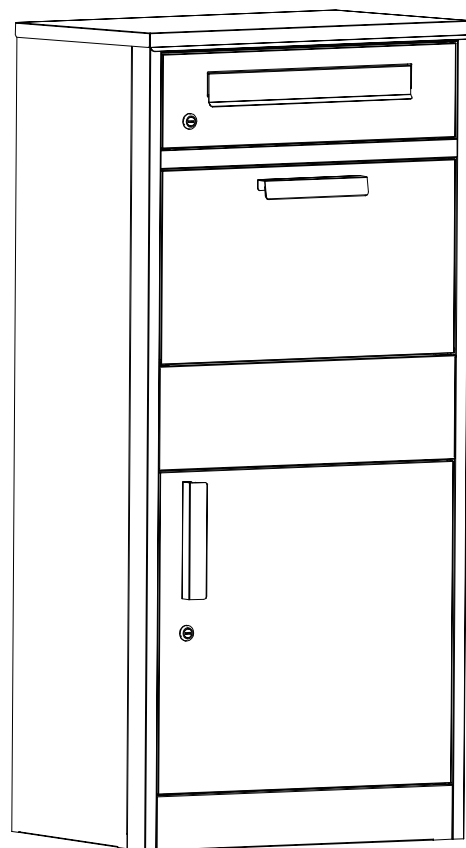
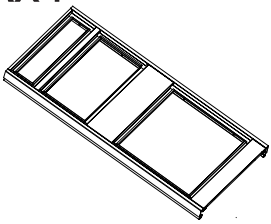
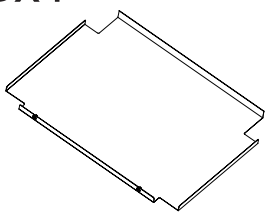
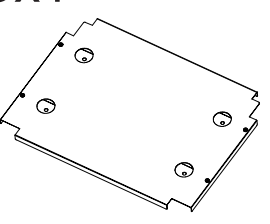
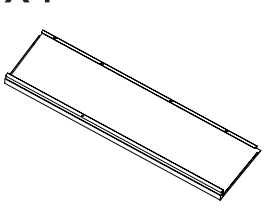
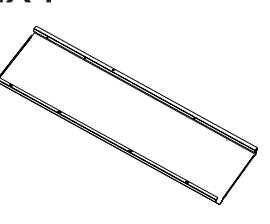
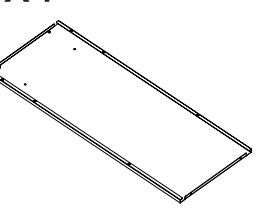
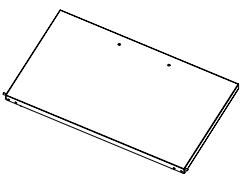
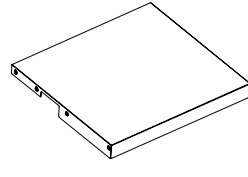
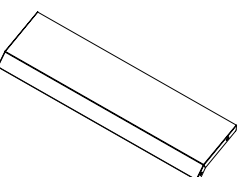
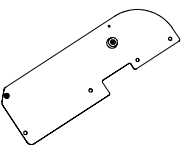

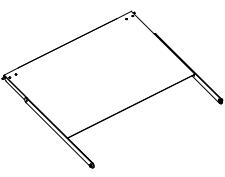
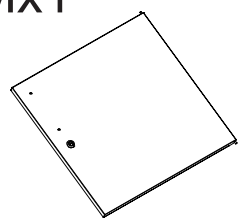
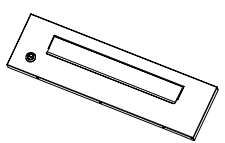
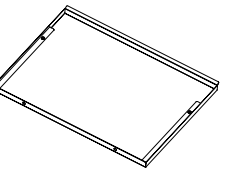
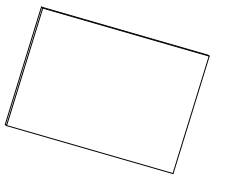
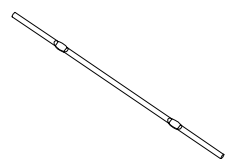

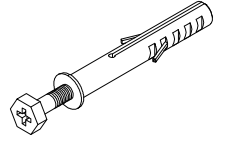
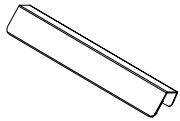






Parcel Safe


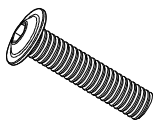


Ax1 	Bx1 	Cx1 	Dx1 	Ex1 	Fx1 
Gx1 	Hx1 	Ix1 	Jx1 	Kx1 	Lx1 
Mx1 	Nx1 	Ox1 	Px1 	Qx1 	Rx32  M4x10mm
Sx8  Ø7xØ4.2*2	Tx4  M4x16mm	Ux4 	Vx2 	Wx4  M4x8mm	Xx2  Ø7xØ4.2*7
Yx4  M4	Zx1 	B1x2 	SPARE PART  X2		
			 X2	 X2	 X2


STEP 1

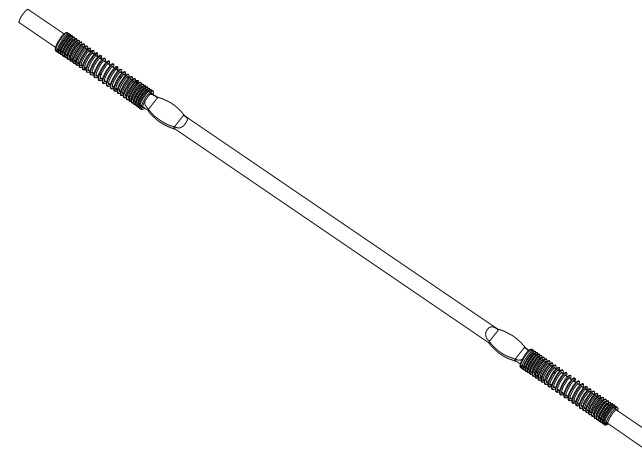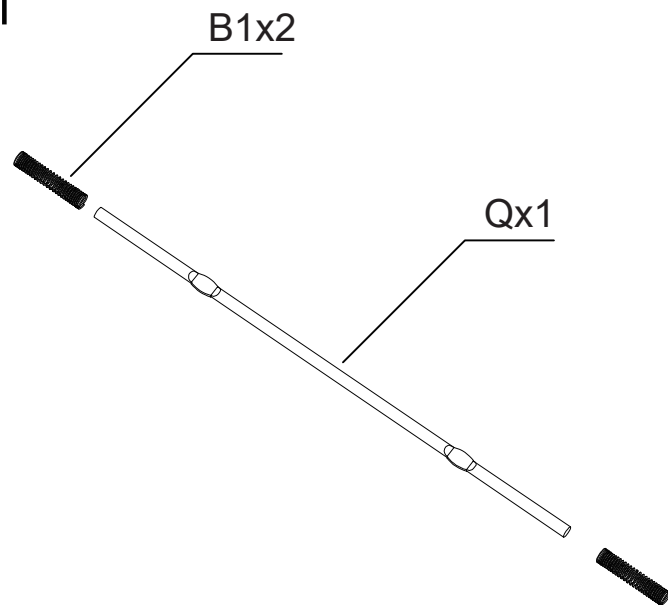


STEP 2

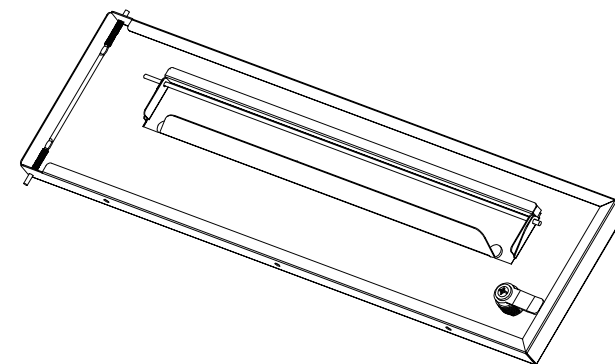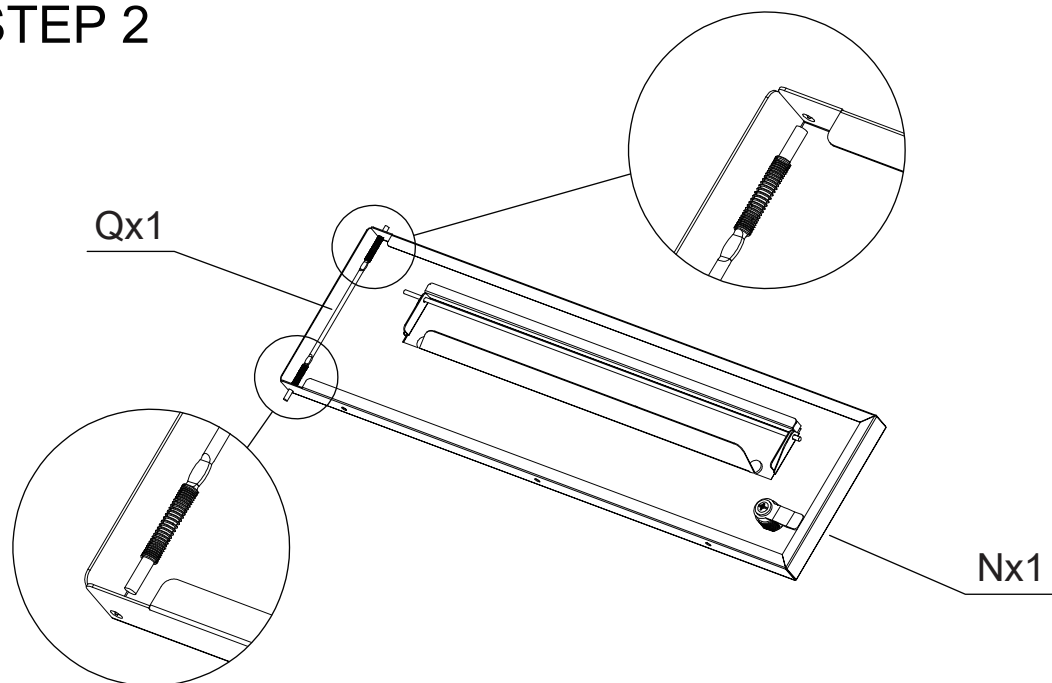


STEP 3

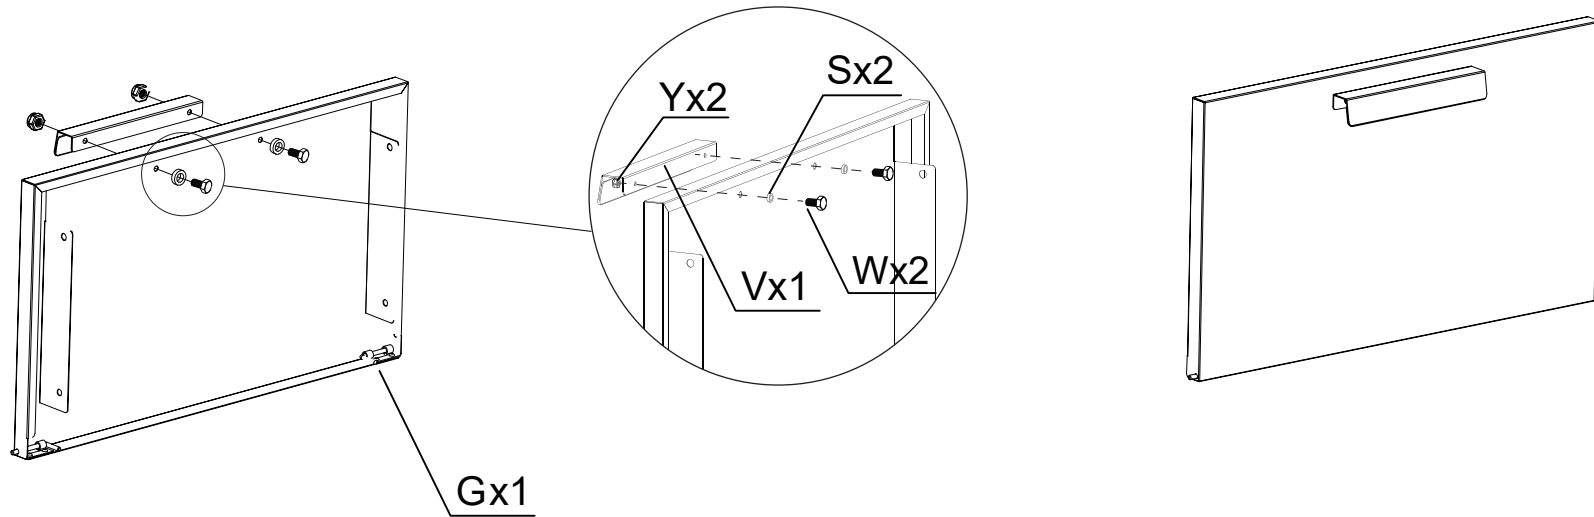

STEP 4

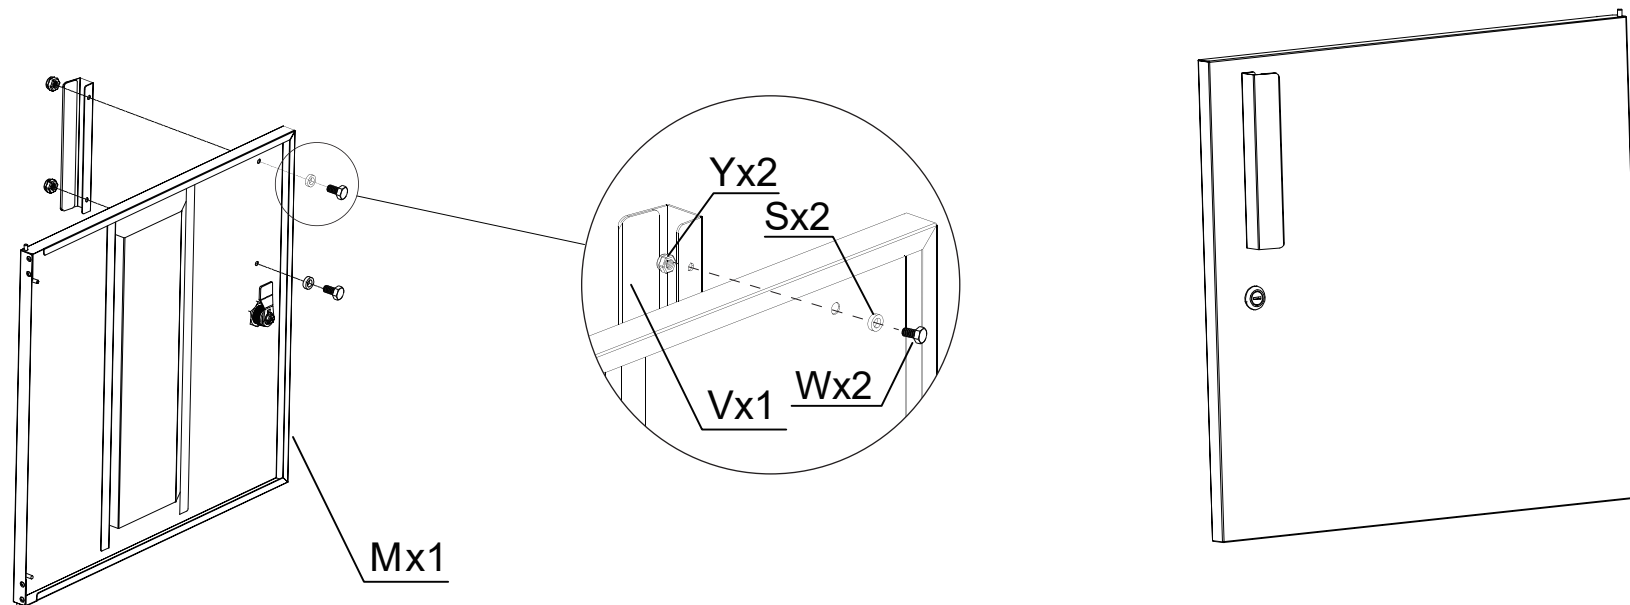


STEP 5

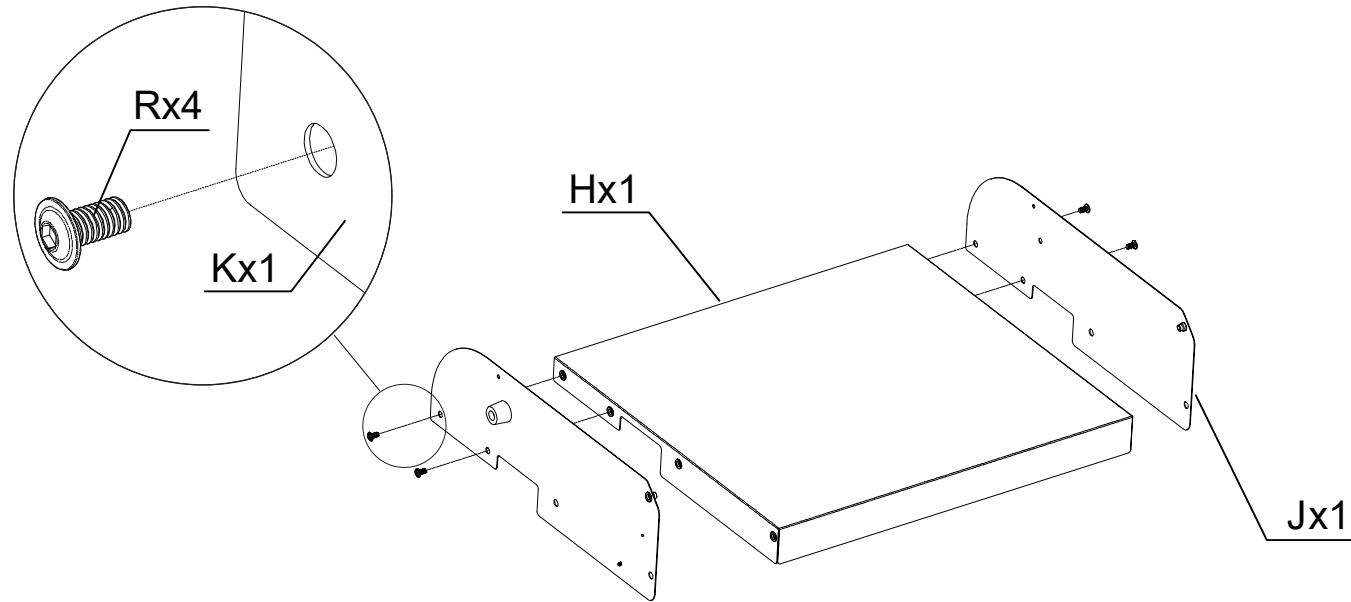


First, put all the screws on and just turn them in slightly. Then you can tighten the screws.


STEP 6

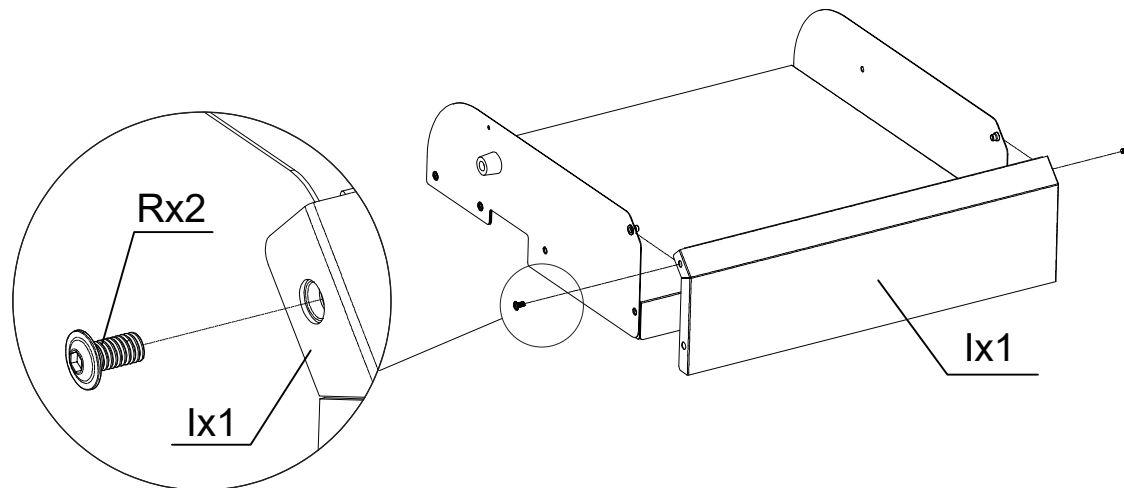


STEP 7

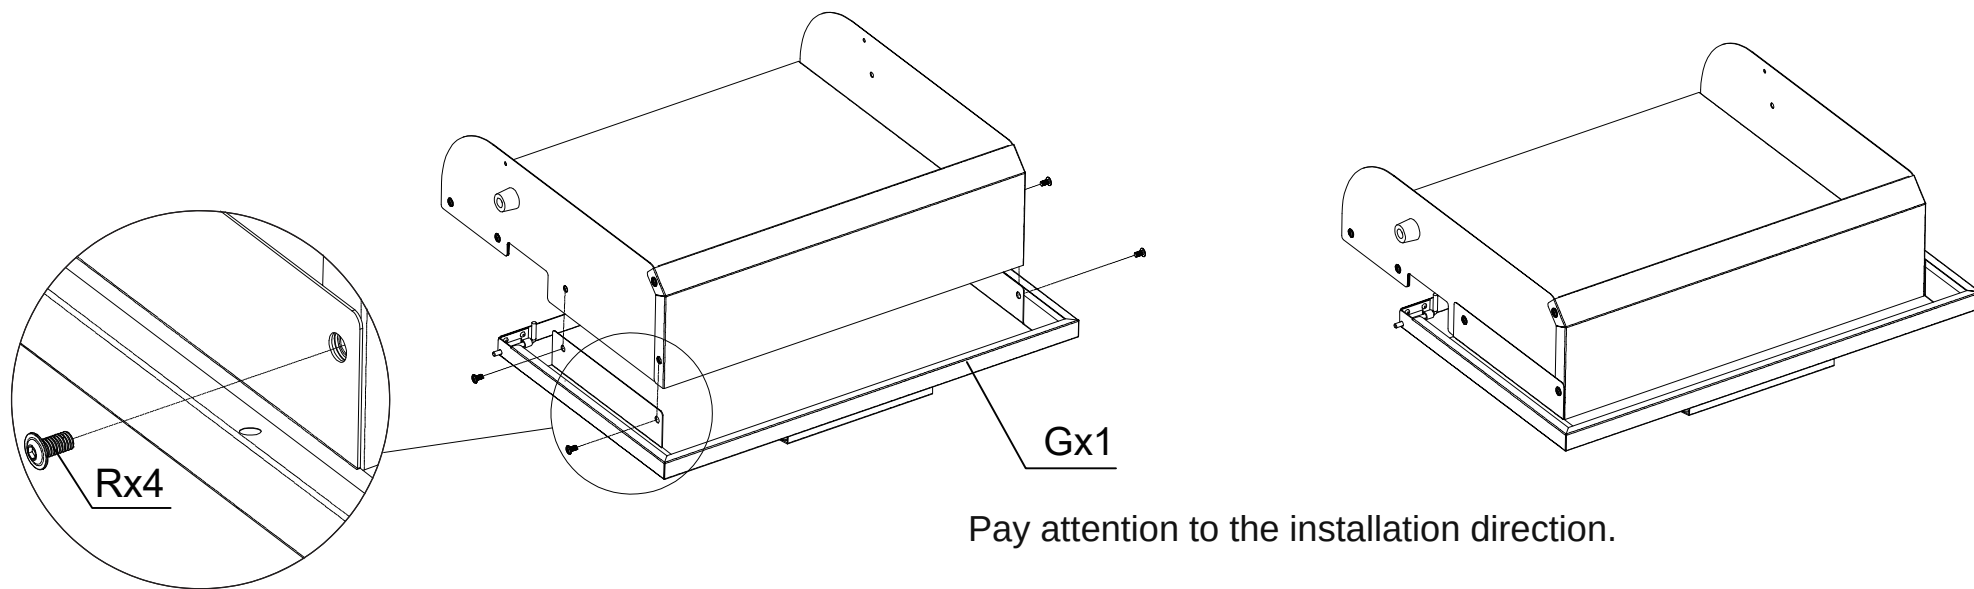


STEP 8

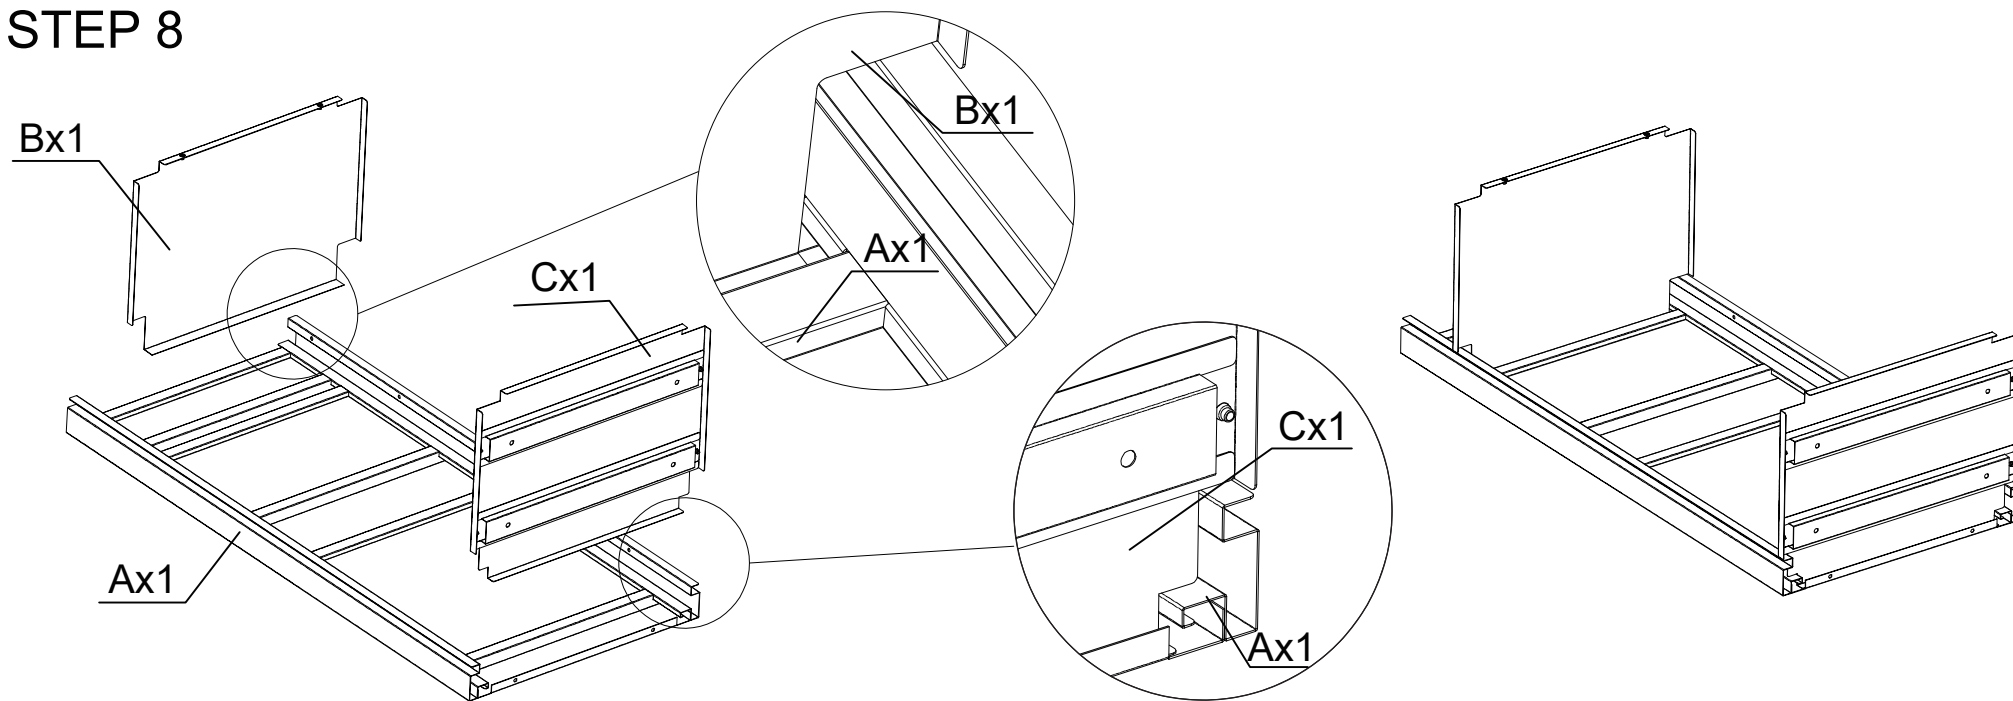



STEP 9

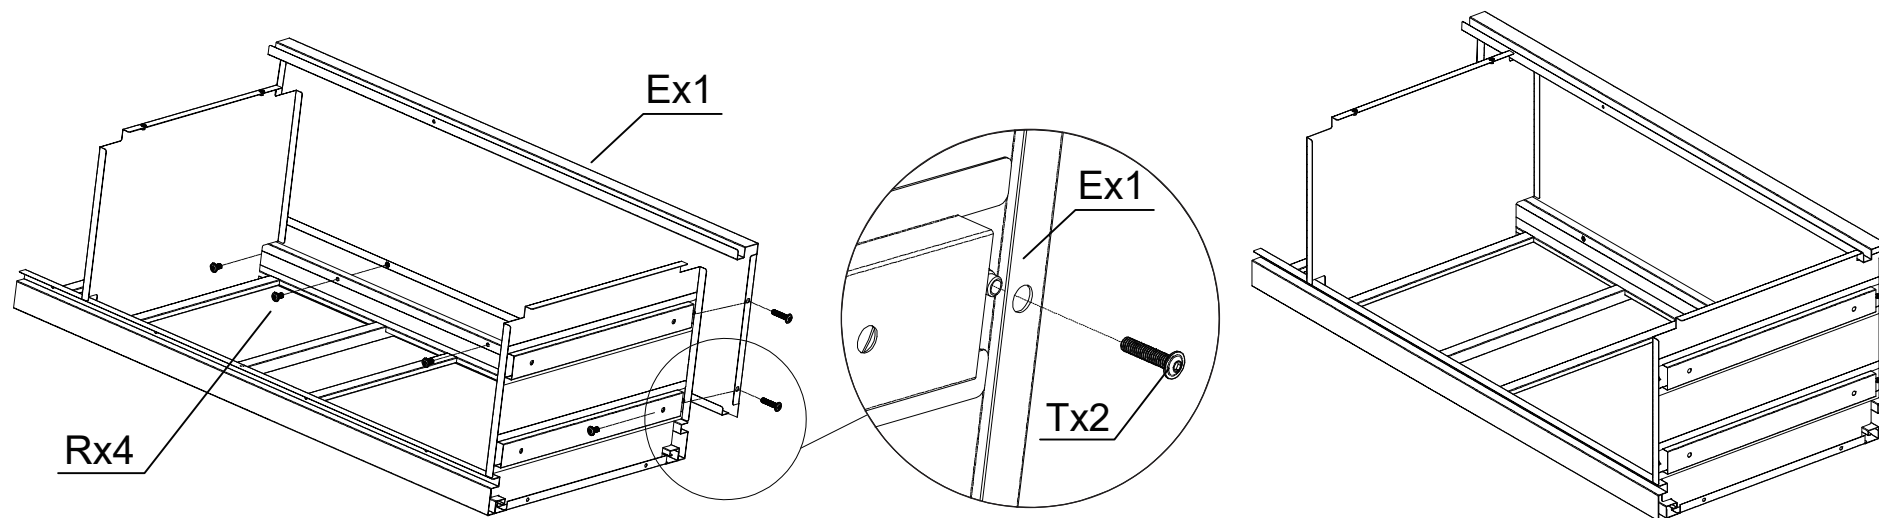



STEP 10

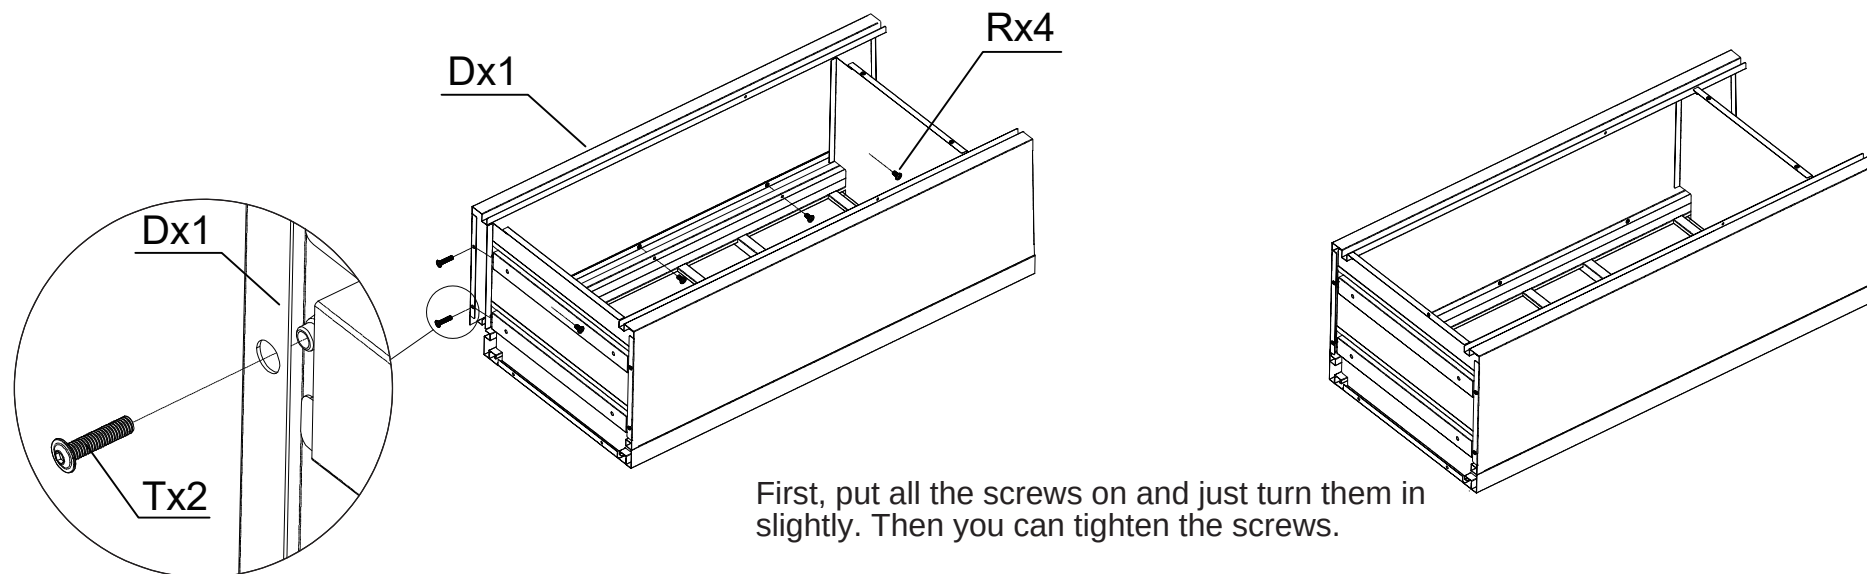


STEP 11

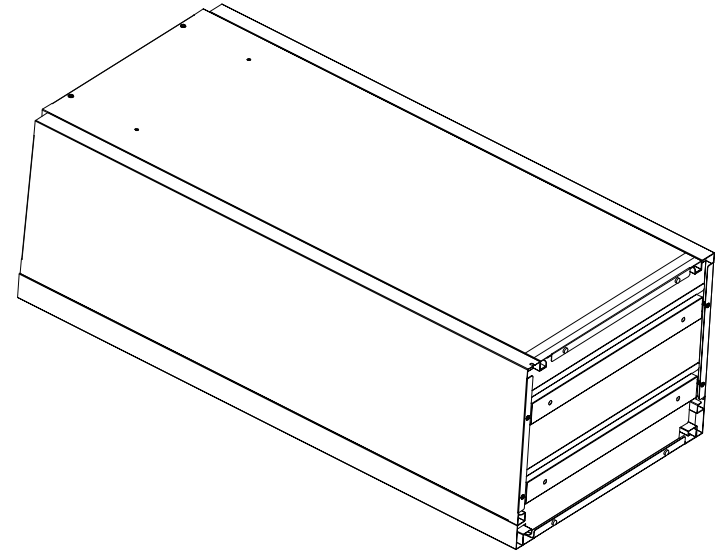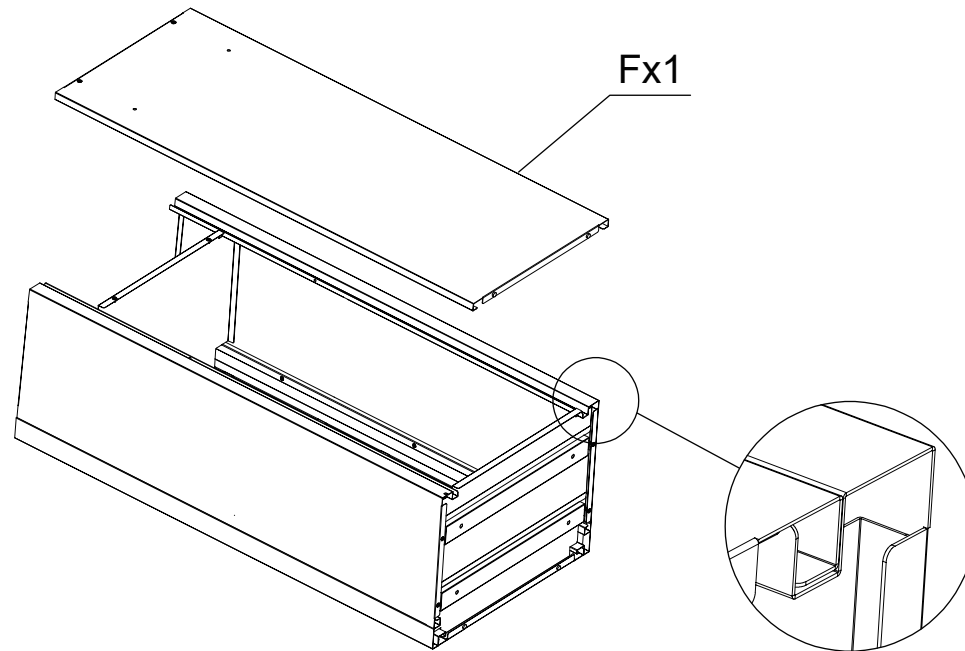


STEP 12

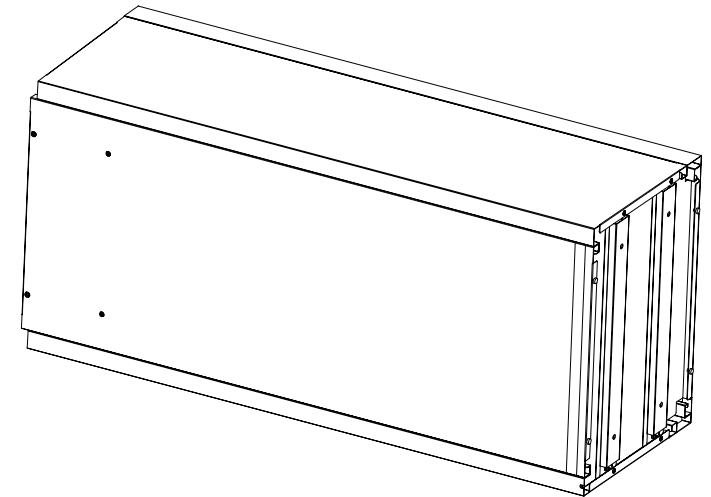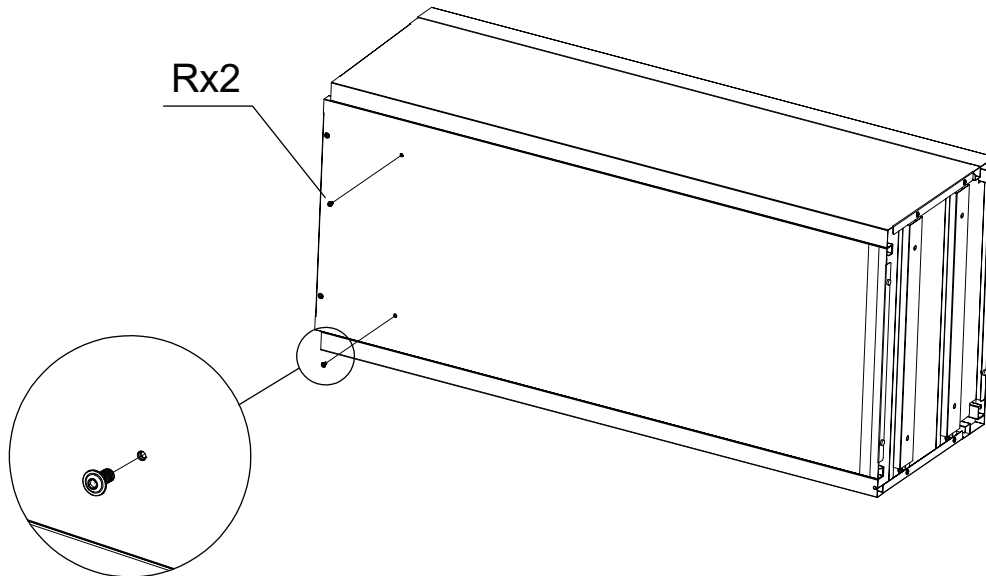

STEP 13

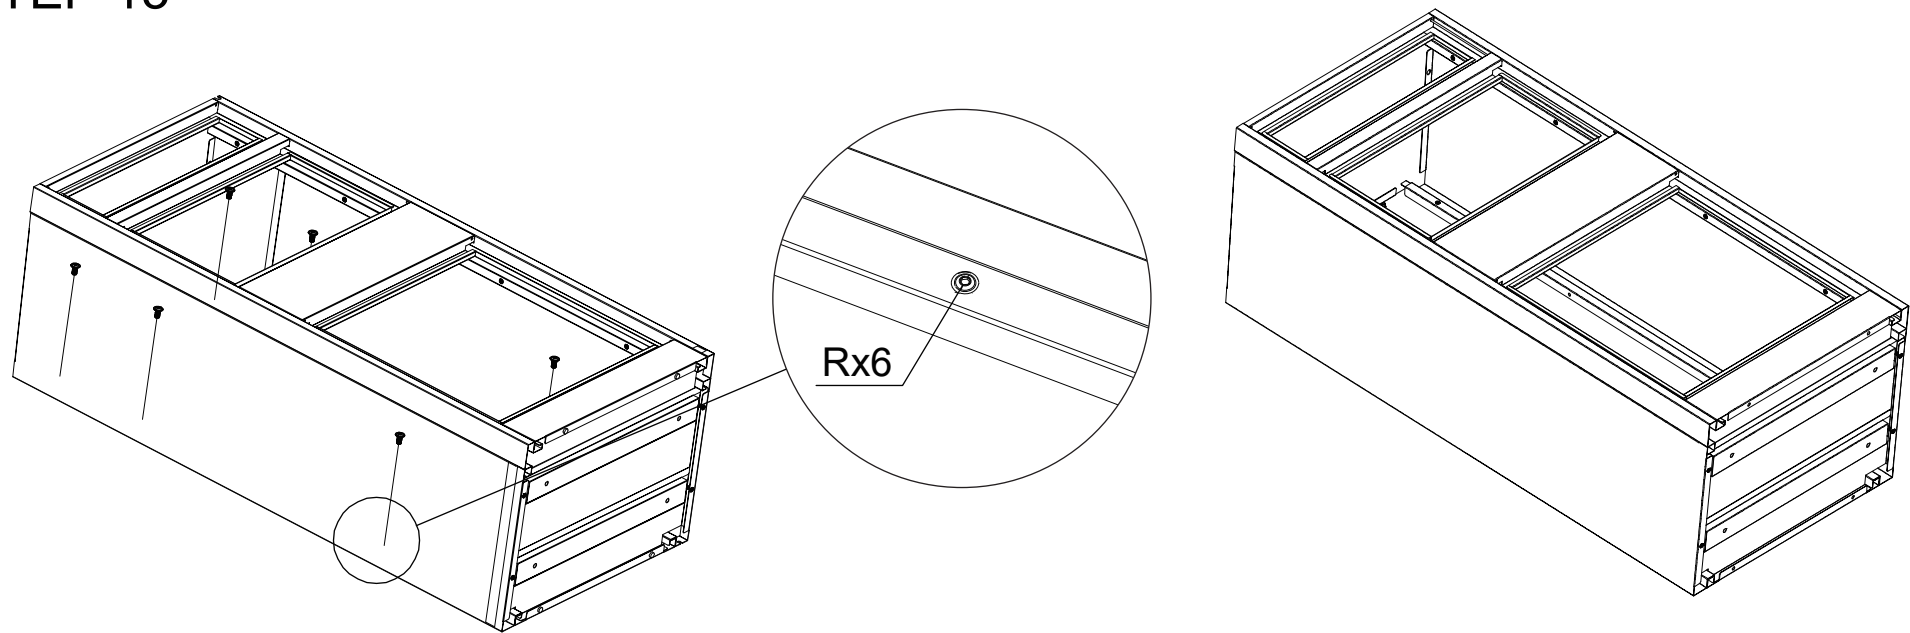


STEP 14

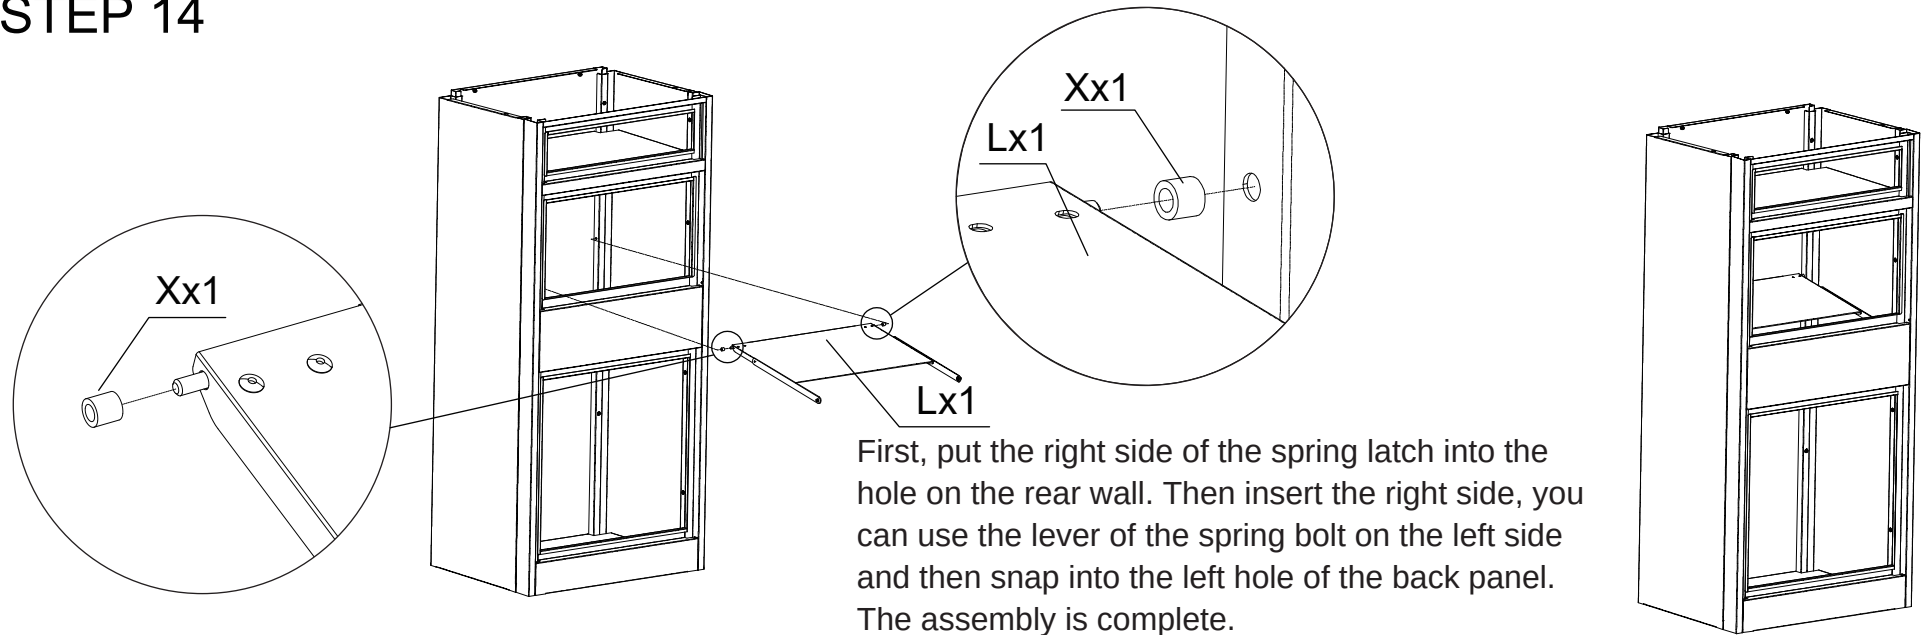


First, put the right side of the spring latch into the hole on the rear wall. Then insert the right side, you can use the lever of the spring bolt on the left side and then snap into the left hole of the back panel. The assembly is complete.


STEP 15

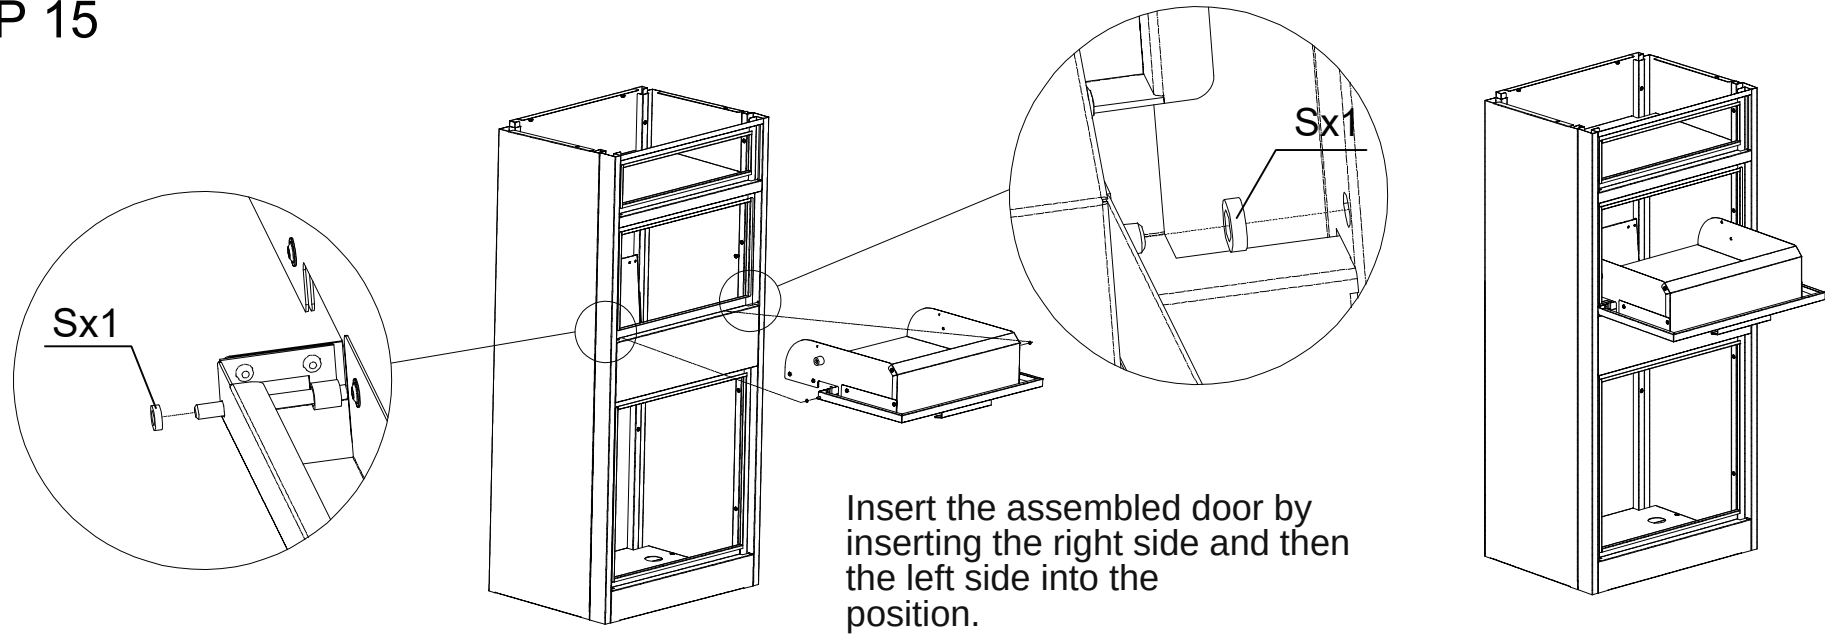


STEP 16

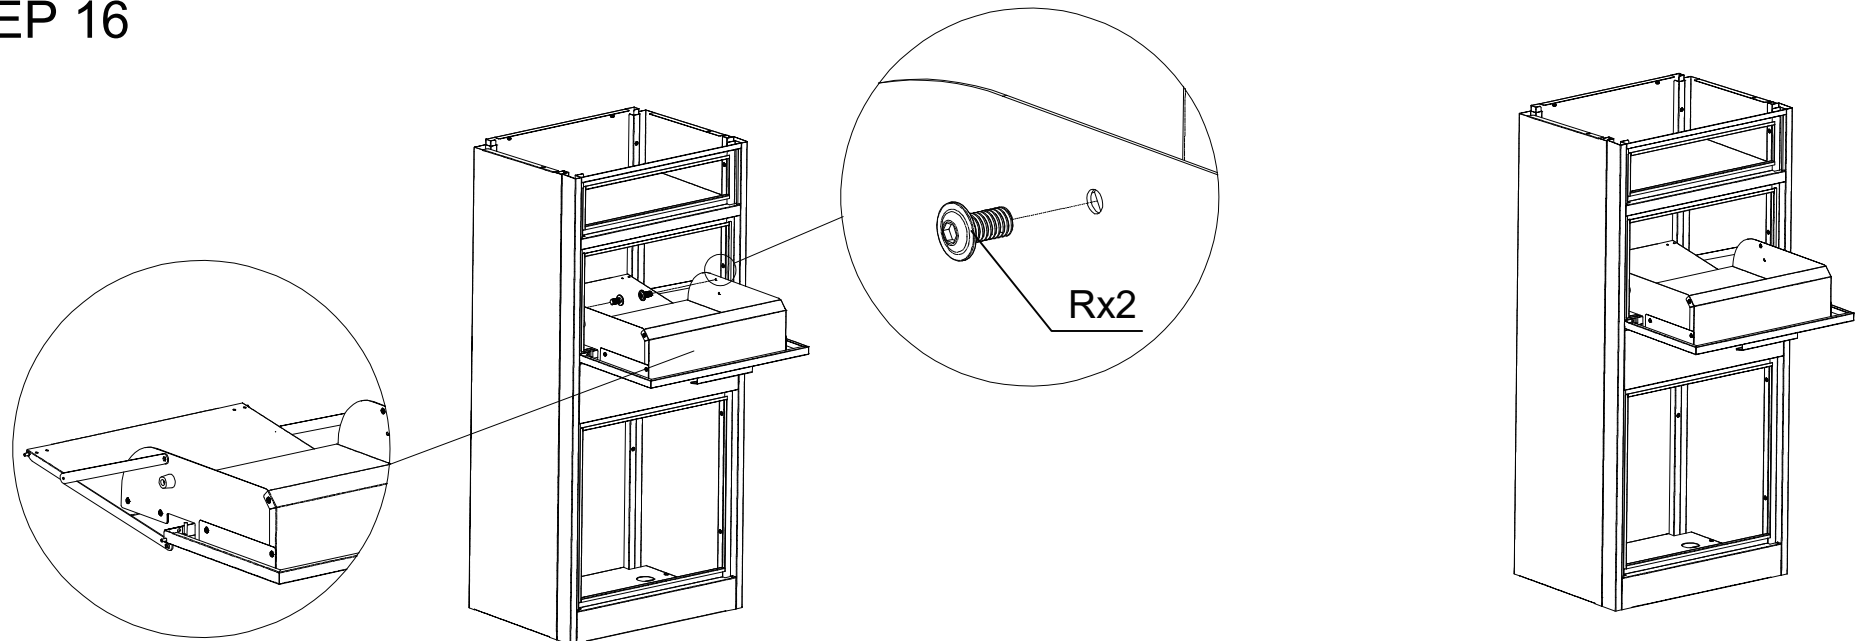



STEP 17

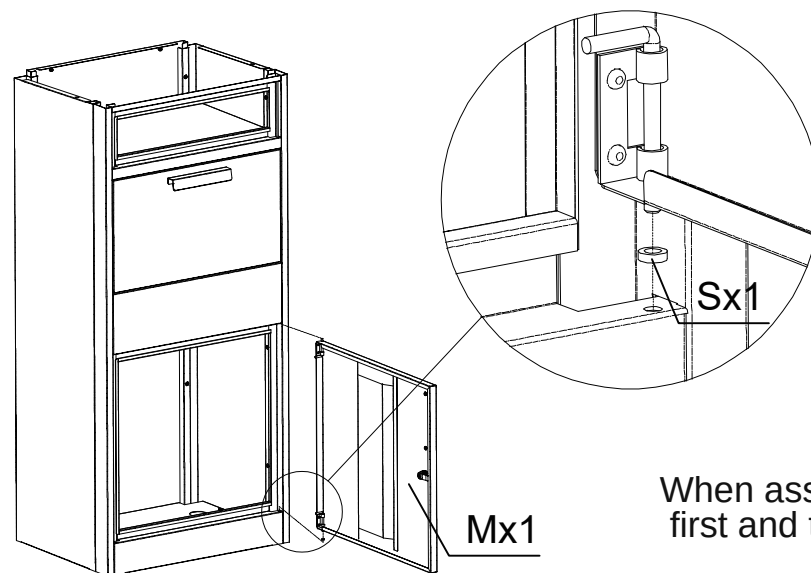



When assembling, assemble the bottom first and then the top.

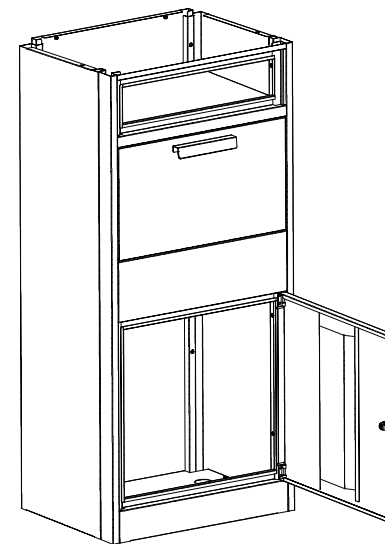



STEP 18

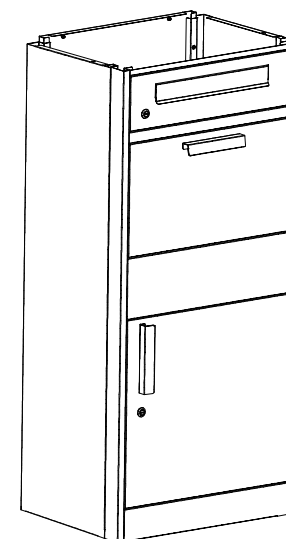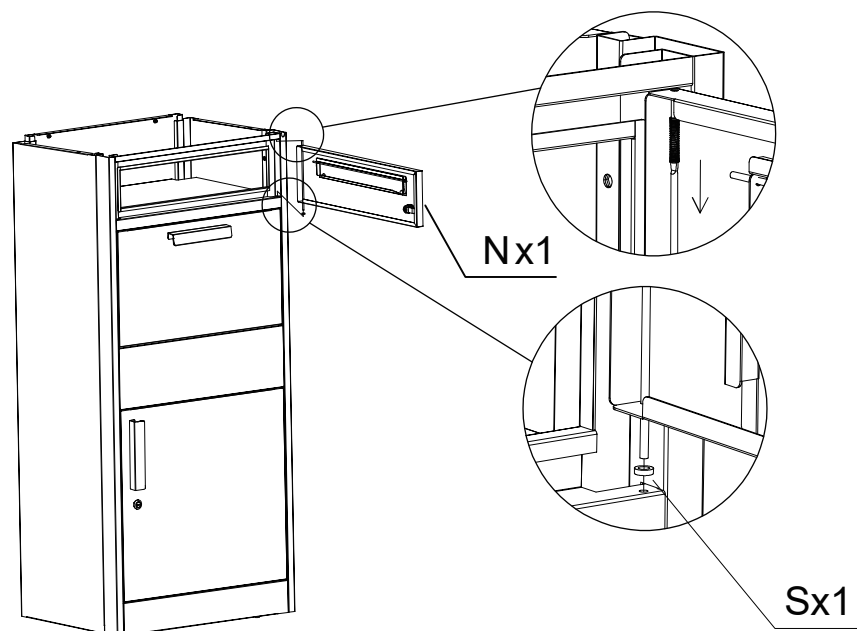


STEP 19

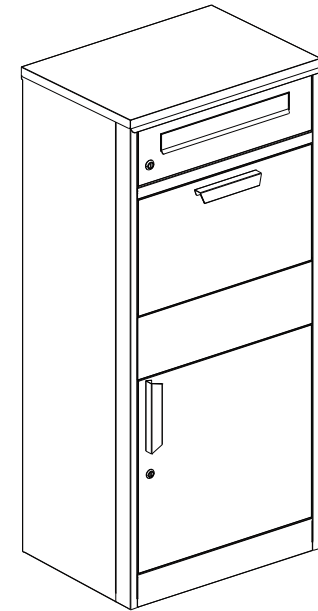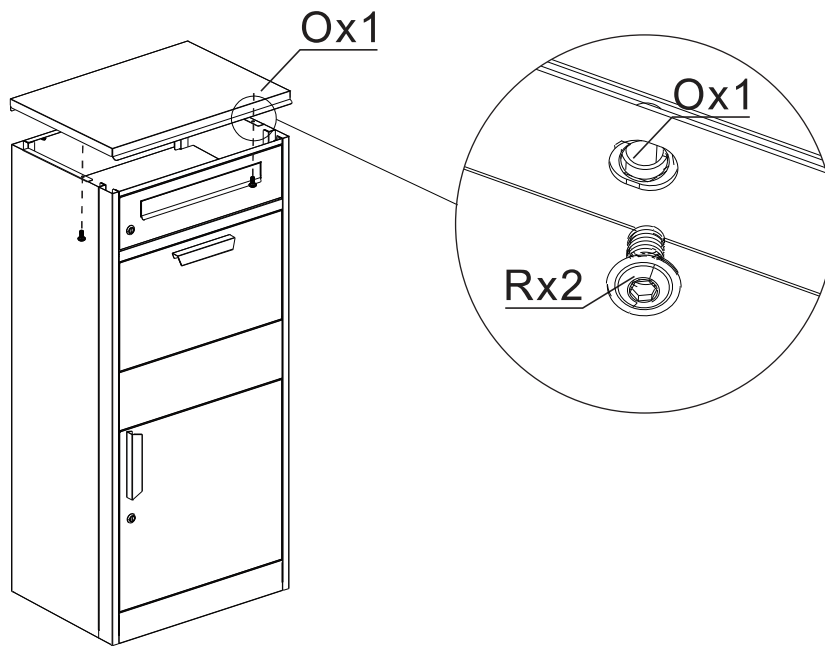

STEP 20

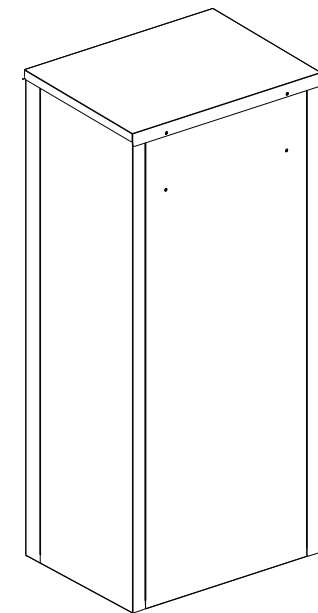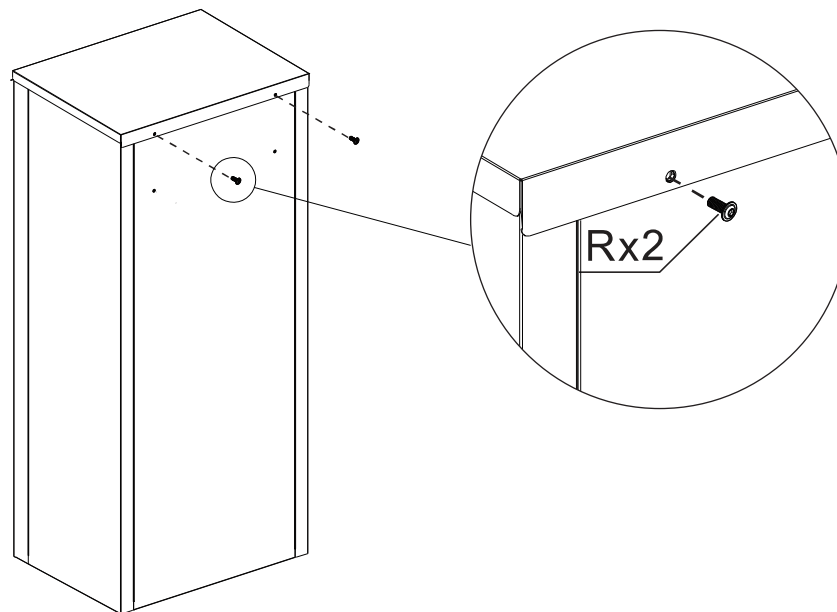

STEP 21

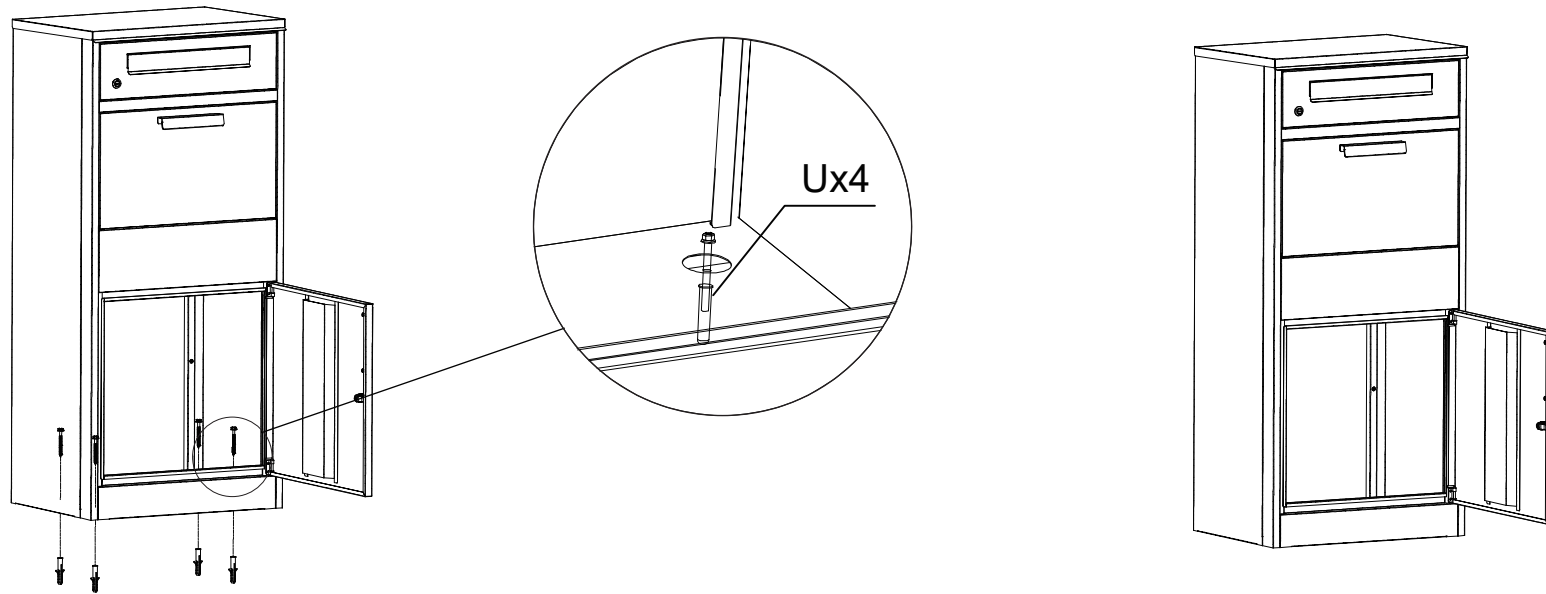

STEP 22

